

IBM SAN Volume Controller
MTM 2145-SV1, 2147-SV1, 2145-12F, 2147-12F,
2145-24F, 2147-24F, 2145-92F, and 2147-92F

Hardware Installation Guide



Note

Before using this information and the product it supports, read the following information:

- The general information in “Notices” on page 167
- The information in the “Safety and environmental notices” on page ix
- The information in the *IBM Environmental Notices and User Guide* (provided on a DVD)

This edition replaces GI13-4547-01.

© **Copyright IBM Corporation 2014, 2017.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Figures	v
--------------------------	----------

Tables	vii
-------------------------	------------

Safety and environmental notices . . . ix

Safety notices and labels	ix
Caution notices for the SAN Volume Controller. . .	x
Danger notices for SAN Volume Controller . . .	xiv
Special caution and safety notices	xviii
General safety	xviii
Inspecting the SAN Volume Controller system for unsafe conditions.	xxii
Checking the grounding of a SAN Volume Controller	xxiv
Emergency power-off shutdown.	xxiv
Handling static-sensitive devices	xxiv
Environmental notices	xxv

About this guide xxvii

Who should use this guide	xxvii
Emphasis	xxvii
SAN Volume Controller library and related publications	xxviii
IBM Publications Center	xxix
Related websites	xxx
Sending your comments.	xxx
How to get information, help, and technical assistance	xxx

SAN Volume Controller initial installation overview xxxiii

Chapter 1. Preparing to install the SAN Volume Controller 1

Applicable machine types and models.	1
SAN Volume Controller operating environment. . .	2
Rack cabinet physical location	2
SAN Volume Controller 2145-SV1 front panel controls and indicators	3
SAN Volume Controller 2145-SV1 operator-information panel	4
SAN Volume Controller 2145-SV1 rear-panel indicators	6
Fibre Channel LEDs	6
SAS port LEDs	7
AC, DC, and power-supply error LEDs	8
Identify button and LED	9
SAN Volume Controller 2145-SV1 Ethernet port LEDs	9
SAN Volume Controller 2145-SV1 connectors . . .	11
SAN Volume Controller 2145-SV1 ports used during service procedures	12
SAN Volume Controller 2145-SV1 unused ports	12

SAN Volume Controller 2145-SV1 Fibre Channel and Ethernet port numbers	13
---	----

Chapter 2. Installing the SAN Volume Controller 2145-SV1 hardware. 15

Preparing for the SAN Volume Controller 2145-SV1 hardware installation	15
Installing the SAN Volume Controller 2145-SV1 . .	18
Installation guidelines	18
Installing the support rails: 2145-SV1	18
Installing the SAN Volume Controller 2145-SV1 in a rack	21
Installing the cable management arm assembly for the SAN Volume Controller 2145-SV1 . . .	22
Connecting the SAN Volume Controller 2145-SV1 to the SAN and to the Ethernet network. . . .	25
Verifying the SAN Volume Controller 2145-SV1 installation	26

Chapter 3. Installing an optional 2U SAS expansion enclosure 29

Installing support rails for 2U SAS expansion enclosures	29
Installing the optional 2U SAS expansion enclosure into the rack	33
Connecting the optional 2U SAS expansion enclosures to the 2145-SV1	34
Combining 2U and 5U expansion enclosures . .	37

Chapter 4. Installing an optional 5U SAS expansion enclosure 39

Safety notices and considerations: 2145-92F. . . .	39
Weight considerations: 2145-92F	45
Identify the hardware components: 2145-92F . . .	50
Unpacking and installing the enclosure: 2145-92F. .	53
Removing the top cover: 2145-92F.	56
Installing or replacing the support rails: 2145-92F. .	58
Installing or replacing an expansion enclosure in a rack: 2145-92F	61
Installing or replacing an expansion canister: 2145-92F	69
Removing or moving the cable-management arm: 2145-92F	70
Moving the cable management arms	73
Installing or replacing the cable-management arm: 2145-92F	75
Installing or replacing the top cover: 2145-92F. . .	80
Installing or replacing a drive: 2145-92F	81
Installing or replacing a secondary expander module: 2145-92F	86
Installing or replacing the fascia: 2145-92F	89
Installing or replacing a power supply: 2145-92F . .	91
Removing the fascia: 2145-92F	94
Removing and installing a SAS cable: 2145-92F . .	97

Installing or replacing a fan module: 2145-92F . . .	100
Installing or replacing a fan interface board: 2145-92F	101
Removing an expansion enclosure from a rack: 2145-92F	104
Removing a power supply: 2145-92F.	112
Removing a drive: 2145-92F	114
Removing a secondary expander module: 2145-92F	117
Removing an expansion canister: 2145-92F.	122
Removing a fan module: 2145-92F	123
Removing a fan interface board: 2145-92F	125
Replacing an enclosure: 2145-92F.	128
Removing the display panel assembly: 2145-92F	130
Installing or replacing the display panel assembly: 2145-92F	132
Removing the support rails: 2145-92F	135
Connecting the optional 2145-92F SAS expansion enclosures	136
Combining 2U and 5U expansion enclosures	139
Powering on the expansion enclosure: 2145-92F	140
Powering off the expansion enclosure: 2145-92F	143
SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators.	144

Chapter 5. Initializing the SAN Volume Controller 2145-SV1 system 151

Checking your web browser settings for the initialization GUI	151
User name and password for system initialization	153
Initializing the SAN Volume Controller 2145-SV1 system by using the technician port	154
Adding nodes to an existing system.	155

Appendix A. Accessibility features for SAN Volume Controller 159

Appendix B. Where to find the Statement of Limited Warranty 161

Appendix C. SAN Volume Controller physical installation planning 163

SAN Volume Controller 2145-SV1 environment requirements	163
--	-----

Notices 167

Trademarks	169
Homologation statement	169
Electronic emission notices	169
Federal Communications Commission (FCC) statement.	169
Industry Canada compliance statement.	170
Australia and New Zealand Class A Statement	170
European Union Electromagnetic Compatibility Directive	170
Germany Electromagnetic Compatibility Directive	170
People's Republic of China Class A Statement	171
Taiwan Class A compliance statement	172
Taiwan Contact Information	172
Japan Voluntary Control Council for Interference Class A statement	172
Japan Electronics and Information Technology Industries Association Statement	172
Korean Electromagnetic Interference (EMI) Statement	173
Russia Electromagnetic Interference Class A Statement	173

Index 175

Figures

1. SAN Volume Controller 2145-SV1 front panel	3	43. Features on the rear of the 2145-92F expansion enclosure	51
2. SAN Volume Controller 2145-SV1 operator-information panel.	4	44. 2145-92F support rails	52
3. SAN Volume Controller 2145-SV1 rear-panel indicators	6	45. 2145-92F CMA assemblies.	53
4. Fibre Channel LEDs	7	46. Tray containing expansion enclosure parts	54
5. SAS port LEDs.	8	47. Packaging materials.	55
6. SAN Volume Controller 2145-SV1 AC, DC, and power-error LEDs.	9	48. Packaging for fascia.	56
7. Identify button and LED	9	49. Releasing the 2145-92F cover.	57
8. Ethernet ports on the system board	10	50. Removing the 2145-92F cover	57
9. Ethernet port LEDs on the system board	10	51. Support rails	58
10. Ethernet port LEDs on a 10 Gbps Ethernet adapter	11	52. Detaching the inner rail section	59
11. Connectors on the rear of the SAN Volume Controller 2145-SV1.	11	53. Screw locations to attach the inner rail to the enclosure	59
12. Power connector.	12	54. Attaching the inner rail section to the enclosure	60
13. SAN Volume Controller 2145-SV1 service ports	12	55. Installing the rail assembly to the rack frame	60
14. SAN Volume Controller 2145-SV1 unused Ethernet port	13	56. Example of required rack space	61
15. Fibre Channel port numbers in a typical configuration	14	57. Example installation of the enclosure in the rack	67
16. Ethernet port numbers for iSCSI communication	14	58. Replacing the 2145-92F enclosure in the rack	68
17. Parts provided for SAN Volume Controller 2145-SV1 hardware installation in a rack.	16	59. Expansion canister	69
18. Identifying rack space	19	60. Install the expansion canister.	70
19. Detaching the inner rail section	19	61. Upper and lower cable-management arms	71
20. Attach inner rail section to chassis	20	62. Connectors for the upper cable management arm	72
21. Install the bracket assembly to the frame	20	63. Components of the lower CMA assembly	73
22. Insert the chassis into the rack	22	64. Upper and lower CMA assemblies moved aside.	74
23. Parts for installing the SAN Volume Controller 2145-SV1 CMA assembly	23	65. Lower CMA assembly moved	74
24. Reversing the orientation of the assembly	24	66. Release the upper CMA assembly	75
25. Install the inner member	24	67. Release the lower CMA assembly	75
26. Install the outer member	24	68. Upper and lower cable-management arms	76
27. Install the other outer member	25	69. Upper and lower cable-management arms	76
28. Ethernet ports on the rear of the SAN Volume Controller 2145-SV1.	26	70. Connectors for the cable management arm	77
29. Fibre Channel ports.	26	71. Install the inner connector of the upper CMA to the inner member of the support rail	77
30. SAN Volume Controller 2145-SV1 front panel	27	72. Install the inner connector of the upper CMA to the inner member of the support rail	78
31. SAN Volume Controller 2145-SV1 operator-information panel	28	73. Attach the support rail connector of the upper CMA to the right support rail	78
32. Expansion enclosure support rails	29	74. Comparing the location of the components of the CMA assemblies	79
33. Installing the rail spring	30	75. Aligning the 2145-92F top cover.	80
34. Hole locations in the front of the rack.	31	76. Replacing the 2145-92F top cover	81
35. Opening the hinge brackets	32	77. Locking the top cover	81
36. Closing the hinge brackets	32	78. Drive assembly	82
37. Removing enclosure end caps	33	79. Drive locations in a 2145-92F expansion enclosure	83
38. Inserting the enclosure into the rack	34	80. Correct drive installation	83
39. SAS cable connector orientation.	35	81. Incorrect drive installation	84
40. Connecting the SAS cables	36	82. Replace the drive	85
41. Features on the front of the 2145-92F expansion enclosure.	50	83. Location of secondary expander modules	87
42. Front fascia of the 2145-92F expansion enclosure	51	84. LEDs on a secondary expansion module	88
		85. Open the secondary expander module handles	88
		86. Replace the secondary expander module	89
		87. Fascia components on the expansion enclosure	90

88. Replace fascia components on the expansion enclosure	91	115. Expansion canister	122
89. Preparing to install the power supply	92	116. Removing the expansion canister	123
90. Install the power supply	93	117. Fan module LED	124
91. Power supply indicators	94	118. Fan module release tab	124
92. Fascia components on the expansion enclosure	95	119. Remove fan module	125
93. Remove fascia components from the expansion enclosure	96	120. Fan module LED	126
94. Fascia removed from the PSUs	97	121. Location of the FIB cover	126
95. Correct orientation for SAS cable connectors	98	122. Loosen the FIB screws	127
96. Example of SAS cables routed through the cable management arms	99	123. Remove the FIB from the chassis	127
97. SAS cable correctly inserted into the SAS port	100	124. FIB parts removed from the chassis	128
98. Fan module orientation	101	125. Removing the display panel assembly	131
99. Replace fan module	101	126. Display panel assembly	132
100. FIB parts for the chassis	102	127. Display panel assembly	134
101. Insert the new FIB in the chassis	103	128. Installing the display panel assembly	135
102. Secure the FIB to the drive board	103	129. Remove the rail assembly from the front frame bracket	135
103. Replace the FIB cover	104	130. Remove the rail assembly from the rear frame bracket.	136
104. Removing the 2145-92F enclosure from the rack.	111	131. SAS cable connector orientation	136
105. Releasing the power supply handles	113	132. Connecting the SAS cables	138
106. Removed power supply	114	133. SAS port orientation on expansion enclosures	140
107. Drive assembly	115	134. Features on the front of the 2145-92F expansion enclosure	141
108. Drive locations in a 2145-92F expansion enclosure	116	135. Power cable connections on the back of the expansion enclosure	142
109. Remove the drive assembly.	117	136. Features on the rear of the 2145-92F expansion enclosure	143
110. Location of secondary expander modules	119	137. LEDs on the front of the expansion enclosure	145
111. Location of LEDs on the secondary expander module	119	138. LEDs on the front of a power supply unit	146
112. Remove the secondary expander module	120	139. LEDs on a drive assembly	147
113. Secondary expander module connectors	121	140. LEDs on a secondary expansion module	148
114. Secondary expander module removed from the enclosure.	121	141. LEDs on the back of the expansion enclosure	149
		142. LEDs on the back of the expansion canister	149
		143. Technician port	154

Tables

1. IBM websites for help, services, and information	xxviii	16. Examples of supported SAS chain combinations.	139
2. SAN Volume Controller library	xxviii	17. Display panel LEDs	145
3. IBM documentation and related websites	xxix	18. Power supply unit LEDs.	146
4. IBM websites for help, services, and information	xxx	19. LED indicators on drives.	147
5. Machine types and models.	1	20. LED indicators on secondary expansion modules	148
6. Link status values for Fibre Channel LEDs	7	21. Expansion canister and SAS port LEDs	150
7. States and meanings for SAS LEDs	8	22. Default user name and password for the initialization GUI	153
8. The PCIe expansion slots in which an adapter can be used	13	23. Node model names and software version requirements.	155
9. Selecting bracket pins for your rack	31	24. Input-voltage requirements	163
10. Examples of supported SAS chain combinations	37	25. Power consumption	163
11. Weight of expansion enclosure parts	46	26. Physical specifications	163
12. Weight of expansion enclosure SAS drives	47	27. Dimensions and weight	164
13. Weight of an enclosure with 92 SAS drives	48	28. Additional space requirements.	164
14. Enclosure weight as FRUs are installed	48	29. Maximum heat output of each SAN Volume Controller 2145-SV1 node	165
15. LEDs on the secondary expander modules	119		

Safety and environmental notices

Review the safety notices, environmental notices, and electronic emission notices for IBM® SAN Volume Controller before you install and use the product.

Suitability for telecommunication environment: This product is not intended to connect directly or indirectly by any means whatsoever to interfaces of public telecommunications networks.

To find the translated text for a caution or danger notice, complete the following steps.

1. Look for the identification number at the end of each caution notice or each danger notice. In the following examples, the numbers (C001) and (D002) are the identification numbers.

CAUTION:

A caution notice indicates the presence of a hazard that has the potential of causing moderate or minor personal injury. (C001)

DANGER

A danger notice indicates the presence of a hazard that has the potential of causing death or serious personal injury. (D002)
--

2. Locate the *IBM System Storage SAN Volume Controller Safety Notices* with the user publications that were provided with the SAN Volume Controller hardware.
3. Find the matching identification number in the *IBM System Storage SAN Volume Controller Safety Notices*. Then, review the topics about the safety notices to ensure that you are in compliance.
4. (Optional) Read the multilingual safety instructions on the SAN Volume Controller website.
 - a. Go to www.ibm.com/support
 - b. Search for “SAN Volume Controller”
 - c. Click the documentation link

Safety notices and labels

Review the safety notices and safety information labels before using this product.

To view a PDF file, you need Adobe Acrobat Reader. You can download it at no charge from the Adobe website:

www.adobe.com/support/downloads/main.html

IBM Systems Safety Notices

This publication contains the safety notices for the IBM Systems products in English and other languages. Anyone who plans, installs, operates, or services the system must be familiar with and understand the safety notices. Read the related safety notices before you begin work.

Note: The *IBM System Safety Notices* document is organized into two sections. The danger and caution notices without labels are organized alphabetically by language in the “Danger and caution notices by language” section. The danger and caution notices that are accompanied with a label are organized by label reference number in the “Labels” section.

Note: You can find and download the current *IBM System Safety Notices* by searching for Publication number **G229-9054** in the IBM Publications Center.

The following notices and statements are used in IBM documents. They are listed in order of decreasing severity of potential hazards.

Danger notice definition

A special note that emphasizes a situation that is potentially lethal or extremely hazardous to people.

Caution notice definition

A special note that emphasizes a situation that is potentially hazardous to people because of some existing condition, or to a potentially dangerous situation that might develop because of some unsafe practice.

Note: In addition to these notices, labels might be attached to the product to warn of potential hazards.

Finding translated notices

Each safety notice contains an identification number. You can use this identification number to check the safety notice in each language.

To find the translated text for a caution or danger notice:

1. In the product documentation, look for the identification number at the end of each caution notice or each danger notice. In the following examples, the numbers (D002) and (C001) are the identification numbers.

DANGER

A danger notice indicates the presence of a hazard that has the potential of causing death or serious personal injury. (D002)

CAUTION:

A caution notice indicates the presence of a hazard that has the potential of causing moderate or minor personal injury. (C001)

2. After you download the *IBM System Safety Notices* document, open it.
3. Under the language, find the matching identification number. Review the topics about the safety notices to ensure that you are in compliance.

Note: This product was designed, tested, and manufactured to comply with IEC 60950-1, and where required, to relevant national standards that are based on IEC 60950-1.

Caution notices for the SAN Volume Controller




Ensure that you understand the caution notices for SAN Volume Controller.

Use the reference numbers in parentheses at the end of each notice (for example, D005) to find the matching translated notice in *IBM System Storage SAN Volume Controller Safety Notices*.

CAUTION:
The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

Do not: Throw or immerse into water, heat to more than 100°C (212°F), repair or disassemble. (C003)

CAUTION:

		
33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

svr01053

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:
To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

CAUTION:
The doors and covers to the product are to be closed at all times except for service by trained service personnel. All covers must be replaced and doors closed at the conclusion of the service operation. (C013)

CAUTION:

CAUTION regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers). Read and completely understand the contents of LIFT TOOL operator's manual before using.
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's website.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not raise, lower or slide platform load shelf unless stabilizer (brake pedal jack) is fully engaged. Keep stabilizer brake engaged when not in use or motion.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads. (C048, part 1 of 2)

- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048, part 2 of 2)

CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers) Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers) This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack. (R001 part 2 of 2)

CAUTION:

Removing components from the upper positions in the rack cabinet improves rack stability during a relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions.
 - Remove all devices in the 32U position and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
 - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off the pallet and bolt the rack cabinet to the pallet. (R002)

Danger notices for SAN Volume Controller

Ensure that you are familiar with the danger notices for SAN Volume Controller.

Use the reference numbers in parentheses at the end of each notice (for example, D005) to find the matching translated notice in *IBM System Storage SAN Volume Controller Safety Notices*.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- If IBM supplied a power cord(s), connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices.

To connect:

1. Turn off everything (unless instructed otherwise).
 2. Attach all cables to the devices.
 3. Attach the signal cables to the connectors.
 4. Attach the power cords to the outlets.
 5. Turn on the devices.
- Sharp edges, corners and joints might be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching.
- (D005)

DANGER


Heavy equipment—personal injury or equipment damage might result if mishandled. (D006)

DANGER

DANGER: Serious injury or death can occur if loaded lift tool falls over or if a heavy load falls off the lift tool. Always completely lower the lift tool load plate and properly secure the load on the lift tool before moving or using the lift tool to lift or move an object. (D010)

DANGER

Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)

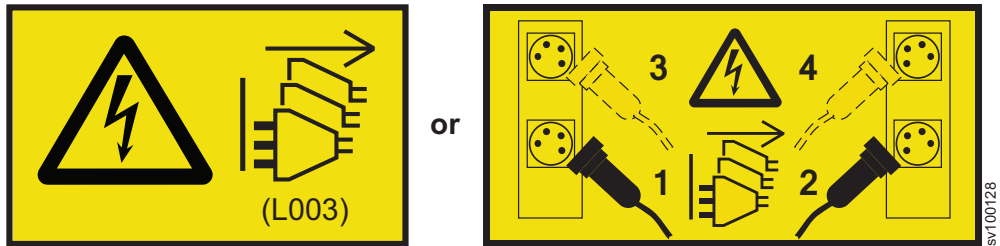

DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (R001 part 1 of 2)

DANGER

Racks with a total weight of > 227 kg (500 lb.), Use Only Professional Movers! (R003)

DANGER

Do not transport the rack via fork truck unless it is properly packaged, secured on top of the supplied pallet. (R004)

DANGER:



Main Protective Earth (Ground):

This symbol is marked on the frame of the rack.

The PROTECTIVE EARTHING CONDUCTORS should be terminated at that point. A recognized or certified closed loop connector (ring terminal) should be used and secured to the frame with a lock washer using a bolt or stud. The connector should be properly sized to be suitable for the bolt or stud, the locking washer, the rating for the conducting wire used, and the considered rating of the breaker. The intent is to ensure the frame is electrically bonded to the PROTECTIVE EARTHING CONDUCTORS. The hole that the bolt or stud goes into where the terminal conductor and the lock washer contact should be free of any non-conductive material to allow for metal to metal contact. All PROTECTIVE EARTHING CONDUCTORS should terminate at this main protective earthing terminal or at points marked with \perp . (R010)

Special caution and safety notices

This information describes special safety notices that apply to the SAN Volume Controller. These notices are in addition to the standard safety notices supplied and address specific issues relevant to the equipment provided.

General safety

When you service the SAN Volume Controller, follow general safety guidelines.

Use the following general rules to ensure safety to yourself and others.

- Observe good housekeeping in the area where the devices are kept during and after maintenance.
- Follow the guidelines when lifting any heavy object:
 1. Ensure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. *Do not attempt to lift any objects that weigh more than 18 kg (40 lb) or objects that you think are too heavy for you.*
- Do not perform any action that causes a hazard or makes the equipment unsafe.
- Before you start the device, ensure that service representatives and other personnel are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the unit.
- Keep your tool case away from walk areas so that other people cannot trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a device. Ensure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconducting clip, approximately 8 cm (3 in.) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Remember: Metal objects are good electrical conductors.

- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.

- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly after you have finished servicing the unit.

Electrical safety

Observe these rules when working on electrical equipment.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices.

To connect:

1. Turn off everything (unless instructed otherwise).
 2. Attach all cables to the devices.
 3. Attach the signal cables to the connectors.
 4. Attach the power cords to the outlets.
 5. Turn on the devices.
- Sharp edges, corners and joints may be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching.

(D005)

Important: Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents. Many customers have, near their equipment, rubber

floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before the following activities:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the unit, unplug the power cord. If you cannot unplug it, ask the customer to power off the wall box that supplies power to the device and to lock the wall box in the off position.
- If you need to work on a device that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Remember: Another person must be there to switch off the power, if necessary.

- Use only one hand when working with electrical equipment that has the power turned on; keep the other hand in your pocket or behind your back.

Remember: There must be a complete circuit to cause electrical shock. By observing the previous rule, you might prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; these instructions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- *Never assume* that power has been disconnected from a circuit. First, *check* that power has been powered off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and device damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a device. (This practice ensures correct grounding of the units.)
 - Power supply units
 - Pumps
 - Blowers and fans

- Motor generators
- And similar units
- If an electrical accident occurs:
 - Use caution; do not become a victim yourself.
 - Switch off power.
 - Send another person to get medical aid.

Inspecting the SAN Volume Controller system for unsafe conditions

Use caution when you are working in any potential safety hazardous situation that is not covered in the safety checks. If unsafe conditions are present, determine how serious the hazards are and whether you can continue before you correct the problem.

Before you begin

Before you start the safety inspection, make sure that the power is off, and that the power cord is disconnected.

About this task

Each device has the required safety items that are installed to protect users and IBM service personnel from injury. Only those items are addressed.

Important: Good judgment must also be used to identify potential safety hazards due to the attachment of non-IBM features or options that are not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard might be and whether you can continue without first correcting the problem. For example, consider the following conditions and their potential safety hazards:

Electrical hazards (especially primary power)

Primary voltage on the frame can cause serious or lethal electrical shock.

Explosive hazards

A damaged CRT face or a bulging capacitor can cause serious injury.

Mechanical hazards

Loose or missing items (for example, nuts and screws) can cause serious injury.

To inspect each SAN Volume Controller node for unsafe conditions, use the following steps. If necessary, see any suitable safety publications.

Procedure

1. Turn off the SAN Volume Controller system and disconnect the power cord.
2. Check the frame for damage (loose, broken, or sharp edges).
3. Check the power cables by using the following steps:
 - a. Ensure that the third-wire ground connector is in good condition. Use a meter to check that the third-wire ground continuity is 0.1 ohm or less between the external ground pin and the frame ground.

- b. Ensure that the power cord is the appropriate type, as specified in the parts listings.
 - c. Ensure that the insulation is not worn or damaged.
4. Check for any obvious nonstandard changes, both inside and outside the unit. Use good judgment about the safety of any such changes.
5. Check inside the SAN Volume Controller node for any obvious unsafe conditions, such as metal particles, contamination, water or other fluids, or marks of overheating, fire, or smoke damage.
6. Check for worn, damaged, or pinched cables.
7. Ensure that the voltage that is specified on the product-information label matches the specified voltage of the electrical power outlet. If necessary, verify the voltage.
8. Inspect the power-supply assemblies and check that the fasteners (screws or rivets) in the cover of the power-supply unit are not removed or disturbed.
9. Check the grounding of the network switch before you connect the SAN Volume Controller system to the storage area network (SAN).

Checking external devices

Ensure that you complete an external device check before you install or service SAN Volume Controller.

Procedure

To conduct an external device check, complete the following steps.

1. Verify that all external covers are present and are not damaged.
2. Ensure that all latches and hinges are in the correct operating condition.
3. Check the power cords for damage.
4. Check the external signal cables for damage.
5. Check the cover for sharp edges, damage, or alterations that expose the internal parts of the device.
6. Correct any problems that you find.

Checking internal devices

Ensure that you complete an internal device check before you install or service SAN Volume Controller.

About this task

To conduct the internal device check, use the following steps:

Procedure

1. Check for any non-IBM changes that were made to the device. If any are present, obtain the "Non-IBM Alteration Attachment Survey," form number R009, from the IBM branch office. Complete the form and return it to the branch office.
2. Check the condition of the inside of the device for any metal or other contaminants, or any indications of water, other fluid, fire, or smoke damage.
3. Check for any obvious mechanical problems, such as loose components.
4. Check any exposed cables and connectors for wear, cracks, or pinching.

Checking the grounding of a SAN Volume Controller

Ensure that you understand how to check the grounding of a SAN Volume Controller.

About this task

To test the grounding of a SAN Volume Controller node: Follow the steps for the SAN Volume Controller configuration that you are using. Before you start, confirm that you know the SAN Volume Controller model type. Determine the location of the signal cables that are attached to the SAN Volume Controller.

When you are asked to test the grounding continuity, use your local procedures to initiate the test. The test is successful if the measured resistance is 0.1 ohm or less.

Attention: Some electrical circuits can be damaged if the external signal cables are present at the SAN Volume Controller while it is undergoing a grounding test.

Procedure

1. Ensure that the SAN Volume Controller node is powered off. See MAP 5350: Powering off a SAN Volume Controller node in the *IBM SAN Volume Controller Troubleshooting Guide*.
2. Disconnect all signal cables from the SAN Volume Controller node, which includes the following cables:
 - The Fibre Channel cables
 - The Ethernet cable or cables
3. Disconnect the power cable from the site power-distribution unit.
4. Disconnect **both** input power leads from the site power distribution units.
5. Test the grounding continuity between a conductive area on the SAN Volume Controller frame and the ground pin on the plug of each input-power cable.
6. Initiate one of the following procedures after you complete testing the grounding continuity, depending on the outcome of the test.
 - If the test is successful, reconnect any cables that were removed, and power on any SAN Volume Controller nodes that were powered off.
 - If the test was not successful, ensure that all cables are securely connected. If the test still fails, test the individual system components. Before you test the individual components, remove all cables from the components. If any component test fails, replace the component. After you test each component and replace any failing ones, repeat the complete system test by returning to step 1.
 - Test the SAN Volume Controller node, from the frame to the ground pin of the input power receptacle.

Emergency power-off shutdown

The SAN Volume Controller supports emergency power-off (EPO) shutdowns.

Handling static-sensitive devices

Ensure that you understand how to handle devices that are sensitive to static electricity.

Attention: Static electricity can damage electronic devices and your system. To avoid damage, keep static-sensitive devices in their static-protective bags until you are ready to install them.

To reduce the possibility of electrostatic discharge, observe the following precautions:

- Limit your movement. Movement can cause static electricity to build up around you.
- Handle the device carefully, holding it by its edges or frame.
- Do not touch solder joints, pins, or exposed printed circuitry.
- Do not leave the device where others can handle and possibly damage the device.
- While the device is still in its antistatic bag, touch it to an unpainted metal part of the system unit for at least two seconds. (This action removes static electricity from the package and from your body.)
- Remove the device from its package and install it directly into your SAN Volume Controller, without putting it down. If it is necessary to put the device down, place it onto its static-protective bag. (If your device is an adapter, place it component-side up.) Do not place the device onto the cover of the SAN Volume Controller or onto a metal table.
- Take additional care when you handle devices during cold weather. Indoor humidity tends to decrease in cold weather, causing an increase in static electricity.

Environmental notices

The *IBM Systems Environmental Notices* contains all of the required environmental notices for IBM Systems products in English and other languages.

The *IBM Systems Environmental Notices* (<http://ibm.co/1fBgWFI>) includes statements on limitations, product information, product recycling and disposal, battery information, flat panel display, refrigeration and water-cooling systems, external power supplies, and safety data sheets.

About this guide

This guide describes the SAN Volume Controller 2145-SV1 or 2147-SV1 node and the SAN Volume Controller 2145-24F or 2147-24F and 2145-12F or 2147-12F and 2145-92F or 2147-92F expansion enclosures, and provides detailed installation instructions.

The SAN Volume Controller 2147-SV1 is physically identical to the 2145-SV1, but includes three-year Enterprise Class Support and warranty. The SAN Volume Controller 2145-SV1 comes with a one-year warranty; you can purchase additional maintenance agreements for the device.

For the purposes of this guide, references to 2145-SV1 also apply to the 2147-SV1 model.

Use this guide to perform the following tasks:

- Install a new SAN Volume Controller system or extend an existing system.
- Install one or more SAN Volume Controller nodes and SAN Volume Controller expansion enclosures.
- Connect SAN Volume Controller components to a SAN.
- Manage connections to an Ethernet network.
- Verify the completeness of a SAN Volume Controller installation.

The topics within this book provide conceptual, planning, and installation information for the SAN Volume Controller hardware model that was ordered.

Who should use this guide

The intended audience for this guide is the IBM service representative.

This guide should be read by the IBM service representative who is responsible for the initial installation of the SAN Volume Controller.

After the IBM service representative has installed the SAN Volume Controller hardware, use the initialization GUI presented in a web browser of any computer that is directly connected to the technician port to configure the system.

Emphasis

Different typefaces are used in this guide to show emphasis.

The following typefaces are used to show emphasis:

Boldface	Text in boldface represents menu items.
Bold monospace	Text in bold monospace represents command names.
<i>Italics</i>	Text in <i>italics</i> is used to emphasize a word. In command syntax, it is used for variables for which you supply actual values, such as a default directory or the name of a system.

Monospace	Text in monospace identifies the data or commands that you type, samples of command output, examples of program code or messages from the system, or names of command flags, parameters, arguments, and name-value pairs.
-----------	---

SAN Volume Controller library and related publications

Product manuals, other publications, and websites contain information that relates to SAN Volume Controller.

IBM Knowledge Center for SAN Volume Controller

The information collection in the IBM Knowledge Center contains all of the information that is required to install, configure, and manage the system. The information collection in the IBM Knowledge Center is updated between product releases to provide the most current documentation. The information collection is available at the following website:

<http://www.ibm.com/support/knowledgecenter/STPVGU>

SAN Volume Controller library

Unless otherwise noted, the publications in the library are available in Adobe portable document format (PDF) from a website.

ibm.com/shop/publications/order

Click **Search for publications** to find the online publications you are interested in, and then view or download the publication by clicking the appropriate item.

Table 1 lists websites where you can find help, services, and more information.

Table 1. IBM websites for help, services, and information

Website	Address
Directory of worldwide contacts	http://www.ibm.com/planetwide
Support for SAN Volume Controller (2145)	www.ibm.com/support
Support for IBM System Storage® and IBM TotalStorage products	www.ibm.com/support/

Each PDF publication in the Table 2 library is also available in the IBM Knowledge Center by clicking the number in the “Order number” column:

Table 2. SAN Volume Controller library

Title	Description	Order number
<i>IBM SAN Volume Controller Model 2145-SV1 Hardware Installation Guide</i>	The guide provides the instructions that the IBM service representative uses to install the hardware for SAN Volume Controller model 2145-SV1.	GI13-4547

Table 2. SAN Volume Controller library (continued)

Title	Description	Order number
<i>IBM SAN Volume Controller Hardware Maintenance Guide</i>	The guide provides the instructions that the IBM service representative uses to service the SAN Volume Controller hardware, including the removal and replacement of parts.	GC27-2283
<i>IBM SAN Volume Controller Troubleshooting Guide</i>	The guide describes the features of each SAN Volume Controller model, explains how to use the front panel or service assistant GUI, and provides maintenance analysis procedures to help you diagnose and solve problems with the SAN Volume Controller.	GC27-2284
<i>IBM Spectrum Virtualize for SAN Volume Controller and Storwize Family Command-Line Interface User's Guide</i>	The guide describes the commands that you can use from the SAN Volume Controller command-line interface (CLI).	GC27-2287

IBM documentation and related websites

Table 3 lists websites that provide publications and other information about the SAN Volume Controller or related products or technologies. The IBM Redbooks® publications provide positioning and value guidance, installation and implementation experiences, solution scenarios, and step-by-step procedures for various products.

Table 3. IBM documentation and related websites

Website	Address
IBM Publications Center	ibm.com/shop/publications/order
IBM Redbooks publications	www.redbooks.ibm.com/

Related accessibility information

To view a PDF file, you need Adobe Reader, which can be downloaded from the Adobe website:

www.adobe.com/support/downloads/main.html

IBM Publications Center

The IBM Publications Center is a worldwide central repository for IBM product publications and marketing material.

The IBM Publications Center website offers customized search functions to help you find the publications that you need. You can view or download publications at no charge. Access the IBM Publications Center through the following website:

Related websites

The following websites provide information about SAN Volume Controller or related products or technologies:

Type of information	Website
SAN Volume Controller support	www.ibm.com/support
Technical support for IBM storage products	www.ibm.com/support/
IBM Electronic Support registration	www-01.ibm.com/support/electronicssupport/

Sending your comments

Your feedback is important in helping to provide the most accurate and highest quality information.

To submit any comments about this book or any other SAN Volume Controller documentation, send your comments by email to starpubs@us.ibm.com. Include the following information in your email:

- Publication title
- Publication form number
- Page, table, or illustration numbers that you are commenting on
- A detailed description of any information that should be changed

How to get information, help, and technical assistance

If you need help, service, technical assistance, or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you.

Information

IBM maintains pages on the web where you can get information about IBM products and fee services, product implementation and usage assistance, break and fix service support, and the latest technical information. For more information, refer to Table 4.

Table 4. IBM websites for help, services, and information

Website	Address
Directory of worldwide contacts	http://www.ibm.com/planetwide
Support for SAN Volume Controller (2145)	www.ibm.com/support
Support for IBM System Storage and IBM TotalStorage products	www.ibm.com/support/

Note: Available services, telephone numbers, and web links are subject to change without notice.

Help and service

Before calling for support, be sure to have your IBM Customer Number available. If you are in the US or Canada, you can call 1 (800) IBM SERV for help and service. From other parts of the world, see <http://www.ibm.com/planetwide> for the number that you can call.

When calling from the US or Canada, choose the **storage** option. The agent decides where to route your call, to either storage software or storage hardware, depending on the nature of your problem.

If you call from somewhere other than the US or Canada, you must choose the **software** or **hardware** option when calling for assistance. Choose the **software** option if you are uncertain if the problem involves the SAN Volume Controller software or hardware. Choose the **hardware** option only if you are certain the problem solely involves the SAN Volume Controller hardware. When calling IBM for service regarding the product, follow these guidelines for the **software** and **hardware** options:

Software option

Identify the SAN Volume Controller product as your product and supply your customer number as proof of purchase. The customer number is a 7-digit number (0000000 - 9999999) assigned by IBM when the product is purchased. Your customer number should be on the customer information worksheet or on the invoice from your storage purchase. If asked for an operating system, use **Storage**.

Hardware option

Provide the serial number and appropriate 4-digit machine type. For SAN Volume Controller, the machine type is 2145.

In the US and Canada, hardware service and support can be extended to 24x7 on the same day. The base warranty is 9x5 on the next business day.

Getting help online

You can find information about products, solutions, partners, and support on the IBM website.

To find up-to-date information about products, services, and partners, visit the IBM website at www.ibm.com/support.

Before you call

Make sure that you have taken steps to try to solve the problem yourself before you call.

Some suggestions for resolving the problem before calling IBM Support include:

- Check all cables to make sure that they are connected.
- Check all power switches to make sure that the system and optional devices are turned on.
- Use the troubleshooting information in your system documentation. The troubleshooting section of the knowledge center contains procedures to help you diagnose problems.

- Go to the IBM Support website at www.ibm.com/support to check for technical information, hints, tips, and new device drivers or to submit a request for information.

Using the documentation

Information about your IBM storage system is available in the documentation that comes with the product.

That documentation includes printed documents, online documents, readme files, and help files in addition to the knowledge center. See the troubleshooting information for diagnostic instructions. The troubleshooting procedure might require you to download updated device drivers or software. IBM maintains pages on the web where you can get the latest technical information and download device drivers and updates. To access these pages, go to www.ibm.com/support and follow the instructions. Also, some documents are available through the IBM Publications Center.

Sign up for the Support Line Offering

If you have questions about how to use and configure the machine, sign up for the IBM Support Line offering to get a professional answer.

The maintenance that is supplied with the system provides support when there is a problem with a hardware component or a fault in the system machine code. At times, you might need expert advice about using a function that is provided by the system or about how to configure the system. Purchasing the IBM Support Line offering gives you access to this professional advice while deploying your system, and in the future.

Contact your local IBM sales representative or your support group for availability and purchase information.

SAN Volume Controller initial installation overview

The installation and configuration of a SAN Volume Controller system requires the completion of various tasks, some of which are normally completed by an IBM service representative.

Use the installation and configuration procedures in the documents that are listed here. Additional publications are included with some of the hardware components.

When planning, installing, and configuring, have the following SAN Volume Controller information or publications available:

- Information center “Planning” section
- Information center “Configuring” section

See the “Support for SAN Volume Controller (2145)” website for access to SAN Volume Controller publications:

www.ibm.com/support

Planning tasks to complete before installing the SAN Volume Controller

Before you install the SAN Volume Controller, you must complete the following planning tasks or have them completed by an IBM service representative or IBM Business Partner:

1. Verify that all the system installation requirements have been met.

Ensure that space and power requirements are met before you begin the installation.

2. Review SAN fabric and zoning guidelines and develop your SAN Volume Controller system, host systems, and storage controllers plan.

This task helps to assure a seamless configuration.

3. Complete all physical planning charts.

Use the following charts and tables:

- Hardware location chart
- Cable connection table
- Configuration data table

The SAN Volume Controller charts and tables are available at the Support for SAN Volume Controller (2145) website:

www.ibm.com/support

You can save, edit, and share the charts and tables between members of the installation team.

Hardware installation tasks that an IBM service representative performs

To install the SAN Volume Controller hardware, an IBM service representative must complete the following tasks:

1. Verify that you have all of the required parts for the installation.

Chapters 2, 3, and 4 of the *IBM SAN Volume Controller Model 2145-SV1 Hardware Installation Guide* include lists of all the parts that are required for installation. The lists include the SAN Volume Controller nodes, optional SAN Volume Controller expansion enclosures, and associated parts.

2. Install the hardware.

Chapters 2, 3, and 4 describe the procedures for installing the SAN Volume Controller nodes and optional expansion enclosures.

Configuration tasks

To configure a SAN Volume Controller system, you must complete the following tasks or have them completed by an IBM service representative or IBM Business Partner:

1. Register your product.

To receive product support notifications from IBM, you must register your product. To register your product, click **Register** at this website:
www.ibm.com/support

2. Create a system.

Use the System Initialization GUI presented in a web browser of a computer that is directly connected to the technician port for this procedure, which is completed in two phases:

- a. Use the Create Cluster action on the System Initialization GUI accessed via the technician port of one of the SAN Volume Controller nodes that you have installed to create the system.

This procedure is usually performed by an IBM representative or IBM Business Partner using information that the customer provides.

- b. Follow the Setup wizard in the management GUI to perform the initial system configuration.

Chapter 1. Preparing to install the SAN Volume Controller

Before installing the SAN Volume Controller, you must meet the hardware, software, and environmental requirements (including a suitable rack cabinet physical location). Learning about the controls, indicators, operator-information panel, and connectors will prepare you for the installation procedures.

The SAN Volume Controller combines software and hardware into a comprehensive, modular appliance that uses symmetric virtualization.

Symmetric virtualization is achieved by creating a pool of managed disks (MDisks) from the attached storage systems. Those storage systems are then mapped to a set of volumes for use by attached host systems. System administrators can view and access a common pool of storage on the storage area network (SAN). This functionality helps administrators to use storage resources more efficiently and provides a common base for advanced functions.

Each SAN Volume Controller node is an individual server in a SAN Volume Controller clustered system on which the SAN Volume Controller software runs.

The nodes are always installed in pairs; a minimum of one pair and a maximum of four pairs of nodes constitute a *system*. Each pair of nodes is known as an *I/O group*.

Applicable machine types and models

The following machine types and models apply to the SAN Volume Controller.

Table 5. Machine types and models

Machine type / model	Description	Height in rack units
2145-SV1	SAN Volume Controller node	2U
2147-SV1	SAN Volume Controller node with three-year warranty and Enterprise Class Support	2U
2145-12F	SAN Volume Controller SAS expansion enclosure with one-year warranty for up to 12 3.5-inch SAS drives	2U
2147-12F	SAN Volume Controller SAS expansion enclosure with three-year warranty and Enterprise Class Support for up to 12 3.5-inch SAS drives	2U
2145-24F	SAN Volume Controller SAS expansion enclosure with one-year warranty for up to 24 2.5-inch SAS drives	2U
2147-24F	SAN Volume Controller SAS expansion enclosure with three-year warranty and Enterprise Class Support for up to 24 2.5-inch SAS drives	2U

Table 5. Machine types and models (continued)

Machine type / model	Description	Height in rack units
2145-92F	SAN Volume Controller high-density SAS expansion enclosure with one-year warranty for up to 92 SAS drives	5U
2147-92F	SAN Volume Controller high-density SAS expansion enclosure with three-year warranty and Enterprise Class Support for up to 92 SAS drives	5U

SAN Volume Controller operating environment

To use the system, you must meet the minimum hardware and software requirements and ensure that other operating environment criteria are met.

Minimum requirements

You must set up your SAN Volume Controller operating environment according to the following requirements:

- At least one pair of SAN Volume Controller nodes
- A 19-inch rack in which to mount the enclosures

SAN Volume Controller 2145-SV1 node features

The SAN Volume Controller 2145-SV1 contains:

- At least one Fibre Channel adapter or one 10 Gbps Ethernet adapter
- Optional second, third, and fourth Fibre Channel adapters
- 64 - 256 GB memory
- Two eight-core processors
- Dual redundant power supplies
- Up to 20 SAN Volume Controller expansion enclosures to house optional SAS drives
- iSCSI host attachment (10 Gbps Ethernet) electrical and optional optical
- Support for optional IBM Real-time Compression™

Rack cabinet physical location

Before you install the SAN Volume Controller components, you must ensure that a suitable rack cabinet location is available.

Refer to the “Planning” section of the documentation for full details of how to locate the SAN Volume Controller components in a rack cabinet. Key points to consider:

- Plan for the 2145-SV1 nodes to be installed in a cabinet above existing SAN Volume Controller components.
- Do not sandwich less deep units between deeper ones.
- Allow spare rack unit space for cable runs and service access.

SAN Volume Controller 2145-SV1 front panel controls and indicators

The controls and indicators on the front panel are used for power and to indicate information such as system activity, node failures, and node identification.

Figure 1 shows the controls and indicators on the front panel of the SAN Volume Controller 2145-SV1.

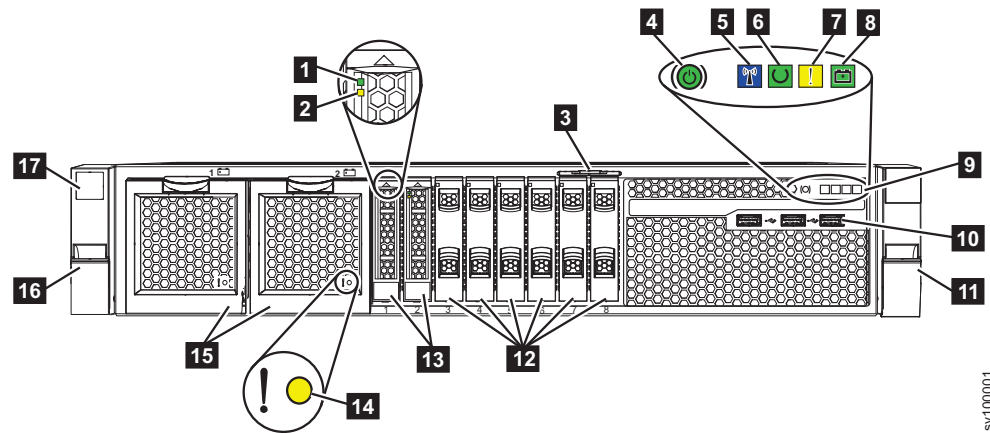


Figure 1. SAN Volume Controller 2145-SV1 front panel

- 1** Boot drive activity LED
- 2** Boot drive status LED
- 3** Pullout tab showing 11S serial number
- 4** Power-control button and power-on LED
- 5** Identify LED
- 6** Node status LED
- 7** Node fault LED
- 8** Battery status LED
- 9** Operator-information panel
- 10** Front USB ports 1-3
- 11** Right side latch (releases chassis to slide out on rails)
- 12** Drive slot fillers (no empty slots permitted)
- 13** Boot drives
- 14** Battery fault LED
- 15** Batteries
- 16** Left side latch (releases chassis to slide out on rails)
- 17** Machine type and model (MTM) and serial number

Boot drive activity LED

The green drive activity LED indicates one of the following conditions.

Off The drive is not ready for use.

Flashing

The drive is in use.

On The drive is ready for use, but is not in use.

Boot drive status LED

The amber drive status LED indicates one of the following conditions.

Off The drive is in a good state or has no power.

Flashing
The drive is being identified.

On The drive has failed.

Battery fault LED

The amber Battery fault LED indicates one of the following conditions.

Off The battery is functioning normally.

Flashing
The battery is being identified.

On The battery has failed.

SAN Volume Controller 2145-SV1 operator-information panel

The operator-information panel contains buttons and indicators such as the power-control button, and LEDs that provide node information.

Figure 2 shows the operator-information panel for the SAN Volume Controller 2145-SV1.

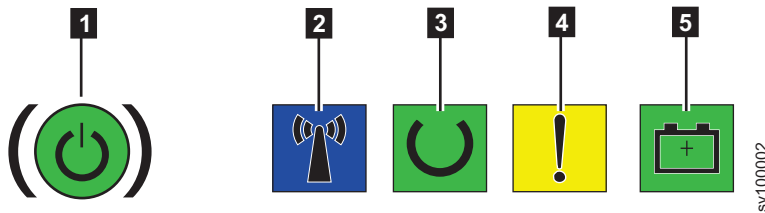


Figure 2. SAN Volume Controller 2145-SV1 operator-information panel

- 1** Power-control button and power-on LED
- 2** Identify LED
- 3** Node status LED
- 4** Node fault LED
- 5** Battery status LED

Power LED

The green power LED indicates one of the following power conditions.

Off One or more of the following are true:

- No power is present at the power supply input.
- The power supply has failed.
- The LED has failed.

On The SAN Volume Controller node is turned on.

Blinking

The SAN Volume Controller node is turned off, but is still connected to a power source.

Power button

The power button turns main power on or off for the SAN Volume Controller.

- To turn on the power, press and release the power button.
- To turn off the power, press and release the power button. For more information about what to check before you turn off the SAN Volume Controller node, see “MAP 5350: Powering off a node.”

Attention: When the node is operational and you press and immediately release the power button, the SAN Volume Controller writes its control data to its internal disk and then turns off. This process can take up to five minutes.

Identify LED

This LED blinks if the Identify button on the back of node is pressed. The Identify LED begins to blink on both the front and rear panels. Use this feature to find a specific node in the data center. After the SAN Volume Controller system is initialized and initial setup is completed, you can use the Management GUI to identify a node by making the Identify LED on the node blink.

Node status LED

The green Node status LED has the following states:

Off The SAN Volume Controller software is not running or cannot communicate with this LED.

On This node is active in a SAN Volume Controller system.

Slow blink

This node is not active. It has Candidate or Service status.

Fast blink

The node is dumping cache and state data to the local disk in anticipation of a system reboot from a pending power-off action or other controlled restart sequence.

Node fault LED

The yellow Node fault LED has the following states:

Off No warning or critical error is shown in the baseboard management controller (BMC) event log, and no fatal node error has been reported by the SAN Volume Controller software.

On The SAN Volume Controller software indicates a fatal node error.

Blinking

A warning or critical error is shown in the BMC event log.

Battery status LED

The green battery status LED has the following states:

- Off** Hardened data will not be saved if there is power loss or the SAN Volume Controller software is not running.
- On** Battery charge level is sufficient for the hardened data to be saved twice if power to the node is lost.
- Slow blink**
Battery charge level is sufficient for the hardened data to be saved once if power to the node is lost.
- Fast blink**
Battery charge level is too low for the hardened data to be saved if power to the node is lost. Batteries are charging.

SAN Volume Controller 2145-SV1 rear-panel indicators

The rear-panel indicators consist of LEDs that indicate the status of the Fibre Channel ports, Ethernet connection and activity, power, and electrical current.

Figure 3 shows the rear-panel indicators on the SAN Volume Controller 2145-SV1 back-panel assembly.

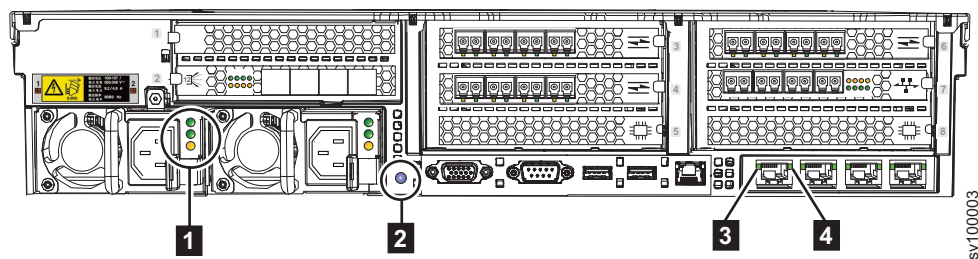


Figure 3. SAN Volume Controller 2145-SV1 rear-panel indicators

- 1** AC, DC, and power-supply fault LEDs
- 2** Identify button and LED
- 3** Ethernet-link LED
- 4** Ethernet-activity LED

Fibre Channel LEDs

The Fibre Channel LEDs indicate the status of the Fibre Channel ports on the SAN Volume Controller 2145-SV1 node.

The SAN Volume Controller 2145-SV1 uses two LEDs per Fibre Channel port, which are located directly under the port. The following figure shows the location of the LEDs.

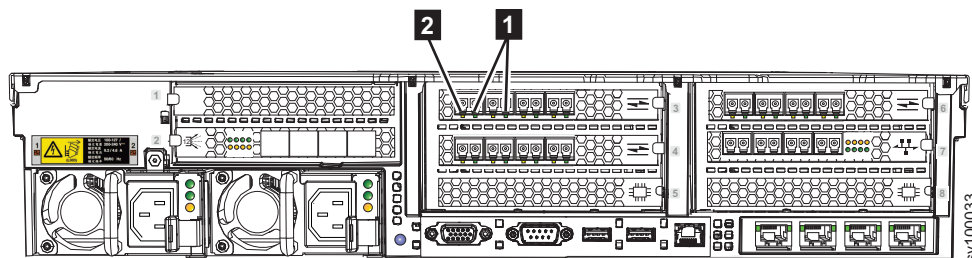


Figure 4. Fibre Channel LEDs

- 1** Green LEDs
- 2** Amber LEDs

The following table lists the link status values for the Fibre Channel LEDs.

Table 6. Link status values for Fibre Channel LEDs

Green LED	Amber LED	Meaning
Off	Off	One of the following situations is in effect: <ul style="list-style-type: none"> The port is not configured in flex hardware. The port is not active in the current profile. For example, in a 2 x 16 Gb profile, 2 ports are inactive.
Off	On	The port is configured, but the link is not detected at the transport layer. This situation is the result of the port not being connected or of a failed link negotiation with the switch.
On	Off	The link is up and running at the expected port speed. This display does not necessarily imply logical connectivity, that is, completion of FLOGI or FIP.
On	On	The link is up, but running at a degraded speed.

SAS port LEDs

LEDs on the rear of the SAN Volume Controller 2145-SV1 node indicate the status of the SAS port.

The SAN Volume Controller 2145-SV1 uses two rows of LEDs on the optional 12 Gbps SAS adapter to show the status of the SAS port. The LEDs are arranged in the same order as the ports. Those four ports are immediately to the right of the LEDs and are numbered from left to right. The following figure shows the location of the LEDs.

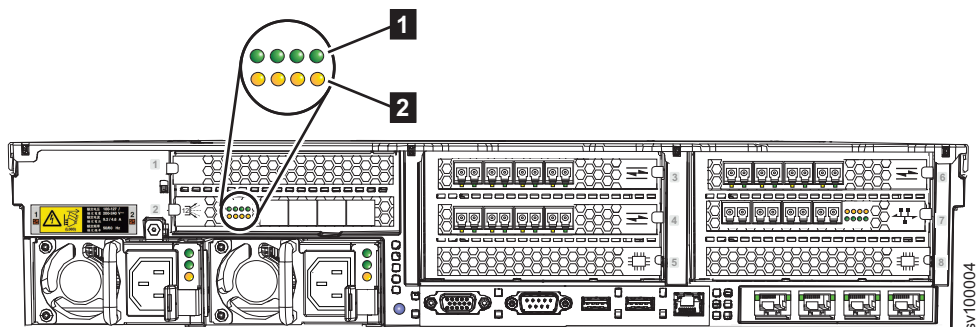


Figure 5. SAS port LEDs

- 1** Link LEDs
- 2** Fault LEDs

The following table lists the states and meanings for these LEDs.


Table 7. States and meanings for SAS LEDs

Name	Color	State	Meaning
Link	Green	Off	No link connection on any lane.
		On	A connection exists on at least one lane.
Fault	Amber	Off	No fault. All four physical links have a link connection.
		On	One of the following error conditions occurred: <ul style="list-style-type: none"> • 1, 2, or 3 lanes are connected, but not all 4. • Not all 4 lanes are running at the same speed. • Not all 4 all lanes are connected to the same remote port. • An unsupported device is connected to the port.

AC, DC, and power-supply error LEDs

The AC, DC, and power-supply error LEDs indicate whether the node is receiving electrical current.

The following figure shows the location of the SAN Volume Controller 2145-SV1 AC, DC, and power-supply error LEDs.

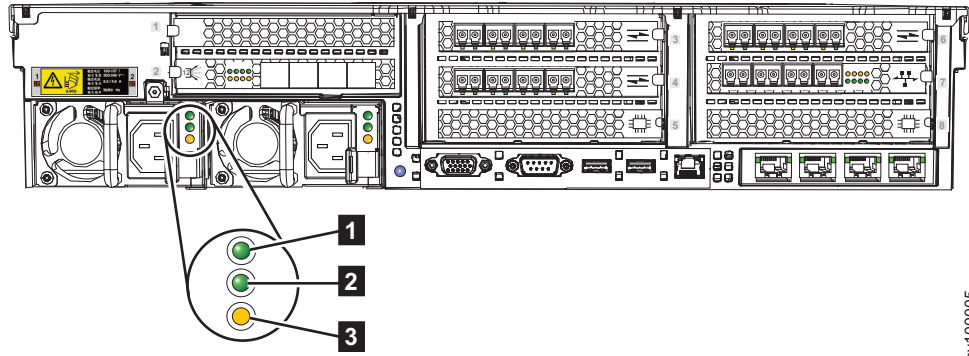

sv100005

Figure 6. SAN Volume Controller 2145-SV1 AC, DC, and power-error LEDs


Each of the two power supplies has its own set of LEDs.

- 1** AC input is working properly.
- 2** DC output is working properly.
- 3** A power supply fault has occurred in this unit.

Identify button and LED

Identify LEDs are located on both the front and the rear of the SAN Volume Controller. An Identify button is located on the rear.

The following figure shows the location of the button and LED.

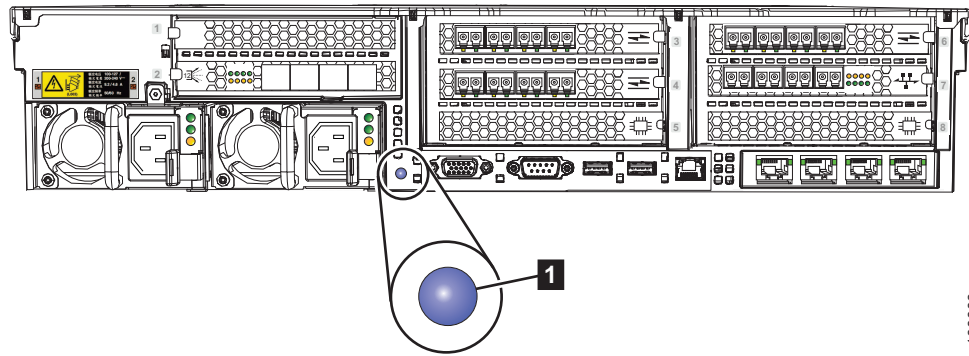

sv100006

Figure 7. Identify button and LED

Press the Identify button on the rear panel to trigger flashing in the Identify LEDs on both the front and rear of the system. Use the flashing to distinguish a particular node when you move from the rear of the rack to the front. You can also trigger flashing from the management GUI by selecting **Monitoring > System**. Right-click the node and select **Identify**.

SAN Volume Controller 2145-SV1 Ethernet port LEDs

Ethernet link and activity LEDs indicate the status of each Ethernet port.

- An Ethernet-link LED indicates that the node is communicating on the network that is connected to the port.
- An Ethernet-activity LED indicates an active connection on the port.

Ethernet ports on the system board

The operator-information panel LEDs refer to the Ethernet ports that are mounted on the system board (Figure 8).

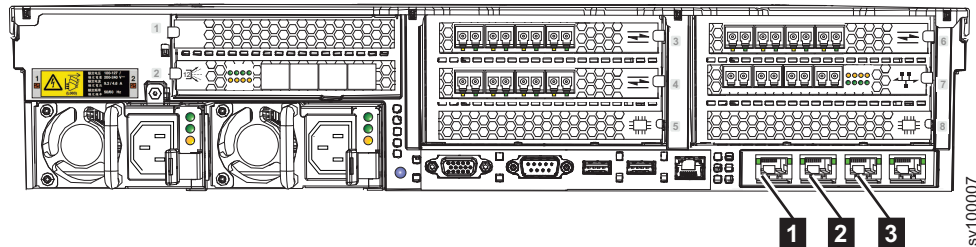


Figure 8. Ethernet ports on the system board

- 1** 10 Gbps Ethernet port 1
- 2** 10 Gbps Ethernet port 2
- 3** 10 Gbps Ethernet port 3

The status of these ports is also indicated by LEDs beside each port (Figure 9).

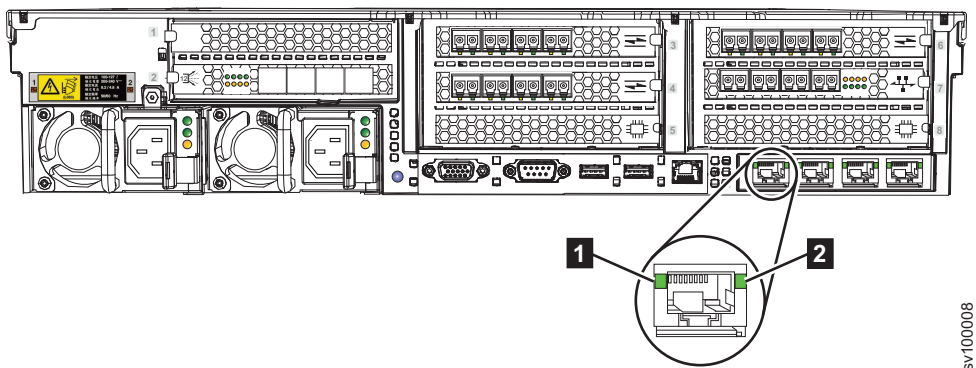


Figure 9. Ethernet port LEDs on the system board

- 1** Ethernet link LED
- 2** Ethernet activity LED

The Ethernet-link LED indicates that the node is communicating on the network that is connected to the port. The Ethernet-activity LED indicates an active connection on the port.

Ethernet ports on a 10 Gbps Ethernet adapter

If the SAN Volume Controller 2145-SV1 is equipped with a 10 Gbps Ethernet adapter, the port activity is not reflected on the activity LEDs of the operator-information panel. The activity of those ports is indicated by LEDs on the adapter itself, which are visible from the rear of the SAN Volume Controller 2145-SV1 (as shown in Figure 10 on page 11). The adapter has two LEDs per port, arranged one above the other. These pairs of LEDs are arranged in the same order as the ports.

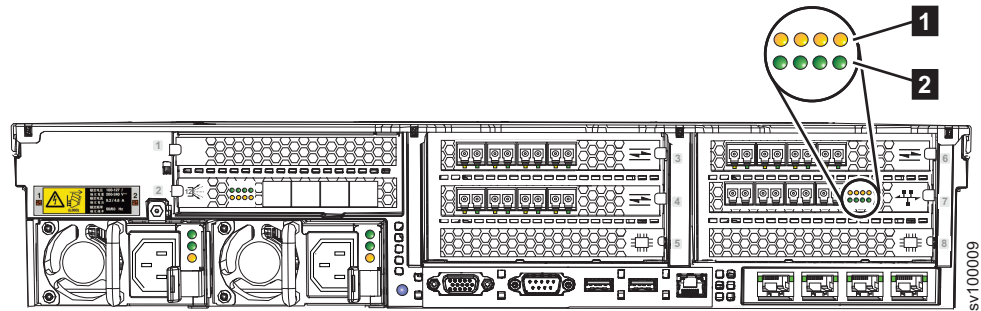


Figure 10. Ethernet port LEDs on a 10 Gbps Ethernet adapter

- 1** 10 Gbps Ethernet fault LEDs.
- 2** 10 Gbps Ethernet link LEDs.

SAN Volume Controller 2145-SV1 connectors

The SAN Volume Controller 2145-SV1 includes multiple external connectors for data, video, and power.

Figure 11 shows the external connectors on the SAN Volume Controller 2145-SV1 back panel assembly.

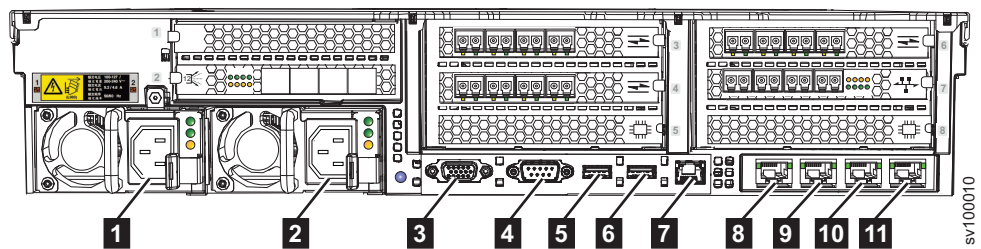


Figure 11. Connectors on the rear of the SAN Volume Controller 2145-SV1

- 1** Power supply 1
- 2** Power supply 2
- 3** Video port
- 4** Serial port (not used)
- 5** Rear USB port 1
- 6** Rear USB port 2
- 7** Unused Ethernet port
- 8** 10 Gbps Ethernet port 1
- 9** 10 Gbps Ethernet port 2
- 10** 10 Gbps Ethernet port 3
- 11** Technician port (Ethernet)

Figure 12 on page 12 shows the type of connector that is on each power-supply assembly.

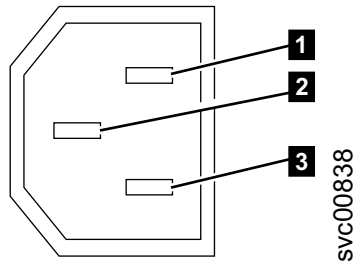


Figure 12. Power connector

- 1** Neutral
- 2** Ground
- 3** Live

Note: Optional host interface adapters provide additional connectors for 10Gbps Ethernet, Fibre Channel, or SAS.

SAN Volume Controller 2145-SV1 ports used during service procedures

The SAN Volume Controller 2145-SV1 contains a number of ports that are used during service procedures.

The following figure shows ports that are used during service procedures.

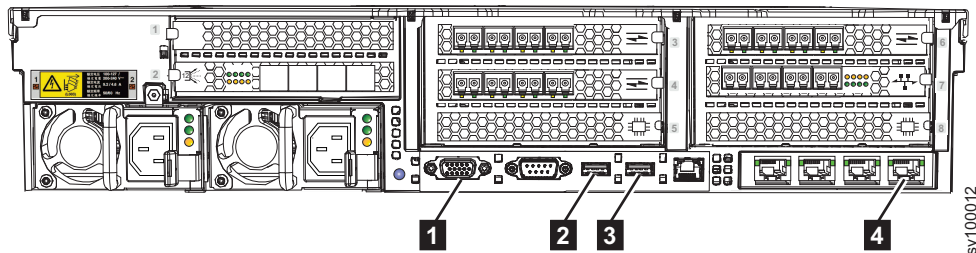


Figure 13. SAN Volume Controller 2145-SV1 service ports

- 1** VGA port
- 2** Rear USB port 1
- 3** Rear USB port 2
- 4** Technician port (Ethernet)

Any of these ports other than the Technician port can be used during normal operation. Connect a device to the Technician port only when you are directed to do so by a service procedure or by your IBM service representative.

SAN Volume Controller 2145-SV1 unused ports

The SAN Volume Controller 2145-SV1 includes one Ethernet port and one serial port that are not used.

The following figure shows the Ethernet port that is not used during service procedures or normal operation. This port is disabled in software to make the port inactive.

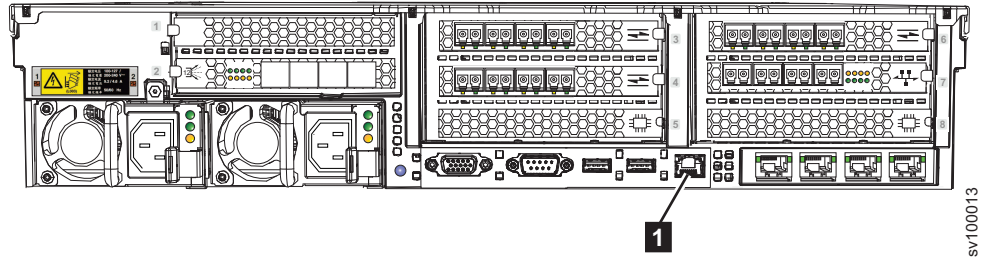


Figure 14. SAN Volume Controller 2145-SV1 unused Ethernet port

- 1** Unused Ethernet port

Although not disabled, the serial port is also not used in normal operation.

SAN Volume Controller 2145-SV1 Fibre Channel and Ethernet port numbers

Fibre Channel port numbers for the SAN Volume Controller 2145-SV1 vary, depending on how many host interface adapters are installed, and in which slots. Port numbers also depend on the configuration of the 10Gbps Optical Ethernet adapter.

Figure 15 on page 14 shows a typical configuration of the SAN Volume Controller 2145-SV1 with the following adapters installed:

Table 8. The PCIe expansion slots in which an adapter can be used

PCIe expansion slot number	Adapter
1	Not used
2	12 Gbps SAS adapter
3	16 Gbps Fibre Channel adapter or 10 Gbps Ethernet adapter*
4	16 Gbps Fibre Channel adapter or 10 Gbps Ethernet adapter
5	Compression Accelerator
6	16 Gbps Fibre Channel adapter or 10 Gbps Ethernet adapter
7	16 Gbps Fibre Channel adapter or 10 Gbps Ethernet adapter
8	Compression Accelerator
* Slots 3, 4, 6, and 7 can contain a 16G FC or a 10G Ethernet adapter, but only one 10 Gbps Ethernet adapter is supported.	

The following figure shows the physical Fibre Channel port numbers when the 10 Gbps Optical Ethernet adapter is configured for Fibre Channel over Ethernet (FCoE) communications.

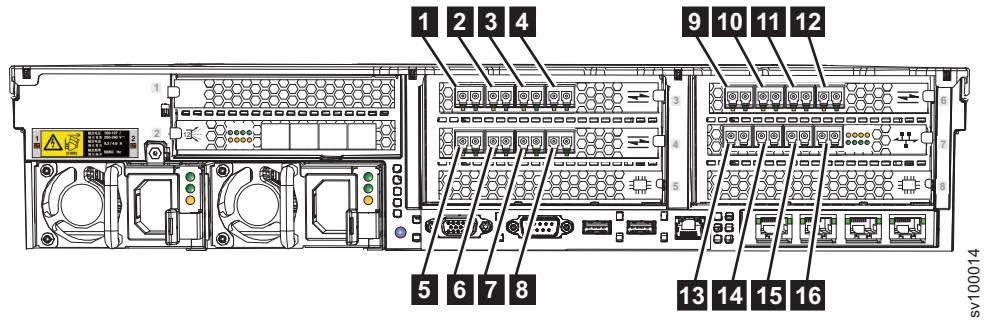


Figure 15. Fibre Channel port numbers in a typical configuration

1 - 16 Fibre Channel ports 1-16

Figure 16 shows the Ethernet port numbers for the SAN Volume Controller 2145-SV1 when the 10 Gbps Optical Ethernet adapter is configured for iSCSI communications.

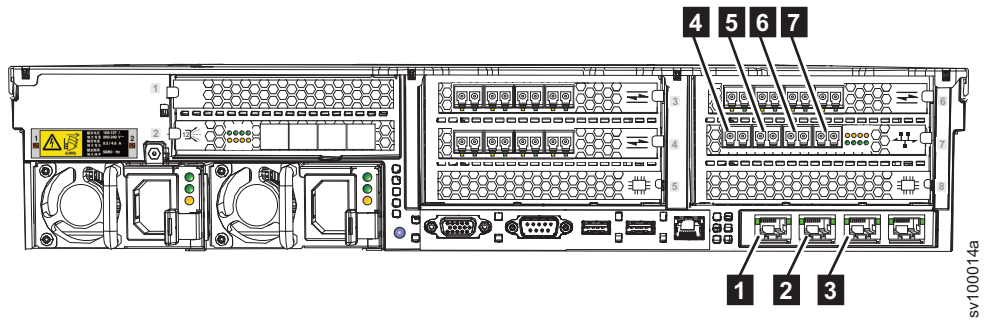


Figure 16. Ethernet port numbers for iSCSI communication

1 - 3 10 Gbps Ethernet ports 1-3

4 - 7 10 Gbps optical Ethernet ports 4-7

Chapter 2. Installing the SAN Volume Controller 2145-SV1 hardware

There are several steps that you must complete to prepare, and then install the SAN Volume Controller hardware.

Before you begin

Note: If you are adding a new I/O group to an existing system, there is no need to turn off the existing, operating system nodes.

Procedure

To install the SAN Volume Controller hardware, complete the following steps.

1. Prepare for the hardware installation by confirming that you have all the planning information and parts that you require.
2. Install the support rails for the nodes.
3. Install the cable-management arms for the nodes.
4. Install the nodes.
5. Optionally install the expansion enclosures.
6. Connect the Fibre Channel and Ethernet cables to the nodes.
7. Optionally connect the nodes to the expansion enclosures.
8. Verify that the nodes are operational.

Results


After you finish these steps, the hardware installation is complete. The customer is responsible for all configuration tasks.

Preparing for the SAN Volume Controller 2145-SV1 hardware installation

You must prepare for the installation of the SAN Volume Controller.

Before you begin

Figure 17 on page 16 shows the major hardware components required.

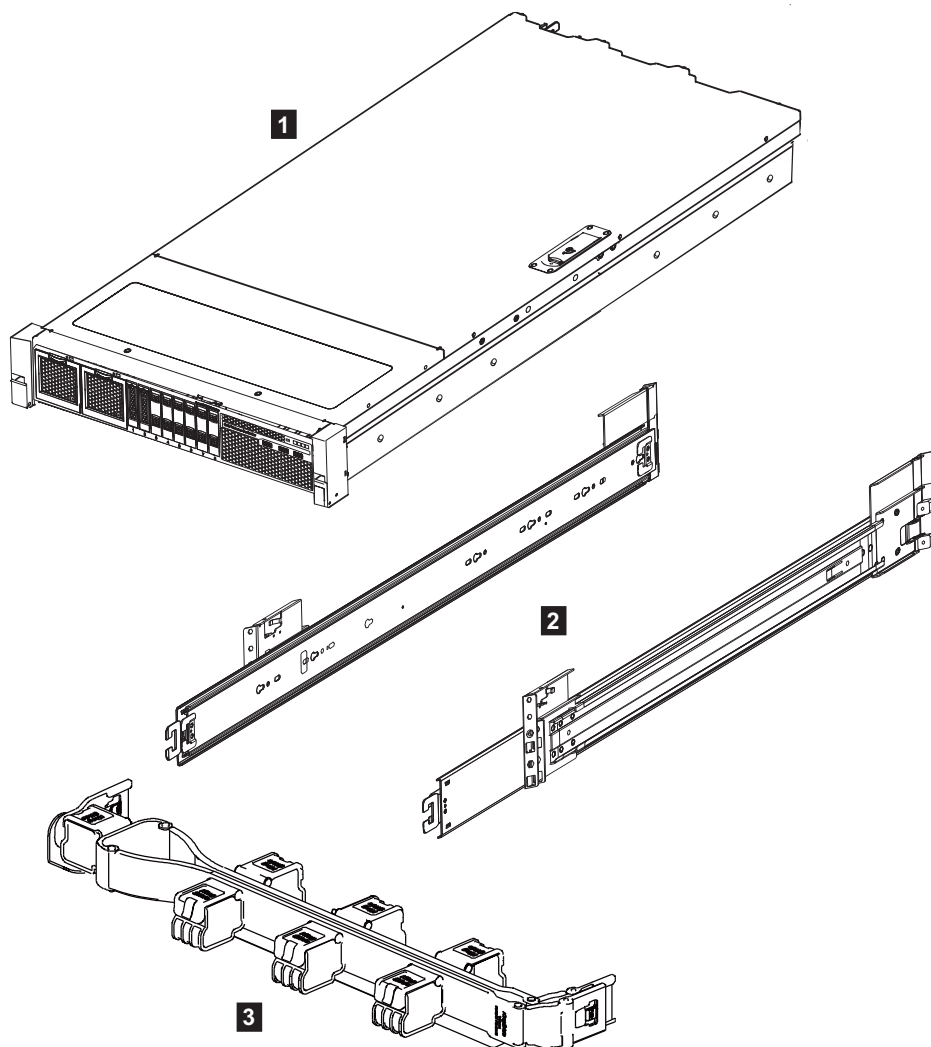

sv100015

Figure 17. Parts provided for SAN Volume Controller 2145-SV1 hardware installation in a rack

- 1** SAN Volume Controller 2145-SV1 node
- 2** SAN Volume Controller 2145-SV1 support rails
- 3** SAN Volume Controller 2145-SV1 cable-management arm assembly

Country-specific power cables come with the SAN Volume Controller node. These cables are intended for your country-specific power sockets.

Before you start the installation, verify that all the parts that were ordered have been received and that all the optional features are fitted. Verify that you know the quantity of nodes and optional features that were ordered.

A label on the main shipping box indicates the features that were shipped.

Note: You must install at least two SAN Volume Controller nodes.

Procedure

To prepare for installation, complete the following steps.

1. Ensure that you have everything you need for installation, including the planning tables and charts. You can obtain the planning tables and charts from www.ibm.com/support. The planning information provides guidelines for completing the planning tables and charts. These tables include the location of hardware, cable connection, and configuration data information that you need to complete the installation procedures. Go no further with these instructions until you are satisfied that all the information is correct and valid.
2. The label on the main shipping box indicates features that were shipped. Make sure that the contents and quantity match the order. The following feature codes are included:
 - Each of the following:
 - Feature code 3001: initial SAN Volume Controller 2145-SV1 node, quantity 1
 - Feature code 3002: additional SAN Volume Controller 2145-SV1 node, quantity 1
 - Optional feature code 3003: spare SAN Volume Controller 2145-SV1 node.
 - Optional features as listed in “Optional features” in the documentation.
 - One of the following country-specific SAN Volume Controller 2145-SV1 power cable feature codes: 9716, 9717, 9718, 9719, 9720, 9721, 9722, 9723, 9725, 9726, 9731, 9732, 9733, 9734, 9735, 9736, or 9737.
3. Check that the correct part set has been shipped for the feature codes. Unless otherwise stated, the feature code contents are in the main box.
 - Feature codes 3001 and 3002 ship the same parts. Verify that you have the listed parts:
 - SAN Volume Controller 2145-SV1 node
 - Part number 01EJ334: SAN Volume Controller 2145-SV1 rail kit, quantity 1
 - Part number 01EJ335: SAN Volume Controller 2145-SV1 Cable-management arm assembly, quantity 1
 - The support rail kit contains a number of components within its box. Verify that you have the following items:
 - One left side rail
 - One right side rail
 - Four M6 screws
 - Feature codes 9716, 9717, 9718, 9719, 9720, 9721, 9722, 9723, 9725, 9726, 9731, 9732, 9733, 9734, 9735, 9736, and 9737 each ship a single power cable. Use the power plug that is appropriate to your location unless you are connecting to a rack-mounted power distribution unit.
 - SAN Volume Controller publications: ship group (one box of publications per pair of 2145-SV1 nodes):
 - SAN Volume Controller Publications CD
 - *SAN Volume Controller Read First*
 - *IBM Systems Safety Notices* CD
 - *IBM SAN Volume Controller Model 2145-SV1 Hardware Installation Guide*
 - *SAN Volume Controller License Information for SAN Volume Controller* CD
 - *SAN Volume Controller Statement of Limited Warranty* flyer
 - *Environmental Notices* CD
 - IBM license information for machine code
 - Other miscellaneous flyers

If feature codes 5305, or 5325 are not ordered for Fibre Channel connection, you must supply your own fiber-optic Fibre Channel cables. Make sure that four cables per adapter are available.

If feature code AH12 is ordered, and feature codes 5305 and 5325 or ACSS are not ordered for Ethernet connection, the customer must supply their own OM2 or OM3 fiber-optic cables. Make sure that four cables per node are available.

At least one network adapter feature code AH14 or AH12 is fitted in each 2145-SV1.

Note: Part numbers and feature codes are subject to change between SAN Volume Controller releases. The numbers listed here might not always reflect what you receive.

Installing the SAN Volume Controller 2145-SV1

You must complete several tasks to install the SAN Volume Controller 2145-SV1 node.

About this task

Installing a SAN Volume Controller 2145-SV1 node consists of the following tasks:

1. Spitting the support rails, attaching one part to the node and the other to the rack.
2. Installing the node in the rack, rejoining the support rails.
3. Installing the cable-management arm in the rack cabinet.

Installation guidelines

Before you install the support rails for the 2145-SV1 node, review the following guidelines.

- Do not install a unit in a rack where the internal-rack ambient temperature exceeds the maximum manufacturer-recommended ambient temperature for *any* of your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Ensure that the equipment is connected properly to the supply circuit so that the circuits do not overload and compromise the supply wiring or overcurrent protection.
- Plan the device installation by starting at the bottom of the rack cabinet to ensure that the rack is stable and cannot tip over.
- Install the heaviest device in the bottom of the rack cabinet.

Installing the support rails: 2145-SV1

You must install the support rails before you install a SAN Volume Controller 2145-SV1 node in a rack.

Procedure

To install the support rails, complete the following steps.

1. Locate the hardware that is used to install the rails, including the rail-mounting pins, M5 screws, and M5 washers. Set the hardware aside for use later in the installation process.

2. Select an available 2U space (depending on the node you are installing) in your rack to install your node, as shown in Figure 18.

Note: When you install a SAN Volume Controller 2145-SV1, be sure to install the slide rails in the bottom U of the 2U area in the rack.

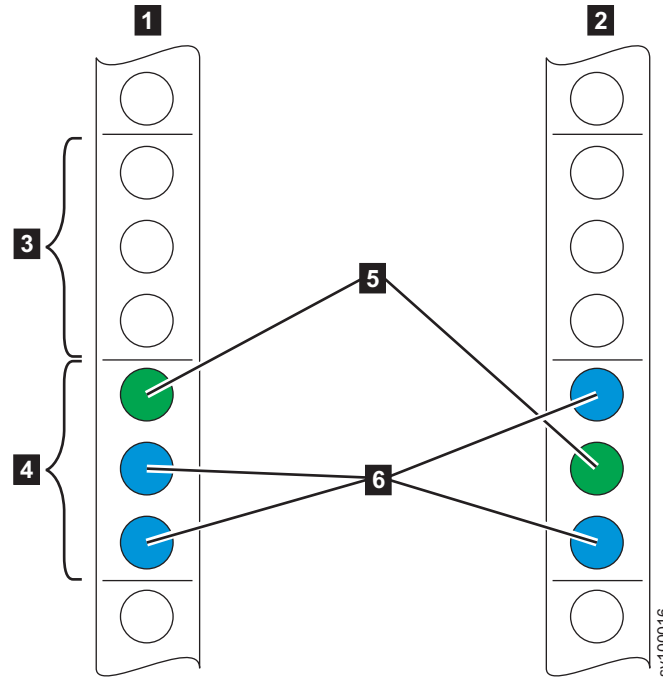


Figure 18. Identifying rack space

- 1 Front
- 2 Rear
- 3 Upper U (for 2U system)
- 4 Lower U
- 5 Location of optional screws for securing enclosure to rack
- 6 Location of rail-mounting pins

3. Detach the inner section of one three-part rail, as shown in Figure 19.

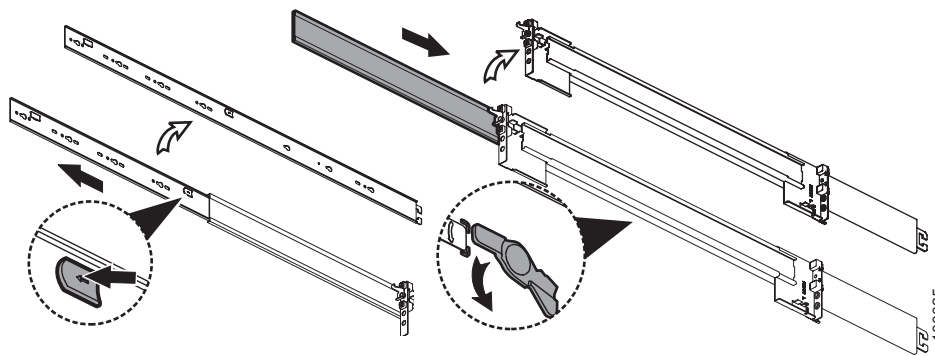


Figure 19. Detaching the inner rail section

- a. Pull the tab forward.

- b. Turn the rotation plate upward.
 - c. Slide the middle section back.
4. Install the inner section of the rail onto the chassis. No screws are required. Fit the holes in the inner rail section over the heads of the pins on the side of the appliance, then slide the rail toward the rear of the appliance to lock, as shown in Figure 20.

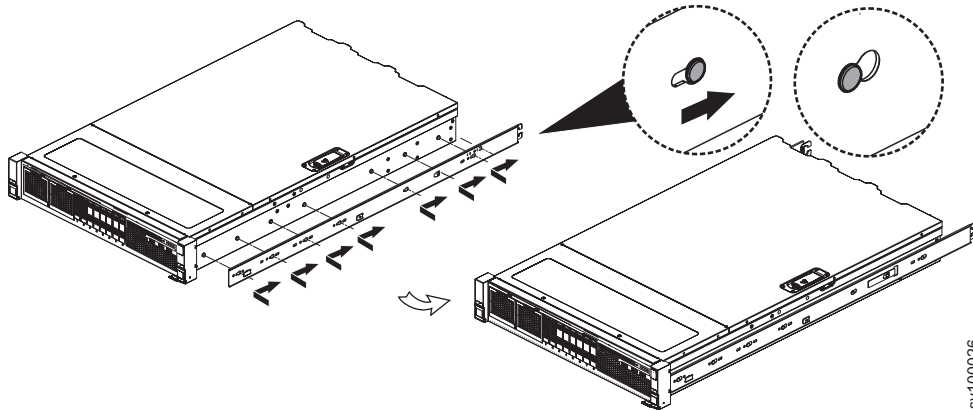


Figure 20. Attach inner rail section to chassis

5. Repeat steps 3 on page 19-4 for the opposite rail.
6. Install the outer section of the rail to the front frame, as shown in the following figure.

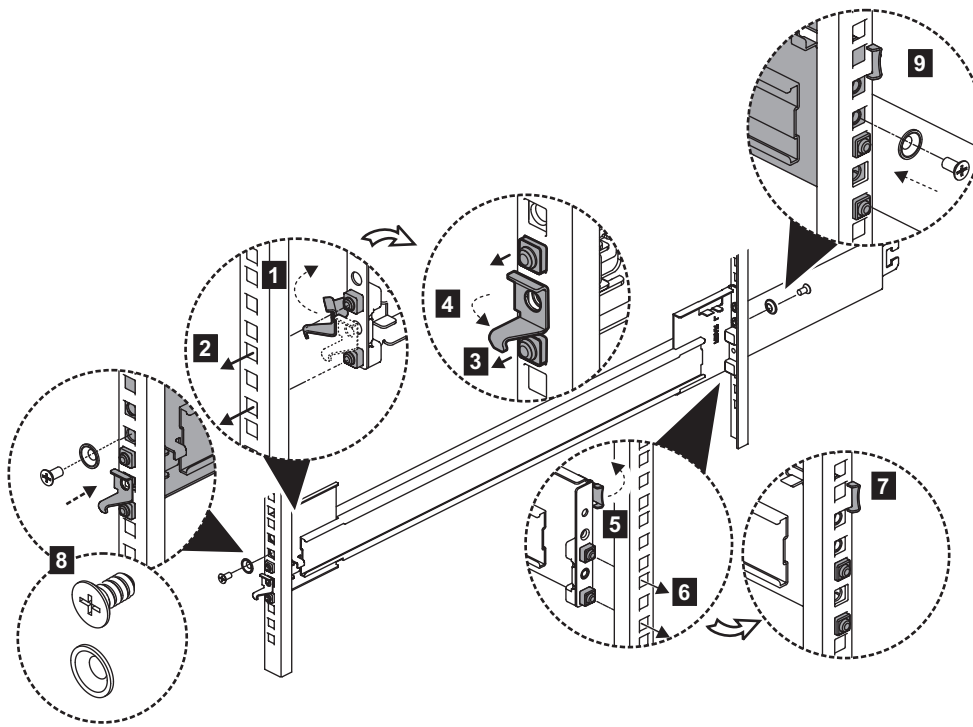


Figure 21. Install the bracket assembly to the frame

- a. Open the front latch hook (**1**).
 - b. Fit the tool-less rail-mounting pin to the front rack post (**2**).
 - c. Click the rail-mounting pin into place (**3**).
 - d. Close the front latch hook (**4**).
7. Install the outer section of the rail to the rear frame, as shown in Figure 21 on page 20.
 - a. Open the rear latch hook (**5**).
 - b. Click the rear bracket into place on the rear frame (**6**).
 - c. Close the rear latch hook (**7**).
 8. Using an M5 x 10 mm screw and M5 washer, anchor the front bracket to the front frame (**8**).
 9. Using an M5 x 10 mm screw and M5 washer, anchor the rear bracket to the rear frame (**9**).
 10. Repeat steps 6 on page 20-9 for the opposite rail.

Installing the SAN Volume Controller 2145-SV1 in a rack

After you install the support rails, you can install the SAN Volume Controller 2145-SV1 node in the rack.

Before you begin

CAUTION:

To avoid any hazard from the rack tipping forward when devices are installed, observe all safety precautions for the rack into which you are installing the device.

CAUTION:

The weight of this part or unit is between 18 and 32 kg (39.7 and 70.5 lb). It takes two persons to safely lift this part or unit. (C009)

Procedure

To install the SAN Volume Controller 2145-SV1 node in the rack, complete the following steps.

1. Fully extend the middle section of the rail from the outer section on both sides and lock it in place.

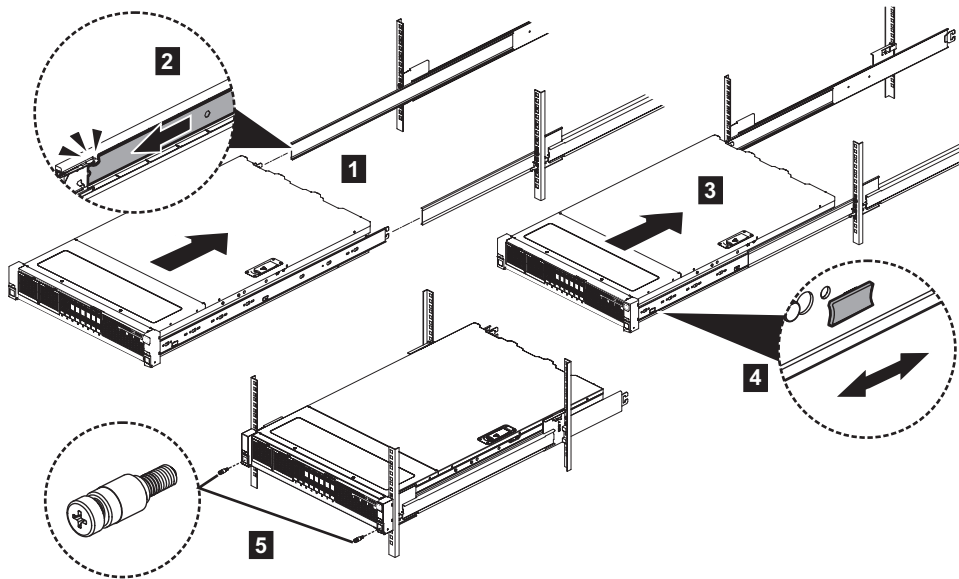


Figure 22. Insert the chassis into the rack

2. Make sure that the ball bearing retainer is located at the front of the middle section of the rail.
3. With the help of multiple persons, lift the chassis until the inner section of the rail (attached to the chassis) is aligned with the middle section (**1**).
4. Insert the chassis and inner member into the middle section of the rail until it stops (**2** , **3**).
5. Pull or push the release tab to unlock (**4**), and then retract the chassis into the rack.
6. If you ship the rack with the chassis attached, tighten the shipping screws in the front of the chassis before you ship the rack (**5**).


Installing the cable management arm assembly for the SAN Volume Controller 2145-SV1

The SAN Volume Controller 2145-SV1 uses a cable management arm (CMA) assembly to route and secure power and data cables.

About this task

- The CMA assembly can be installed on either side of the node.
- The inner rail of the CMA assembly must be on top to work correctly.

Figure 23 on page 23 shows the parts that are used to install the CMA assembly.

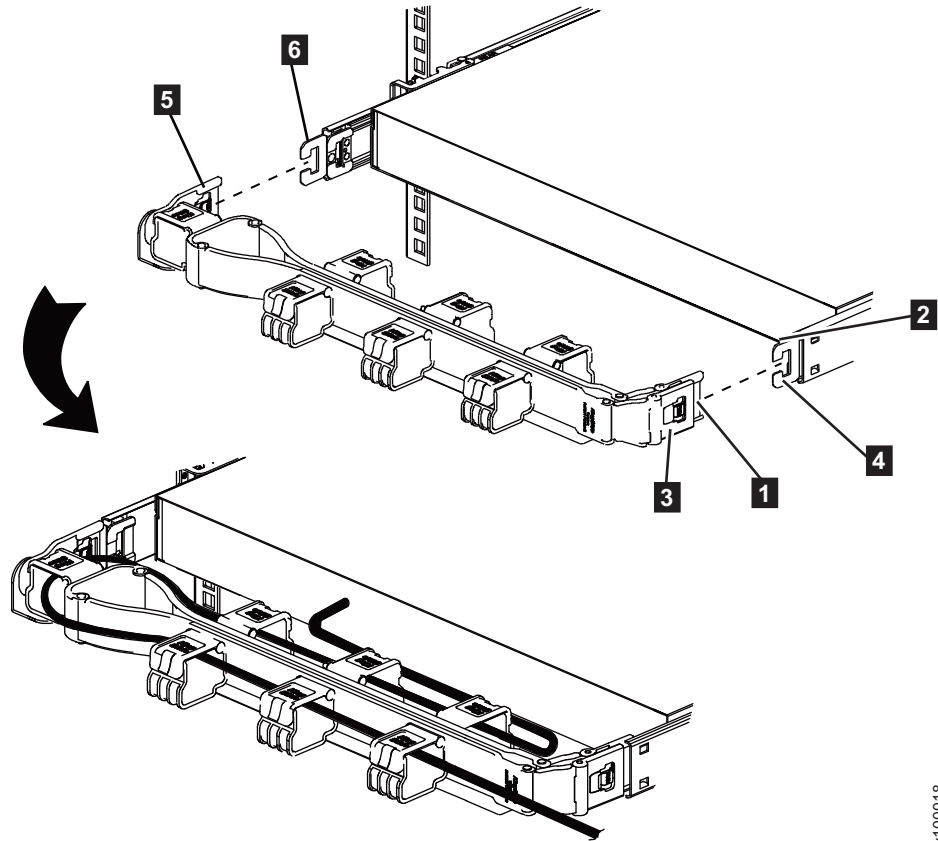

sv100018

Figure 23. Parts for installing the SAN Volume Controller 2145-SV1 CMA assembly

- 1** CMA inner connector
- 2** CMA connector base on inner member
- 3** CMA outer connector
- 4** CMA connector base on outer member
- 5** CMA connector beside the center body
- 6** CMA connector base on outer member

CAUTION:

The loop strap must be tied to the CMA crossbar for transportation. Remove the loop strap after the system arrives at its final destination.

Procedure

To install the CMA assembly, complete the following steps.

1. Optional: You might need to reverse the left-right orientation of the CMA to accommodate the routing of cables that lead to the node. To reverse the orientation of the arm, complete the following steps:
 - a. Press the button marked "PUSH" in Figure 24 on page 24.

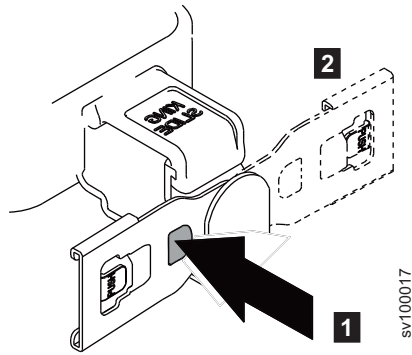


Figure 24. Reversing the orientation of the assembly

- b. Turn the connector 180 degrees.
2. Install the CMA inner connector (1) onto the CMA connector base on the inner member (2) as in the following figure.

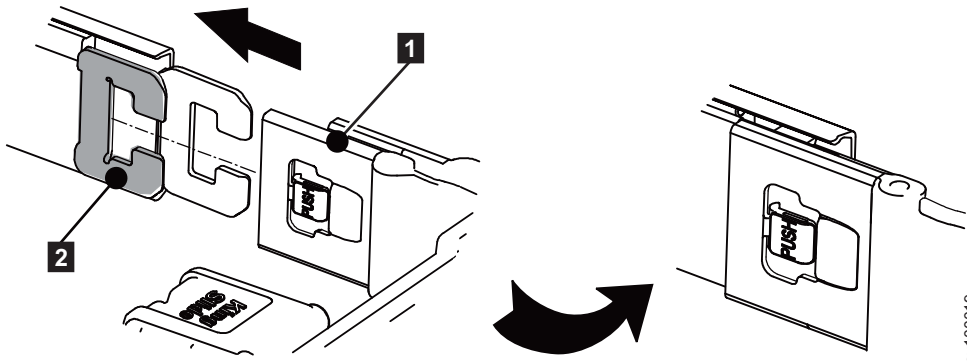


Figure 25. Install the inner member

3. Install the CMA outer connector (3) onto the CMA connector base on the outer member (4), as shown in the following figure.

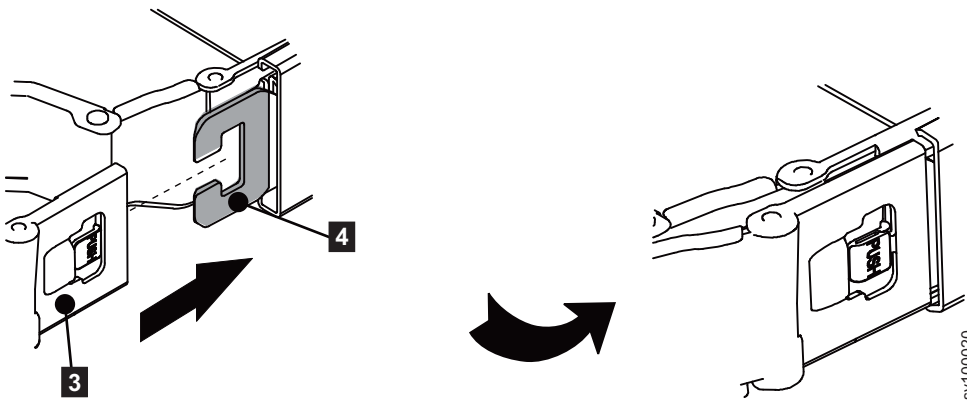


Figure 26. Install the outer member

4. Install the opposite CMA connector (**5**) to the opposite outer CMA connector base (**6**) as shown in the following figure.

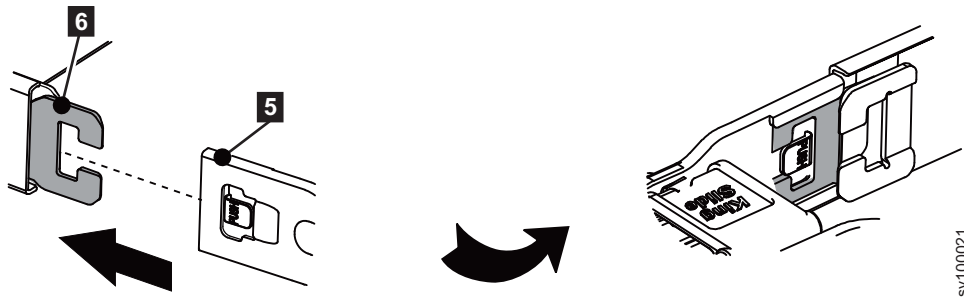


Figure 27. Install the other outer member

5. Connect and route the cables.
 - a. Connect the power cords and other cables to the rear of the node.
 - b. Route the cables and power cords on the CMA and secure them with cable ties or hook-and-loop fasteners.

Note:

- The location of the cable straps can vary in different systems.
- Use the cable straps that are provided on the rear of the system to retain the cables and prevent them from sagging.
- Allow slack in all cables to avoid tension in the cables as the CMA moves.

Connecting the SAN Volume Controller 2145-SV1 to the SAN and to the Ethernet network

Before you connect the SAN Volume Controller 2145-SV1 to the SAN, you must connect the Ethernet and Fibre Channel cables.

Before you begin

Refer to the cable-connection table to find out where to connect the Ethernet and Fibre Channel cables.

Up to three RJ45 Ethernet cables can be connected to the SAN Volume Controller 2145-SV1. The cable connection table indicates the number of cables to connect. Connect to the ports in numerical order, beginning with Ethernet port 1.

Procedure

To connect the SAN Volume Controller 2145-SV1 to the SAN and to the Ethernet network, complete the following steps.

1. Connect the Ethernet cables to the Ethernet ports on the rear of the SAN Volume Controller 2145-SV1. Ports 1-3 are standard. If you have a 10 Gbps Optical Ethernet adapter that you want to connect to a suitable Ethernet switch for iSCSI communications, then Ethernet ports 4-7 are also available. The following figure shows these Ethernet ports.

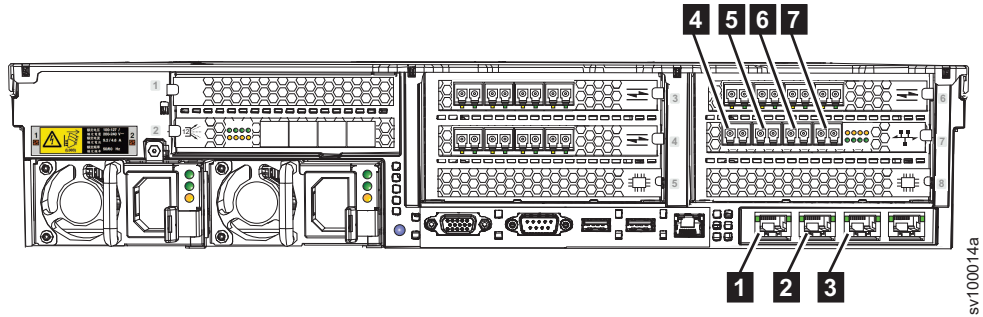


Figure 28. Ethernet ports on the rear of the SAN Volume Controller 2145-SV1

- 1 - 3** 10 Gbps Ethernet ports 1-3
 - 4 - 7** 10 Gbps optical Ethernet ports 4-7
2. Connect the other end of the Ethernet cable to the proper connector on the Ethernet hub or switch.
 3. Optional: If the Fibre Channel feature is installed, you can connect Fibre Channel cables to the Fibre Channel ports as required by your configuration. Figure 29 shows an example of the device with 16 Gbps Fibre Channel adapters that are installed in slots 3, 4, and 6. A 10 Gbps Optical Ethernet adapter is used for Fibre Channel over Ethernet (FCoE) communications and is installed in slot 7, providing additional Fibre Channel ports.

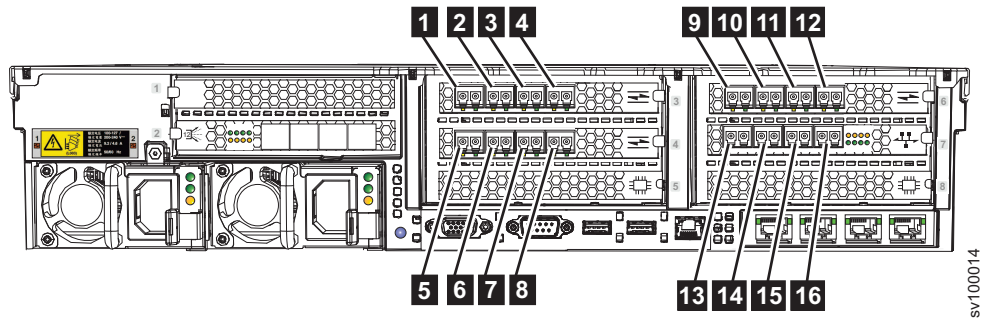


Figure 29. Fibre Channel ports

- 1 - 16** Fibre Channel ports 1-16

Attention: When routing the Fibre Channel cables, do not tighten the cable straps or bend the cables to a radius smaller than 76 mm (3 in.).

4. Connect the other ends of the Fibre Channel cables to the proper connectors of the Fibre Channel switches.

Verifying the SAN Volume Controller 2145-SV1 installation

You must verify the installation after the installation has completed.

Before you begin

This task shows you how to verify the installation after you install the system in the rack and connect it to the storage area network (SAN) and the Ethernet.

Note: If at any point the system does not operate as described, see MAP 5000: in the *IBM SAN Volume Controller Troubleshooting Guide*, unless a different maintenance analysis procedure (MAP) is specified.

Procedure

To verify the installation, complete the following steps.

1. Connect power supply 1 and power supply 2 to a live AC supply. The SAN Volume Controller node begins to power on. The Power LED should be solidly on after a few seconds, but if it continues to flash after one minute, press the power-control button. If the LED is not illuminated, see MAP 5000 in the *IBM SAN Volume Controller Troubleshooting Guide* to repair the problem.

Note: You do not need to install any software. The node boots automatically. The SAN Volume Controller 2145-SV1 runs an extended series of power-on self-tests. The node might appear to be idle for up to five minutes after it powers on.

Figure 30 shows the controls and indicators on the front panel that verify the installation. Figure 31 on page 28 is a close-up view of the operator-information panel.

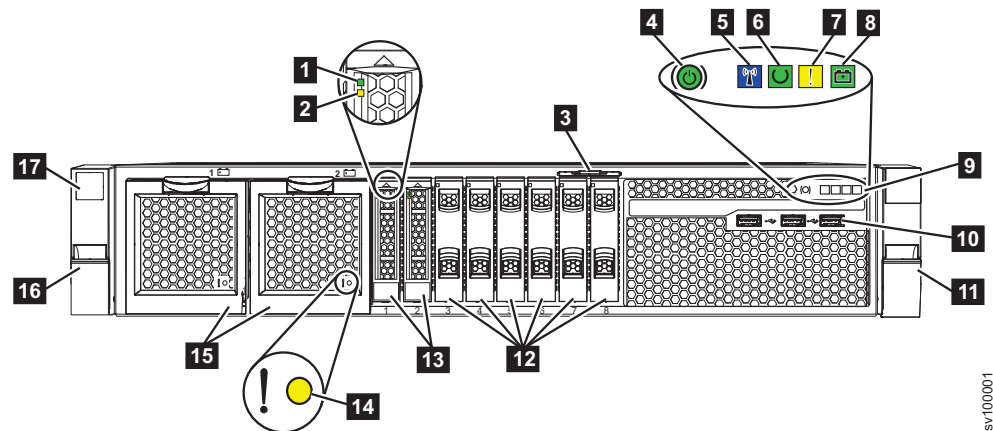


Figure 30. SAN Volume Controller 2145-SV1 front panel

- 1** Boot drive activity LED
- 2** Boot drive status LED
- 3** Pullout tab that shows 11s serial number
- 4** Power-control button and power-on LED
- 5** Identify LED
- 6** Node status LED
- 7** Node fault LED
- 8** Battery status LED
- 9** Operator-information panel
- 10** Front USB ports 1-3
- 11** Right side latch (releases chassis to slide out on rails)
- 12** Drive slot fillers (no empty slots permitted)
- 13** Boot drives
- 14** Battery fault LED

- 15** Batteries
- 16** Left side latch (releases chassis to slide out on rails)
- 17** Machine type and model (MTM) and serial number

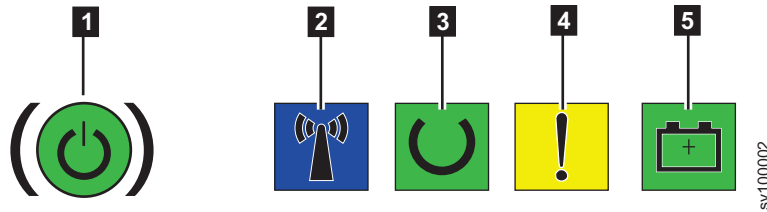


Figure 31. SAN Volume Controller 2145-SV1 operator-information panel

- 1** Power-control button and power-on LED
 - 2** Identify LED
 - 3** Node status LED
 - 4** Node fault LED
 - 5** Battery status LED
2. Verify that the node boots without error. The Node status LED should slowly flash and the Node fault LED should be off. If the node fault LED is lit, see the "Troubleshooting" section of the documentation. When the battery charge is low, the battery status LED flashes. When the batteries are fully charged, the battery status LED is on. The battery fault LEDs should be off.

Results

The installation of the SAN Volume Controller hardware is now complete. No software installation is required.

What to do next

Continue with the instructions in "Installing the optional 2U SAS expansion enclosure into the rack" on page 33 followed by Chapter 5, "Initializing the SAN Volume Controller 2145-SV1 system," on page 151.

Chapter 3. Installing an optional 2U SAS expansion enclosure

Up to 20 optional SAS expansion enclosures can be connected to each I/O group in the system. To install a 5U SAS expansion enclosure, see the following chapter.

Installing an optional SAS expansion enclosure requires the following steps:

1. Installing support rails for an SAS expansion enclosure
2. Installing the optional SAS expansion enclosure into the rack
3. Connecting the optional SAS expansion enclosures to the 2145-SV1

Installing support rails for 2U SAS expansion enclosures

Before you install 2U SAS expansion enclosures, you must first install support rails.


Before you begin

Note: Up to 20 optional SAS expansion enclosures can be connected to each I/O group in the system. Refer to the planning worksheet completed by the customer.

Procedure

To install the support rails, complete the following steps.

1. Locate the expansion enclosure rails (Figure 32). The rail assembly consists of two rails that must be installed in the rack cabinet.

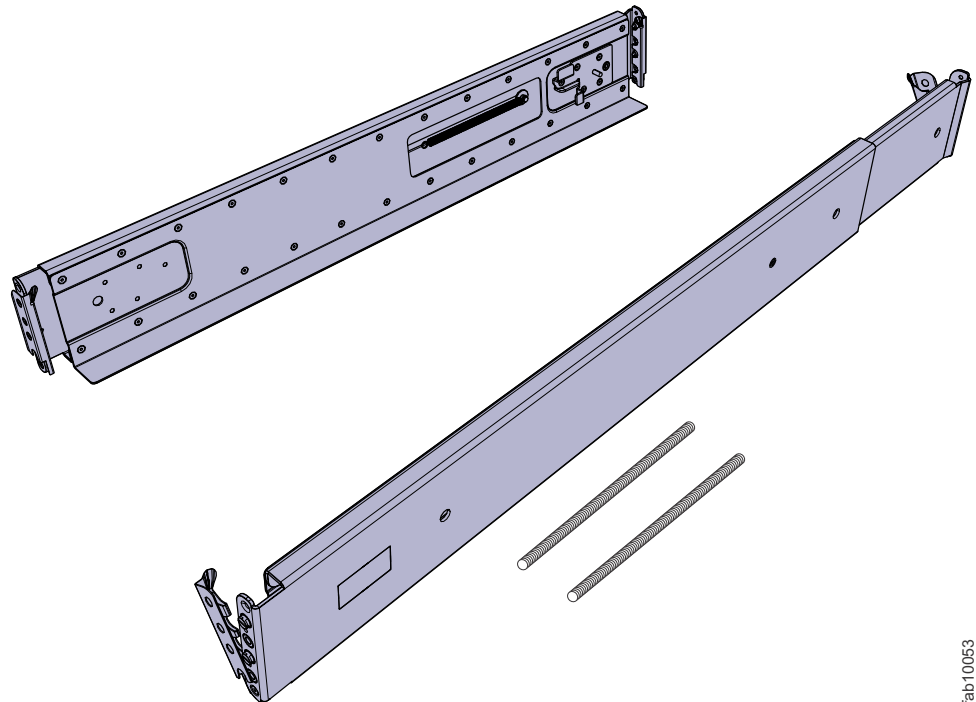

fab10053

Figure 32. Expansion enclosure support rails

2. Locate the hardware that is used to install the rails, including two rail springs, two sets of eight bracket pins, and two M5 screws. Set the hardware aside for use later in the installation process.
3. Install a spring on each rail.
 - a. Extend the rail to its full length.
 - b. Push one looped end of a spring over one stud on the inside of the rail. (See Figure 33.)

Note: Some models of rail have the studs on the outside of the rail.

- c. Stretch the spring slightly and push the other looped end of the spring onto the other stud on the inside of the rail.

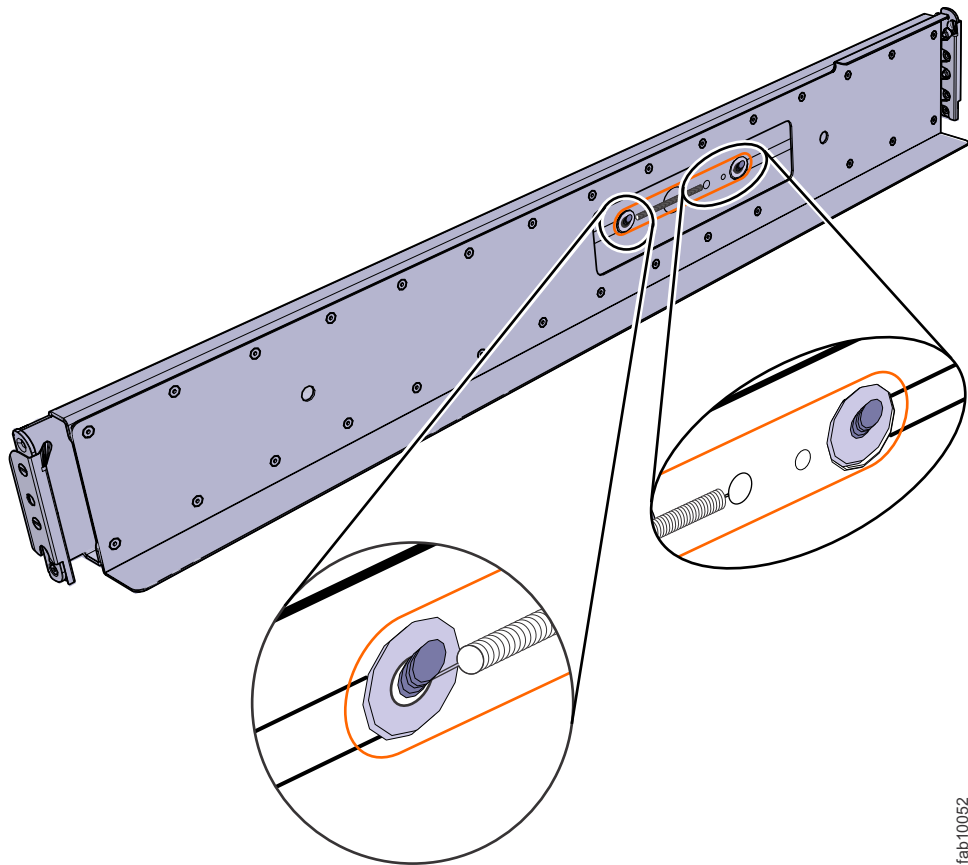


Figure 33. Installing the rail spring

4. Working at the front of the rack cabinet, identify the two standard rack units (2U) of space in the rack into which you want to install the support rails. Figure 34 on page 31 shows two rack units with the front mounting holes identified.

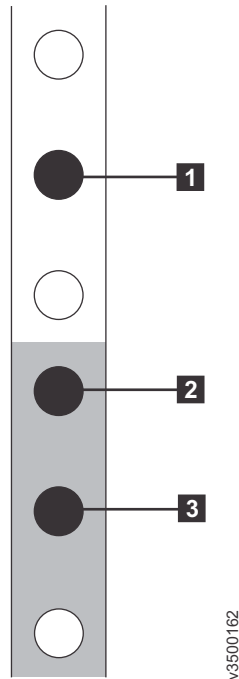


Figure 34. Hole locations in the front of the rack

- **1** Upper rail mounting bracket pin
 - **2** Lower rail mounting bracket pin
 - **3** Rack mounting screw hole
5. Ensure that the appropriate bracket pins are installed in the front and rear bracket of each rail. Each rail comes with four medium pins preinstalled (two in the front bracket and two in the rear bracket). Large and small pins are provided separately. Use the pins that are appropriate for the mounting holes in your rack (see Table 9).

Table 9. Selecting bracket pins for your rack

Mounting holes	Bracket pins
Round, unthreaded	Use the preinstalled medium pins.
Round, threaded	Unscrew the medium pins and replace with the smaller pins that are supplied with the rails.
Square	Unscrew the medium pins and replace with the large pins that are supplied with the rails.

6. At each end of the rail, grasp the tab **1** and pull *firmly* to open the hinge bracket (see Figure 35 on page 32).

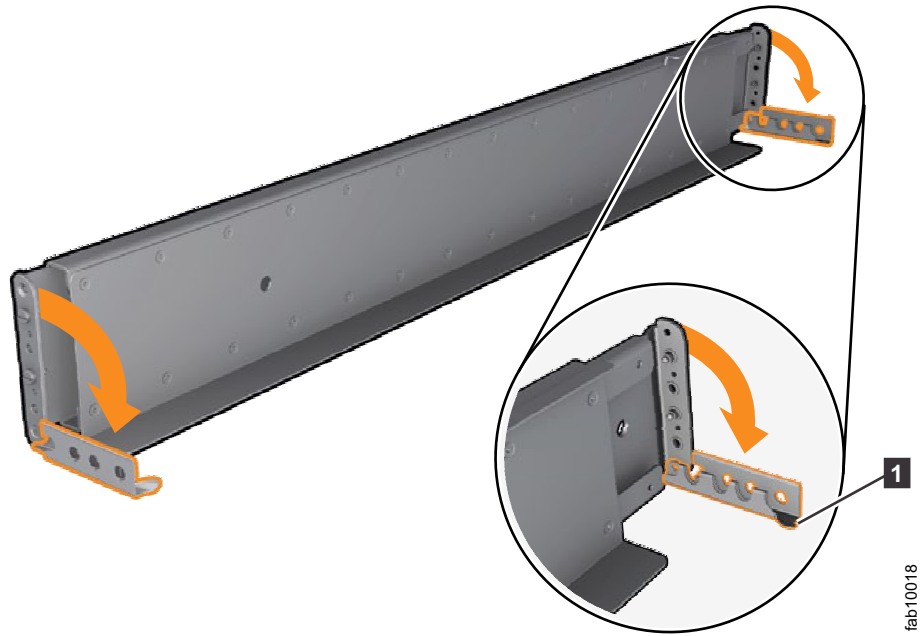


Figure 35. Opening the hinge brackets

7. Align the holes in the rail bracket with the holes on the front and rear rack cabinet flanges. Ensure that the rails are aligned on the inside of the rack cabinet.
8. On the rear of the rail, press the two bracket pins into the holes in the rack flanges.
9. Close the rear hinge bracket to secure the rail to the rack cabinet flange. (See Figure 36.)

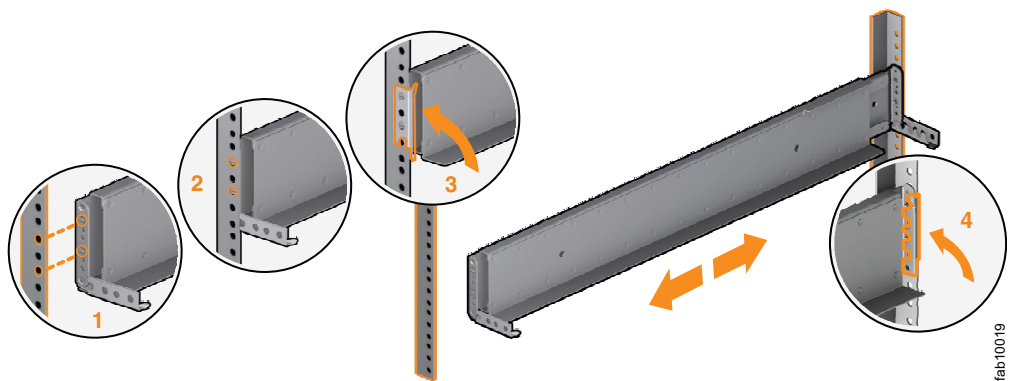


Figure 36. Closing the hinge brackets

10. On the front of the rail, press the two bracket pins into the holes in the rack flanges.
11. Close the front hinge bracket to secure the rail to the rack cabinet flange. (See Figure 36.)
12. Secure the rear of the rail to the rear rack flange with an M5 screw that is provided with the rack kit.
13. Repeat the steps to secure the opposite rail to the rack cabinet.
14. Repeat the procedure to install rails for each additional expansion enclosure.

Installing the optional 2U SAS expansion enclosure into the rack

The 2145-12F or 2145-24F SAS expansion enclosures can be installed in a separate rack or in the same rack as the SAN Volume Controller nodes.

About this task

Note: Up to 20 optional SAS expansion enclosures can be connected to each pair of SAN Volume Controller nodes (I/O group).

CAUTION:

- To lift and install the SAS expansion enclosure into the rack requires at least two people.
- Install a SAS expansion enclosure only onto the rails that are supplied with the enclosure.
- Load the rack from the bottom up to ensure rack stability. Empty the rack from the top down.

Procedure

To install an optional SAS expansion enclosure, complete the following steps.

1. On either side of the drive assemblies, remove the enclosure end caps by grasping the handle and pulling the bottom of the end cap free, then clearing the tab on the top of the enclosure. (See Figure 37.)


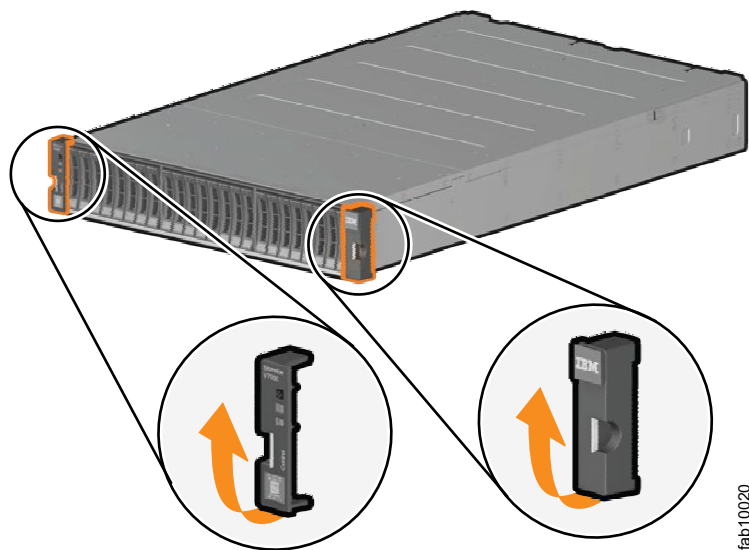


Figure 37. Removing enclosure end caps

2. Align the enclosure with the front of the rack cabinet.
3. Carefully slide the enclosure into the rack along the rails until the enclosure is fully inserted (see Figure 38 on page 34).

Note: The rails are not designed to hold an enclosure that is partially inserted. The enclosure must always be in a fully inserted position.

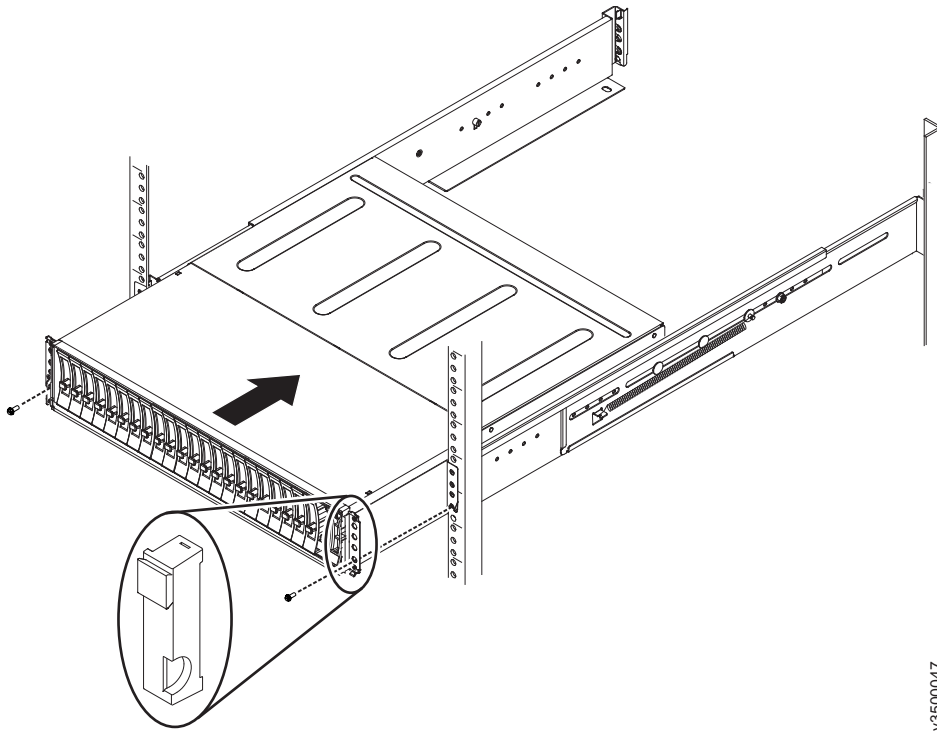

v3500047

Figure 38. Inserting the enclosure into the rack

4. Secure the enclosure with screws in the rack mounting screw holes.
5. Reinstall the left and right end caps. See Figure 38. The left end cap has indicator windows that align with the status LEDs (light-emitting diodes) on the edge of the enclosure.
 - a. Ensure that the serial number of the end cap matches the serial number on the rear of the enclosure.
 - b. Fit the slot on the top of the end cap over the tab on the chassis flange.
 - c. Rotate the end cap down until it snaps into place.
 - d. Ensure that the inside surface of the end cap is flush with the chassis.
6. If you are installing extra SAS expansion enclosures, repeat the previous steps to complete the installation.

Connecting the optional 2U SAS expansion enclosures to the 2145-SV1

After you install the SAS expansion enclosures into the rack, you must connect them to each 2145-SV1 node in the IO group that will use them.

About this task

This task applies if you are installing a expansion enclosure. Each pair of nodes in the system can manage up to 20 expansion enclosures.

Note: When you insert SAS cables, ensure that the connector is oriented correctly.

- When you connect an expansion enclosure, the blue pull tab must be below the cable (**1** in Figure 39 on page 35).
- When you connect a 2145-SV1, the blue pull tab must be above the connector (**2** in Figure 39 on page 35).

- Insert the connector gently until it clicks into place. If you feel resistance, the connector is probably oriented the wrong way. Do not force it.
- When inserted correctly, the connector can be removed only by pulling the tab.

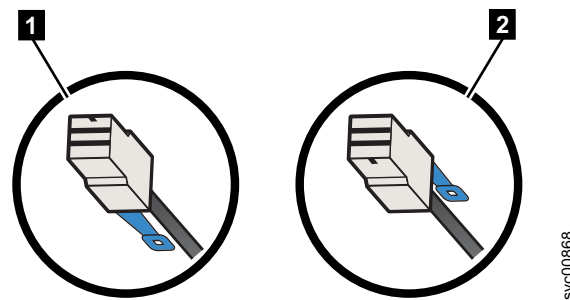


Figure 39. SAS cable connector orientation

- 1** Correct orientation for 2145-24F or 2145-12F SAS expansion enclosure
- 2** Correct orientation for 2145-SV1 node or 2145-92F SAS expansion enclosure

Be aware of the following guidelines when you attach the cables to the SAS ports.

- No cable can be connected between a port on a left canister and a port on a right canister of the expansion enclosures.
- Ensure that cables are installed in an orderly way to reduce the risk of cable damage when replaceable units are removed or inserted.
- SAS cables must be routed through the cable management arms to avoid the risk of disconnecting the nodes from their flash drive arrays. This step also helps to protect the SAS cables from getting damaged if the node is slid out on its rails while attached to the enclosure.
- Arrange your cables to provide access to the following components:
 - Ethernet ports, including the technician port. The technician port is used for initial setup of the system by directly attaching to a personal computer. It can also be used to complete service actions for the system.
 - USB ports. USB ports can be used to initialize the system or to perform service-related tasks by using a USB flash drive that contains executable files for initializing the system.
 - Fibre Channel and Fibre Channel over Ethernet (FCoE) ports. If your system has an optionally installed Fibre Channel and FCoE adapter for host and external storage attachment, ensure that these ports are accessible.
 - The nodes and the enclosures themselves. Access is required to the hardware for servicing and for safely removing and replacing components by using two or more people.

Procedure

1. Install the cables as shown in the following figure. Note that this illustration is provided to show the cable connections between the SAS enclosures and each 2145-SV1. It does not imply or represent the precise racking order for the devices in a cabinet/rack.

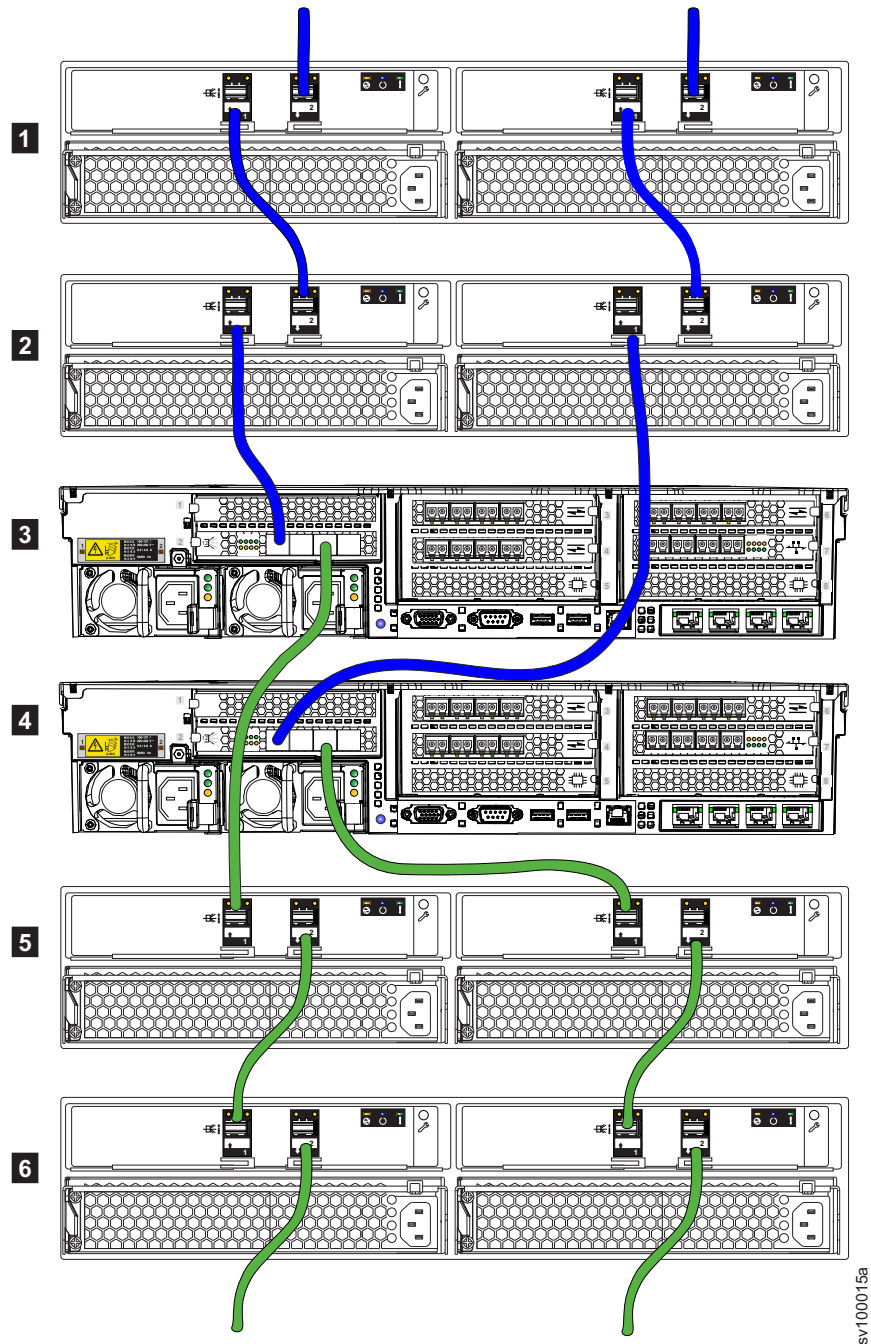


Figure 40. Connecting the SAS cables

- 1** 2145-24F or 2145-12F SAS expansion enclosure
 - 2** 2145-24F or 2145-12F SAS expansion enclosure
 - 3** 2145-SV1 with SAS adapter in PCIe expansion slot 2
 - 4** 2145-SV1 with SAS adapter in PCIe expansion slot 2
 - 5** 2145-24F or 2145-12F SAS expansion enclosure
 - 6** 2145-24F or 2145-12F SAS expansion enclosure
2. If more I/O groups are configured, repeat the cabling procedure for the other I/O groups. The system supports up to four I/O groups with a total of 80 expansion enclosures per system.

Combining 2U and 5U expansion enclosures

About this task

You can combine 2145-24F, 2145-12F, and 2145-92F enclosures in an SAS chain. The limiting factor is the combined *chain weight* of the various components. The maximum SAS chain weight that can be attached to a node SAS port is 10:

- 2145-92F enclosures have a chain weight of 2.5
- 2145-24F and 2145-12F enclosures have a chain weight of 1.

Example

Table 10. Examples of supported SAS chain combinations

Number of 2145-12F	Number of 2145-24F	Number of 2145-92F	Combined chain weight
2	0	3	9.5
2	3	2	10
0	7	1	9.5

Chapter 4. Installing an optional 5U SAS expansion enclosure

Up to eight optional high-density SAS expansion enclosures can be connected to each I/O group in the system. To install a 2U SAS expansion enclosure, see the previous chapter.

Installing an optional SAS expansion enclosure requires the following steps:

1. Familiarize yourself with the safety requirements for the enclosure.
2. Remove the parts from the shipping container.
3. Install the enclosure in the rack by using the provided support rails.
4. Install the fascia.
5. Install the drives.
6. Install the cable management arm.
7. Connect the SAS expansion enclosures to the 2145-SV1.

For more detailed information on these steps, see “Unpacking and installing the enclosure: 2145-92F” on page 53

Safety notices and considerations: 2145-92F

Before you install, service, or move the 2145-92F expansion enclosure, you must review and follow the safety notices.

Always read and following the following safety notices and guidelines for the 2145-92F expansion enclosure.

Safety notices


Use the reference numbers in parentheses at the end of each notice (for example, D005) to find the matching translated notice in *IBM System Storage SAN Volume Controller Safety Notices*.

DANGER

DANGER: Serious injury or death can occur if loaded lift tool falls over or if a heavy load falls off the lift tool. Always completely lower the lift tool load plate and properly secure the load on the lift tool before moving or using the lift tool to lift or move an object. (D010)

DANGER

Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)

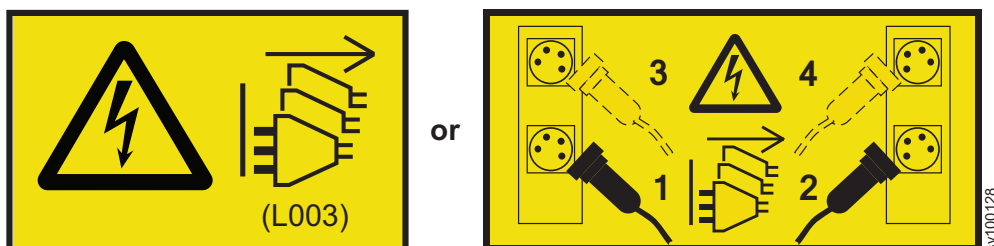

DANGER



Hazardous voltage present. Voltages present constitute a shock hazard, which can cause severe injury or death. (L004)

DANGER



Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in splattered metal, burns, or both. (L005)

DANGER:

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



12c00064

- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (R001 part 1 of 2)

CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers) Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers) This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack. (R001 part 2 of 2)

CAUTION:

Removing components from the upper positions in the rack cabinet improves rack stability during a relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions.
 - Remove all devices in the 32U position and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
 - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off the pallet and bolt the rack cabinet to the pallet. (R002)

DANGER

Racks with a total weight of > 227 kg (500 lb.), Use Only Professional Movers! (R003)

DANGER

Do not transport the rack via fork truck unless it is properly packaged, secured on top of the supplied pallet. (R004)

DANGER:

Main Protective Earth (Ground):

This symbol is marked on the frame of the rack.

The PROTECTIVE EARTHING CONDUCTORS should be terminated at that point. A recognized or certified closed loop connector (ring terminal) should be used and secured to the frame with a lock washer using a bolt or stud. The connector should be properly sized to be suitable for the bolt or stud, the locking washer, the rating for the conducting wire used, and the considered rating of the breaker. The intent is to ensure the frame is electrically bonded to the PROTECTIVE EARTHING CONDUCTORS. The hole that the bolt or stud goes into where the terminal conductor and the lock washer contact should be free of any non-conductive material to allow for metal to metal contact. All PROTECTIVE EARTHING CONDUCTORS should terminate at this main protective earthing terminal or at points marked with \perp . (R010)

CAUTION:

		
33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

svc01053

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:

To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

CAUTION:

CAUTION regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers). Read and completely understand the contents of LIFT TOOL operator's manual before using.
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's website.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not raise, lower or slide platform load shelf unless stabilizer (brake pedal jack) is fully engaged. Keep stabilizer brake engaged when not in use or motion.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads. (C048, part 1 of 2)

- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048, part 2 of 2)

CAUTION:

If the System slide rails are installed above EIA location 29U, the [ServerLIFT®] tool (or other qualified lift tool) must be used as a safety precaution for servicing. Position the lift tool platform slightly below the bottom of the System drawer to account for the slight downward flex when the drawer is extended out fully on its slides. Then gently raise the lift tool platform to stably contact the bottom of the drawer, minding not to over force it as it could put upward stress to the slide rails. A service-qualified ladder may have to be used to reach or properly work around the System at such heights. While using a ladder, do not lean on or against the system drawer or lift tool during service, and follow safe practices. (C051)

Weight considerations: 2145-92F

Before you install, move, or perform service on a 2145-92F expansion enclosure, you must be prepared to handle the weight of the enclosure and its parts.

Safety notices and considerations

Important: Always read and follow the safety notices and instructions before you install, move, or service the 2145-92F expansion enclosure and its parts. See “Safety notices and considerations: 2145-92F” on page 39 for information.

- Do not exceed the specified maximum load of the rack where the enclosure is to be installed.
- Do not exceed any load limit of the building and flooring where the enclosure is to be installed.

- Always use a suitably rated mechanical lift or four persons when you are performing any of the following tasks:
 - Removing the expansion enclosure from its packing material
 - Lifting and installing the expansion enclosure in the rack for the first time
 - Reinstalling the expansion enclosure after you complete a service task (for example, replacing the enclosure FRU)
- At least three persons are required to move the 2145-92F enclosure while it is in the rack (if you are moving the enclosure off the rails). Even after the drives, power supply units, secondary expander modules, canisters, fans, and top cover are removed, the enclosure weighs approximately 43 kg (95 lbs).
- To maximize rack stability, always install the expansion enclosure in the lowest possible position in the rack.
- Ensure that the drives are easily accessible. It is best not to install the 2145-92F expansion enclosure above position 22U in the rack

Weight of expansion enclosure parts

Table 11 summarizes the weight and quantity of the parts (FRUs) that are shipped with the 2145-92F expansion enclosure.

Table 11. Weight of expansion enclosure parts

FRU description	FRU part number	Weight per unit		Quantity shipped	Total weight	
		kg	lbs		kg	lb
Enclosure FRU	01LJ112	42.5	93.696	1	42.500	93.696
Rail kit	01LJ114	9.231	20.351	1	9.231	20.351
Front fascia (4U front cover)	01LJ116	0.303	0.668	1	0.303	0.668
Display panel assembly	01LJ118	0.020	0.044	1	0.020	0.044
PSU fascia (1U cover)	01LJ120	0.010	0.022	1	0.010	0.022
Power supply unit (PSU)	01LJ122	3.335	7.352	2	6.670	14.705
Secondary expansion module	01LJ124	0.826	1.821	2	1.652	3.642
Fan module	01LJ126	0.890	1.962	4	3.560	7.848
Expansion canister	01LJ128	1.588	3.501	2	3.176	7.002
Cable management arm (lower and upper arms)	01LJ130	1.373	3.027	1	1.373	3.027
Top cover	01LJ132	3.720	8.201	1	3.720	8.201
Fan interface board	01LJ134	0.118	0.260	1	0.236	0.260

Weight of expansion enclosure SAS drives

The SAS drives are shipped in a separate package from the 2145-92F expansion enclosure. The enclosure can support up to 92 SAS drives; however, the quantity varies depending on the number of drives ordered.

Table 12 summarizes the weight of the SAS drives that are supported in the 2145-92F expansion enclosure. SAN Volume Controller 2145-DH8 and SAN Volume Controller 2145-SV1 systems that are running software level 7.8 support the expansion enclosure.

Table 12. Weight of expansion enclosure SAS drives

FRU description	FRU part number	Feature code	Approximate weight per unit	
			kg	lb
600 GB 15 K 2.5-inch hard disk drive	01LJ061	AH70	0.304	0.670
1.2 TB 10 K 2.5-inch hard disk drive	01LJ062	AH73	0.304	0.670
1.8 TB 10 K 2.5-inch hard disk drive	01LJ063	AH74	0.304	0.670
6 TB 7.2 K 3.5-inch Near-Line SAS hard disk drive	01LJ064	AH77	0.876	1.931
8 TB 7.2 K 3.5-inch Near-Line SAS hard disk drive	01LJ065	AH78	0.876	1.931
10 TB 7.2 K 3.5-inch Near-Line SAS hard disk drive	01LJ066	AH79	0.876	1.931
1.6 TB 2.5-inch tier 0 flash drive	01LJ073	AH7D	0.224	0.494
3.2 TB 2.5-inch tier 0 flash drive	01LJ074	AH7E	0.224	0.494
1.92 TB 2.5-inch tier 1 flash drive	01LJ075	AH7J	0.224	0.494
3.84 TB 2.5-inch tier 1 flash drive	01LJ076	AH7K	0.224	0.494
7.68 TB 2.5-inch tier 1 flash drive	01LJ077	AH7L	0.224	0.494
15.36 TB 2.5-inch tier 1 flash drive	01LJ078	AH7M	0.224	0.494

Weight increases as FRUs are installed

The 2145-92F expansion enclosure supports up to 92 SAS drives. As Table 13 on page 48 shows, substantial weight is added to the enclosure when all drives are installed.

Table 13. Weight of an enclosure with 92 SAS drives

FRU description	Approximate weigh per unit		Maximum supported	Approximate extra weight	
	kg	lb		kg	lb
2.5-inch tier 0 flash drive	0.224	0.494	92	20.608	45.433
2.5-inch tier 1 flash drive					
2.5-inch hard disk drive	0.304	0.670	92	27.968	61.659
3.5-inch Near-Line SAS hard disk drive	0.876	1.931	92	80.592	177.675

As you install or replace FRUs, the overall weight of the expansion enclosure increases. For example, Table 14 shows the weight progression as different combinations of FRUs are installed.

Table 14. Enclosure weight as FRUs are installed

Enclosure assembly		Approximate weight	
FRUs installed	FRUs not installed	kg	lb
<ul style="list-style-type: none"> Enclosure (01LJ112) 	<ul style="list-style-type: none"> Secondary expansion modules Fascia (1U and 4U) PSUs Expansion canisters Fan modules Fan interface board Display assembly Drives Cover 	42.5	93.7
<ul style="list-style-type: none"> Enclosure (01LJ112) Secondary expansion modules 	<ul style="list-style-type: none"> Fascia (1U and 4U) PSUs Expansion canisters Fan modules Fan interface board Display assembly Drives Cover 	44.3	97.7
<ul style="list-style-type: none"> Enclosure (01LJ112) Secondary expansion modules Fascia (1U and 4U) PSUs Expansion canisters Fan modules Fan interface board Display assembly 	<ul style="list-style-type: none"> Drives Cover 	58	127.9

Table 14. Enclosure weight as FRUs are installed (continued)

Enclosure assembly		Approximate weight	
FRUs installed	FRUs not installed	kg	lb
Note: The following FRUs are installed when the enclosure is initially shipped. <ul style="list-style-type: none"> • Enclosure (01LJ112) • Secondary expansion modules • PSUs • Expansion canisters • Fan modules • Fan interface board • Display assembly • Cover 	<ul style="list-style-type: none"> • Fascia (1U and 4U) • Drives 	61.5	135.4
<ul style="list-style-type: none"> • Enclosure (01LJ112) • Secondary expansion modules • Fascia (1U and 4U) • PSUs • Expansion canisters • Fan modules • Fan interface boards • 92 2.5-inch tier 1 flash drives 	<ul style="list-style-type: none"> • Cover 	78.6	173.3
<ul style="list-style-type: none"> • Enclosure (01LJ112) • Secondary expansion modules • Fascia • PSUs • Expansion canisters • Fan modules • Fan interface board • 92 2.5-inch hard disk drives 	<ul style="list-style-type: none"> • Cover 	86	189.6
<ul style="list-style-type: none"> • Enclosure (01LJ112) • Secondary expansion modules • Fascia • PSUs • Expansion canisters • Fan modules • Fan interface board • 92 3.5-inch Near-Line SAS hard disk drives 	<ul style="list-style-type: none"> • Cover 	138.6	305.6

Conversely, the overall weight of the expansion enclosure is reduced as you remove parts. However, even with parts removed, the 2145-92F expansion enclosure is heavy. Depending on the number of parts that remain, you might need four persons or a mechanical lift to support the weight of the expansion enclosure.

Identify the hardware components: 2145-92F

You should become familiar with the external components of the 2145-92F expansion enclosure.

Components on the front of the enclosure

Figure 41 shows the front of the 2145-92F expansion enclosure. In the figure, all parts are installed in the enclosure.

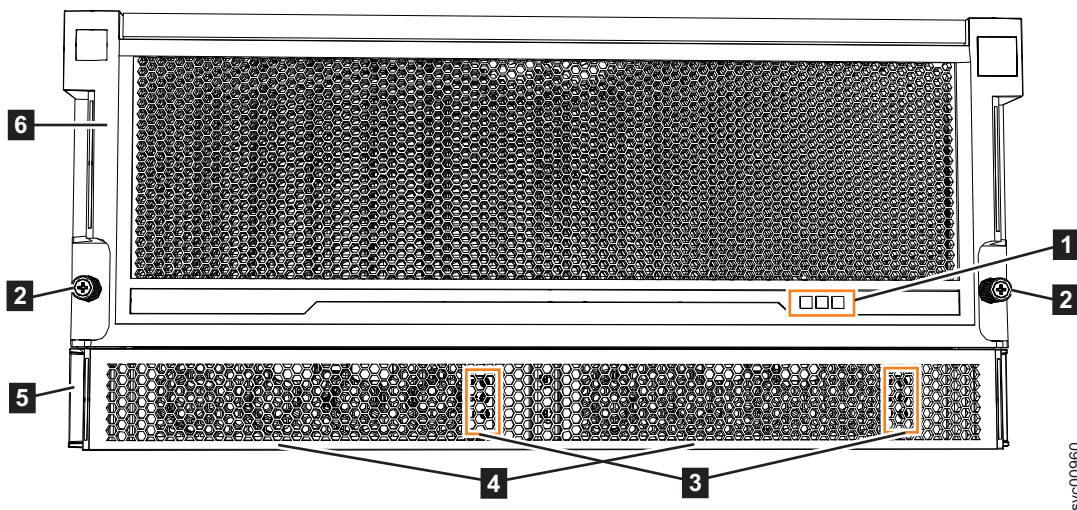


Figure 41. Features on the front of the 2145-92F expansion enclosure

- 1** Display panel indicators
- 2** Rack retention thumb screws
- 3** Power supply unit indicators
- 4** Power supply units (PSUs)
- 5** PSU fascia (1U)
- 6** Front fascia (4U)

However, as Figure 42 on page 51 shows, the 4U and 1U fascias are packaged separately. You must attach them to the front of the 2145-92F expansion enclosure as part of the initial installation process.

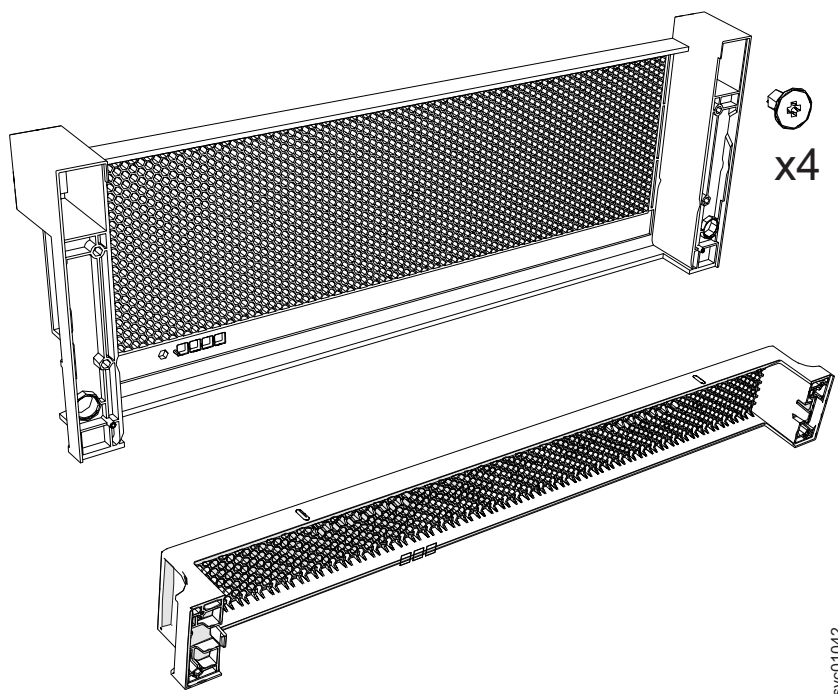


Figure 42. Front fascia of the 2145-92F expansion enclosure

Components on the rear of the enclosure

Figure 43 shows the components on the rear of the 2145-92F expansion enclosure. Four fan modules and two expansion enclosures are accessible from the back of the enclosure.

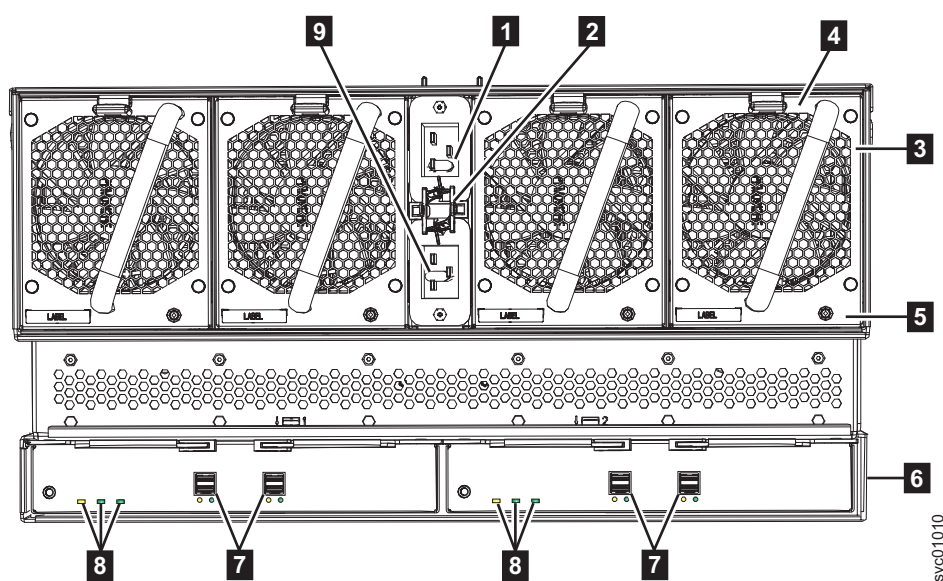


Figure 43. Features on the rear of the 2145-92F expansion enclosure

- 1** Power cable connector for PSU 2
- 2** Power cable retention clamps

- 3** Fan module
- 4** Fan release latch
- 5** Fan fault indicator
- 6** Expansion canister
- 7** SAS ports and indicators
- 8** Expansion canister indicators
- 9** Power cable connector for PSU 1

Support rails

Figure 44 shows the support rails for the expansion enclosure. The support rails are packaged separately from the expansion enclosure.

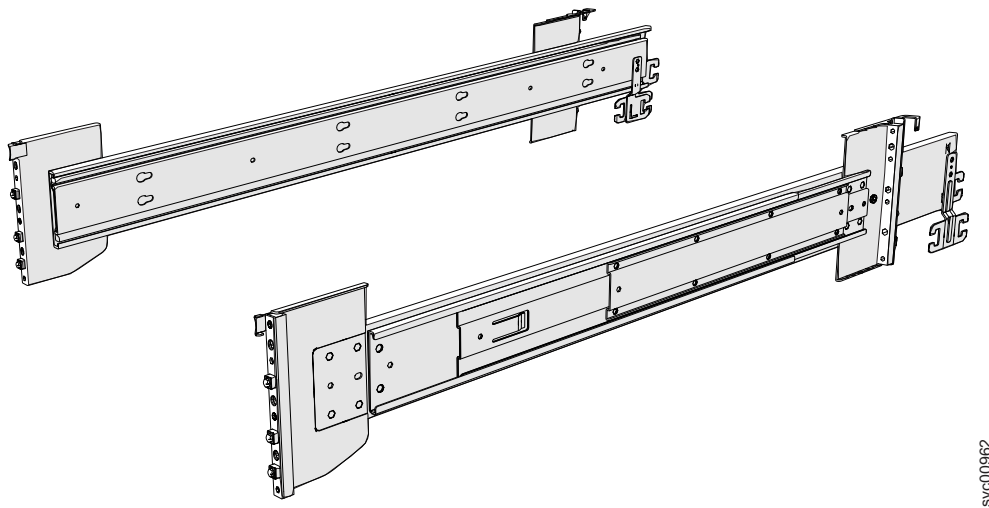


Figure 44. 2145-92F support rails

Cable management arm

The cable management arm (CMA), which consists of an upper and lower assembly, are packaged separately from the expansion enclosure. As Figure 45 on page 53 shows, each CMA assembly is attached to the rear end of the support rails.

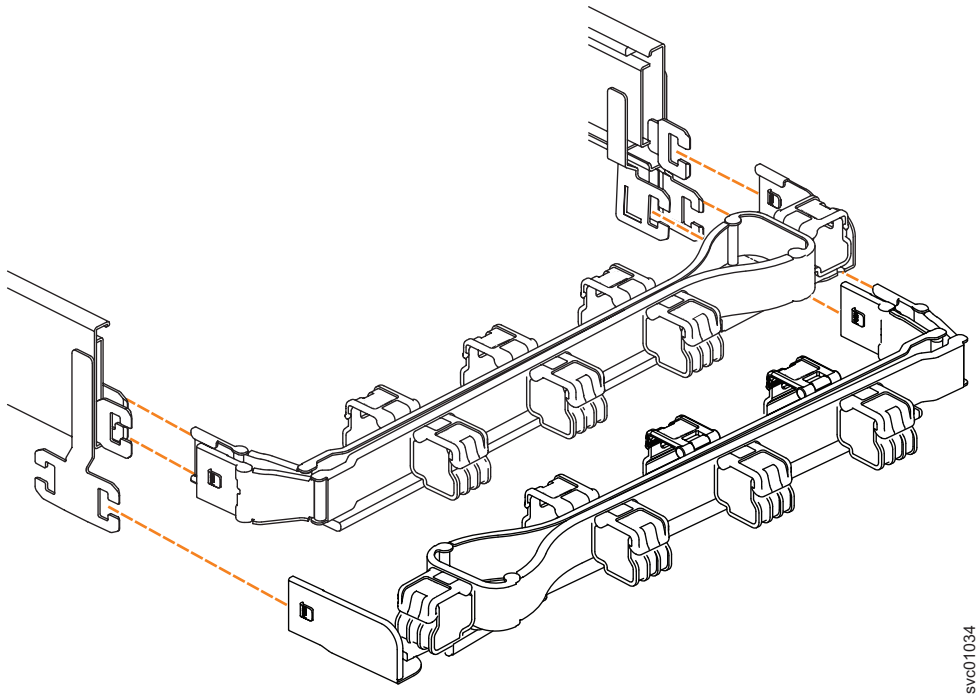


Figure 45. 2145-92F CMA assemblies

Unpacking and installing the enclosure: 2145-92F

Before you unpack and install the 2145-92F expansion enclosure, ensure that you review and follow the installation checklist and safety notices.

Before you begin

CAUTION:

33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:

To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

Important: Before you unpack, move, install, or service the 2145-92F expansion enclosure and its parts, always perform the following tasks:

- Read and follow the safety notices and instructions, as described in “Safety notices and considerations: 2145-92F” on page 39.
- Read and follow the guidelines that are described in “Weight considerations: 2145-92F” on page 45.

- Ensure that a suitably rated mechanical lift is available to support the weight of the expansion enclosure as it is inserted into the rack for installation.

About this task

The 2145-92F expansion enclosure and most parts are shipped together in one large box. A tray on top of the enclosure contains the front fascia (1U and 4U pieces), the cable management arm (CMA), and the slide rail kit; you must install these parts. Figure 46 shows how the enclosure is packaged for shipment.



Figure 46. Tray containing expansion enclosure parts

- 1** Slide rail kit
- 2** Cable management arm
- 3** Fascia

Other parts, such as the cover, secondary expander modules, and fans, are installed in the enclosure. However, due to weight considerations, you must remove some parts and then reinstall them as part of the initial installation process.

Note: Drives are not included in installation package for the enclosure; they are provided in a separate package.

Procedure

1. Remove the cardboard tray that contains the slide rails, cable management arm, and fascia from cardboard box in which the expansion enclosure was shipped.
2. Remove the foam end pieces from the top of the 2145-92F expansion enclosure.
3. Cut the corners of the shipping box and fold them down to uncover the sides and faces of the expansion enclosure, as shown in Figure 47 on page 55.

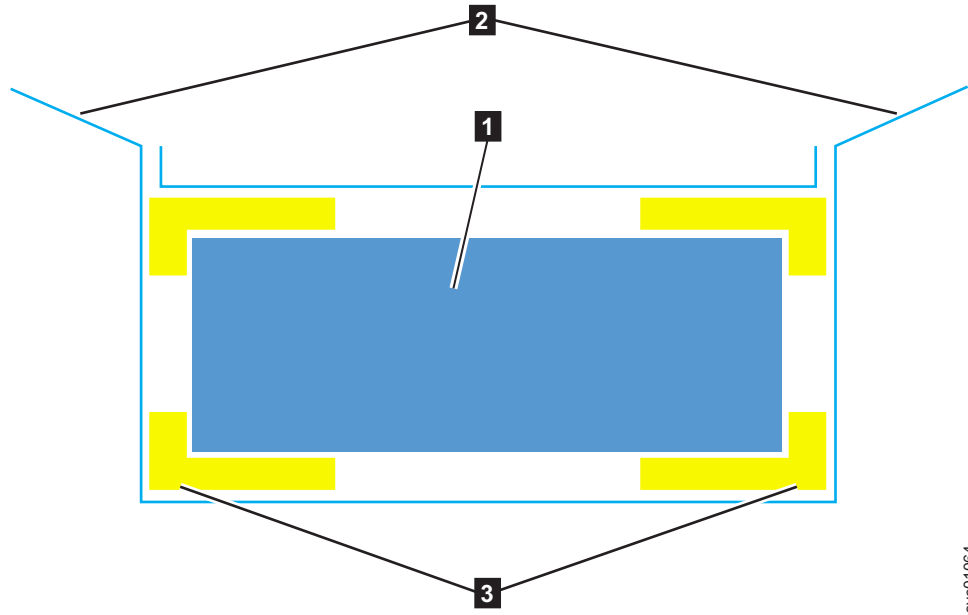


Figure 47. Packaging materials

- 1** Enclosure
- 2** Top of shipping box, folded back
- 3** Foam protectors

4. Remove the top cover, as described in “Removing the top cover: 2145-92F” on page 56.
5. With two or more persons, push the expansion enclosure sideways onto an adjacent flat bed lift. Keep the remaining foam block protectors attached to the enclosure.
6. Remove the support rail kit from the box in which it was shipped (**1**), as shown in Figure 46 on page 54).
7. Separate the inner section of the support rails and attach them to each side of the expansion enclosure, as described in steps 3 on page 58 through 5 on page 59 in “Installing or replacing the support rails: 2145-92F” on page 58.
8. Attach the remaining sections of the support rails to the rack, as described in step 6 on page 60 in “Installing or replacing the support rails: 2145-92F” on page 58.
9. Move the mechanical lift to the front of the rack. Align the inner section of the rails with the mid section of the rails that are extending from the rack.
10. On each side, push the inner section and middle section of the rails together until they click and will no longer separate, as described in step 1 on page 67 in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61.
11. Remove the 4U and 1U fascia from the boxes in which they were shipped, as shown in Figure 48 on page 56.



Figure 48. Packaging for fascia

- 1** 4U fascia (front)
 - 2** 1U fascia (power supply units)
12. Attach the 4U and 1U fascia to the front of the enclosure, as described in “Installing or replacing the fascia: 2145-92F” on page 89.
 13. Install the drives, as described in “Installing or replacing a drive: 2145-92F” on page 81.
 14. Replace the top cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
 15. Lower the mechanical lift so that you can remove the remaining foam blocks away from the expansion enclosure.
 16. Slide the latch on the side of each rail and push the expansion enclosure securely into the rack, as described in steps 6 on page 68 through 8 on page 68 in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61.
 17. Remove the cable management arm assembly from its packaging (**2** in Figure 46 on page 54).
 18. Attach the cable management arm, as described in “Installing or replacing the cable-management arm: 2145-92F” on page 75.
 19. Connect the SAS cables, as described in “Removing and installing a SAS cable: 2145-92F” on page 97.
 20. Connect the power cables.

Removing the top cover: 2145-92F


To perform service tasks, you might need to remove the top cover from a 2145-92F expansion enclosure.

Before you begin

Important: You can remove the cover without powering off the expansion enclosure. However, to maintain operating temperature, replace the cover within 15 minutes of its removal. When the cover is removed, the reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

Procedure


1. Use the slide rails to pull the enclosure out from the rack. See “Removing an expansion enclosure from a rack: 2145-92F” on page 104 for details.
2. Slide the release latch (**1**) in the direction that is shown in Figure 49.

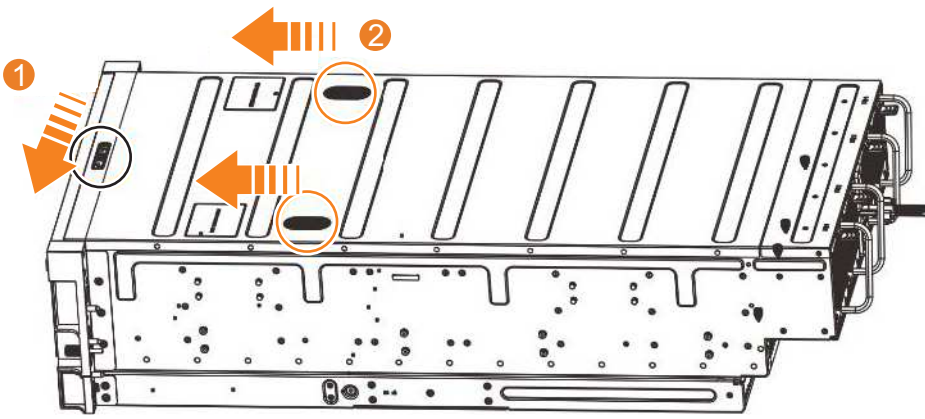

svc00977

Figure 49. Releasing the 2145-92F cover

3. Slide the cover toward the front of the expansion enclosure (**2**), as shown in Figure 49.
4. Carefully lift the cover up, as shown in Figure 50.

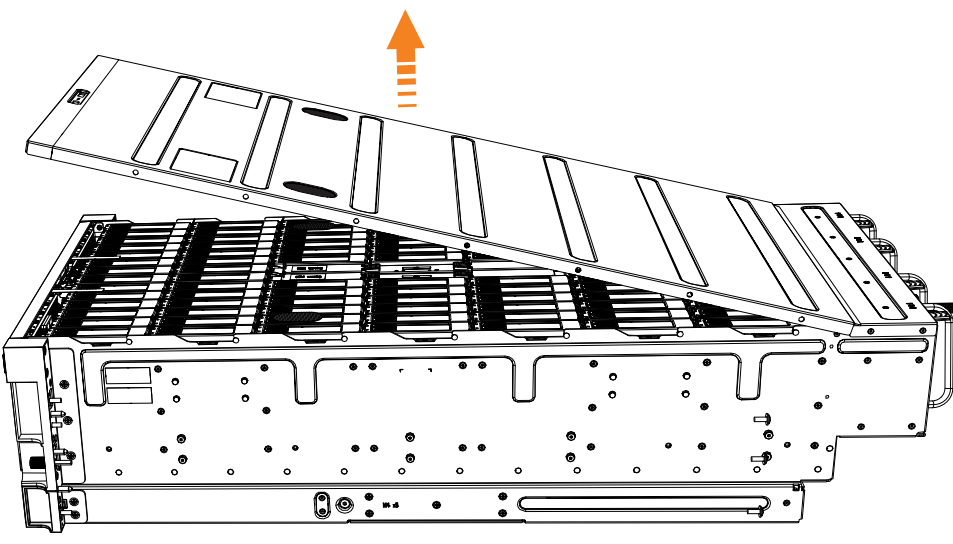

svc00978

Figure 50. Removing the 2145-92F cover

5. Place the cover in a safe location.

Replace the cover


6. To reinstall the cover, or replace it with one from FRU stock, follow the procedure in "Installing or replacing the top cover: 2145-92F" on page 80.

Installing or replacing the support rails: 2145-92F

You must install the support rails before you can install a 2145-92F expansion enclosure in a rack.

Procedure

1. Locate the hardware that is used to install the rails, including the M4xL6 and M5xL13 screws. Set the hardware, which is shown in Figure 51, aside for use later in the installation process.

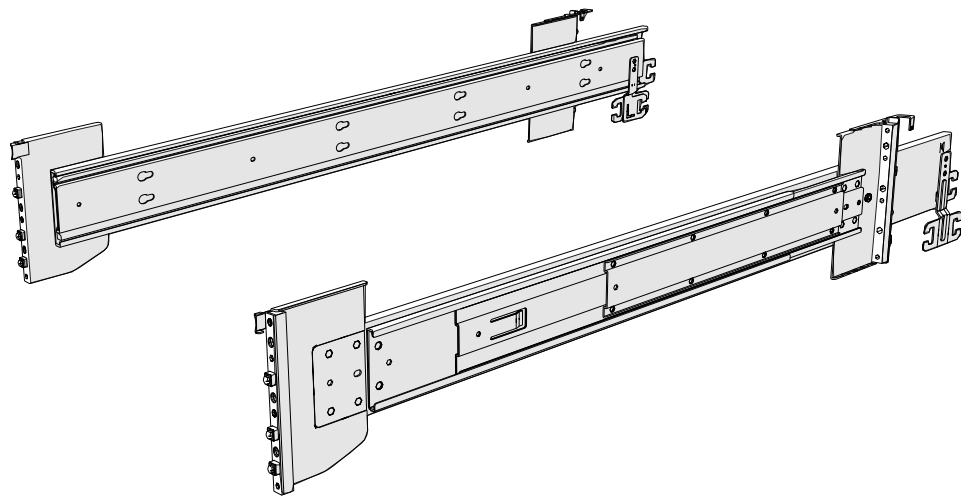

svc00962

Figure 51. Support rails

2. Select an available 5U space in your rack to install the expansion enclosure.

Important: When all components and drives are installed, the expansion enclosure is heavy. Install the support rails and enclosure at the lowest available position. Do not install the rails and enclosure above position U25 in the rack.

3. Remove the inner member of the rail. Push the tab (**a**) and slide the middle rail member back, as shown in Figure 52 on page 59.

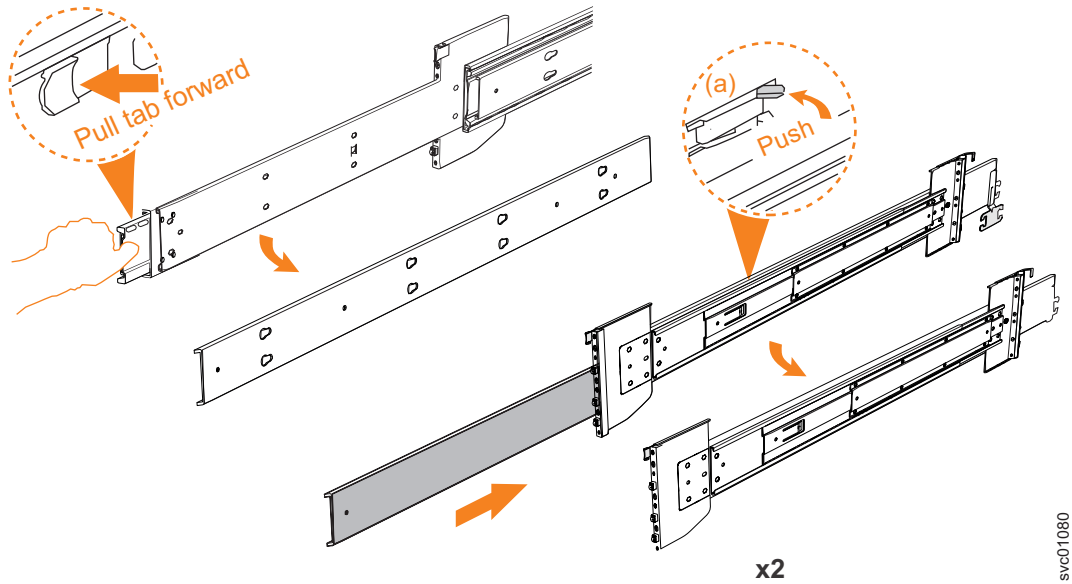


Figure 52. Detaching the inner rail section

4. Use four M4 screws to attach the inner rail to the side of the enclosure. Figure 53 shows the screw locations.

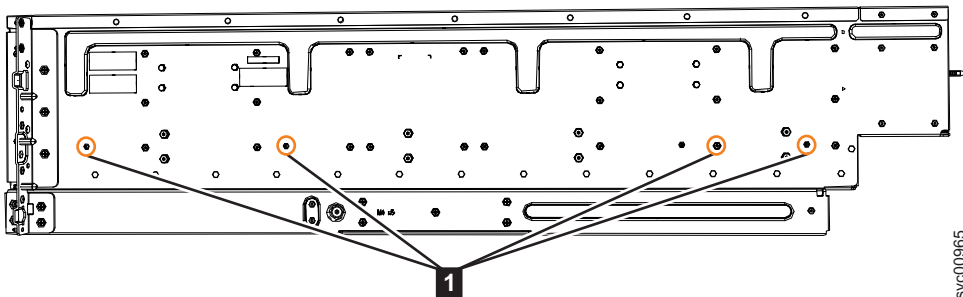


Figure 53. Screw locations to attach the inner rail to the enclosure

5. Install the inner section of the rail onto each side of the expansion enclosure, as shown in Figure 54 on page 60.

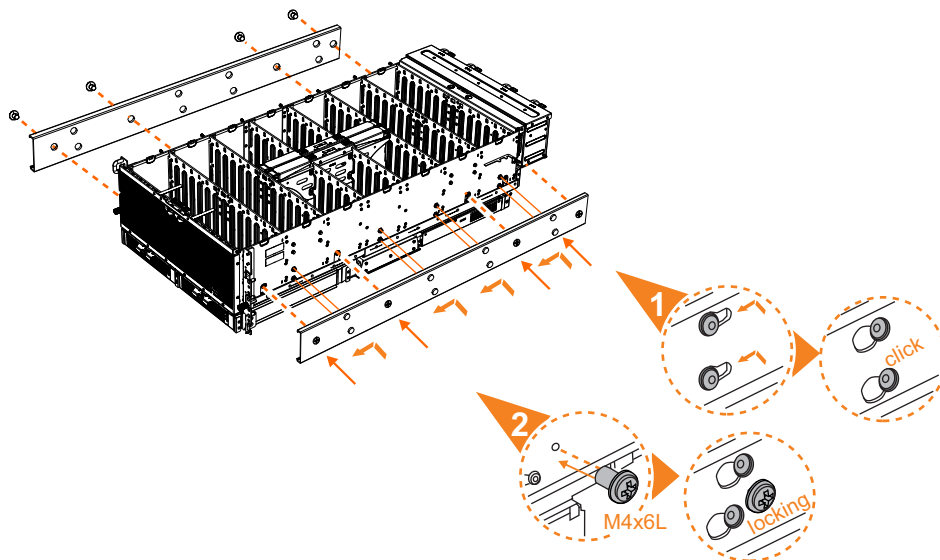


Figure 54. Attaching the inner rail section to the enclosure

6. Use the M5 screws to install the outer rail member and bracket assembly to the rack, as shown in Figure 55.

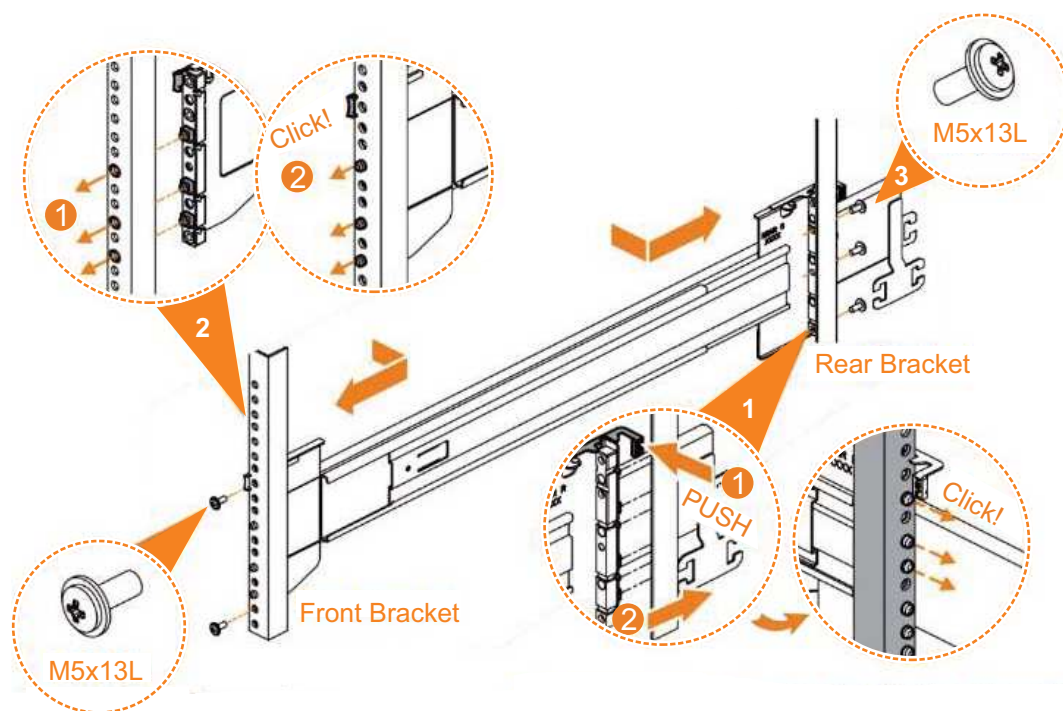


Figure 55. Installing the rail assembly to the rack frame

For example, Figure 56 on page 61 shows the front of the rail that is attached to the frame.



Figure 56. Example of required rack space

7. Repeat steps 5 on page 59 through 6 on page 60 to install the opposite rail.
8. Install the expansion enclosure in the rack, as described in “Installing or replacing an expansion enclosure in a rack: 2145-92F.”


Installing or replacing an expansion enclosure in a rack: 2145-92F

Use the following procedure to place the 2145-92F expansion controller in a rack during the installation process. To complete some service tasks, you might also need to slide the enclosure back in to the rack.

Before you begin

DANGER

Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)

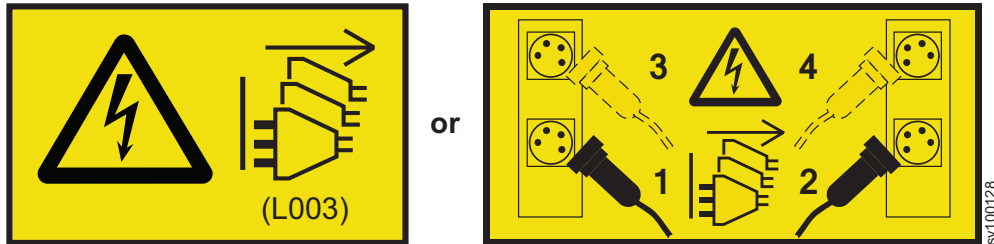

Use the reference numbers in parentheses at the end of each notice (for example, D005) to find the matching translated notice in *IBM System Storage SAN Volume Controller Safety Notices*.

DANGER:

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (R001 part 1 of 2)

CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers) Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers) This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack. (R001 part 2 of 2)

CAUTION:

Removing components from the upper positions in the rack cabinet improves rack stability during a relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions.
 - Remove all devices in the 32U position and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
 - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off the pallet and bolt the rack cabinet to the pallet. (R002)



DANGER

Racks with a total weight of > 227 kg (500 lb.), Use Only Professional Movers! (R003)

DANGER

Do not transport the rack via fork truck unless it is properly packaged, secured on top of the supplied pallet. (R004)

CAUTION:

		
33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

svr01053

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:

To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

CAUTION:

CAUTION regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers). Read and completely understand the contents of LIFT TOOL operator's manual before using.
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's website.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not raise, lower or slide platform load shelf unless stabilizer (brake pedal jack) is fully engaged. Keep stabilizer brake engaged when not in use or motion.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads. (C048, part 1 of 2)

- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048, part 2 of 2)

CAUTION:

If the System slide rails are installed above EIA location 29U, the [ServerLIFT®] tool (or other qualified lift tool) must be used as a safety precaution for servicing. Position the lift tool platform slightly below the bottom of the System drawer to account for the slight downward flex when the drawer is extended out fully on its slides. Then gently raise the lift tool platform to stably contact the bottom of the drawer, minding not to over force it as it could put upward stress to the slide rails. A service-qualified ladder may have to be used to reach or properly work around the System at such heights. While using a ladder, do not lean on or against the system drawer or lift tool during service, and follow safe practices. (C051)

DANGER

DANGER: Serious injury or death can occur if loaded lift tool falls over or if a heavy load falls off the lift tool. Always completely lower the lift tool load plate and properly secure the load on the lift tool before moving or using the lift tool to lift or move an object. (D010)

About this task

Important: The 2145-92F expansion enclosure is heavy. Before you install the expansion enclosure in the rack for the first time or replace it in the rack to complete a service task, perform the following tasks:

- Always use a suitably rated mechanical lift or four persons to raise the enclosure to install it in the rack. Even after the drives, power supply units, secondary expander modules, canisters, fans, and top cover are removed, the enclosure weighs 43 kg (95 lbs).
- Install the expansion enclosure in the lowest position in the rack. Figure 57 shows an example.

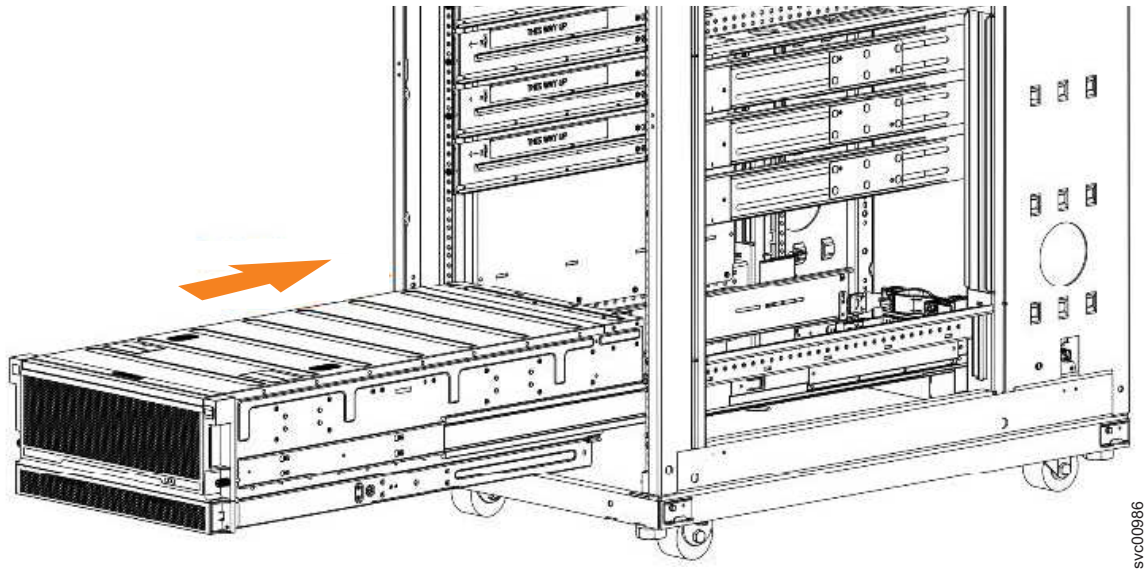


Figure 57. Example installation of the enclosure in the rack

- Ensure that the drives are easily accessible. Avoid installing the 2145-92F expansion enclosure above position 22U in the rack.

If you are reinstalling the expansion enclosure in the rack after you performed a service task (for example, replacing the enclosure), you must also perform the following tasks:

- Reinstall all of the following parts:
 - Cover
 - Drives
 - Fan modules
 - Power supply units and 1U fascia
 - Secondary expansion modules
 - Expansion canisters (and SAS cables)
- Reconnect both power cables to the expansion enclosure.

Procedure

1. Fully extend the left and right drawer sections from the rack to lock the rails in the extended position (**1** in Figure 58 on page 68).

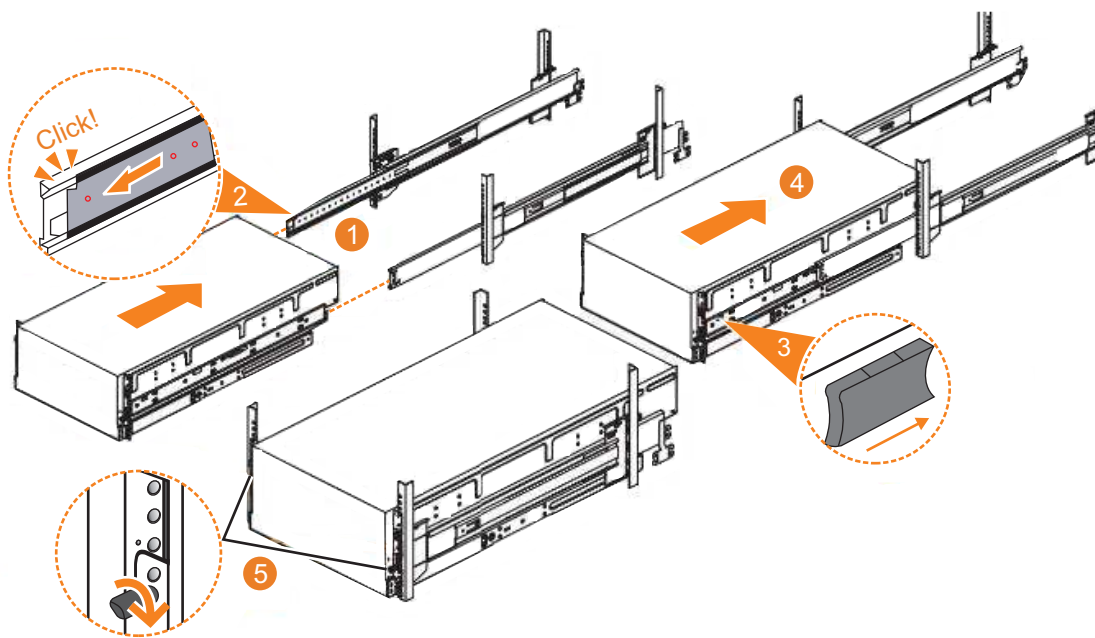


Figure 58. Replacing the 2145-92F enclosure in the rack

2. Ensure that the ball bearing retainer clicks into place inside the front of the left and right drawer sections (**2** in Figure 58).

Reinstalling parts into the enclosure

3. If you took the enclosure out of the rack, reinstall the following parts inside of the enclosure, as described in the following topics. You can reinstall the parts in any order.
 - “Installing or replacing a drive: 2145-92F” on page 81
 - “Installing or replacing a secondary expander module: 2145-92F” on page 86

Remember: The weight of the enclosure increases as more drives are installed.

4. Replace the top cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
5. Reinstall the remaining enclosure parts, as described in the following topics. You can reinstall the parts in any order.
 - “Installing or replacing a power supply: 2145-92F” on page 91 and “Installing or replacing the fascia: 2145-92F” on page 89
 - “Installing or replacing an expansion canister: 2145-92F” on page 69 and “Removing and installing a SAS cable: 2145-92F” on page 97
 - “Installing or replacing a fan module: 2145-92F” on page 100

Sliding the enclosure into the rack

6. Locate the left and right blue release tabs near the front of the enclosure. Press both release tabs forward to unlock the drawer mechanism (**3** in Figure 58).
7. Push the enclosure firmly into the rack (**4** in Figure 58).
8. Tighten the locking thumb screws (**5** in Figure 58) to secure the enclosure in the rack.
9. Reconnect power to the expansion enclosure.

Installing or replacing an expansion canister: 2145-92F

You can reinstall an expansion canister in a 2145-92F expansion enclosure or replace a faulty expansion canister with one from FRU stock.

Before you begin

Important: You can replace an expansion canister without powering off the expansion enclosure. However, to maintain operating temperature, replace the expansion canister within 10 minutes of its removal. When an expansion canister is removed, the reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

An expansion canister provides SAS connectivity between the 2145-92F expansion enclosure and SAN Volume Controller system. The expansion enclosure contains two expansion canisters. Figure 59 shows an example of an expansion canister. If either of the two expansion canisters has a failure, the other expansion canister assumes the full I/O load.

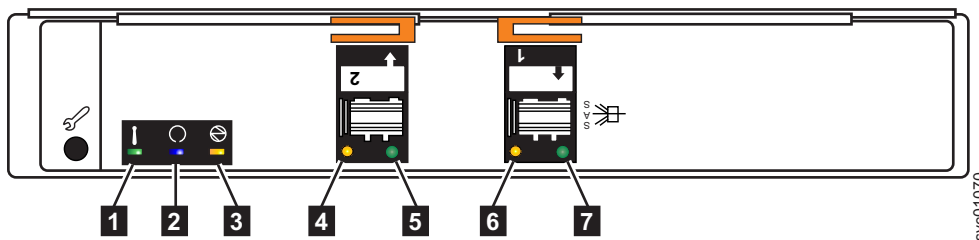


Figure 59. Expansion canister

- 1** Canister fault indicator
- 2** Canister status
- 3** Canister power indicator
- 4** and **6** SAS link fault indicators
- 5** and **7** SAS link operational indicators
- 8** Canister release handles

Procedure

1. Disconnect the elbow of the lower cable management arm to swing it out of the way, as shown in Figure 60 on page 70.
Follow the procedure that is described in “Moving the cable management arms” on page 73.
2. Carefully align the expansion canister with the expansion enclosure.
3. Rotate both the handles outward and insert the expansion canister into the expansion enclosure.
4. When the expansion canister is fully inserted, rotate each handle inward to lock it into position, as shown in Figure 60 on page 70.

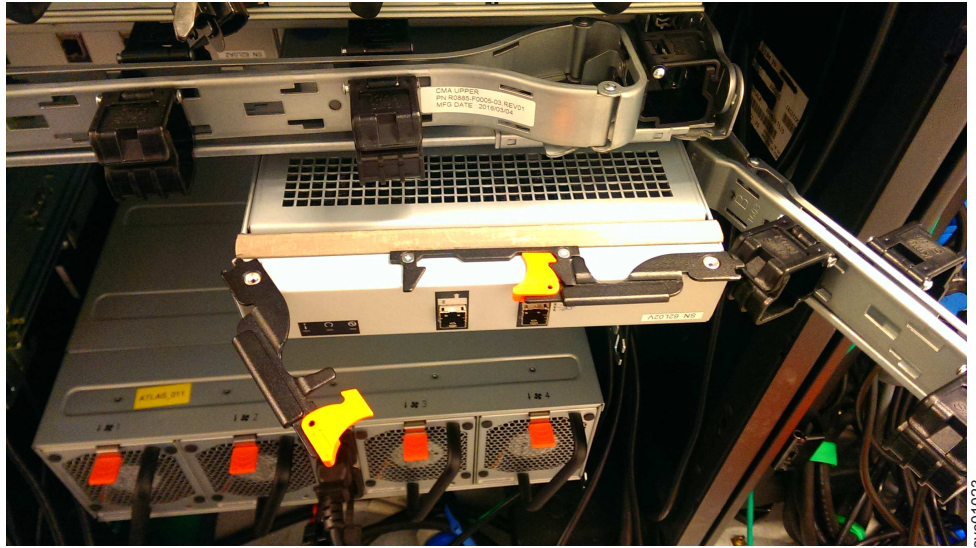


Figure 60. Install the expansion canister

5. Reconnect all the SAS cables to the appropriate SAS ports on the expansion canister, as described in “Removing and installing a SAS cable: 2145-92F” on page 97.
6. Reconnect the elbow of the lower cable management arm to the inner member of the slide rail.

Removing or moving the cable-management arm: 2145-92F

You might need to move the cable-management arm (CMA) aside to complete service tasks. If needed, you can also remove the CMA from the 2145-92F expansion enclosure.

About this task

The cable management arm (CMA) consists of an upper and lower arm assembly, as Figure 61 on page 71 shows. The upper and lower are independent of each other. They can be installed, moved, or removed from the enclosure individually.

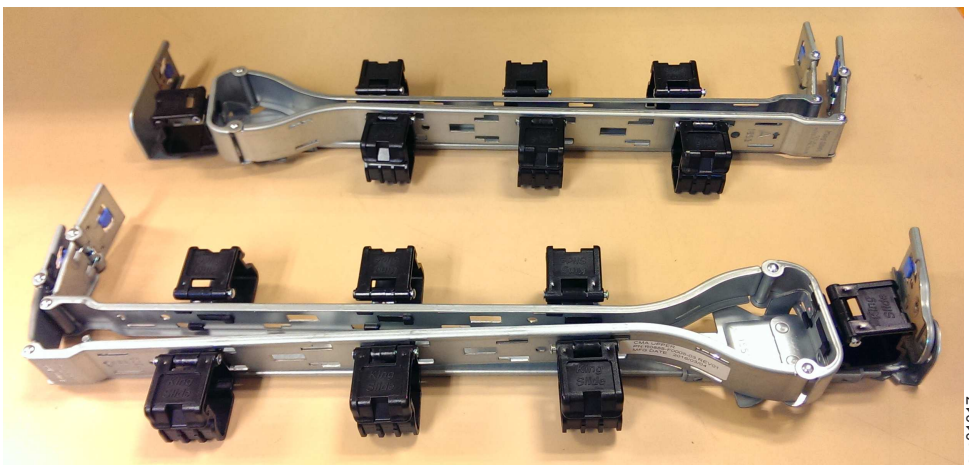


Figure 61. Upper and lower cable-management arms

To complete many service tasks, you can swing the CMA assemblies away from the expansion enclosure. You do not have to completely remove the CMA assemblies from the enclosure. For these service tasks, complete step 1 on page 74 through step 4 on page 75 in “Moving the cable management arms” on page 73.

However, you might need to remove a CMA assembly from the 2145-92F expansion enclosures. To do so, complete step 1 on page 72 through step 8 on page 73 in following procedure.

Procedure

Remove the upper CMA assembly

The connectors of the CMA are installed on the rail hooks at the end of the support rails. Figure 62 on page 72 shows the connectors on the upper CMA assembly.

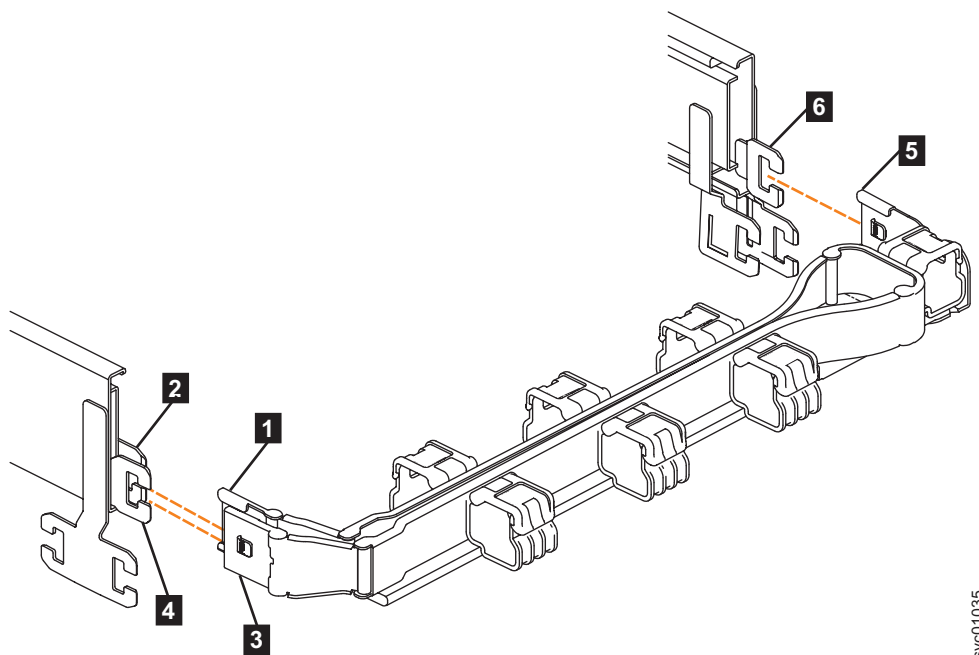


Figure 62. Connectors for the upper cable management arm

- 1** Inner connector on the upper CMA
- 2** Connector base on inner rail member
- 3** Outer connector on the upper CMA
- 4** Connector base on outer rail member
- 5** Support rail connector on the upper CMA
- 6** Connector base on outer rail member

1. Press the latch on the connector base on the upper CMA assembly (**5** in Figure 62).
2. Pull the connector to remove it from the connector base on the right support rail (**6** in Figure 62).
3. Press the latch on the outer connector of the upper CMA assembly (**3** in Figure 62).
4. Remove the outer connector from the inner member of the left support rail (**4** in Figure 62).
5. Remove the inner connector of the upper CMA assembly (**1**) from the inner member of the left support rail (**2**), as shown in Figure 62.

Remove the lower CMA assembly

Note: The procedure for removing the lower CMA assembly is the same as the procedure to remove the upper CMA assembly. However, the connector locations are reversed. For example, the connector base of the upper CMA (**5** in Figure 62) connects to the right rail. The connector base of the lower CMA (**11** in Figure 63 on page 73) attaches to the left rail.

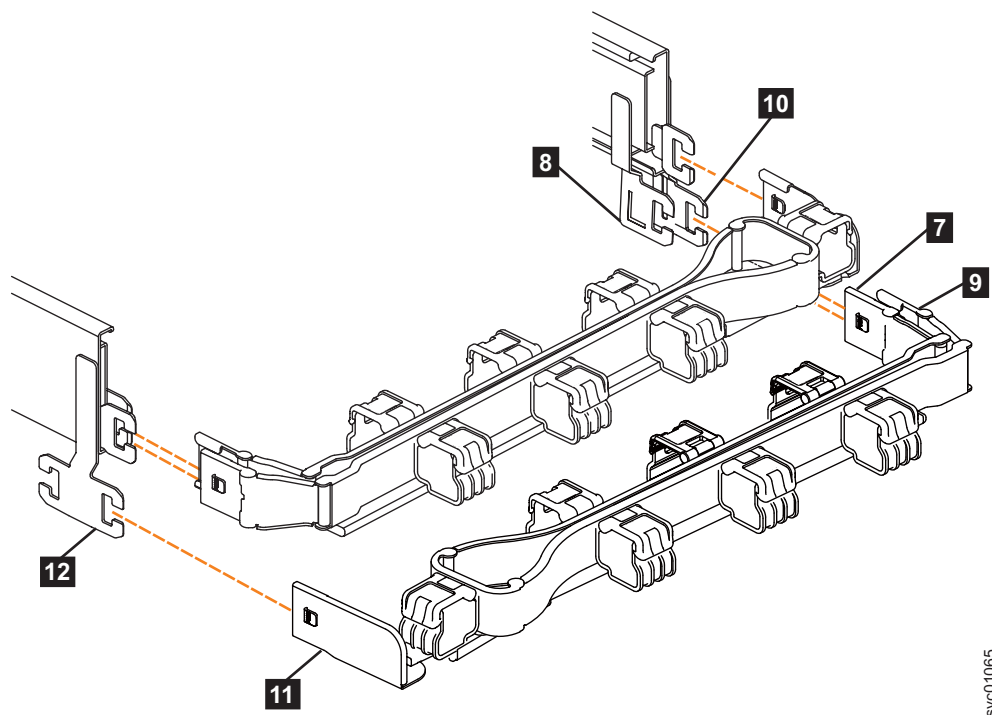


Figure 63. Components of the lower CMA assembly

6. Remove the connector base on the lower CMA assembly (**11**) from the connector on the left support rail (**12**), as Figure 63.
7. Remove the inner connector of the lower CMA assembly (**9**) from the outer member of the right support rail (**10**), as shown in Figure 63.
8. Remove the outer connector of the lower CMA assembly (**7**) from the inner member of the right support rail (**8**), as shown in Figure 63.

Replace the CMA assembly

9. To reinstall the CMA, or replace it with one from FRU stock, follow the procedure in “Installing or replacing the cable-management arm: 2145-92F” on page 75.

Moving the cable management arms

About this task

To complete most service tasks, you can swing the CMA assemblies out of the way. You can move each arm independently or you can move both arms. For example, Figure 64 on page 74 shows that both of the CMA assemblies are swung away from the rear of the enclosure.

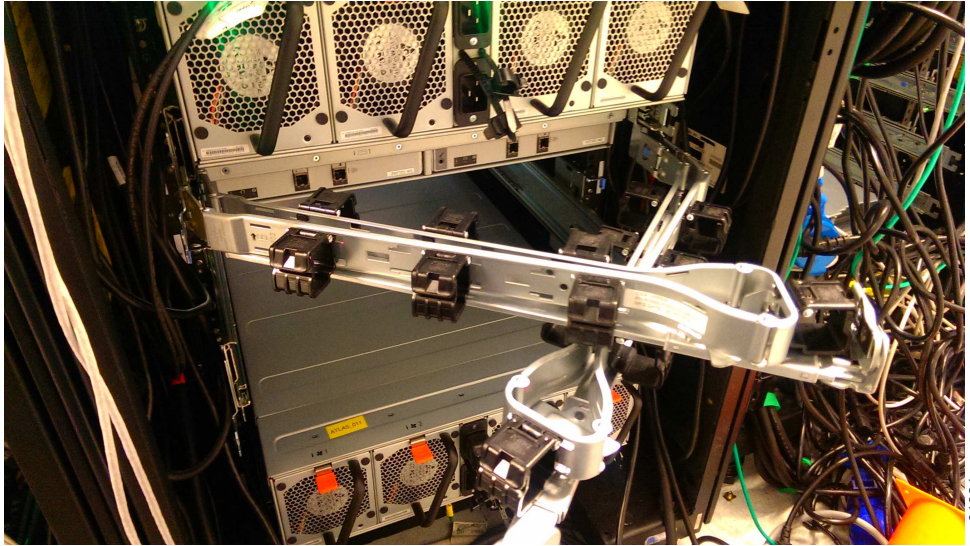


Figure 64. Upper and lower CMA assemblies moved aside

Figure 65 shows that the lower CMA assembly is swung away from the rear of the enclosure so that the expansion canister is accessible.

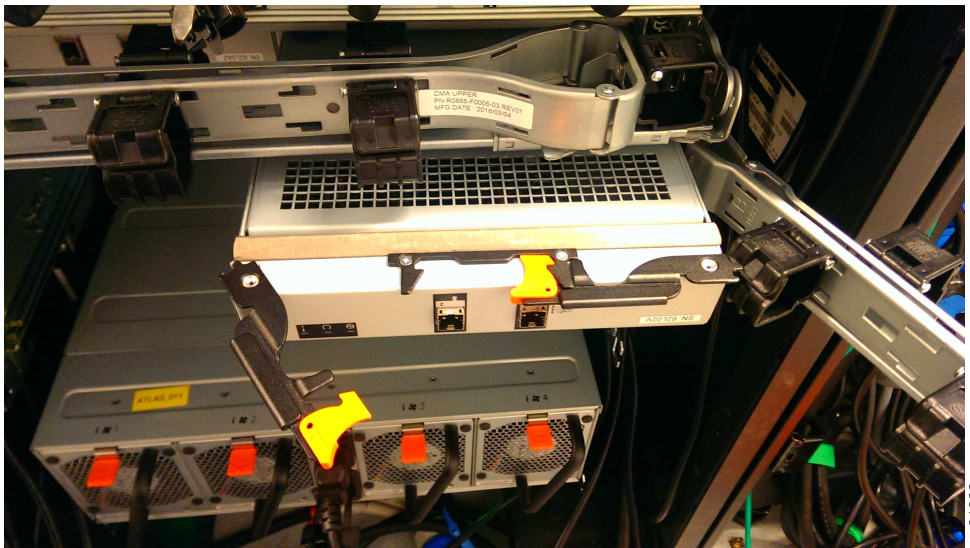


Figure 65. Lower CMA assembly moved

Procedure

1. To release the upper CMA, push the latch on the support rail connector **5** to release it from the connector base **6** on the right rail.

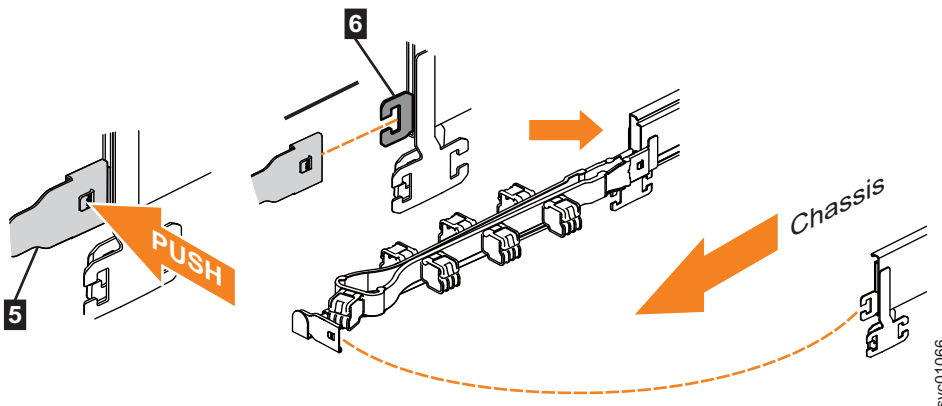


Figure 66. Release the upper CMA assembly

2. Move the upper CMA to the left to swing it out of the way.
 - a. To reattach the upper CMA to the rail, reverse the procedure.
3. To release the lower CMA, push the latch on the support rail connector **11** to release it from the connector base **12** on the left rail.

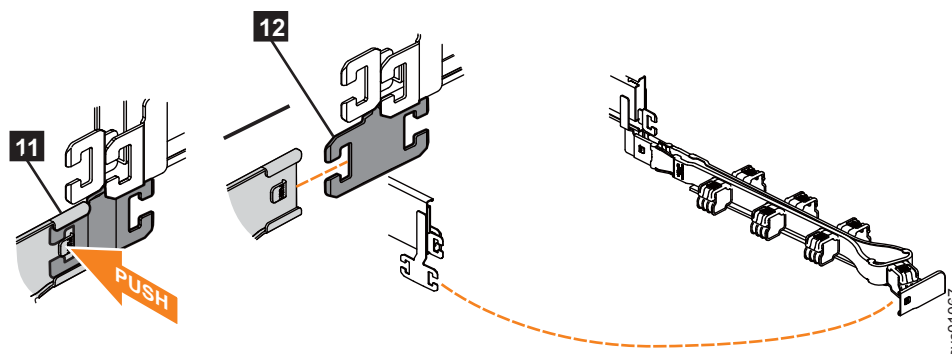


Figure 67. Release the lower CMA assembly

4. Move the lower CMA to the right to swing it out of the way.
 - a. To reattach the lower CMA to the rail, reverse the procedure.

Installing or replacing the cable-management arm: 2145-92F

Use these procedures to install the cable-management arm (CMA) for the 2145-92F expansion enclosure. You can also use these procedure to replace a faulty CMA assembly.

About this task

As part of the initial installation of the 2145-92F expansion enclosure, you must attach the CMA. You might also need to replace a faulty CMA with a new one from FRU stock.

The cable management arm (CMA) consists of an upper arm and a lower arm assembly, as Figure 68 on page 76 shows.

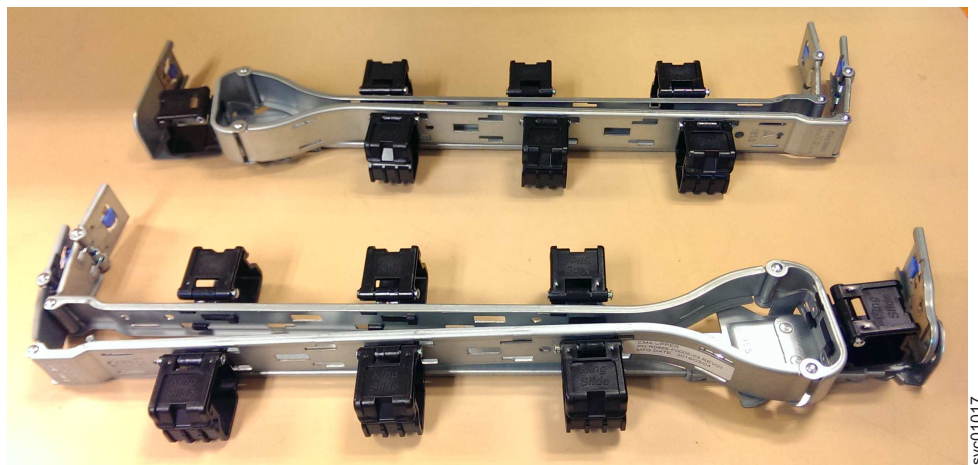


Figure 68. Upper and lower cable-management arms

As Figure 69 shows, the support rail connectors of each CMA assembly are installed on the rail hooks at the end of the support rails.

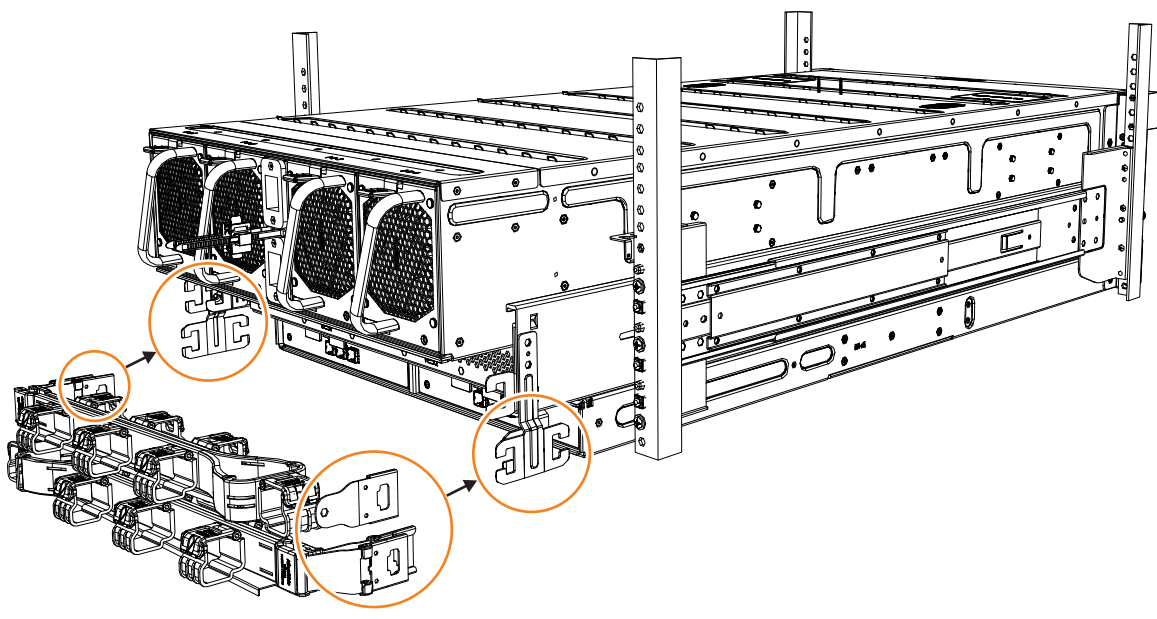



Figure 69. Upper and lower cable-management arms

Procedure

1. Remove the loop straps from the upper and lower CMA assemblies. The straps are used only for shipping.

Installing the upper CMA assembly


Figure 70 on page 77 shows the connectors on the upper CMA assembly.

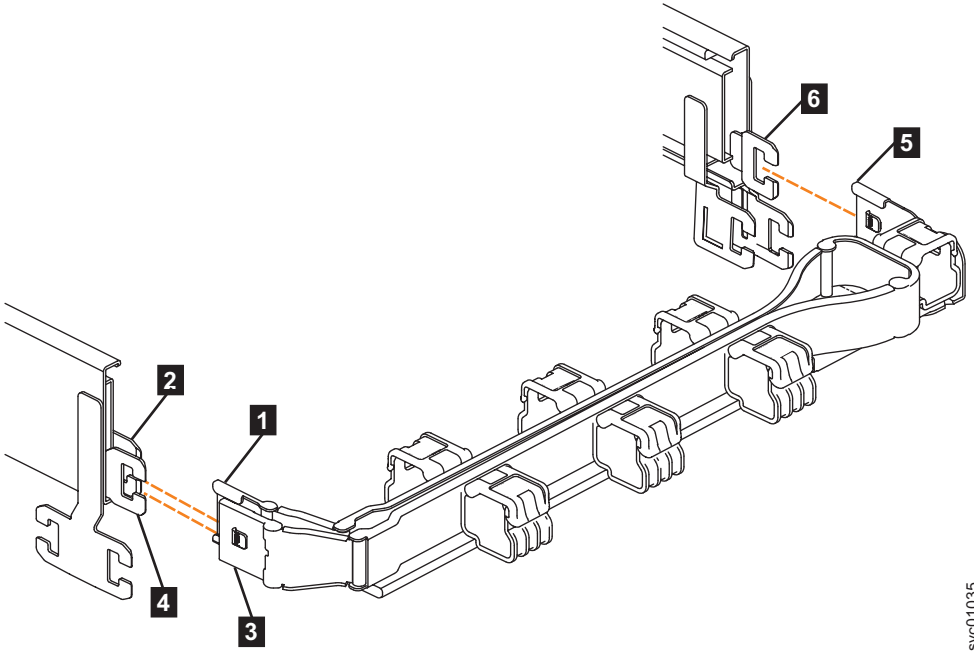

svc01035

Figure 70. Connectors for the cable management arm

- 1** Inner connector on upper CMA
 - 2** Connector base on inner rail member
 - 3** Outer connector on upper CMA
 - 4** Connector base on outer rail member
 - 5** Support rail connector on upper CMA
 - 6** Connector base on outer rail member
2. Install the inner connector of the upper CMA assembly (**1**) to the inner member of the left support rail (**2**), as shown in Figure 71 from the outer and inner support rails.

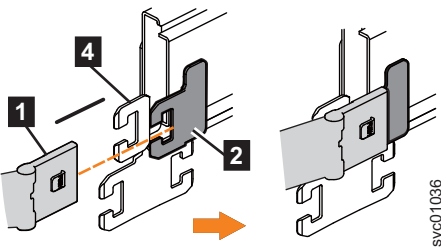

svc01036

Figure 71. Install the inner connector of the upper CMA to the inner member of the support rail

3. Install the inner connector of the upper CMA assembly (**3**) to the inner member of the left support rail (**4**), as shown in Figure 72 on page 78.

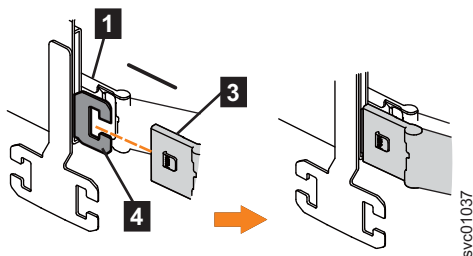


Figure 72. Install the inner connector of the upper CMA to the inner member of the support rail

4. Attach the support rail connector on the upper CMA assembly (5) to the connector base on the right support rail (6), as shown in Figure 73.

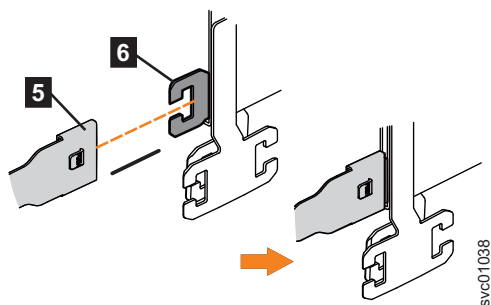


Figure 73. Attach the support rail connector of the upper CMA to the right support rail

Ensure the cable-management arm connector attaches securely to the hooks on the rails.

Installing the lower CMA assembly

Note: The procedure for attaching the lower CMA assembly is the same as the procedure to attach the upper CMA assembly. However, the connector locations are reversed. For comparison, Figure 74 on page 79 shows the upper and lower CMA assemblies as they are aligned to the support rails. The support rail connector of the upper CMA attaches to the right rail. The support rail connector of the lower CMA **11** attaches to the left rail.

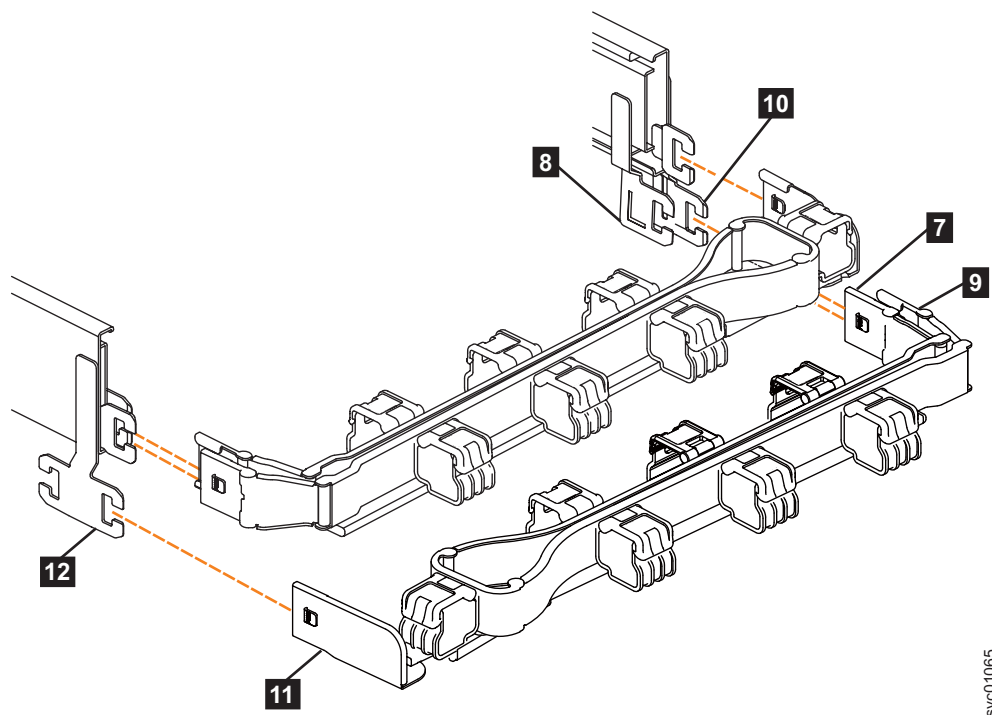


Figure 74. Comparing the location of the components of the CMA assemblies

- 7** Inner connector on lower CMA
 - 8** Connector base on inner rail member
 - 9** Outer connector on lower CMA
 - 10** Connector base on outer rail member
 - 11** Support rail connector the lower CMA
 - 12** Connector base on outer rail member
5. Install the inner connector of the lower CMA assembly (**7**) to the inner member of the right support rail (**8**), as shown in Figure 74).
 6. Install the outer connector of the lower CMA assembly (**9**) to the outer member of the right support rail **10** , as shown in Figure 74.
 7. Attach the support rail connector on the lower CMA assembly (**11**) to the connector on the left support rail (**12**), as shown in Figure 74. Ensure the lower CMA assembly is securely attached to the hooks on the end of the support rails.
 8. Route the cables and power cords on the CMA. If needed, secure them with cable ties or hook-and-loop fasteners.

Notes:

- Use the cable straps that are provided on the rear of the system to retain the cables and prevent them from sagging.
 - Allow slack in all of the cables to avoid tension in the cables as the CMA moves.
9. Reconnect the power cords and other cables, as needed.

Installing or replacing the top cover: 2145-92F

You can replace the top cover on a 2145-92F expansion enclosure during the installation process or after you complete a service task.

Before you begin

Important: You can install the cover while the expansion enclosure is powered on. To maintain operating temperature, replace the cover within 15 minutes of completing other service tasks. When the cover is removed, the reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

To install or replace the top cover on the 2145-92F expansion enclosure, complete the following steps.

Procedure

1. Carefully lower the cover and ensure that it is aligned correctly with the back of the enclosure, as shown in Figure 75.


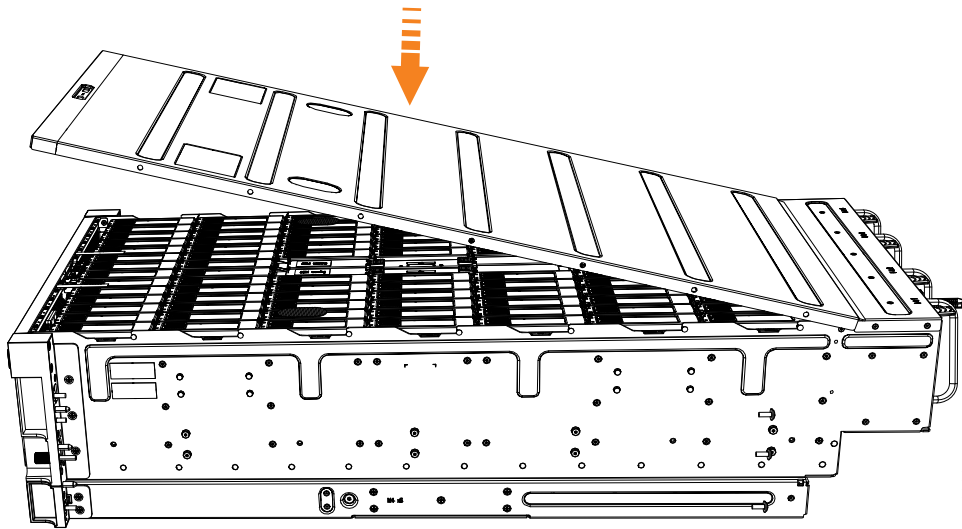


Figure 75. Aligning the 2145-92F top cover


2. Push the cover release lever to the side (**2**) as shown in Figure 76 on page 81.
3. Slide the cover towards the back of the enclosure (**3**) back until it stops, as shown in Figure 76 on page 81.

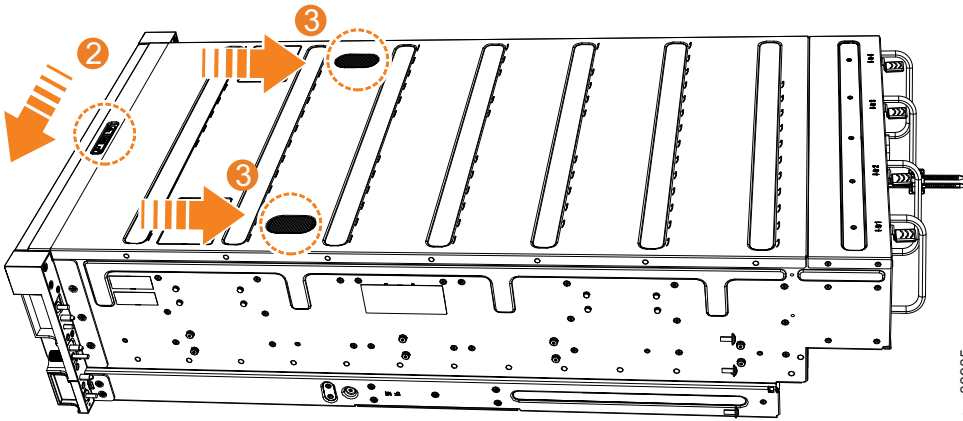

svc00985

Figure 76. Replacing the 2145-92F top cover

4. Verify that the cover correctly engages the cover release latch and all of the inset tabs on the expansion enclosure.
5. Lock the cover into position by sliding the release lever **4**, as shown in Figure 77

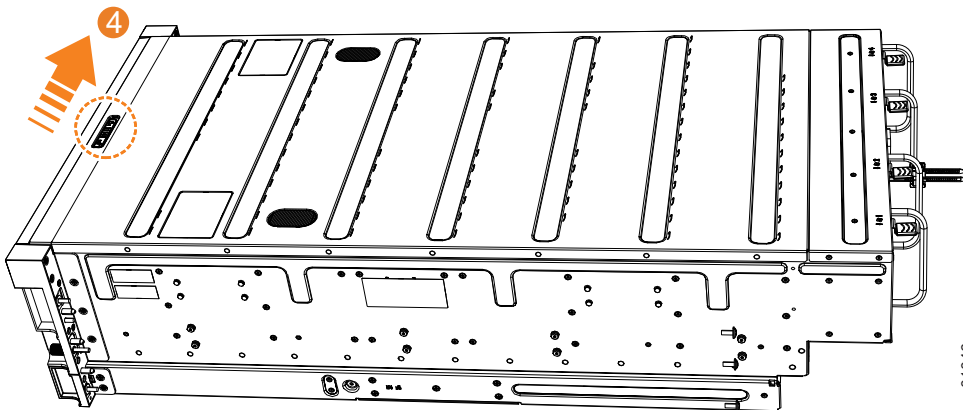

svc01046

Figure 77. Locking the top cover

Installing or replacing a drive: 2145-92F

Use the following procedure to install a drive for the first time or to replace a faulty drive in a 2145-92F expansion enclosure with a new one received from FRU stock.

Before you begin

Important:

- You can replace a drive assembly without powering off the expansion enclosure. However, to maintain operating temperature, do not keep the cover off an operational enclosure for more than 15 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.
- Ensure that the drive that you are replacing is not a spare or a member of an array. The drive status is shown in **Pools > Internal Storage** in the management GUI. If the drive is a member of an array, follow the fix procedures in the

management GUI. The fix procedures minimize the risk of losing data or access to data; the procedures also manage the system's use of the drive.

About this task

The 2145-92F expansion enclosure supports 92 drives. Figure 78 shows an example of a drive assembly.

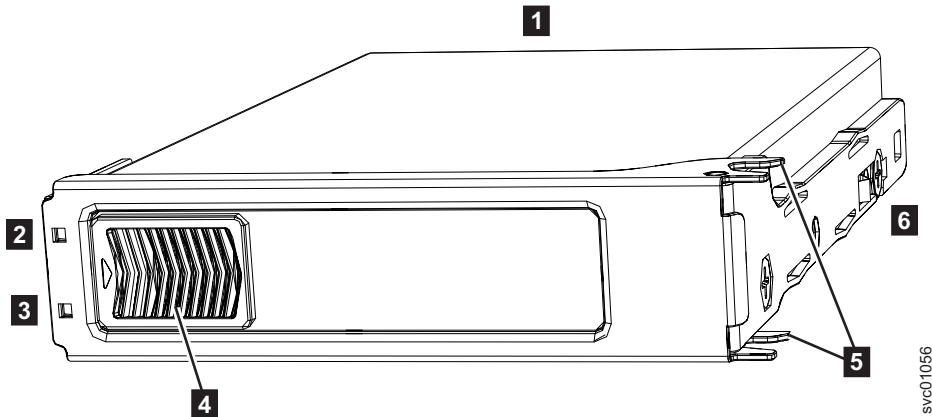


Figure 78. Drive assembly

- 1** Disk drive
- 2** Online indicator
- 3** Fault indicator
- 4** Release latch
- 5** Drive latch toes
- 6** Drive carrier

Procedure

1. Read all the available safety information.
2. Carefully slide the expansion enclosure out of the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
3. Remove the cover, as described in “Removing the top cover: 2145-92F” on page 56.
4. Locate the empty drive slot to receive the new drive or that contains the faulty drive that you want to replace.

Note: When a drive is faulty, the amber fault indicator is lit (**3** in Figure 78). Do not replace a drive unless the drive fault indicator is on or you are instructed to do so by a fix procedure.

A label on the enclosure cover (Figure 79 on page 83) shows the drive locations in the enclosure. The drive slots are numbered 1-14 from left to right and A-G from the back to the front of the enclosure.

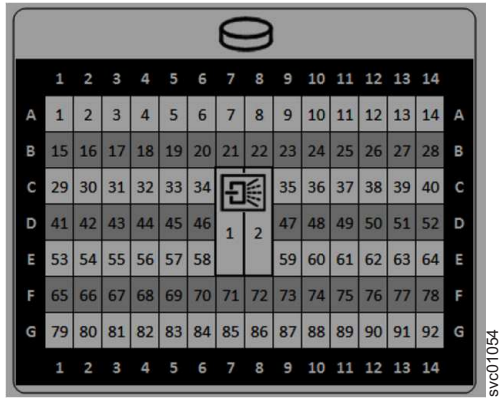


Figure 79. Drive locations in a 2145-92F expansion enclosure

The drive slots must be populated sequentially, starting from the back-left corner position (slot 1, grid A1). Sequentially install the drive in the slots from left to right and back row to front. Always complete a full row before you install drives in the next row. For example, in Figure 80, the drives are installed correctly. Drives are installed in slots 1 -14 of row A and the installation continues in slot 15 in row B.

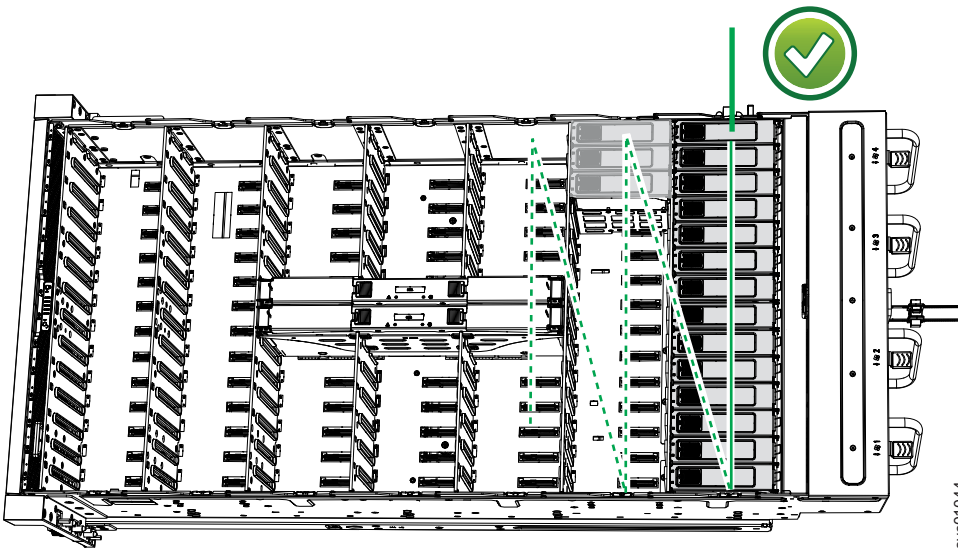


Figure 80. Correct drive installation

In Figure 81 on page 84, the drives are not installed correctly. Slot 1 (A1) does not contain a drive. In addition, drives are installed in row B even though row A contains empty drive slots.

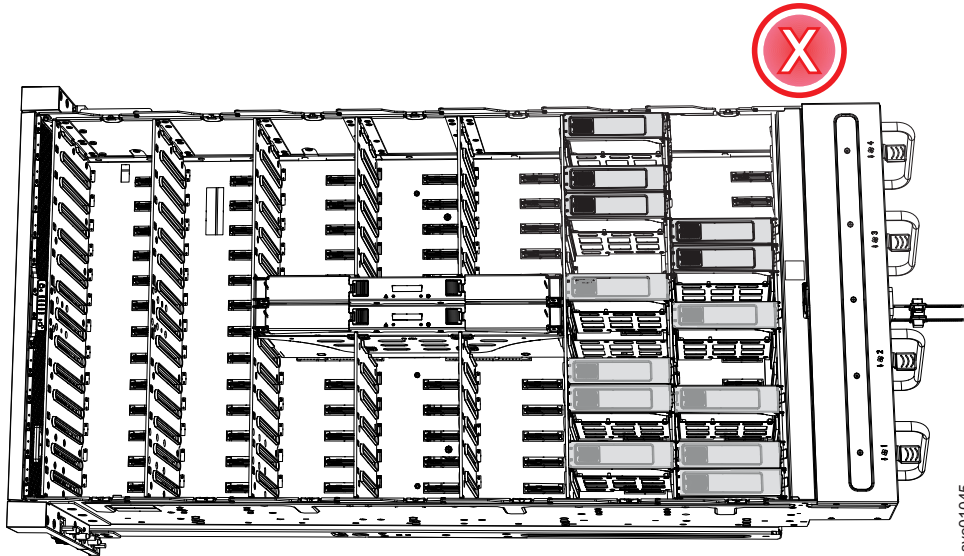


Figure 81. Incorrect drive installation

5. Touch the static-protective package that contains the drive to any unpainted metal surface on the enclosure. Wear an anti-static wrist strap to remove the drive from the package.
6. Ensure that the drive handle (**1** in Figure 82 on page 85) of the drive assembly is in the open (unlocked) position.
7. Align the drive carrier into the appropriate drive slot.
8. Gently push the drive down until it stops and the bottom of the latch is aligned with the top of the partition. Ensure that the handle is not open more than 45 degrees from the drive carrier. (**2** in Figure 82 on page 85).

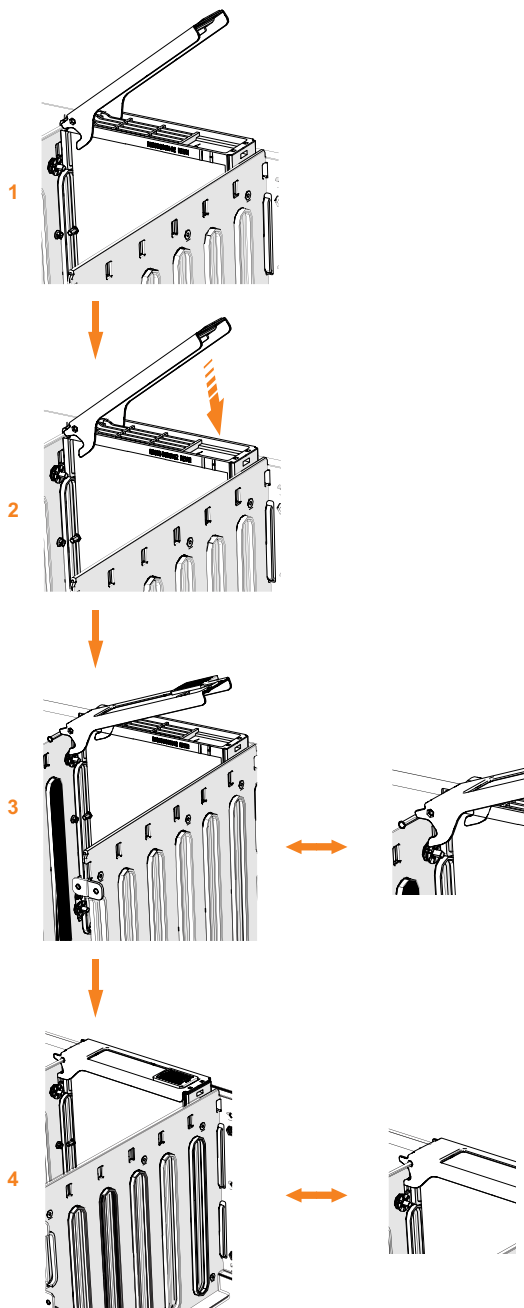


Figure 82. Replace the drive

9. Rotate the handle down to lock the drive assembly into the chassis (**3** in Figure 82).

10. Ensure the toe on the bottom of the latch is fully engaged with the partition in the chassis.
11. Ensure that the top toe of the latch is also fully engaged (**4** in Figure 82 on page 85).
12. Repeat steps 5 on page 84 through 11 for each drive you are replacing.
13. Replace the cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
14. Slide the expansion enclosure back into the rack, as described in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61.

Installing or replacing a secondary expander module: 2145-92F

You can replace a faulty secondary expander module in a 2145-92F expansion enclosure. You can also reinstall the secondary expander modules after you perform other service tasks.

Before you begin

DANGER



Hazardous voltage present. Voltages present constitute a shock hazard, which can cause severe injury or death. (L004)

DANGER



Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in splattered metal, burns, or both. (L005)

CAUTION:

Use caution when you are removing or replacing a secondary expander module from an enclosure (01LJ112) that is powered on. Avoid contact with the connectors on the main board. Only an IBM Service Support Representative (SSR) can remove the secondary expander module if the 01LJ112 enclosure is powered.

Important: You can replace a secondary expander module without powering off the expansion enclosure. However, to maintain operating temperature, do not keep

the cover off an operational enclosure for more than 15 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

The 2145-92F expansion enclosure contains two secondary expander modules, as Figure 83 shows. The secondary expander modules provide SAS connectivity between the expansion canisters and the drives. Each drive has 2 SAS ports. SAS port 1 of each drive is connected to secondary expander module 1. SAS port 2 of each drive is connected to secondary expander module 2. Each expansion canister is connected to both secondary expander module 1 and secondary expander module 2. If secondary expander module 2 is missing or is faulty, the expansion canisters can communicate only with SAS port 1 on each drive. Similarly, if secondary expander module 1 is missing or is faulty, the expansion canisters can communicate only with SAS port 2 on each drive.



Figure 83. Location of secondary expander modules

This task assumes that the following conditions were met:

- The top cover was removed, as described in “Removing the top cover: 2145-92F” on page 56.
- The secondary expansion module was removed, as described in “Removing a secondary expander module: 2145-92F” on page 117.

Procedure

1. Slide the expansion enclosure out from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
2. Identify the secondary expander module to be replaced; Figure 84 on page 88 shows the LEDs on top of a secondary expansion module.

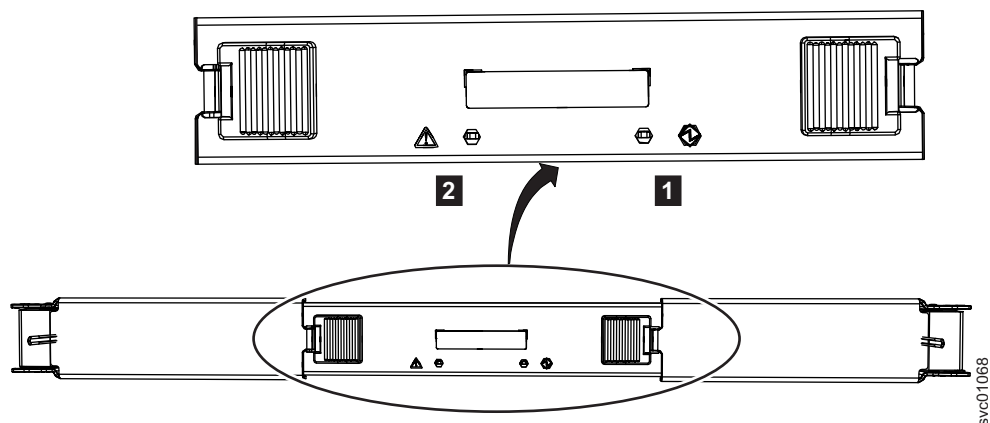


Figure 84. LEDs on a secondary expansion module

- 1** Online indicator
- 2** Fault indicator
- 3. Rotate both handles on the new secondary expander module to an open position, as shown in Figure 85.

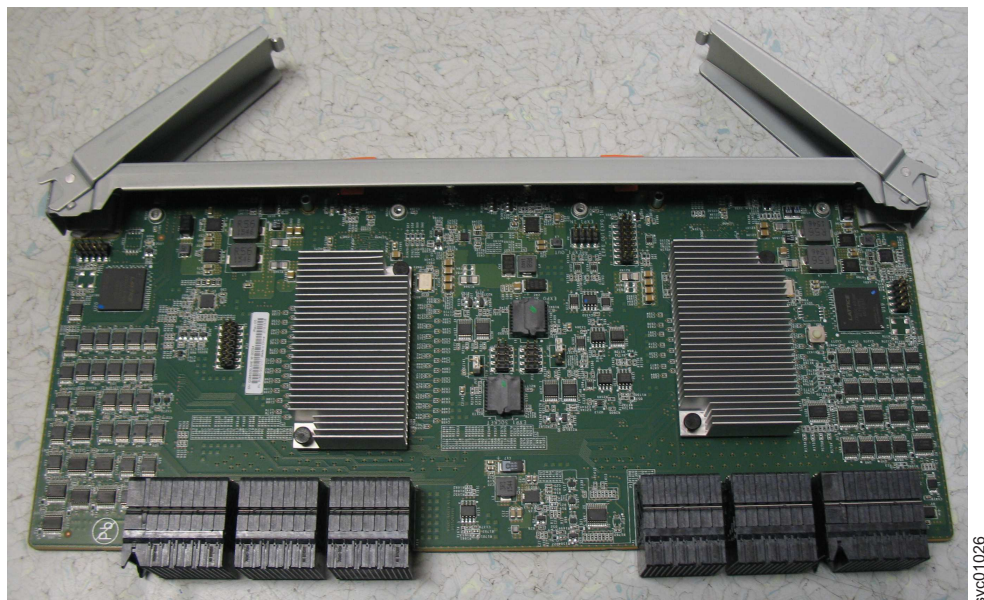


Figure 85. Open the secondary expander module handles

- 4. Carefully align the edges of the secondary expander module in the guide slot in the enclosure, as shown in Figure 86 on page 89.

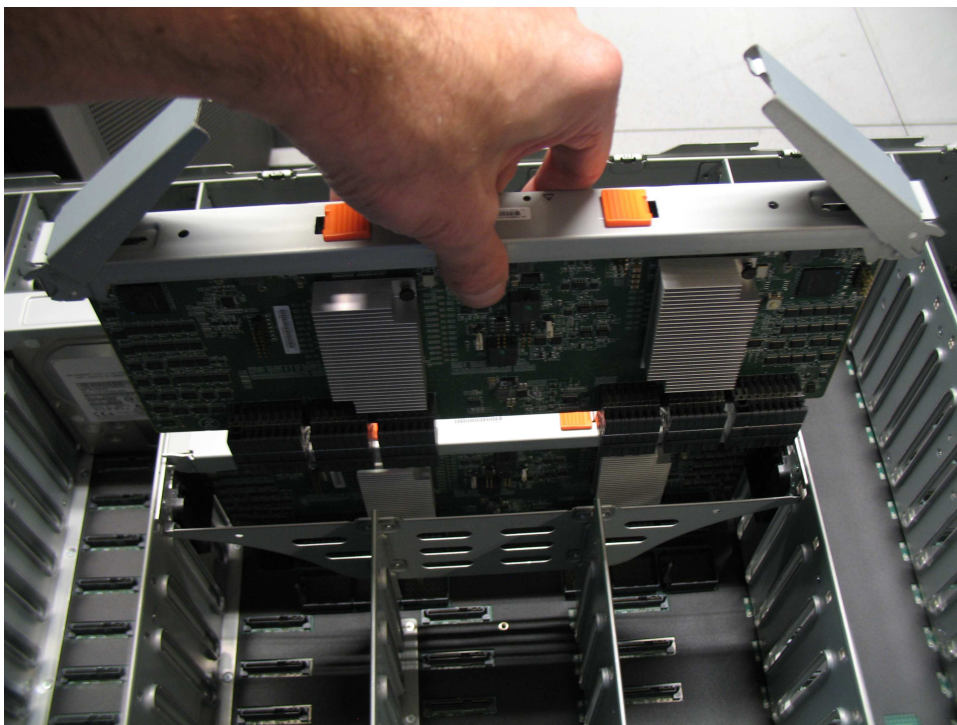


Figure 86. Replace the secondary expander module

5. Press the secondary expander module down into position in the enclosure.
6. Rotate the handles on the secondary expander module to the closed position to lock it in the enclosure.
7. If needed, repeat step 3 on page 88 through step 6 to replace the other secondary expander module.
8. Replace the top cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
9. If needed, reconnect the power cables to the expansion enclosure, as described in “Powering on the expansion enclosure: 2145-92F” on page 140.
10. Check the LEDs on the top of the secondary expander module to verify that it is receiving power.
“SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators” on page 144 describes the status indicated by the LEDs.

Installing or replacing the fascia: 2145-92F

During the initial installation process or after you perform service, you can install the fascia components on the front of a 2145-92F expansion enclosure.

About this task

The 4U fascia covers the display panel of the expansion enclosure. It is attached to the enclosure by four screws. The bottom 1U fascia covers both of the power supply units (PSUs) on the enclosure. As Figure 87 on page 90 shows, the fascias are independent; you can remove or replace one without having to remove or replace the other.

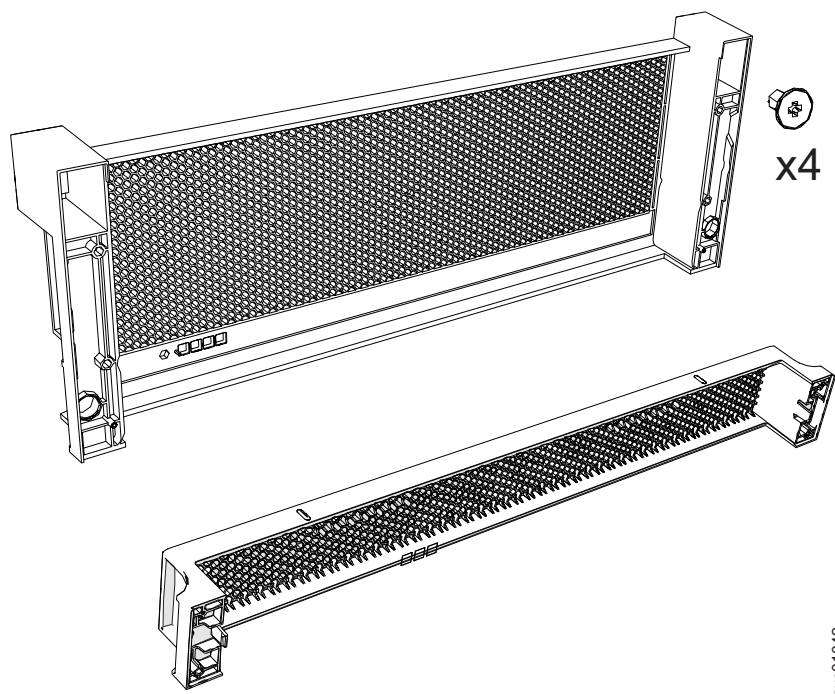


Figure 87. Fascia components on the expansion enclosure

Note: When the expansion enclosure is shipped, the 4U and 1U fascia are not installed. You must install them as part of the initial installation process.

Procedure

1. Use the slide rails to pull the enclosure out of the rack, as described in "Removing an expansion enclosure from a rack: 2145-92F" on page 104.

Attach the front (4U) fascia

2. Align the front 4U fascia with the enclosure so that the thumbscrews go through the holes on each side. As Figure 88 on page 91 shows, this action aligns the screw holes on the back of the fascia with the screw holes on the front flange of the enclosure.
3. Replace the four screws to reattach the 4U fascia. Secure the screws from the back of the flange and into the rear of the fascia. Each side of the 4U fascia contains two screws.

Attach the bottom (1U) fascia

4. Reattach the bottom 1U fascia that covers the power supply units (PSUs). Align the fascia with the enclosure and gently push it until it clicks into place on the chassis, as shown in Figure 88 on page 91.

Align the tab on each side of the 1U fascia with the corresponding slots on the enclosure flange. Pins on each flange must also align with a hole in each side of the 1U fascia.

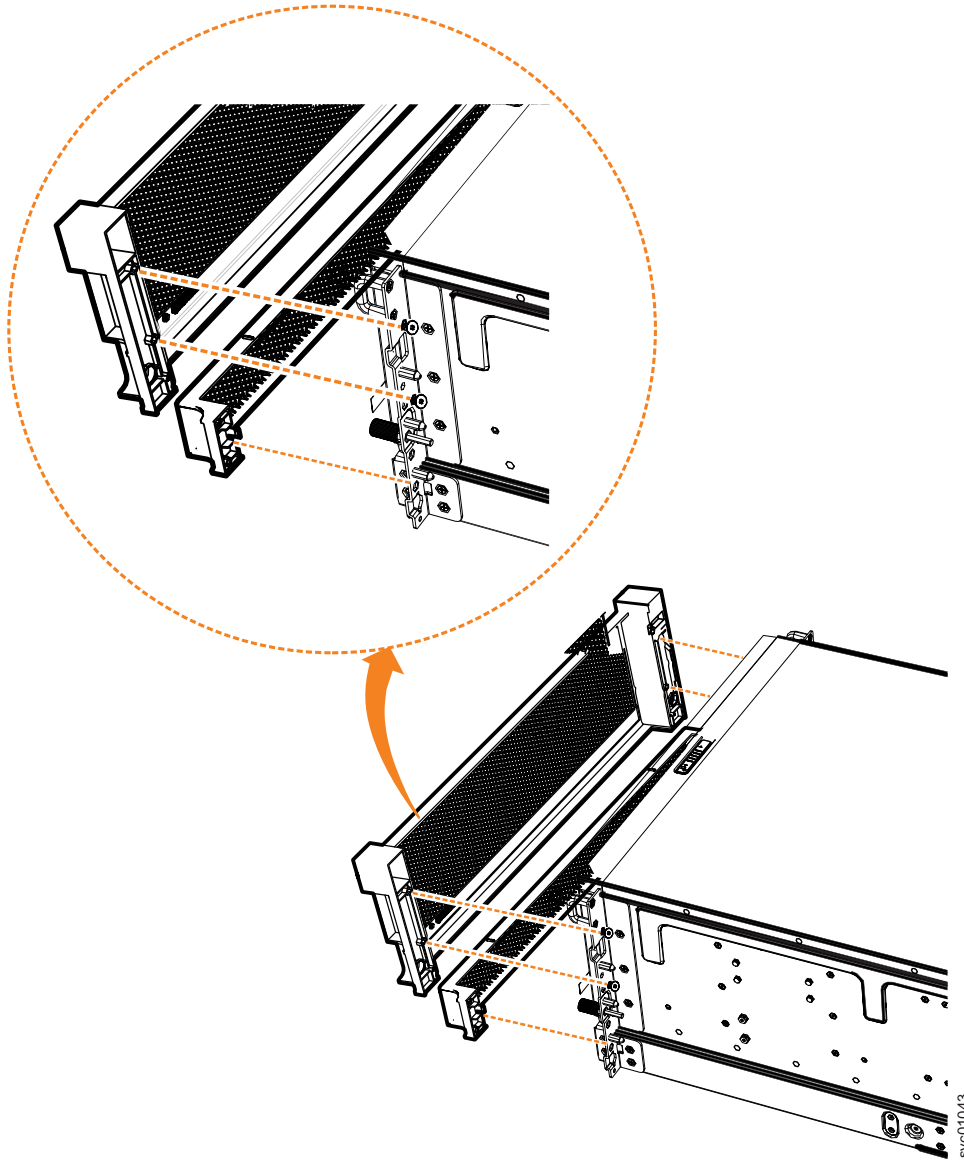


Figure 88. Replace fascia components on the expansion enclosure

Installing or replacing a power supply: 2145-92F

Use the following procedures to replace either of the redundant power supplies in the 2145-92F expansion enclosure. The redundant power supplies operate in parallel; one continues to provide power to the enclosure if the other fails.

Before you begin

Important: You can replace a PSU without powering off the expansion enclosure. However, to maintain operating temperature, replace the PSU within 10 minutes of its removal. When a PSU is removed, the reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

This task assumes that the following conditions are met:

- You removed the PSU, following the procedure described in “Removing a power supply: 2145-92F” on page 112.
- You removed the fascia that covers the PSU from the front of the expansion enclosure, as described in “Removing the fascia: 2145-92F” on page 94.
- You are aware of the procedures for handling static-sensitive devices.

Procedure

1. Read all safety information.
2. Rotate the handles on the PSU outward, as shown in Figure 89.



Figure 89. Preparing to install the power supply

3. Slide the PSU forward into the chassis until it clicks in to place, as shown in Figure 90 on page 93.



Figure 90. Install the power supply

4. Close the handles on the PSU and ensure the handle lock clicks in to place.
5. Verify that the AC input and the DC power indicators are lit on the front of the PSU, as shown in Figure 91 on page 94.



Figure 91. Power supply indicators

For more information about the power supply indicators, see “SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators” on page 144.

Removing the fascia: 2145-92F

To perform service tasks, you can remove each component of the fascia from the front of a 2145-92F expansion enclosure.

About this task

The expansion enclosure has a 4U front fascia that covers the display panel and a 1U fascia that covers the power supply units (PSUs). As Figure 92 on page 95 shows, the fascias are independent; you can remove or replace one without having to remove or replace the other.

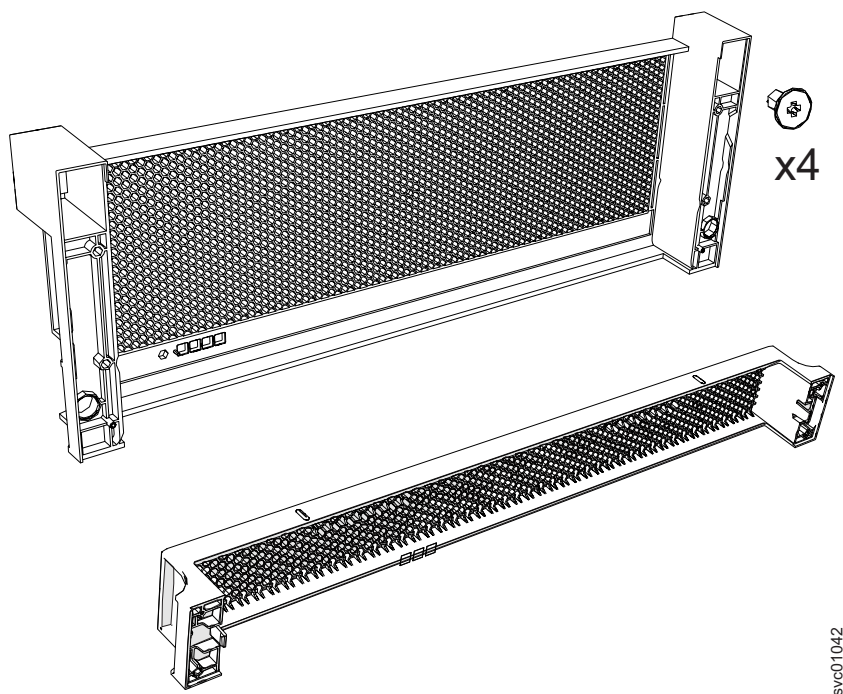


Figure 92. Fascia components on the expansion enclosure

Procedure

1. Use the slide rails to pull the enclosure out of the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104. Ensure that a mechanical lift is available to support the weight of the enclosure.

Remove the front (4U) fascia

2. Remove the front fascia by removing the two screws that attach the fascia to the flange on each side of the chassis, as shown in Figure 93 on page 96.

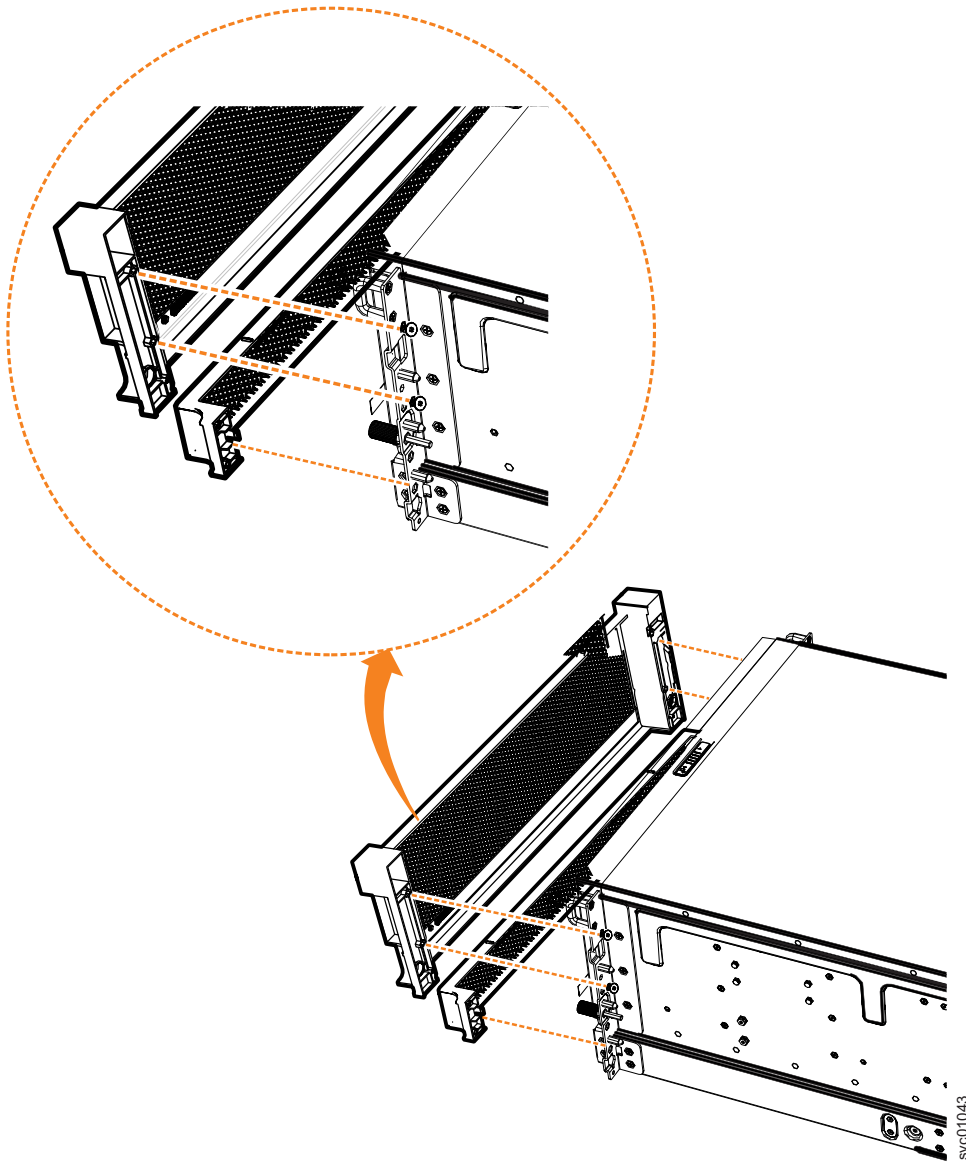


Figure 93. Remove fascia components from the expansion enclosure

Remove the bottom (1U) fascia

3. Gently pull on each side of the PSU fascia to remove it from the chassis, as shown in Figure 93. The PSU fascia will disengage from the slot and pin that connect it to each side of the chassis

You must remove the bottom fascia to access and service either PSU. However, as Figure 94 on page 97 shows, you do not have to remove the front fascia.



Figure 94. Fascia removed from the PSUs

Replace the fascia

4. To reinstall the front or PSU fascia, or replace them with parts from FRU stock, follow the procedure in “Installing or replacing the fascia: 2145-92F” on page 89.

Removing and installing a SAS cable: 2145-92F

Use the following procedures to attach SAS cables to the 2145-92F enclosure during the initial installation process. You can also remove a faulty SAS cable and replace it with a new one received from FRU stock.

About this task

Be careful when you are replacing the hardware components that are located in the back of the system. Do not inadvertently disturb or remove any cables that you are not instructed to remove.

If you replace more than one cable, record which two ports, canisters, and enclosures each cable connects, so you can match the connections with the replacement cables. The system cannot operate if the SAS cabling to the expansion enclosure is incorrect. See the Installing container of the IBM Knowledge Center for information about the correct SAS cabling for expansion enclosures.

When the 2145-92F expansion enclosure is installed in the rack, the expansion canisters are upside down. The input cable connects to the right port (port 1) on the expansion canister. The output cable connects to the left port (port 2) on the canister.

Procedure

Removing a SAS cable

1. Locate the connector at the end of the SAS cable that is to be removed from the expansion enclosure.
2. Grasp the connector by its blue tag. Pull the tag.
3. Release the connector and slide it out of the SAS port.
4. Repeat steps 2 and 3 on the other end of the SAS cable.

Replacing a SAS cable

5. Ensure that the SAS connector is oriented correctly, as shown in Figure 95. The blue tab must face towards the top of the enclosure canister.

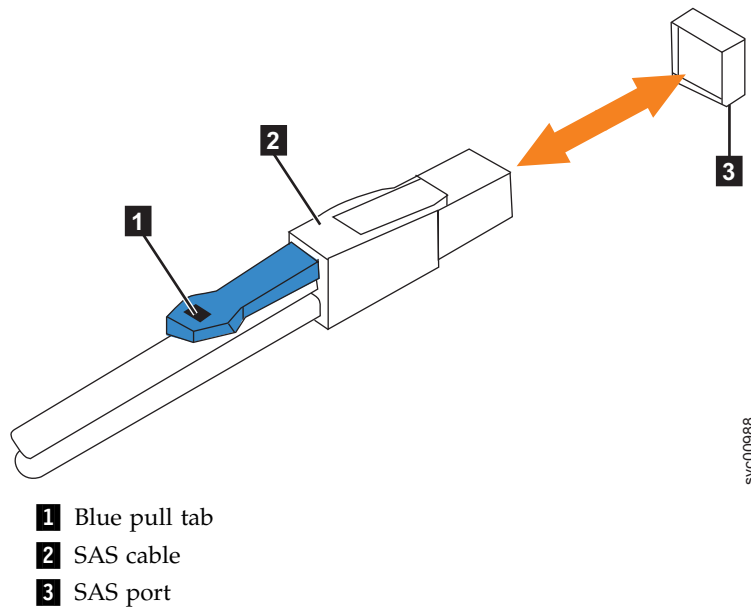


Figure 95. Correct orientation for SAS cable connectors

6. Insert the SAS cable into the SAS port until you hear or feel a click. When the cable is successfully inserted; you cannot disconnect the cable without pulling on the blue tag.

Connecting to a SAN Volume Controller node

7. Connect the SAS cable to the SAS port with blue tab **above** the connector (that is, facing towards the top of the node).
You will hear or feel a click when the cable is successfully inserted; you cannot disconnect the cable without pulling on the blue tag.
8. Route the SAS cables through the cable management arms, as shown in Figure 96 on page 99.

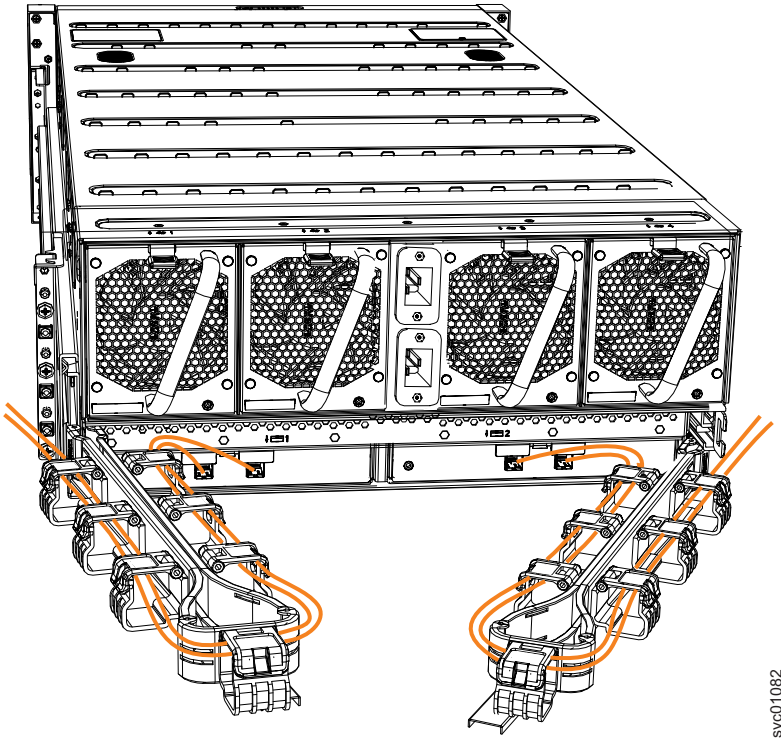


Figure 96. Example of SAS cables routed through the cable management arms

9. When both ends of a SAS cable are correctly connected, the green link-LED next to the connected SAS ports are lit.

For example, Figure 97 on page 100 shows the LEDs of expansion canister 1 on a 2145-92F expansion enclosure. The SAS cable is successfully inserted in to port 1 (input); port 2 (output) does not contain a SAS cable.



Figure 97. SAS cable correctly inserted into the SAS port

Installing or replacing a fan module: 2145-92F

You can reinstall a fan module or replace a faulty fan module in a 2145-92F expansion enclosure.

Before you begin

Important: You can replace a fan module without powering off the expansion enclosure. However, to maintain operating temperature, replace the fan module within 10 minutes of its removal. When a fan module is removed, the reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

The expansion enclosure might or might not be powered on, depending on the number of fan modules that need to be replaced. For example, the expansion enclosure must be powered off if all four fan modules are removed.

This task assumes that the following condition was met:

- You have removed a fan module, following the process described in “Removing a fan module: 2145-92F” on page 123.

Procedure

1. Hold the fan module with the release tab on top and the connector pin on the bottom, as shown in Figure 98 on page 101.

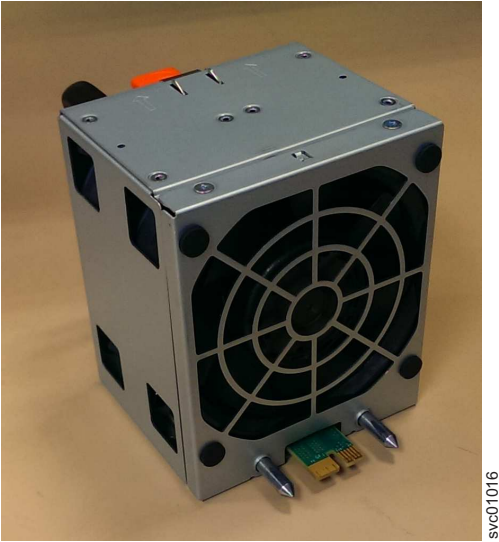


Figure 98. Fan module orientation

2. Carefully insert the fan module into the chassis until it clicks in place, as shown in Figure 99.

Replacing all fan modules

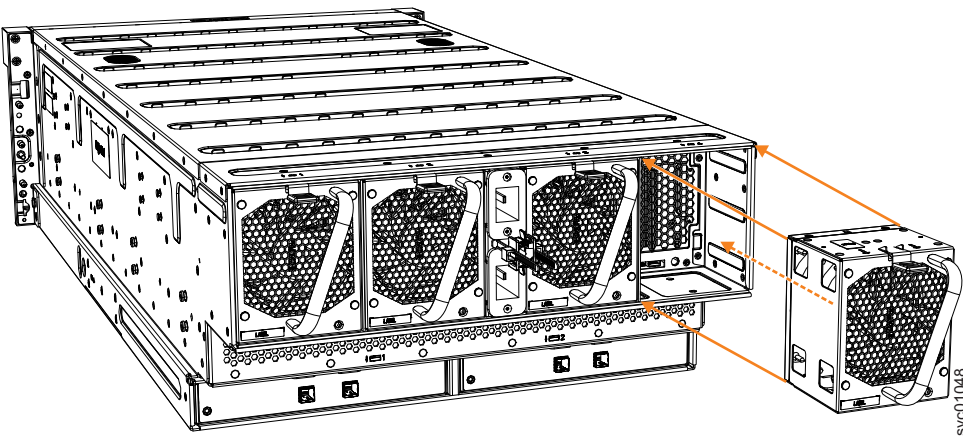


Figure 99. Replace fan module

3. Repeat steps 1 on page 100 and 2 for each fan module to be replaced.
4. Power on the expansion enclosure.

Installing or replacing a fan interface board: 2145-92F

You can replace a fan interface board (FIB) in a 2145-92F expansion enclosure.

Before you begin

This task assumes that the following conditions are met:

- You have removed the fan interface board, following the process described in “Removing a fan interface board: 2145-92F” on page 125.
- All power cables were removed from the enclosure, as described in “Powering off the expansion enclosure: 2145-92F” on page 143.

- The expansion enclosure is removed from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
- A lift is supporting the weight of the enclosure.
- The top cover, fans, drives, and other heavy FRUs are removed from the enclosure.

About this task

The 2145-92F expansion enclosure contains two fan interface boards (FIBs). The FIBs act as the interface between the fans and the system drive board. FIB 1 connects fan modules 1 and 2 to the drive board; FIB 2 connects fan modules 3 and 4. If the fault LED on each fan module is lit, it is possible that the FIB that controls those modules needs to be replaced. You can also issue the **lsenclosurefanmodule** command to display the status of the fans.

If you removed the FIBs from a faulty expansion enclosure, you must reinstall them in the replacement enclosure. Refer to the procedure described in “Replacing an enclosure: 2145-92F” on page 128.

Procedure

1. Assemble the new FIB, cover, and the cover screws (shown in Figure 100) in a safe location.

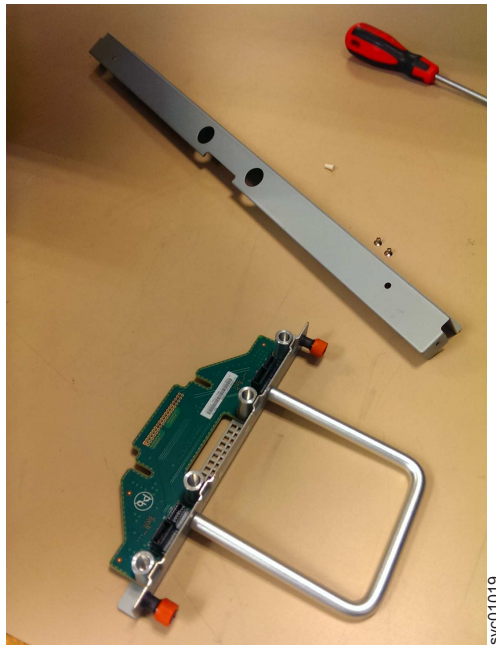


Figure 100. FIB parts for the chassis

2. Carefully insert the new FIB into the expansion enclosure chassis, as shown in Figure 101 on page 103.



Figure 101. Insert the new FIB in the chassis

3. Use a cross head screwdriver to tighten the retaining screws that secure the FIB to the drive board, as shown in Figure 102.



Figure 102. Secure the FIB to the drive board

4. If needed, repeat steps 2 on page 102 and 3 on page 103 to replace the other FIB.
5. Replace the narrow metal cover, which is shown in Figure 103, over the FIB assemblies. The attachment screws are on each side of the chassis.



Figure 103. Replace the FIB cover

6. Place the enclosure back in the rack, as described in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61
7. Replace each of the fan modules. Follow the procedure that is described in “Installing or replacing a fan module: 2145-92F” on page 100.
8. Replace the drives, secondary expander modules, and other heavy FRUs that were removed before the enclosure was removed from the rack.
9. Replace the top cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
10. Reconnect power to the enclosure, as described in “Powering on the expansion enclosure: 2145-92F” on page 140.


Removing an expansion enclosure from a rack: 2145-92F

You might need to slide the 2145-92F expansion enclosure out of the rack to apply service. For some tasks, you might need to completely remove the expansion enclosure from the rack.

Before you begin

DANGER

Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)

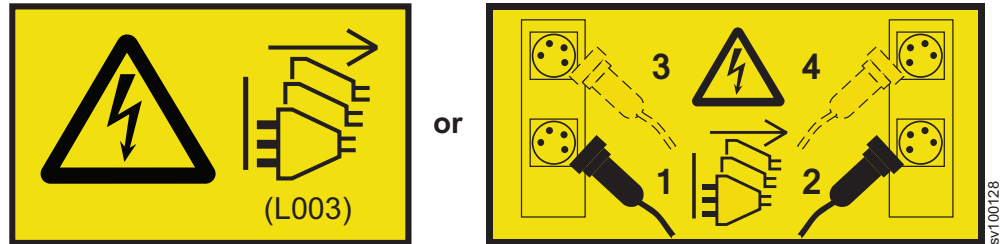

Use the reference numbers in parentheses at the end of each notice (for example, D005) to find the matching translated notice in *IBM System Storage SAN Volume Controller Safety Notices*.

DANGER:

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock. (R001 part 1 of 2)

CAUTION:

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- (For sliding drawers) Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- (For fixed drawers) This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack. (R001 part 2 of 2)

CAUTION:

Removing components from the upper positions in the rack cabinet improves rack stability during a relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building.

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions.
 - Remove all devices in the 32U position and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
 - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- If the rack cabinet you are relocating was supplied with removable outriggers they must be reinstalled before the cabinet is relocated.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off the pallet and bolt the rack cabinet to the pallet. (R002)

DANGER

Racks with a total weight of > 227 kg (500 lb.), Use Only Professional Movers! (R003)

DANGER

Do not transport the rack via fork truck unless it is properly packaged, secured on top of the supplied pallet. (R004)

DANGER:

Main Protective Earth (Ground):




This symbol is marked on the frame of the rack.

The PROTECTIVE EARTHING CONDUCTORS should be terminated at that point. A recognized or certified closed loop connector (ring terminal) should be used and secured to the frame with a lock washer using a bolt or stud. The connector should be properly sized to be suitable for the bolt or stud, the locking washer, the rating for the conducting wire used, and the considered rating of the breaker. The intent is to ensure the frame is electrically bonded to the PROTECTIVE EARTHING CONDUCTORS. The hole that the bolt or stud goes into where the terminal conductor and the lock washer contact should be free of any non-conductive material to allow for metal to metal contact. All PROTECTIVE EARTHING CONDUCTORS should terminate at this main protective earthing terminal or at points marked with \perp . (R010)

DANGER

DANGER: Serious injury or death can occur if loaded lift tool falls over or if a heavy load falls off the lift tool. Always completely lower the lift tool load plate and properly secure the load on the lift tool before moving or using the lift tool to lift or move an object. (D010)

CAUTION:

		
33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

svc01063

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:

To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

CAUTION:

CAUTION regarding IBM provided VENDOR LIFT TOOL:

- Operation of LIFT TOOL by authorized personnel only
- LIFT TOOL intended for use to assist, lift, install, remove units (load) up into rack elevations. It is not to be used loaded transporting over major ramps nor as a replacement for such designated tools like pallet jacks, walkies, fork trucks and such related relocation practices. When this is not practicable, specially trained persons or services must be used (for instance, riggers or movers). Read and completely understand the contents of LIFT TOOL operator's manual before using.
- Read and completely understand the contents of LIFT TOOL operator's manual before using. Failure to read, understand, obey safety rules, and follow instructions may result in property damage and/or personal injury. If there are questions, contact the vendor's service and support. Local paper manual must remain with machine in provided storage sleeve area. Latest revision manual available on vendor's website.
- Test verify stabilizer brake function before each use. Do not over-force moving or rolling the LIFT TOOL with stabilizer brake engaged.
- Do not raise, lower or slide platform load shelf unless stabilizer (brake pedal jack) is fully engaged. Keep stabilizer brake engaged when not in use or motion.
- Do not move LIFT TOOL while platform is raised, except for minor positioning.
- Do not exceed rated load capacity. See LOAD CAPACITY CHART regarding maximum loads at center versus edge of extended platform.
- Only raise load if properly centered on platform. Do not place more than 200 lb (91 kg) on edge of sliding platform shelf also considering the load's center of mass/gravity (CoG).
- Do not corner load the platform tilt riser accessory option. Secure platform riser tilt option to main shelf in all four (4x) locations with provided hardware only, prior to use. Load objects are designed to slide on/off smooth platforms without appreciable force, so take care not to push or lean. Keep riser tilt option flat at all times except for final minor adjustment when needed.
- Do not stand under overhanging load.
- Do not use on uneven surface, incline or decline (major ramps).
- Do not stack loads. (C048, part 1 of 2)

- Do not operate while under the influence of drugs or alcohol.
- Do not support ladder against LIFT TOOL.
- Tipping hazard. Do not push or lean against load with raised platform.
- Do not use as a personnel lifting platform or step. No riders.
- Do not stand on any part of lift. Not a step.
- Do not climb on mast.
- Do not operate a damaged or malfunctioning LIFT TOOL machine.
- Crush and pinch point hazard below platform. Only lower load in areas clear of personnel and obstructions. Keep hands and feet clear during operation.
- No Forks. Never lift or move bare LIFT TOOL MACHINE with pallet truck, jack or fork lift.
- Mast extends higher than platform. Be aware of ceiling height, cable trays, sprinklers, lights, and other overhead objects.
- Do not leave LIFT TOOL machine unattended with an elevated load.
- Watch and keep hands, fingers, and clothing clear when equipment is in motion.
- Turn Winch with hand power only. If winch handle cannot be cranked easily with one hand, it is probably over-loaded. Do not continue to turn winch past top or bottom of platform travel. Excessive unwinding will detach handle and damage cable. Always hold handle when lowering, unwinding. Always assure self that winch is holding load before releasing winch handle.
- A winch accident could cause serious injury. Not for moving humans. Make certain clicking sound is heard as the equipment is being raised. Be sure winch is locked in position before releasing handle. Read instruction page before operating this winch. Never allow winch to unwind freely. Freewheeling will cause uneven cable wrapping around winch drum, damage cable, and may cause serious injury. (C048, part 2 of 2)

About this task

To complete some service tasks, you might need to slide the enclosure out of the rack to gain access to parts. For these tasks, you do not have to completely remove the enclosure from the rack. However, in limited circumstances, you must remove the enclosure out of the rack.

Important:

The 2145-92F expansion enclosure is heavy. Always use a suitably rated mechanical lift or four persons to support the weight of the enclosure whenever you slide the enclosure out from the rack or remove it completely.

In addition to using a mechanical lift, always complete the following tasks before you attempt to remove the expansion enclosure from the rack:

- Remove both power cables from the expansion enclosure.
- Remove all of the following parts:
 - Cover
 - Drives
 - Fan modules
 - Power supply units and 1U fascia
 - Secondary expansion modules
 - Expansion canisters and SAS cables

When the enclosure is not secured to the rails in a rack, you can minimize the risk of injury and make maneuvering the enclosure on a lift easier. However,

even after you remove the drives, power supply units, secondary expander modules, canisters, fans, and cover, the enclosure weighs 43 kg (95 lbs).

Procedure

Sliding the expansion enclosure out of the rack

Note: You can accomplish most service actions when the expansion enclosure is fully extended from the rack on its slide rails.

1. Loosen the locking thumb screws (**1**) on the front of the enclosure, as shown in Figure 104.

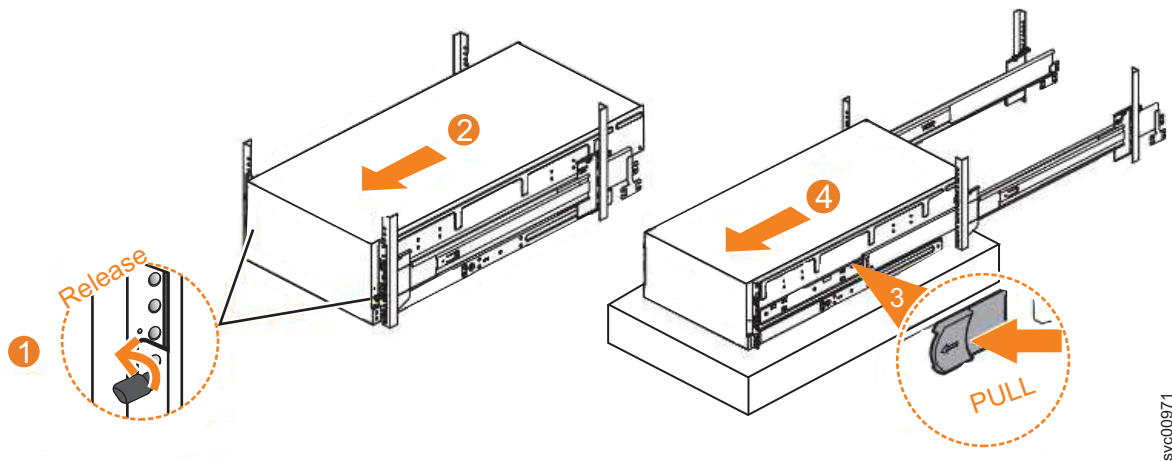


Figure 104. Removing the 2145-92F enclosure from the rack

2. Carefully slide the enclosure forward out of the rack (**2**), as shown in Figure 104.
3. Locate the left and right blue release tabs near the front of the enclosure. Pull both release tabs forward to unlock the drawer mechanism (**3** in Figure 104).
4. Slide the enclosure and inner rail member out of the rack (**4** in Figure 104).
For safety, ensure that a mechanical lift or other mechanism is available to support the weight of the enclosure.

Removing the expansion enclosure from the rack

Note: Continue the procedure (step 5 through step 7 on page 112) only if you must completely remove the expansion enclosure from the rack to complete a service procedure.

5. Power down the expansion enclosure and disconnect all power cords.
6. Remove all of the following parts from the enclosure, as described in the following procedures:
 - “Removing the top cover: 2145-92F” on page 56
 - “Removing the fascia: 2145-92F” on page 94 (for the PSU fascia) and “Removing a power supply: 2145-92F” on page 112
 - “Removing a drive: 2145-92F” on page 114
 - “Removing a secondary expander module: 2145-92F” on page 117
 - “Removing an expansion canister: 2145-92F” on page 122 and “Removing and installing a SAS cable: 2145-92F” on page 97
 - “Removing a fan module: 2145-92F” on page 123

7. With the help of multiple persons or a mechanical lift, lift and remove the enclosure from the rack.

Replace the enclosure in the rack

8. To reinstall or return the expansion enclosure in the rack, follow the procedure in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61.

Removing a power supply: 2145-92F

You can remove either of the redundant power supply units in a 2145-92F expansion enclosure. Redundant power supplies operate in parallel; one continues to provide power to the enclosure if the other fails.

Before you begin

Important: You can remove a PSU without powering off the expansion enclosure. However, to maintain operating temperature, ensure that you perform the following tasks.

- Do not remove a faulty PSU until its replacement is ready to be installed.
- Do not remove a PSU from an operational enclosure for more than approximately 10 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

Each PSU provides cooling to the lower part of the enclosure. Ensure that the second PSU in the enclosure is powered on and operating correctly. For example, in Figure 105 on page 113, PSU 1 is operating while PSU 2 is being removed.

Review and follow the procedures for handling static-sensitive devices before you remove the power supply unit (PSU).

Procedure

1. Read all safety information.
2. Remove the 1U fascia that covers the PSUs on the front of the expansion enclosure, as described in “Removing the fascia: 2145-92F” on page 94.
3. Press on the handle lock to release the handles on the PSU.
4. Rotate the handles outward, as shown in Figure 105 on page 113.



Figure 105. Releasing the power supply handles

5. Carefully pull the PSU out of the expansion enclosure chassis and place it in a safe location, as shown in Figure 106 on page 114.



Figure 106. Removed power supply

6. If you are instructed to return the power supply, follow all packaging instructions. Use any packaging materials for shipping that are supplied to you.

Replace the power supply

7. To reinstall the PSU, or replace it with one from FRU stock, follow the procedure in “Installing or replacing a power supply: 2145-92F” on page 91.

Removing a drive: 2145-92F

You can remove a faulty drive from a 2145-92F expansion enclosure to replace it with a new one received from FRU stock.

Before you begin

Ensure that the drive is not a spare or a member of an array. The drive status is shown in **Pools > Internal Storage** in the management GUI. If the drive is a member of an array, follow the fix procedures in the management GUI. The fix procedures minimize the risk of losing data or access to data; the procedures also manage the system's use of the drive.

Important: You can remove a drive assembly without powering off the expansion enclosure. However, to maintain operating temperature, perform the following tasks.

- Do not remove a faulty drive assembly until its replacement is ready to be installed.
- Do not keep the cover off an operational enclosure for more than 15 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

The 2145-92F expansion enclosure supports 92 drives. Figure 107 shows an example of a drive assembly.

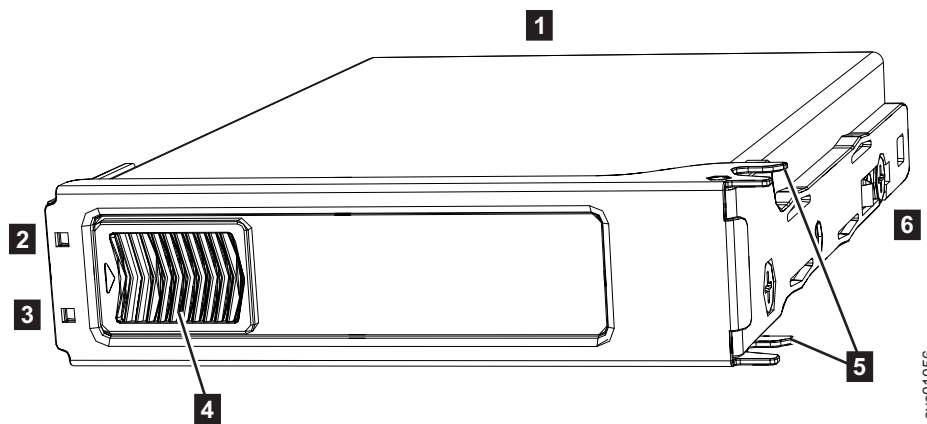


Figure 107. Drive assembly

- 1** Disk drive
- 2** Online indicator
- 3** Fault indicator
- 4** Release latch
- 5** Drive latch toes
- 6** Drive carrier

Procedure

1. Read all available safety information.
2. Use the slide rails to pull the enclosure out from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
3. Remove the top cover, as described in “Removing the top cover: 2145-92F” on page 56.
4. Locate the slot that contains the drive assembly that you want to remove.

Note: When a drive is faulty, the amber fault indicator is lit (**3** in Figure 107). Do not replace a drive unless the drive fault indicator is on or you are instructed to do so by a fix procedure. When lit, the green indicator shows that activity is occurring on the drive.

A label on the enclosure cover (Figure 108 on page 116) shows the location of the drive slots. The drive slots are numbered 1-14 from left to right and A-G from the back to the front of the enclosure.

The drive locations are also marked on the enclosure itself. The rows (A-G) are marked on the left and right edges of the enclosure. The columns (1-14) are marked on the front edge of the enclosure. The row and column marks are visible when the top cover is removed.

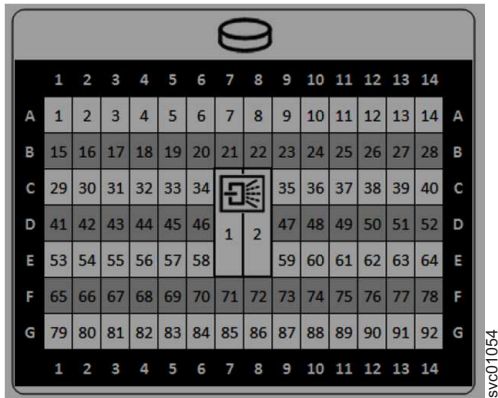


Figure 108. Drive locations in a 2145-92F expansion enclosure

- Slide the release latch forward (**1**), as shown in Figure 109 on page 117.

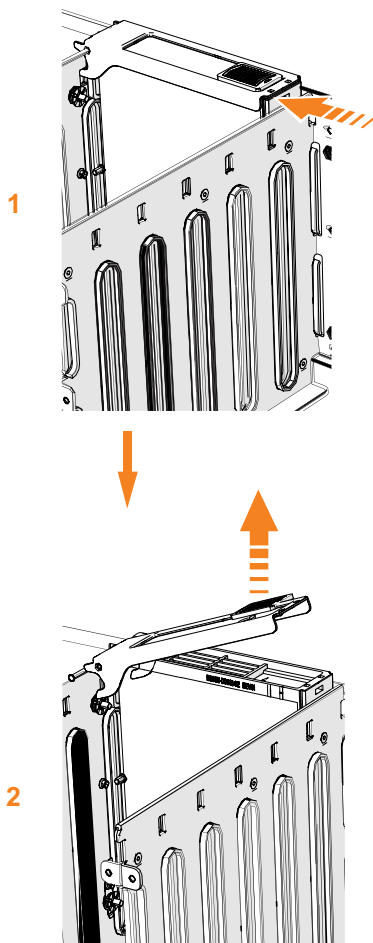


Figure 109. Remove the drive assembly

6. Lift the handle (**2**) to unlock the drive carrier from the partition, as shown in Figure 109. Ensure the toe on the bottom of the latch is fully disengaged.
7. Carefully lift the drive carrier up to remove it from the expansion enclosure.
8. Repeat step 4 on page 115 through step 7 for each drive you need to remove.

Replace the drive

9. To reinstall a drive, or replace it with one from FRU stock, follow the procedure in "Installing or replacing a drive: 2145-92F" on page 81.

Removing a secondary expander module: 2145-92F

You can remove a secondary expander module from a 2145-92F expansion enclosure if it is faulty or to perform other service tasks.

Before you begin

DANGER



Hazardous voltage present. Voltages present constitute a shock hazard, which can cause severe injury or death. (L004)

DANGER



Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in splattered metal, burns, or both. (L005)

CAUTION:

Use caution when you are removing or replacing a secondary expander module from an enclosure (01LJ112) that is powered on. Avoid contact with the connectors on the main board. Only an IBM Service Support Representative (SSR) can remove the secondary expander module if the 01LJ112 enclosure is powered.

Important: You can remove a secondary expander module without powering off the expansion enclosure. However, to maintain operating temperature, perform the following tasks.

- Do not remove a faulty secondary expander module until its replacement is ready to be installed.
- Do not keep the cover off an operational enclosure for more than 15 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

The secondary expander modules provide SAS connectivity between the expansion canisters and the drives. Each drive has 2 SAS ports. SAS port 1 of each drive is connected to secondary expander module 1. SAS port 2 of each drive is connected to secondary expander module 2. Each expansion canister is connected to both secondary expander module 1 and secondary expander module 2. If secondary expander module 2 is missing or is faulty, the expansion canisters can communicate only with SAS port 1 on each drive. Similarly, if secondary expander module 1 is missing or is faulty, the expansion canisters can communicate only with SAS port 2 on each drive.

The two secondary expansion modules are already installed when the 2145-92F expansion enclosure is shipped, as Figure 110 shows.



Figure 110. Location of secondary expander modules

Figure 111 shows the location of the LED indicators on the top of the secondary expander module. Each secondary expander module has its own set of LEDs. When power is connected to the expansion enclosure, the LEDs identify the operational status of the secondary expander modules.

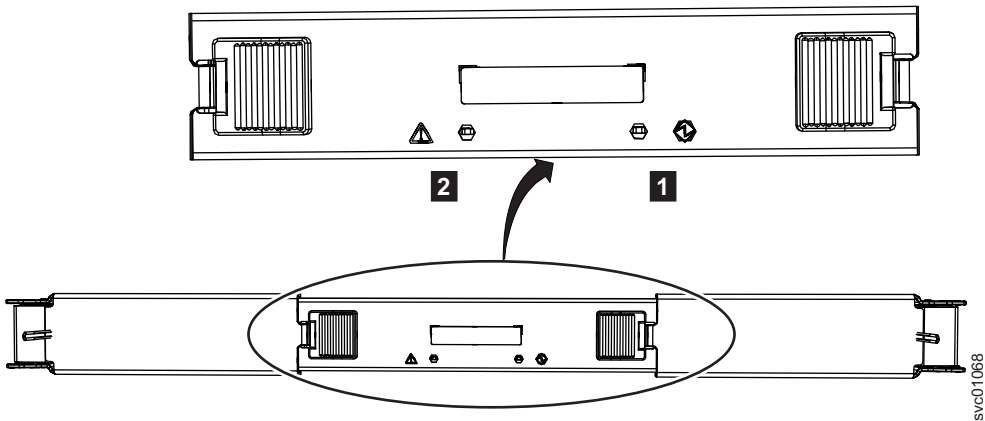


Figure 111. Location of LEDs on the secondary expander module

Table 15 describes the function and status values of each LED indicator.

Table 15. LEDs on the secondary expander modules

LED	Color	Status	Description
Power 1	Green	On	The secondary expander module is receiving power.
		Off	The secondary expander module is not receiving power.

Table 15. LEDs on the secondary expander modules (continued)

LED	Color	Status	Description
Fault 2	Amber	On	Not used.
		Blink	The secondary expander module is being identified.
		Off	Normal operation.

This task assumes that the following conditions were met:

- The expansion enclosure is slid out from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
- The top cover was removed, as described in “Removing the top cover: 2145-92F” on page 56.

Procedure

1. Identify the secondary expander module to be replaced; refer to Table 15 on page 119.
2. Press the release buttons on top of the secondary expander module to release the handles.
3. Rotate the handles outward to the unlocked position.
4. Carefully lift the secondary expander module out of the enclosure, as shown in Figure 112.

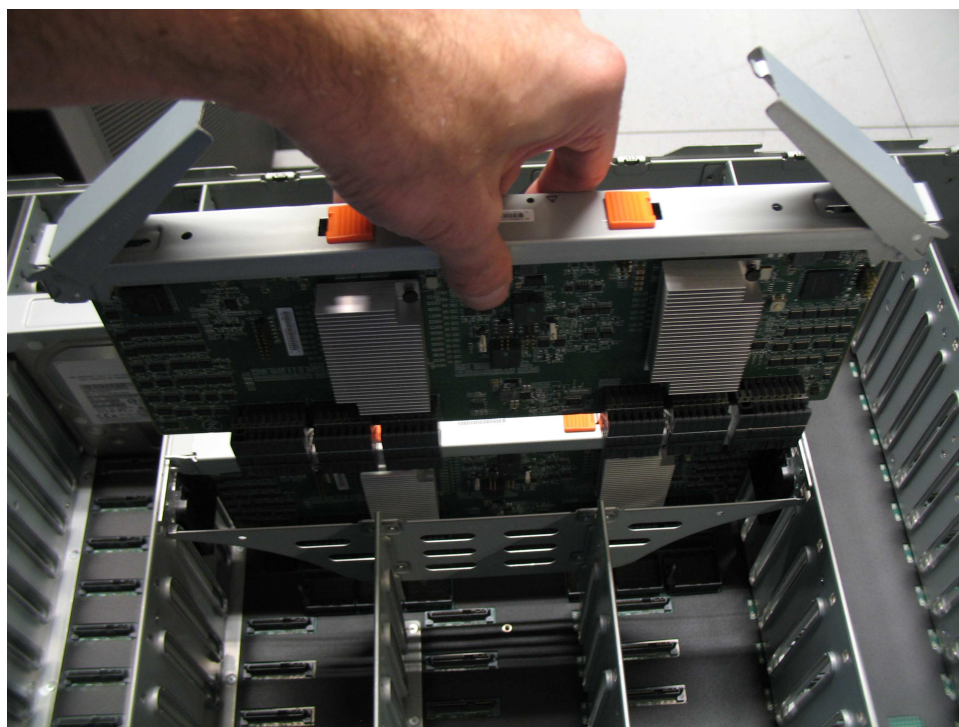


Figure 112. Remove the secondary expander module

Important: To avoid electric shock after you remove the secondary expander module, do not touch the connectors, which are shown in Figure 113 on page 121.



Figure 113. Secondary expander module connectors

5. Place the secondary expander module in a safe location, as shown in Figure 114.

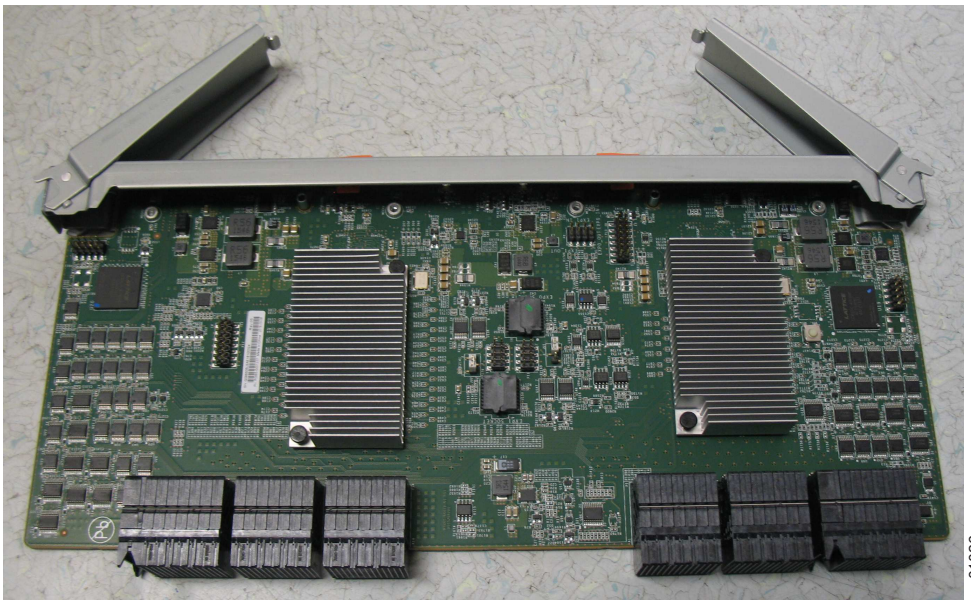


Figure 114. Secondary expander module removed from the enclosure

6. If needed, repeat step 2 on page 120 through step 5 to remove the other secondary expander module.

Replace the secondary expansion module

7. To reinstall the secondary expansion module, or replace it with one from FRU stock, follow the procedure in “Installing or replacing a secondary expander module: 2145-92F” on page 86.

Removing an expansion canister: 2145-92F

You can remove the expansion canisters in a 2145-92F expansion enclosure.

Before you begin

Important: You can remove an expansion canister without powering off the expansion enclosure. However, to maintain operating temperature, perform the following tasks.

- Do not remove a faulty expansion canister until its replacement is ready to be installed.
- Do not remove an expansion canister from an operational enclosure for more than approximately 10 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

An expansion canister provides SAS connectivity between the 2145-92F expansion enclosure and SAN Volume Controller system. If either of the two expansion canisters has a failure, the other expansion canister assumes the full I/O load. Figure 115 shows the features of an expansion enclosure.

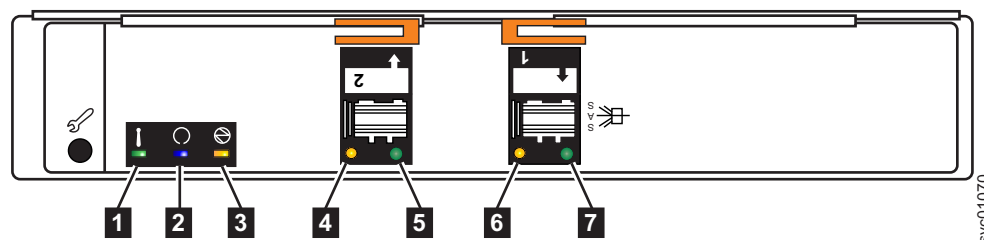


Figure 115. Expansion canister

- 1** Canister fault indicator
- 2** Canister status
- 3** Canister power indicator
- 4** and **6** SAS link fault indicators
- 5** and **7** SAS link operational indicators
- 8** Canister release handles

Procedure

1. Read all safety information.
2. Locate the expansion canister to be removed.
3. Release the lower cable management arm to swing it out of the way, as described in “Moving the cable management arms” on page 73.
4. Remove the SAS cables from the expansion canister, as described in “Removing and installing a SAS cable: 2145-92F” on page 97.
5. Rotate the handles on the expansion canister outward, as shown in Figure 116 on page 123.



Figure 116. Removing the expansion canister

6. Carefully pull the expansion canister out of the chassis and place it on a safe, level surface.

Replace the expansion canister

7. To reinstall an expansion canister, or replace it with one from FRU stock, follow the procedure in “Installing or replacing an expansion canister: 2145-92F” on page 69.

Removing a fan module: 2145-92F

You can remove a faulty fan module from a 2145-92F expansion enclosure.

Before you begin

Important: You can remove a fan module without powering off the expansion enclosure. However, to maintain operating temperature, do not remove more than one fan module at a time.

- Remove a faulty fan module only when its replacement is ready to be installed.
- Do not remove a fan module from an operational enclosure for more than approximately 10 minutes. The reduction in airflow through the enclosure might cause the enclosure or its components to shut down to protect from overheating.

About this task

Note: If you plan to remove the expansion enclosure from the rack, you must remove all of the fan modules.

Procedure

1. Identify the fan module to be replaced. When lit, the amber LED on the front of the fan module (**1** in Figure 117 on page 124) identifies a fault.

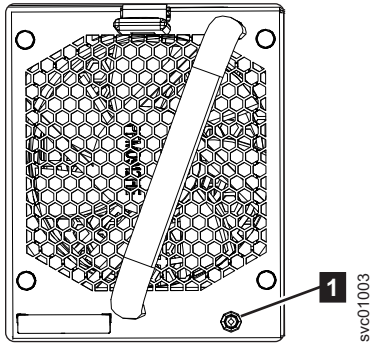


Figure 117. Fan module LED

You can also issue the **lsenclosurefanmodule** command to display the status of the fan modules.

2. Press the release tab on the fan module, as Figure 118 shows.

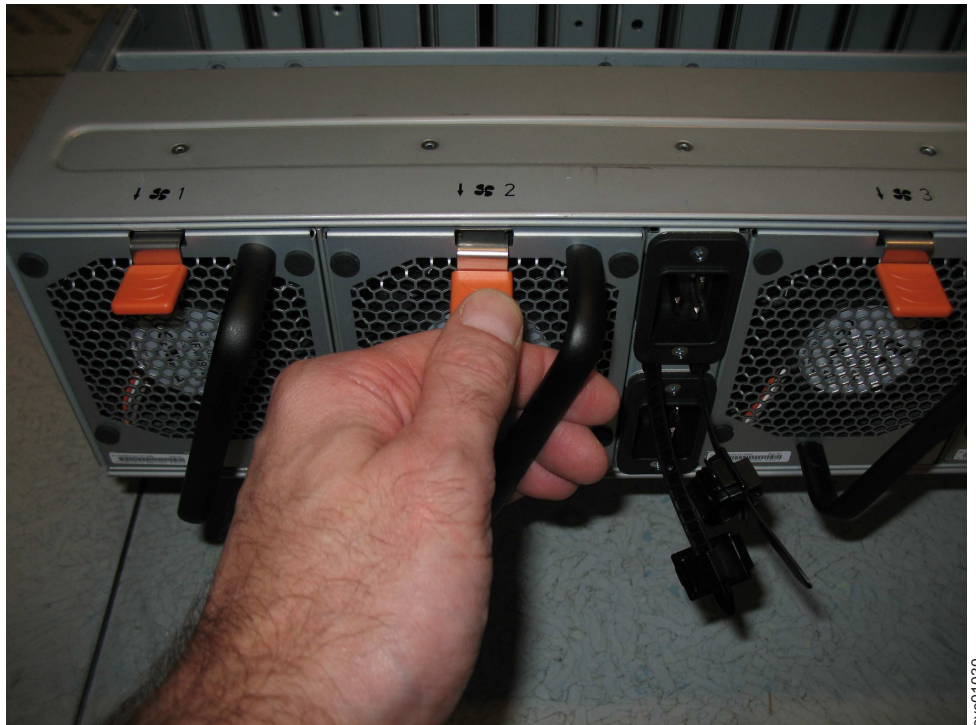


Figure 118. Fan module release tab

3. Use the handle to pull the fan module out of the expansion enclosure chassis, as shown in Figure 119 on page 125.

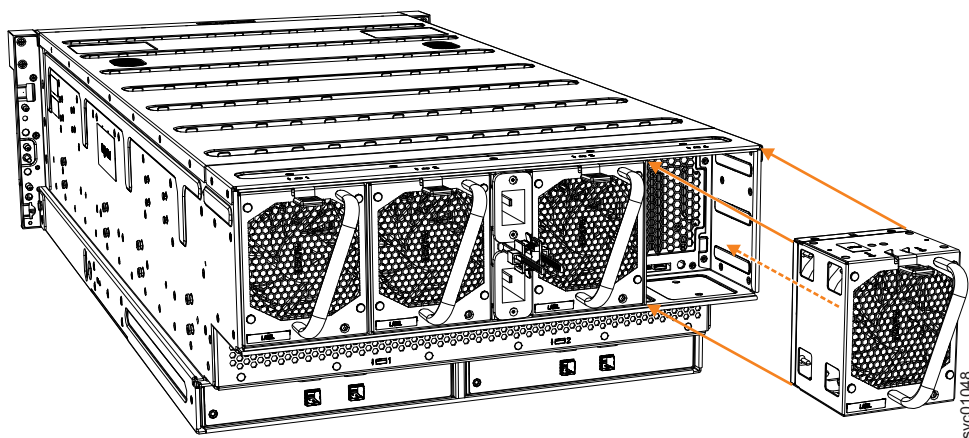


Figure 119. Remove fan module

4. Repeat steps 2 on page 124 and 3 on page 124 for each additional fan module you need to remove.

Replace a fan module

5. To reinstall a fan module, or replace it with one from FRU stock, follow the procedure in “Installing or replacing a fan module: 2145-92F” on page 100.

Removing a fan interface board: 2145-92F

You can remove a fan interface board (FIB) from a 2145-92F expansion enclosure.

Before you begin

This task assumes that the following conditions were met:

- All power cables were removed from the enclosure, as described in “Powering off the expansion enclosure: 2145-92F” on page 143.
- The top cover, fan modules, and the other heavy FRUs (drives, secondary expander modules) were removed before the enclosure was removed from the rack.
- The expansion enclosure was removed from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.

Ensure that you use a lift to support the weight of the enclosure.

About this task

The 2145-92F expansion enclosure contains two fan interface boards (FIBs). The FIBs act as the interface between the fans and the system drive board. FIB 1 connects fan modules 1 and 2 to the drive board; FIB 2 connects fan modules 3 and 4. If both fan modules controlled by a FIB fail, it is possible that the FIB needs to be replaced.

Important: Because this task is disruptive to the storage system, always attempt fan replacement first. See “Removing a fan module: 2145-92F” on page 123 and “Installing or replacing a fan module: 2145-92F” on page 100 for information about the removal and replacement procedures. Ensure that both fans are installed correctly. Perform the following procedure only if the amber fault LED on each fan remains lit (**1** in Figure 120 on page 126).

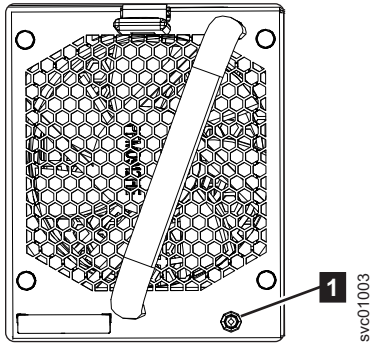


Figure 120. Fan module LED

Procedure

1. Using a cross head screwdriver, remove the narrow metal cover that is over the FIBs, as shown in Figure 121. The screws are on each side of the chassis. Place the cover and cover screws in a safe location.



Figure 121. Location of the FIB cover

2. Use a cross head screwdriver to loosen the retaining screws on the FIB, as shown in Figure 122 on page 127.



Figure 122. Loosen the FIB screws

3. Use the handle to pull the FIB out of the expansion enclosure chassis, as shown in Figure 123.



Figure 123. Remove the FIB from the chassis

4. Place the FIB (shown in Figure 124) in a safe location.

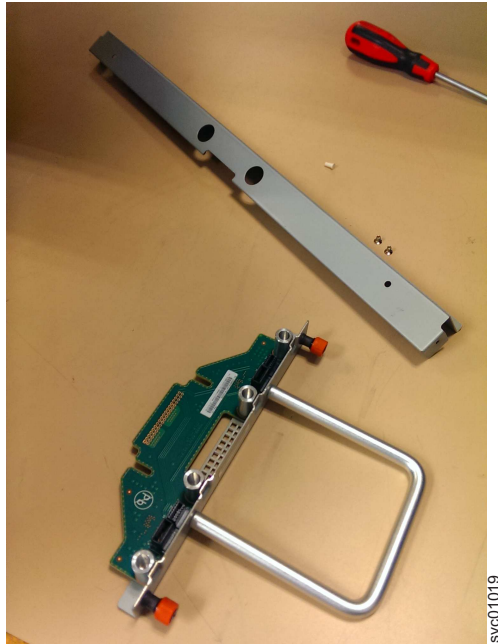


Figure 124. FIB parts removed from the chassis

5. If needed, repeat steps 2 on page 126 through 3 on page 127 to remove the other FIB.

Replace the fan interface board

6. To reinstall a fan interface board, or replace it with one from FRU stock, follow the procedure in “Installing or replacing a fan interface board: 2145-92F” on page 101.


Replacing an enclosure: 2145-92F

You can replace a faulty enclosure (FRU 01LJ112) of a 2145-92F expansion enclosure with a new one from FRU stock.




Before you begin

DANGER

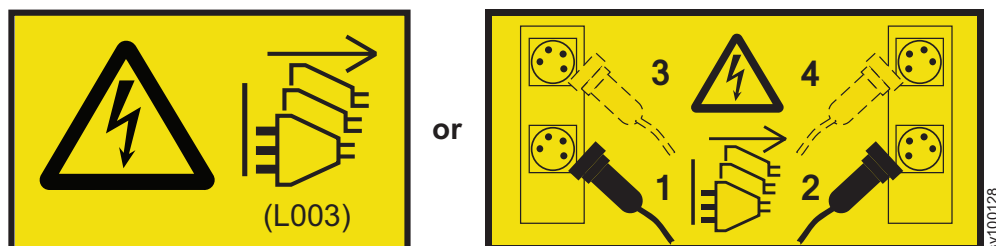Multiple power cords. The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords. (L003)



CAUTION:

		
33.6-46.3 kg (74-102 lbs)	46.3-61.7 kg (102-136 lbs)	≥61.7-100 kg (136-220 lbs)

svr01053

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit. (C011)

CAUTION:

To avoid personal injury, before lifting this unit, remove all appropriate subassemblies per instructions to reduce the system weight. (C012)

Note: Perform the following procedure only if directed to do so by IBM Remote Technical support or by a fix procedure in the management GUI.

This task assumes that the following conditions are met:

- All power cables were removed from the enclosure, as described in “Powering off the expansion enclosure: 2145-92F” on page 143.
- All SAS cables were removed, as described in “Removing and installing a SAS cable: 2145-92F” on page 97.
- The following FRUs were removed from the enclosure, as described in the applicable tasks:
 - Top cover (“Removing the top cover: 2145-92F” on page 56)
 - Drives (“Removing a drive: 2145-92F” on page 114)
 - PSU (1U) fascia (“Removing the fascia: 2145-92F” on page 94)
 - Power supply units (“Removing a power supply: 2145-92F” on page 112)
 - Secondary expander modules (“Removing a secondary expander module: 2145-92F” on page 117)
 - Expansion canisters (“Removing an expansion canister: 2145-92F” on page 122)
 - Fan modules (“Removing a fan module: 2145-92F” on page 123)
- The expansion enclosure was removed from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
- A suitably rated mechanical lift is available to support the weight of the enclosure.

About this task

The expansion enclosure (FRU 01LJ112) contains the drive board, signal interconnect board, and internal power cables. If a fault with the drive board or the intercanister link is suspected, you can replace the enclosure. However, you can remove the parts from the old expansion enclosure and reinstall them in the replacement enclosure.

Procedure

1. Remove the front display (4U) and PSU (1U) fascia from the old enclosure, as described in “Removing the fascia: 2145-92F” on page 94

- a. Install the front display (4U) and PSU (1U) fascia on the new enclosure, as described in “Installing or replacing the fascia: 2145-92F” on page 89.
2. Remove the display panel assembly from the old enclosure, as described in “Removing the display panel assembly: 2145-92F.”
 - a. Install the display panel assembly into on the new enclosure, as described in “Installing or replacing the display panel assembly: 2145-92F” on page 132.
3. Remove the fan interface boards from the old enclosure, as described in “Removing a fan interface board: 2145-92F” on page 125.
 - a. Install the fan interface boards into on the new enclosure, as described in “Installing or replacing a fan interface board: 2145-92F” on page 101.
4. Remove the inner section of the slide rail from the old enclosure, as described in “Removing the support rails: 2145-92F” on page 135.
5. Attach the inner rail section to the new enclosure, as described in “Installing or replacing the support rails: 2145-92F” on page 58.
6. Replace the new enclosure in rack, as described in “Installing or replacing an expansion enclosure in a rack: 2145-92F” on page 61.
7. Reinstall the remaining parts into the enclosure, as described in the following topics. You can install the parts in any order.

Important: Ensure that a mechanical lift is available and in place to support the additional weight as the FRUs are reinstalled in the enclosure.

- “Installing or replacing a power supply: 2145-92F” on page 91
 - “Installing or replacing a drive: 2145-92F” on page 81
 - “Installing or replacing a secondary expander module: 2145-92F” on page 86
 - “Installing or replacing an expansion canister: 2145-92F” on page 69
 - “Installing or replacing a fan module: 2145-92F” on page 100
 - “Installing or replacing the top cover: 2145-92F” on page 80
8. Reconnect the SAS cables, as described in “Connecting the optional 2145-92F SAS expansion enclosures” on page 136 .
 9. Reconnect the power cables, as described in “Powering on the expansion enclosure: 2145-92F” on page 140.
 10. Run the next recommended fix procedure in the management GUI to set the serial number of the 2145-92F enclosure.

Removing the display panel assembly: 2145-92F

You can remove the display panel assembly from a 2145-92F expansion enclosure.

Procedure

1. Slide the expansion enclosure out of the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.
2. Remove the top cover, as described in “Removing the top cover: 2145-92F” on page 56.
3. Press the release tab at the top of the display panel assembly, as shown in Figure 125 on page 131.

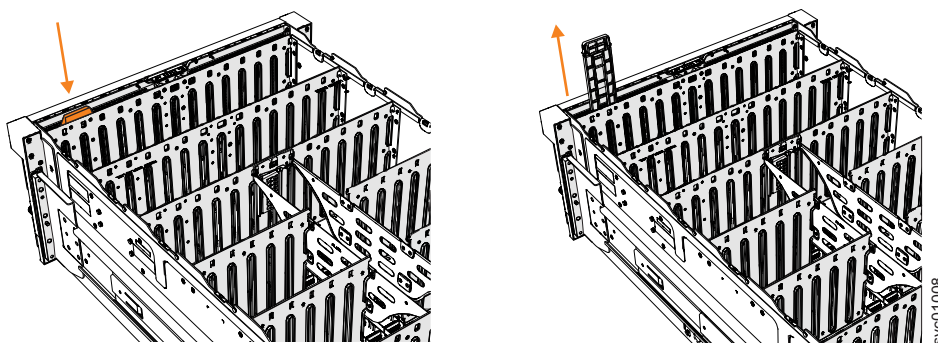


Figure 125. Removing the display panel assembly

4. Carefully pull the display panel assembly, shown in Figure 126 on page 132, out of the chassis.



Figure 126. Display panel assembly

Replace the display panel assembly

5. To reinstall the display panel assembly, or replace it with one from FRU stock, follow the procedure in "Installing or replacing the display panel assembly: 2145-92F."

Installing or replacing the display panel assembly: 2145-92F

You can replace the display panel assembly in a 2145-92F expansion enclosure.

About this task

This task assumes that the following conditions were met:

- The expansion enclosure was moved out from the rack on the slide rails, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104
- The top cover was removed, as described in “Removing the top cover: 2145-92F” on page 56.
- The display panel assembly was removed, as described in “Removing the display panel assembly: 2145-92F” on page 130.

Procedure

1. Remove the display panel assembly, which is shown in Figure 127 on page 134, from its packaging.



Figure 127. Display panel assembly

2. Carefully align the display panel assembly in the slot at the front of the expansion enclosure, as shown in Figure 128 on page 135.
Ensure the display panel assembly, which is shown in Figure 127, faces toward the outside of the chassis.

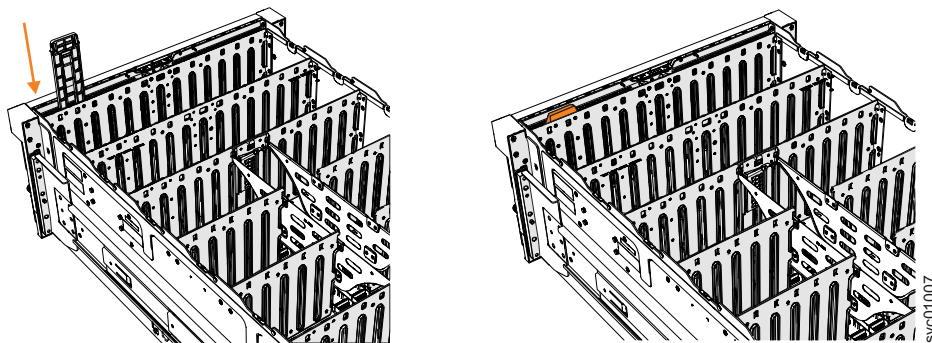


Figure 128. Installing the display panel assembly

3. Insert the display panel assembly until it clicks into position.
4. Replace the top cover, as described in “Installing or replacing the top cover: 2145-92F” on page 80.
5. Ensure the LEDs on the display panel are lit correctly. See “SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators” on page 144 for details.

Removing the support rails: 2145-92F

You can remove the support rails for the 2145-92F expansion enclosure.

About this task

This task assumes the following conditions have been met:

- The cable management arm has been removed, as described in “Removing or moving the cable-management arm: 2145-92F” on page 70.
- The expansion enclosure has been removed from the rack, as described in “Removing an expansion enclosure from a rack: 2145-92F” on page 104.

Procedure

1. Remove the two screws that attach the outer rail section to the front bracket assembly, as shown in Figure 129.

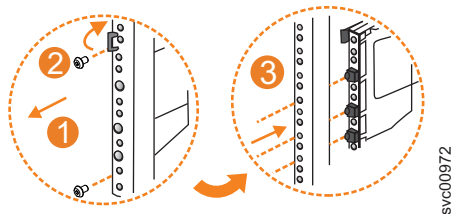


Figure 129. Remove the rail assembly from the front frame bracket

2. Remove the rail section by pulling it away from the front bracket, as shown in Figure 129.
3. Remove the two screws that attach the inner rail section to the rear bracket, as shown in Figure 130 on page 136.

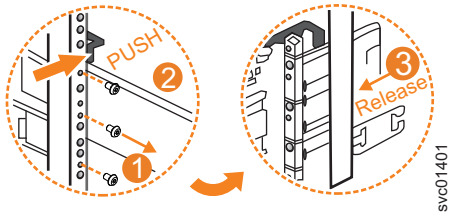


Figure 130. Remove the rail assembly from the rear frame bracket

4. Pull the rail forward, away from the rear bracket, as shown in Figure 130.
5. Repeat step 1 on page 135 through step 4 for the other side of the rail assembly.

Replace the support rails

6. To reinstall the support rails, or replace them with support rails from FRU stock, follow the procedure in "Installing or replacing the support rails: 2145-92F" on page 58.

Connecting the optional 2145-92F SAS expansion enclosures

After you install SAS expansion enclosures into the rack, you must connect them to each 2145-SV1 or 2145-DH8 node in the I/O group that will use them.

Before you begin

Important: To support the 2145-92F expansion enclosure, 2145-SV1 and 2145-DH8 systems require software version 7.8.0. Do not connect the expansion enclosure if software version 7.8.0 is not installed on the system.

About this task

This task applies if you are installing a 2145-92F expansion enclosure. When you insert the SAS cables, ensure that the connector is oriented correctly to the node and expansion enclosure.

- For 2145-24F or 2145-12F expansion enclosures, the blue pull tab must be below the cable (**1** in Figure 131).

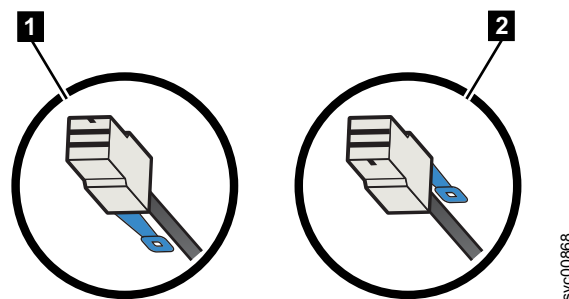


Figure 131. SAS cable connector orientation

- For 2145-SV1 or 2145-DH8 nodes and 2145-92F enclosures, the blue pull tab must be above the connector (**2** in Figure 131).
- Insert the connector gently until it clicks into place. If you feel resistance, the connector is probably oriented the wrong way. Do not force it.
- When inserted correctly, the connector can be removed only by pulling the tab.

Be aware of the following guidelines when you attach the cables to the SAS ports.

- No cable can be connected between a port on a left canister and a port on a right canister of the expansion enclosures.
- Ensure that cables are installed in an orderly way to reduce the risk of cable damage when replaceable units are removed or inserted.
- SAS cables must be routed through the cable management arms to reduce the risk of disconnecting the nodes from their storage arrays. This step also helps to protect the SAS cables from getting damaged if you slide the node or enclosure out of the rack while they are attached. Arrange your cables to provide access to the following components:
 - Ethernet ports, including the technician port. The technician port is used for initial setup of the system by directly attaching to a personal computer. It can also be used to complete service actions for the system.
 - USB ports. USB ports can be used to initialize the system or to perform service-related tasks by using a USB flash drive that contains executable files for initializing the system.
 - Fibre Channel and Fibre Channel over Ethernet (FCoE) ports. If your system has an optionally installed Fibre Channel and FCoE adapter for host and external storage attachment, ensure that these ports are accessible.
 - The nodes and the enclosures themselves. Access is required to the hardware for servicing and for safely removing and replacing components by using two or more people.

Procedure

1. Install the cables, as shown in Figure 132 on page 138.

Note: Figure 132 on page 138 is provided to show the cable connections between the SAS enclosures and each node enclosure. It does not imply or represent the precise racking order for the enclosures in a rack. However, due to its size and weight, always place the 2145-92F enclosure near the bottom of the rack.

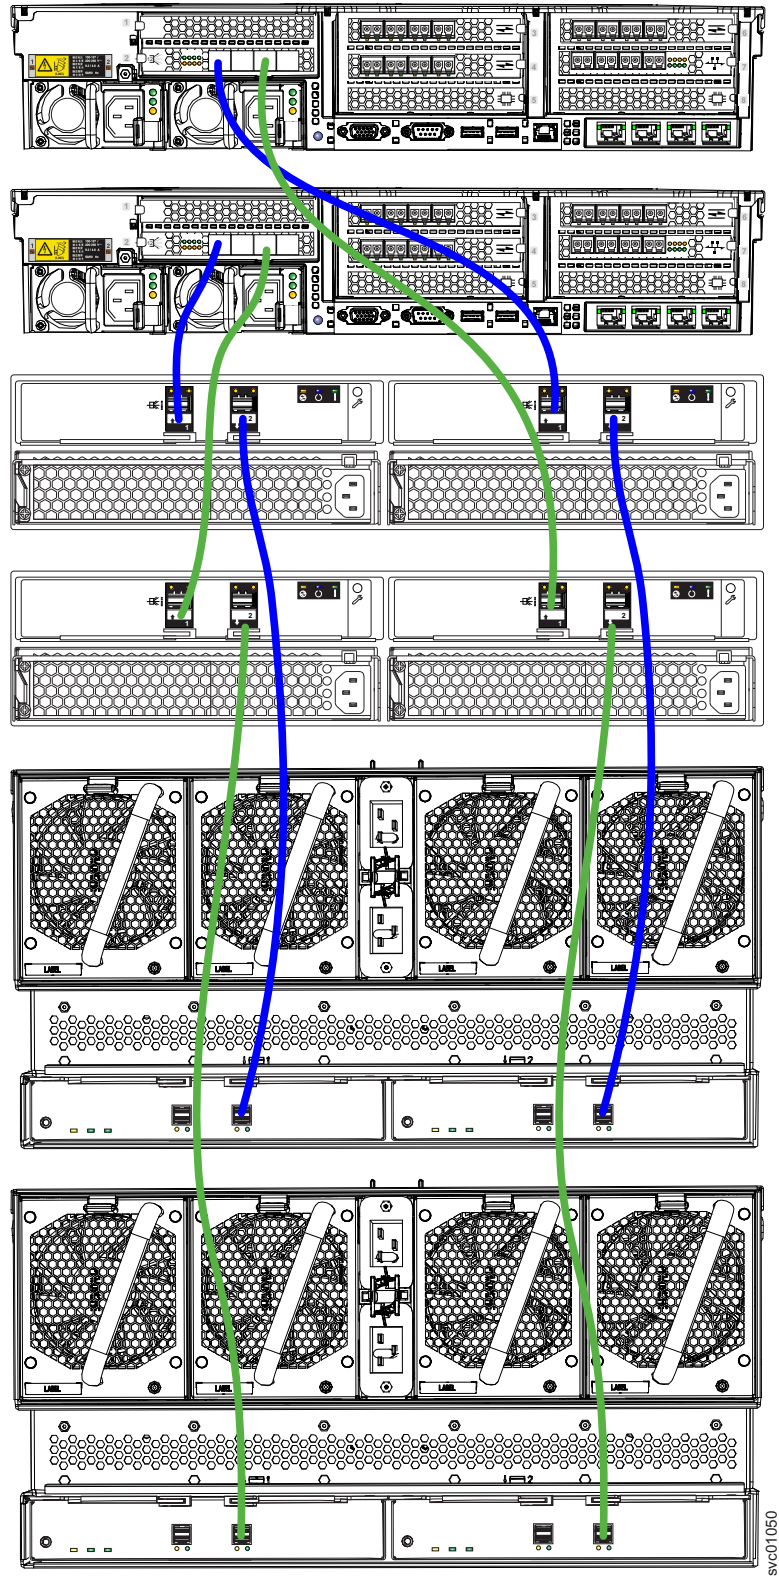


Figure 132. Connecting the SAS cables

2. If more I/O groups are configured, repeat the cabling procedure for the other I/O groups. Each system can have a maximum of four I/O groups, with two

chains of expansion enclosures attached to each I/O group. On each SAS chain, the systems can support up to a SAS chain weight of 10.

Combining 2U and 5U expansion enclosures

About this task

As Figure 132 on page 138 shows, you can combine 2145-24F, 2145-12F, and 2145-92F enclosures in a SAS chain. The limiting factor is the combined *chain weight* of the various components. The maximum SAS chain weight that can be attached to a node SAS port is 10:

- 2145-92F enclosures have a chain weight of 2.5
- 2145-24F and 2145-12F enclosures have a chain weight of 1.

Example

Table 16 shows examples of different combinations of SAS weights.

Table 16. Examples of supported SAS chain combinations

2145-12F Enclosures	2145-24F Enclosures	2145-92F Enclosures	Combined chain weight
0	0	4	10
2	0	3	9.5
2	3	2	10
0	7	1	9.5
1	1	1	4.5 (as shown in Figure 132 on page 138)

In addition, the orientation of the Input and Output SAS ports on the 2U and 5U SAS enclosures differs. Figure 133 on page 140 shows the SAS ports on the 2145-92F, 2145-12F, and 2145-24F SAS enclosures

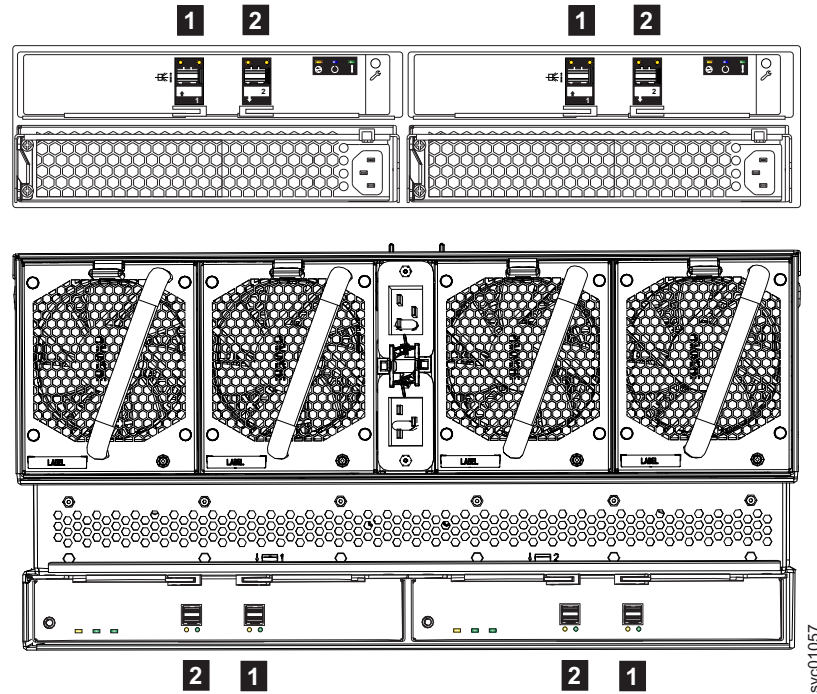


Figure 133. SAS port orientation on expansion enclosures

- 1** Input SAS port
- 2** Output SAS port

Powering on the expansion enclosure: 2145-92F

Use the following procedure to provide power to the 2145-92F expansion enclosure as part of the initial installation process or after a service procedure.

Before you begin

Important:

- To support the 2145-92F expansion enclosure, the SAN Volume Controller system requires software version 7.8.0. If software version 7.8.0 is not installed on the system, do not connect or power on the expansion enclosure.
- Before you connect the power cables to the rear of the enclosure, always check that the expansion enclosure is secured in the rack. If needed, tighten the thumbscrews on the front of the enclosure (**2** in Figure 134 on page 141) to ensure that the enclosure drawer does not roll open.

About this task

The 2145-92F expansion enclosure has two power supply units (PSUs) that are accessible from the front of the enclosure (**4** in Figure 134 on page 141). As the figure also shows, the PSUs are covered by the 1U fascia (**5**).

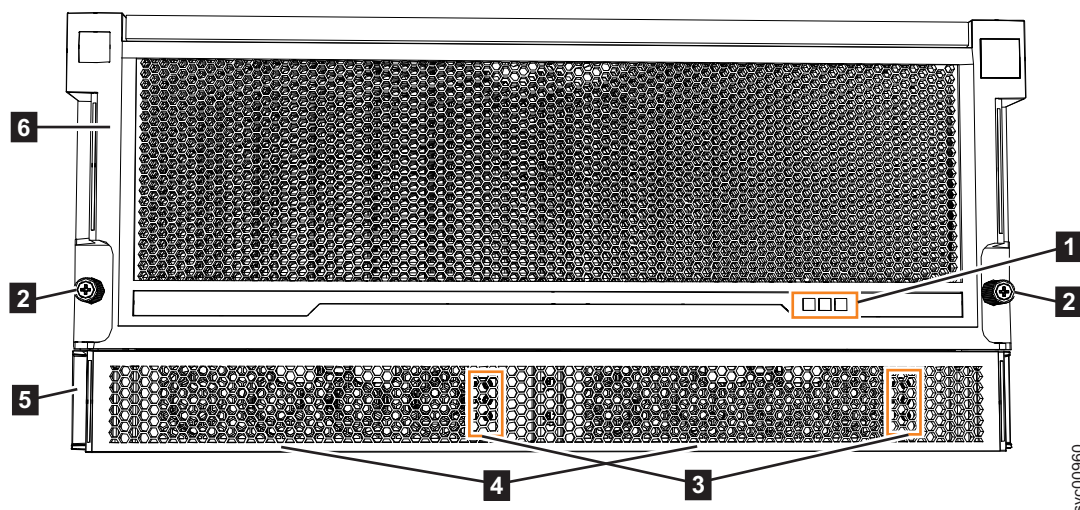


Figure 134. Features on the front of the 2145-92F expansion enclosure


- 1** Display panel LEDs
- 2** Rack retention thumb screws
- 3** Power supply unit LEDs
- 4** Power supply units (PSUs)
- 5** PSU fascia (1U)
- 6** Front fascia (4U)

Each PSU has a power supply connector and power cable, which are accessible from the back of the enclosure, as shown in Figure 135 on page 142. Power is provided by plugging a C19-C20 power cable into each power supply unit and, if necessary, turning on the power source. The expansion enclosure does not have a power button.

Procedure

1. Connect the C19-C20 power cables to the power connectors on the rear of the expansion enclosure. The enclosure automatically powers on and begins its Power On Self-Tests (POST).
2. Secure the power cables in the cable retainer at each power connector on the rear of the enclosure. Also, ensure that each cable is installed along one of the cable management arms. The cable management arms also support the SAS cables.

Important: Always secure each power cable with a cable retainer and ensure that the cable is installed along one of the cable management arms. When secured, the power and SAS cables stay connected when you slide the expansion enclosure out of the rack to perform service tasks.

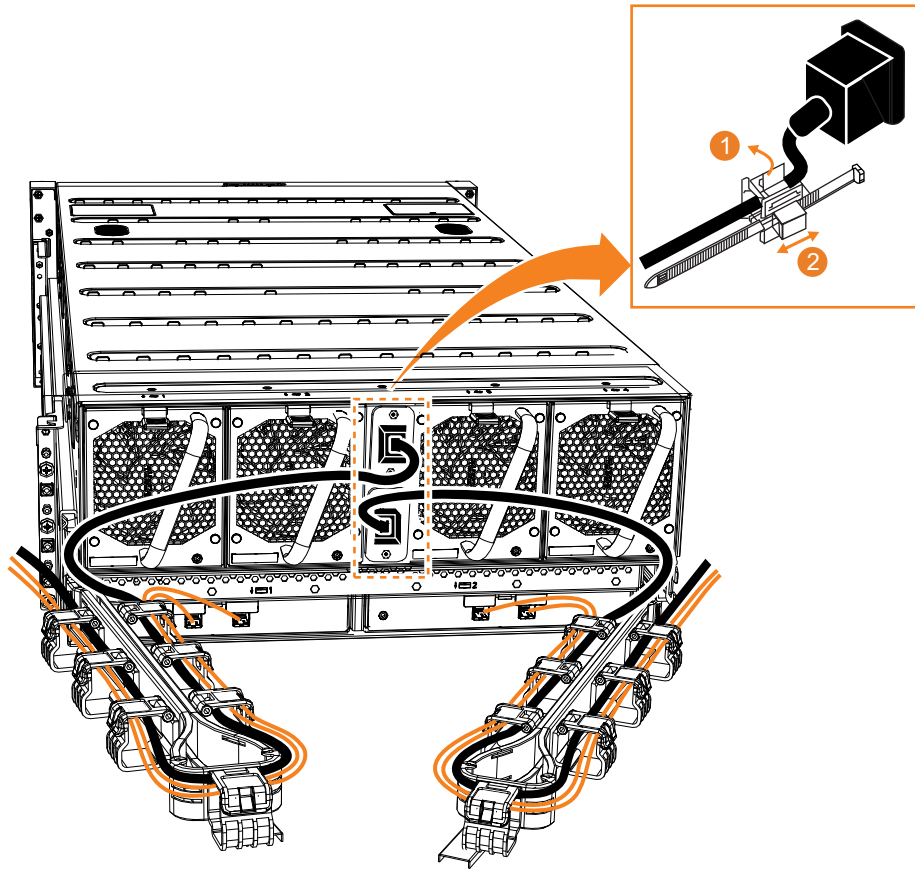

svc01083

Figure 135. Power cable connections on the back of the expansion enclosure

3. Verify that the expansion enclosure and its components are operating as expected.

On the back of the expansion enclosure, all four fans and the expansion canister indicators (**3** and **8** in Figure 136 on page 143) become active when the power is connected.

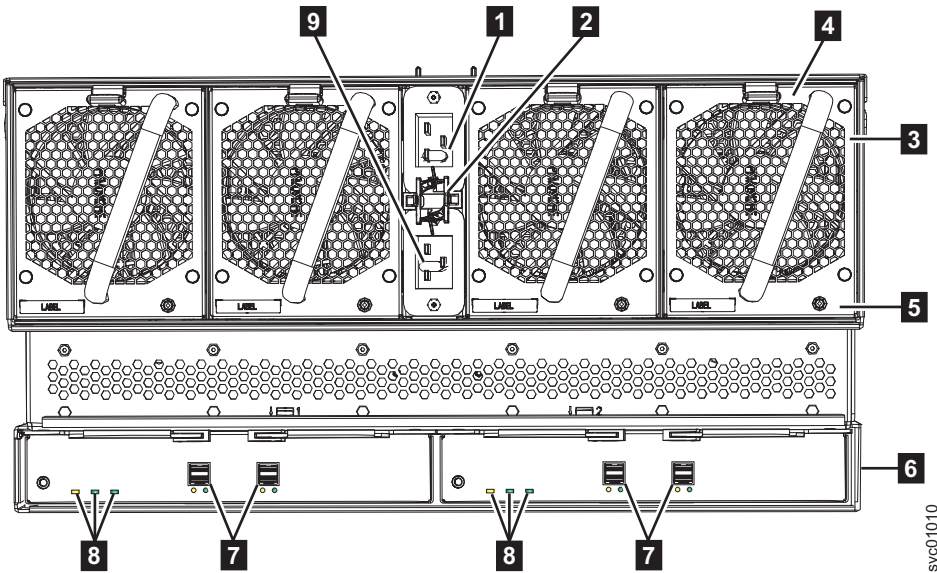


Figure 136. Features on the rear of the 2145-92F expansion enclosure

- 1** Power cable connector for PSU 2
- 2** Power cable retention clamps
- 3** Fan module
- 4** Fan release latch
- 5** Fan fault indicator
- 6** Expansion canister
- 7** SAS ports and indicators
- 8** Expansion canister indicators
- 9** Power cable connector for PSU 1

On the front of the enclosure, the indicators on the front display panel and each PSU (**1** and **3** in Figure 134 on page 141) are also lit when the power is connected. See “SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators” on page 144 for information about the status that is provided by the indicators.

4. Verify that the system recognizes the expansion enclosure.

In the management GUI, view information about the system status and the expansion enclosure.

- If a new expansion enclosure was installed, make sure that the enclosure was discovered by the system. A newly recognized expansion enclosure is visible in the management GUI.
- If the expansion enclosure was powered off as part of a service procedure, view the information in the management GUI to confirm that the enclosure is operating as expected. You can also access the Event Log to view enclosure and component events and complete any remaining fix procedures.

Powering off the expansion enclosure: 2145-92F

Before you power down a 2145-92F expansion enclosure, review the following procedure.

Before you begin

When you power off an expansion enclosure, the drives in that enclosure are no longer available to the control enclosure. The SAS chain also breaks. Any expansion enclosures that are beyond the enclosure that is powered down are also disconnected from the control enclosure.

Before you power off an enclosure, use the management GUI to show the volumes that depend on that enclosure. In the system view, select the expansion enclosure to be powered off. Then, select **Dependent Volumes**. If no configuration changes are made, other volumes remain available to the system.

Procedure

1. Stop all I/O to the system from hosts that access the expansion enclosure.
2. Unmount any associated file systems.
3. Wait 5 minutes for all write data to be flushed to the drives.
4. Unplug both of the power cords from the rear of the expansion enclosure to remove all power from the enclosure.

SAN Volume Controller 2145-92F expansion enclosure LEDs and indicators

The 2145-92F expansion enclosure has several sets of LEDs that provide information about the overall status of the enclosure, power, drives, fans, canisters, and SAS connections.

A 2145-92F expansion enclosure has sets of LEDs on the front and rear of the enclosure. Inside of the expansion enclosure, LEDs also indicate the status of the drives and each secondary expander module.

Note: All of the information about the 2145-92F expansion enclosure is also applicable to the 2147-92F expansion enclosure.

LEDs on the front of the expansion enclosure

As Figure 137 on page 145 shows, the front of the 2145-92F expansion enclosure contains LEDs for the display panel (**1**) and for each of the power supply units (**3**).

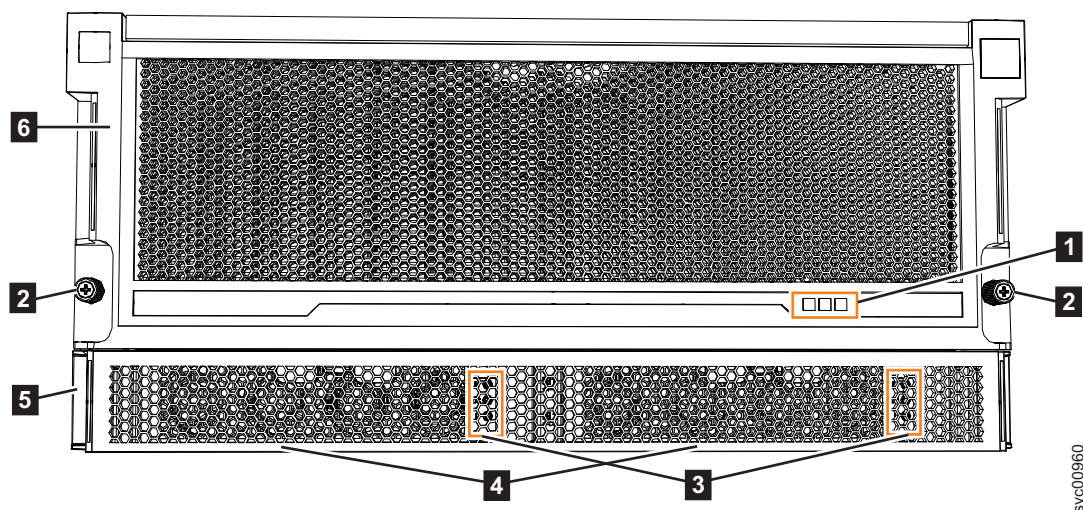


Figure 137. LEDs on the front of the expansion enclosure

- 1** Display panel LEDs
- 2** Rack retention thumb screws
- 3** Power supply unit LEDs
- 4** Power supply units (PSUs)
- 5** PSU fascia (1U)
- 6** Front fascia (4U)

The display panel (**1**) contains three LEDs that describe the operational status of the expansion enclosure. Table 17 describes the function and meaning of the LEDs on the front display panel.

Table 17. Display panel LEDs

Function	Color	Status	Description
Power	Green	On	The expansion enclosure power is on; this LED is controlled by the expansion enclosure.
		Off	The expansion enclosure power is off.
Identify	Blue	On	Identifies the expansion enclosure; this LED is controlled by the system. Use the management GUI or service interface to identify an enclosure.
		Off	The expansion enclosure is operating normally.

Table 17. Display panel LEDs (continued)

Function	Color	Status	Description
Enclosure fault	Amber	On	The expansion enclosure is coming up or a fault is detected against a component within the enclosure.
		Off	No faults are detected.

The 2145-92F expansion enclosure contains two PSUs (**4** in Figure 137 on page 145) that are accessible from the front of the enclosure. Each PSU has its own a set of LEDs, as shown in Figure 138.

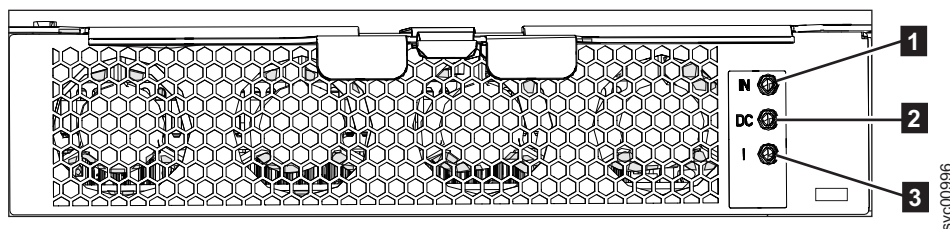


Figure 138. LEDs on the front of a power supply unit

- 1** Input power
- 2** DC power
- 3** Fault indicator

Table 18 explains the function and status that is indicated by each of the LEDs. The power cords for each PSU are accessible from the rear of the expansion enclosure (**1**), as shown in Figure 141 on page 149.

Table 18. Power supply unit LEDs

Function	Color	Status	Description
1 Input power	Green	On	The input voltage is within specification.
		Off	No power input detected.
2 DC power	Green	On	DC power outputs are within specification.
		Off	DC power is not available.
3 Fault	Amber	On	A fault is detected in the PSU.
		Off	No faults are detected.

LEDs inside of the expansion enclosure

Each of the drives and secondary expansion modules within the 2145-92F expansion enclosure has two LED indicators. To view the drives and secondary expansion modules, you must remove the cover of the enclosure, as described in “Removing the top cover: 2145-92F” on page 56.

Figure 139 shows the components of a drive assembly. Each drive has an online indicator (**2**) and fault indicator (**3**).

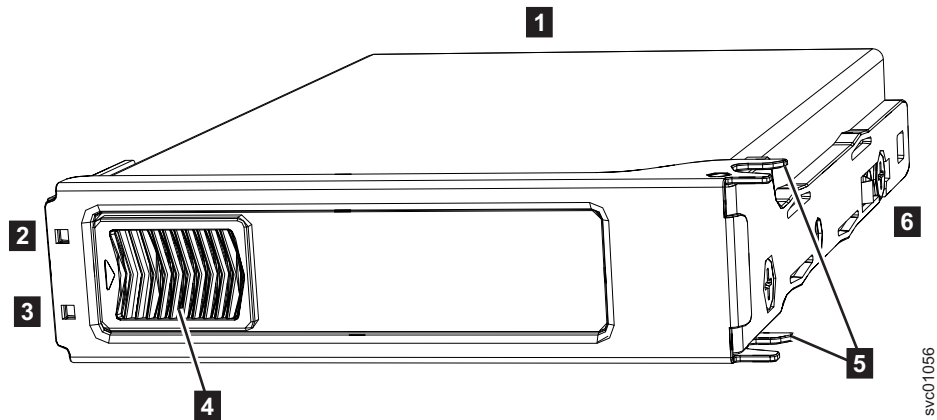


Figure 139. LEDs on a drive assembly

Table 19 describes the meaning of the LEDs on each drive.

Table 19. LED indicators on drives

Function	Color	Status	Description
2 Activity	Green	On	The drive is ready to be used.
		Flashing	The drive is operating and I/O is occurring.
		Off	The drive is not installed or an installed drive is not ready to be used.
3 Fault	Amber	On	A fault occurred on the drive. The LED is turned off when the drive is removed and replaced.
		Flash	The drive is being identified; a fault might or might not be detected.
		Off	The installed drive is operating normally.

Figure 140 on page 148 shows the LEDs on a secondary expansion module.

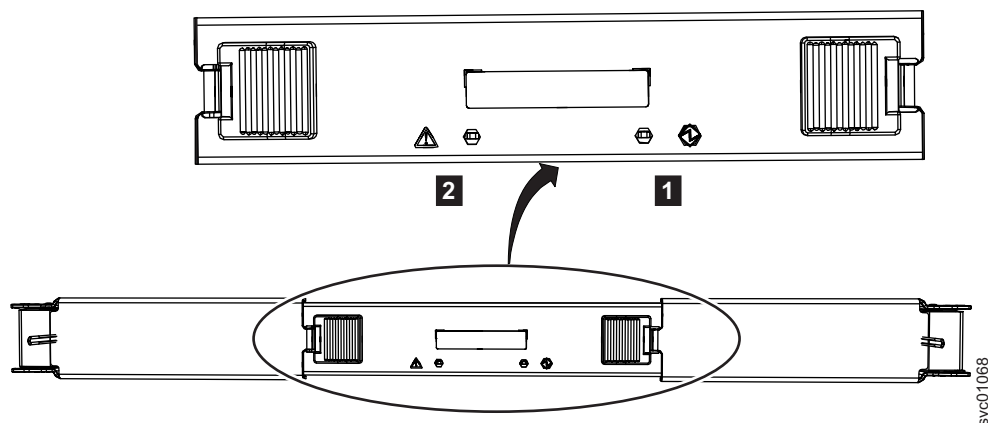


Figure 140. LEDs on a secondary expansion module

- 1** Online indicator
- 2** Fault indicator

Table 20 describes the meaning of the LEDs on each secondary expansion module.

Table 20. LED indicators on secondary expansion modules

Function	Color	Status	Description
1 Power	Green	On	The secondary expansion module is receiving power.
		Flashing	Not used.
		Off	The secondary expansion module is not receiving power.
2 Fault	Amber	On	Not used.
		Flash	The secondary expansion module is being identified.
		Off	The secondary expansion module is operating normally.

LEDs on the rear of the expansion enclosure

Figure 141 on page 149 shows the rear view of a 2145-92F expansion enclosure. LEDs on the rear of the enclosure provide information about each fan module, each expansion canister, and SAS links.

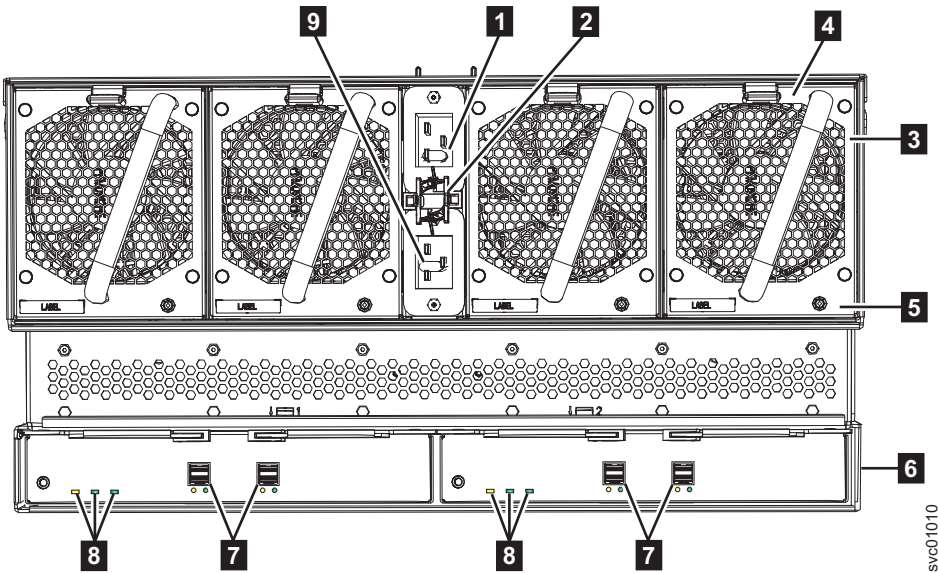


Figure 141. LEDs on the back of the expansion enclosure

The expansion enclosure has four fans. Each fan has one LED; for example, Figure 141 shows the location of the LED (**5**) for fan number four. When a fan is operating normally, the LED is not lit. If a fault is detected, the amber LED is lit.

As Figure 141 also shows, the expansion enclosure contains two expansion canisters. Each expansion canister contains its own set of LEDs, as shown in Figure 142. The LEDs provide status information about the expansion canister itself and the SAS connections.

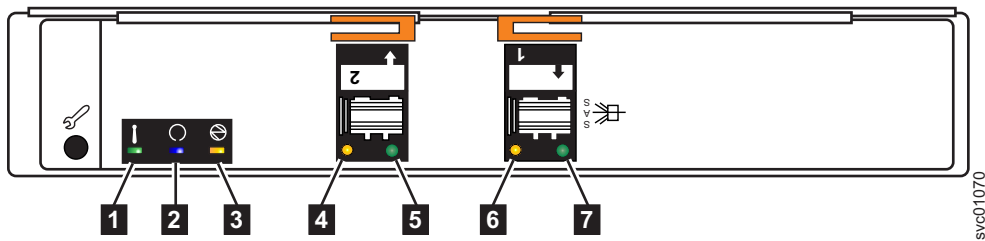


Figure 142. LEDs on the back of the expansion canister

- 1** Canister fault
- 2** Canister status
- 3** Canister power
- 4** and **6** SAS link fault
- 5** and **7** SAS link operational
- 8** Canister release handles

Table 21 on page 150 describes the values and meaning of each LED.

Table 21. Expansion canister and SAS port LEDs

Name	Color	State	Meaning
1 Canister fault	Amber	Off	Normal operation.
		On	A fault was detected.
		Flashing	The expansion canister is being identified. A fault might or might not be detected.
2 Canister status	Green	Off	Canister is off.
		On	Normal operation.
		Flashing	A vital product data (VPD) error occurred.
3 Canister power	Green	Off	Canister is off.
		On	Canister is receiving power.
4 and 6 SAS link fault	Amber	Off	No faults are detected. All four lanes have a link connection.
		On	Several error conditions are possible: <ul style="list-style-type: none"> • Only 1, 2, or 3 lanes are connected, but not all 4. • The lanes are not operating at the same speed. • All lanes are not connected to the same remote port. One or more of the connected lanes are attached to a different address.
5 and 7 SAS link operational	Green	Off	No link connection on any lane. The connection is down.
		On	The SAS link is active. At least one of the four lanes is connected.

Chapter 5. Initializing the SAN Volume Controller 2145-SV1 system

To begin the initialization process for the system, you access the initialization GUI. You need to know the default user name and password.

Next, you initialize the system by using the technician port.

After you create the system, you must configure it.

Checking your web browser settings for the initialization GUI

To access the initialization GUI, you must ensure that your web browser is supported and that the appropriate settings are enabled.

Before you begin

The GUI supports the following web browsers:

- Mozilla Firefox 49
- Mozilla Firefox Extended Support Release (ESR) 45
- Microsoft Internet Explorer (IE) 11 and Microsoft Edge
- Google Chrome 54

IBM supports higher versions of the browsers if the vendors do not remove or disable function that the product relies upon. For browser levels higher than the versions that are certified with the product, customer support accepts usage-related and defect-related service requests. If the support center cannot re-create the issue, support might request the client to re-create the problem on a certified browser version. Defects are not accepted for cosmetic differences between browsers or browser versions that do not affect the functional behavior of the product. If a problem is identified in the product, defects are accepted. If a problem is identified with the browser, IBM might investigate potential solutions or work-arounds that the client can implement until a permanent solution becomes available.

Procedure

To configure your web browser, follow these steps:

1. Enable JavaScript for your web browser.

For Mozilla Firefox, JavaScript is enabled by default and requires no additional configuration.

For Microsoft Internet Explorer (IE) 11 and Microsoft Edge running on Microsoft Windows 10, JavaScript is enabled by default and requires no additional configuration.

For Microsoft Internet Explorer (IE) running on Microsoft Windows 7:

- a. In Internet Explorer, click **Tools > Internet Options**.
- b. Click **Security Settings**.
- c. Click **Internet** to choose the Internet zone.
- d. Click **Custom Level**.

- e. Scroll down to the **Scripting** section, and then in **Active Scripting**, click **Enable**.
- f. Click **OK** to close **Security Settings**.
- g. Click **Yes** to confirm the change for the zone.
- h. Click **OK** to close **Internet Options**.
- i. Refresh your browser.

For Microsoft Internet Explorer (IE) running on Microsoft Windows Server 2008:

- a. In Internet Explorer, click **Tools > Internet Options**.
- b. Click **Security**.
- c. Click **Trusted sites**.
- d. On the **Trusted sites** dialog, verify that the web address for the management GUI is correct and click **Add**.
- e. Verify that the correct web address was added to the **Trusted sites** dialog.
- f. Click **Close** on the **Trusted sites** dialog.
- g. Click **OK**.
- h. Refresh your browser.

For Google Chrome:

- a. On the menu bar in the Google Chrome browser window, click **Settings**.
- b. Click **Show advanced settings**.
- c. In the **Privacy** section, click **Content settings**.
- d. In the **JavaScript** section, select **Allow all sites to run JavaScript**.
- e. Click **OK**.
- f. Refresh your browser.

2. Enable cookies in your web browser.

For Microsoft Internet Explorer (IE) 11 and Microsoft Edge running on Microsoft Windows 10, cookies are enabled by default and require no additional configuration.

For Mozilla Firefox:

- a. On the menu bar in the Firefox browser window, click **Tools > Options**.
- b. On the Options window, select **Privacy**.
- c. Set "Firefox will" to **Use custom settings for history**.
- d. Select **Accept cookies from sites** to enable cookies.
- e. Click **OK**.
- f. Refresh the browser.

For Microsoft Internet Explorer:

- a. In Internet Explorer, click **Tools > Internet Options**.
- b. Click **Privacy**. Under **Settings**, move the slider to the bottom to allow all cookies.
- c. Click **OK**.
- d. Refresh your browser.

For Google Chrome:

- a. On the menu bar in the Google Chrome browser window, click **Settings**.
- b. Click **Show advanced settings**.
- c. In the **Privacy** section, click **Content settings**.
- d. In the **Cookies** section, select **Allow local data to be set**.

- e. Click **OK**.
- f. Refresh your browser.
3. Enable file download on IE 10 and 11 running on Windows 2012.
 - a. In Internet Explorer, click **Tools > Internet Options**.
 - b. On the Internet Options window, select the **Security** tab.
 - c. On the **Security** tab, click the **Internet zone**.
 - d. Click **Custom level** to customize the security level for this zone.
 - e. Scroll down to **Downloads** and select **Enable** under File download.
 - f. Click **OK**.
 - g. Click **Yes** to confirm.
 - h. Click **OK** to close the Internet Options.

For Microsoft Internet Explorer (IE) 11 and Microsoft Edge running on Microsoft Windows 10, file download is enabled by default and requires no additional configuration.

4. Enable scripts to disable or replace context menus. (Mozilla Firefox only).
For Mozilla Firefox:
 - a. On the menu bar in the Firefox browser window, click **Tools > Options**.
 - b. On the Options window, select **Content**.
 - c. Click **Advanced** by the **Enable JavaScript** setting.
 - d. Select **Disable or replace context menus**.
 - e. Click **OK** to close the Advanced window.
 - f. Click **OK** to close the Options window.
 - g. Refresh your browser.
5. Enable TLS 1.1/1.2 (Microsoft Internet Explorer 9 and 10 only).
For Microsoft Internet Explorer:
 - a. Open Internet Explorer.
 - b. Select **Tools > Internet Options**.
 - c. Select the **Advanced** tab.
 - d. Scroll to the **Security** section.
 - e. Check the **Use TLS 1.1** and **Use TLS 1.2** check box.

Note: IE 11 and later and Microsoft Edge enable TLS 1.1/1.2 by default.

User name and password for system initialization

During the initialization procedure, you need to log in to the initialization GUI for the system.

The default user name and password for the initialization GUI are listed in the following table.

Table 22. Default user name and password for the initialization GUI

User name	Password
superuser	passw0rd

Note: The 0 character in the password is the number zero, not the letter O.

Initializing the SAN Volume Controller 2145-SV1 system by using the technician port

To initialize a new system, you must connect a personal computer to the technician port on the rear of a node and run the initialization tool. This node becomes the configuration node and provides access to the initialization GUI. Access the initialization GUI by using the management IP address through your IP network or through the technician port. Use the initialization GUI to add each candidate node to the system.

Before you begin

Important: Do not use the initialization tool on a node if any other node in the system is already active. For example, a node status LED is solid on any node of the system.

You require the following items:

- A supported browser that is installed on the personal computer
- An Ethernet cable to connect the personal computer to the technician port

Attention: Do not connect the technician port to a switch. If a switch is detected, the technician port connection might shut down, causing a 746 node error.

Procedure

To initialize the system, complete the following steps.

1. Ensure that the nodes and switches of the system are powered on. (Refer to “Powering on and powering off the clustered system” in the SAN Volume Controller IBM Knowledge Center.)
2. Configure an Ethernet port on the personal computer to enable Dynamic Host Configuration Protocol (DHCP) configuration of its IP address and DNS settings.

If you do not have DHCP, you must manually configure the personal computer. Specify the static IPv4 address 192.168.0.2, subnet mask 255.255.255.0, gateway 192.168.0.1, and DNS 192.168.0.1.

3. Starting from the right at the rear of the node, locate the first Ethernet port to the left, which is the technician port. This port is labeled **1** in the figure below.

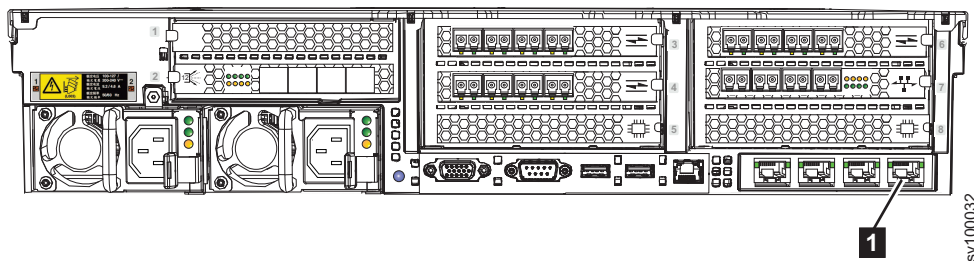


Figure 143. Technician port

4. Connect an Ethernet cable between the port of the personal computer that is configured in step 2 and the technician port. After the connection is made, the

system will automatically configure the IP and DNS settings for the personal computer if DHCP is available. If it is not available, the system uses the values that you provided in step 2 on page 154.

5. After the Ethernet port of the personal computer is connected, open a supported browser and browse to address `http://install`. (If you do not have DHCP, open a supported browser and go to the following static IP address `192.168.0.1`.) The browser is automatically directed to the initialization tool.

Note: If the system cannot be initialized, you are directed to the service assistant interface.

6. Follow the instructions that are presented by the initialization tool to configure the system with a name and management IP address.
7. If you experience a problem during the process due to a change in system states, wait 5 - 10 seconds. Then, either reopen the SSH connection or reload the service assistant.
8. After you complete the initialization process, disconnect the cable between the personal computer and the technician port.

What to do next

The system management GUI can now be reached by opening a supported web browser and pointing it to `http://management_IP_address`. Use the management GUI to add each candidate node to the system. Then, it is best to use the management GUI to set the service IP address for each node now. Ensure that the system is disconnected from the technician port.

Adding nodes to an existing system

Before you add a node to an existing system, consider this high-level overview of the requirements and tasks involved.

Before you begin

This task requires that the following conditions are met:

- All nodes that are configured in the system are present. Nodes must be installed in pairs. Each pair of nodes is an I/O group.
- All errors in the system event log are fixed.
- All managed disks (MDisks) are online.
- A node with only Fibre Channel over Ethernet (FCoE) ports (all FCoE ports) that is connected to the switch and properly zoned can also be added to an I/O group.

About this task

Table 23 lists the models and software version requirements for nodes.

Table 23. Node model names and software version requirements

Node model	Required system SAN Volume Controller software version
SAN Volume Controller 2145-SV1	7.7.1.0 or later
SAN Volume Controller 2145-DH8 with a 2145-12F expansion enclosure	7.7.0.0 or later

Table 23. Node model names and software version requirements (continued)

Node model	Required system SAN Volume Controller software version
SAN Volume Controller 2145-DH8 with a 4-port 16G Fibre Channel adapter	7.6.0.0 or later
SAN Volume Controller 2145-DH8 with a 2-port 16G Fibre Channel adapter	7.4.0.0 or later
SAN Volume Controller 2145-DH8	7.3.0.0 or later
SAN Volume Controller 2145-CG8 with two Fibre Channel adapters	6.4.1.5 or later (any partner systems must have 6.4.0 or later)
SAN Volume Controller 2145-CG8	6.2.0 or later
SAN Volume Controller 2145-CF8	5.1.0 or later

Note: The steps in the following procedure refer to uninterruptible power supply units. SAN Volume Controller 2145-DH8 and 2145-SV1 do not have an external uninterruptible power supply unit. These systems have battery modules in the front panel instead.

Procedure

1. Install the SAN Volume Controller nodes, and if applicable the uninterruptible power supply units, in the rack.
2. Connect the SAN Volume Controller nodes to the LAN.
3. Connect the SAN Volume Controller nodes to the SAN fabric (for example, the FC or FCoE ports).
4. Power on the SAN Volume Controller nodes and, if applicable, the uninterruptible power supply units.
5. Zone the SAN Volume Controller node ports in the existing SAN Volume Controller zone. The SAN Volume Controller zone exists in each fabric with only node ports.
6. Zone the SAN Volume Controller node ports in the existing SAN Volume Controller and storage zone. A storage zone contains all of the SAN Volume Controller node ports and storage system ports that are in the fabric and used to access the physical disks.
7. For each storage system that is used with the SAN Volume Controller system, use the system management application to map the LUNs that are currently used by the system to all of the WWPNs of the SAN Volume Controller nodes that you want to add. The SAN Volume Controller nodes must recognize the same LUNs that the existing nodes in the system can recognize before they can be added. If SAN Volume Controller nodes cannot recognize the same LUNs, the system is marked degraded.
8. Add the SAN Volume Controller nodes to the system.
9. Check the status of the storage systems and MDisks to ensure that status is not marked degraded. If the status is degraded, a configuration problem must be resolved before you can do any further system configuration task. If the problem cannot be resolved, remove the newly added SAN Volume Controller nodes from the clustered system and contact IBM Remote Technical Support for assistance.

What to do next

For specific instructions about adding a new node or adding a replacement node to a clustered system, see the information about adding nodes to a system.

Appendix A. Accessibility features for SAN Volume Controller

Accessibility features help users who have a disability, such as restricted mobility or limited vision, to use information technology products successfully.

Accessibility features

These are the major accessibility features for the SAN Volume Controller:

- You can use screen-reader software and a digital speech synthesizer to hear what is displayed on the screen. HTML documents have been tested using JAWS version 15.0.
- This product uses standard Windows navigation keys.
- Interfaces are commonly used by screen readers.
- Keys are discernible by touch, but do not activate just by touching them.
- Industry-standard devices, ports, and connectors.
- You can attach alternative input and output devices.

The SAN Volume Controller online documentation and its related publications are accessibility-enabled. The accessibility features of the online documentation are described in Viewing information in the information center .

Keyboard navigation

You can use keys or key combinations to perform operations and initiate menu actions that can also be done through mouse actions. You can navigate the SAN Volume Controller online documentation from the keyboard by using the shortcut keys for your browser or screen-reader software. See your browser or screen-reader software Help for a list of shortcut keys that it supports.

IBM and accessibility

See the IBM Human Ability and Accessibility Center for more information about the commitment that IBM has to accessibility.

Appendix B. Where to find the Statement of Limited Warranty

The Statement of Limited Warranty is available in both hardcopy format and in the SAN Volume Controller IBM Knowledge Center.

The *Statement of Limited Warranty* is included (in hardcopy form) with your product. It can also be ordered from IBM (see Table 2 on page xxviii for the part number).

Appendix C. SAN Volume Controller physical installation planning

Before the IBM service representative can set up your environment, you must verify that the prerequisite conditions for system installation are met.

SAN Volume Controller 2145-SV1 environment requirements

Before the SAN Volume Controller 2145-SV1 is installed, the physical environment must meet certain requirements. This includes verifying that adequate space is available and that requirements for power and environmental conditions are met.

Input-voltage requirements

Ensure that your environment meets the voltage requirements that are shown in Table 24.

Table 24. Input-voltage requirements

Voltage	Frequency
100-127 / 200-240Vac	50 Hz or 60 Hz

Maximum power requirements for each node

Ensure that your environment meets the power requirements as shown in Table 25.

The maximum power that is required depends on the node type and the optional features that are installed.

Table 25. Power consumption

Components	Power requirements
SAN Volume Controller 2145-SV1	~450 W typical, 700 W maximum (200 - 240V ac, 50/60 Hz)

Environment requirements without redundant AC power

Ensure that your environment falls within the following ranges if you are not using redundant AC power.

If you are not using redundant ac power, ensure that your environment falls within the ranges that are shown in Table 26.

Table 26. Physical specifications

Environment	Temperature	Altitude	Relative humidity	Maximum dew point
Operating in lower altitudes	5°C to 40°C (41°F to 104°F)	0 - 950 m (0 ft to 3,117 ft)	8% to 85%	24°C (75°F)
Operating in higher altitudes	5°C to 28°C (41°F to 82°F)	951 m to 3,050 m (3,118 ft to 10,000 ft)		

Table 26. Physical specifications (continued)

Environment	Temperature	Altitude	Relative humidity	Maximum dew point
Turned off (with standby power)	5°C to 45°C (41°F to 113°F)	0 m to 3,050 m (0 ft to 10,000 ft)	8% to 85%	27°C (80.6°F)
Storing	1°C to 60°C (33.8°F to 140.0°F)	0 m to 3,050 m (0 ft to 10,000 ft)	5% to 80%	29°C (84.2°F)
Shipping	-40°C to 60°C (-40°F to 140.0°F)	0 m to 10,700 m (0 ft to 34,991 ft)	5% to 100%	29°C (84.2°F)

Note: Decrease the maximum system temperature by 1°C for every 175 m increase in altitude.

Preparing your environment

The following tables list the physical characteristics of a SAN Volume Controller 2145-SV1 node.

Dimensions and weight

Use the parameters that are shown in Table 27 to ensure that space is available in a rack capable of supporting the node.

Table 27. Dimensions and weight

Height	Width	Depth	Maximum weight
87 mm (3.4 in.)	447 mm (17.6 in.)	746 mm (30.1 in.)	25 kg (55 lb) to 30 kg (65 lb) depending on configuration

Additional space requirements

Ensure that space is available in the rack for the additional space requirements around the node, as shown in Table 28.

Table 28. Additional space requirements

Location	Additional space requirements	Reason
Left side and right side	Minimum: 50 mm (2 in.)	Cooling air flow
Back	Minimum: 100 mm (4 in.) If the cable-management arm is used, allow 177 mm (7 in.)	Cable exit

Maximum heat output of each SAN Volume Controller 2145-SV1 node

The node dissipates the maximum heat output that is given in Table 29 on page 165.

Table 29. Maximum heat output of each SAN Volume Controller 2145-SV1 node

Model	Heat output per node
SAN Volume Controller 2145-SV1	<ul style="list-style-type: none"> • Minimum configuration: 419.68 Btu per hour (AC 123 watts) • Maximum configuration: 3480.24 Btu per hour (AC 1020 watts)

Notices

This information was developed for products and services offered in the US. This material might be available from IBM in other languages. However, you may be required to own a copy of the product or product version in that language in order to access it.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.*

For license inquiries regarding double-byte character set (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

*Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan, Ltd.
19-21, Nihonbashi-Hakozakicho, Chuo-ku
Tokyo 103-8510, Japan*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those

websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you provide in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
US*

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

The performance data discussed herein is presented as derived under specific operating conditions. Actual results may vary.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

Statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

All IBM prices shown are IBM's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

COPYRIGHT LICENSE:

This information contains sample application programs in source language, which illustrate programming techniques on various operating platforms. You may copy, modify, and distribute these sample programs in any form without payment to IBM, for the purposes of developing, using, marketing or distributing application

programs conforming to the application programming interface for the operating platform for which the sample programs are written. These examples have not been thoroughly tested under all conditions. IBM, therefore, cannot guarantee or imply reliability, serviceability, or function of these programs. The sample programs are provided "AS IS", without warranty of any kind. IBM shall not be liable for any damages arising out of your use of the sample programs.

If you are viewing this information softcopy, the photographs and color illustrations may not appear.

Trademarks

IBM, the IBM logo, and ibm.com® are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at Copyright and trademark information at www.ibm.com/legal/copytrade.shtml.

Adobe, the Adobe logo, PostScript, and the PostScript logo are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States, and/or other countries.

Microsoft, Windows, and the Windows logo are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other product and service names might be trademarks of IBM or other companies.

Homologation statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

Electronic emission notices

This section contains the electronic emission notices or statements for the United States and other countries.

Federal Communications Commission (FCC) statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors, or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device might not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

Industry Canada compliance statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Australia and New Zealand Class A Statement

Attention: This is a Class A product. In a domestic environment this product might cause radio interference in which case the user might be required to take adequate measures.

European Union Electromagnetic Compatibility Directive

This product is in conformity with the protection requirements of European Union (EU) Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

Attention: This is an EN 55022 Class A product. In a domestic environment this product might cause radio interference in which case the user might be required to take adequate measures.

European community contact:

IBM Deutschland GmbH
Technical Regulations, Department M372
IBM-Allee 1, 71139 Ehningen, Germany
Tele: +49 (0) 800 225 5423 or +49 (0) 180 331 3233
Email: halloibm@de.ibm.com

Germany Electromagnetic Compatibility Directive

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

“Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen.”

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem “Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG).” Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A

Dieses Gerät ist berechtigt, in übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:

International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:

IBM Deutschland GmbH
Technical Regulations, Abteilung M372
IBM-Allee 1, 71139 Ehningen, Germany
Tele: +49 (0) 800 225 5423 or +49 (0) 180 331 3233
Email: halloibm@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

People's Republic of China Class A Statement

中华人民共和国“A类”警告声明

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

Taiwan Class A compliance statement

警告使用者：
這是甲類的資訊產品，在
居住的環境中使用時，可
能會造成射頻干擾，在這
種情況下，使用者會被要
求採取某些適當的對策。

taitemi

Taiwan Contact Information

This topic contains the product service contact information for Taiwan.

IBM Taiwan Product Service Contact Information:
IBM Taiwan Corporation
3F, No 7, Song Ren Rd., Taipei Taiwan
Tel: 0800-016-888

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

f2c00790

Japan Voluntary Control Council for Interference Class A statement

This explains the Japan Voluntary Control Council for Interference (VCCI) statement.

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策
を講ずるよう要求されることがあります。

VCCI-A

Japan Electronics and Information Technology Industries Association Statement

This statement explains the Japan JIS C 61000-3-2 product wattage compliance.

(一社) 電子情報技術産業協会 高調波電流抑制対策実施
要領に基づく定格入力電力値：Knowledge Center を参照

This statement explains the Japan Electronics and Information Technology Industries Association (JEITA) statement for products less than or equal to 20 A per phase.

高周波電流規格 JIS C 61000-3-2 適合品

This statement explains the JEITA statement for products greater than 20 A, single phase.

高周波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 6（単相、PFC回路付）
- 換算係数 : 0

This statement explains the JEITA statement for products greater than 20 A per phase, three-phase.

高周波電流規格 JIS C 61000-3-2 準用品

本装置は、「高圧又は特別高圧で受電する需要家の高調波抑制対策ガイドライン」対象機器（高調波発生機器）です。

- 回路分類 : 5（3相、PFC回路付）
- 換算係数 : 0

Korean Electromagnetic Interference (EMI) Statement

This explains the Korean Electromagnetic Interference (EMI) statement.

이기는업무환경에서사용할목적으로적합성평가를받은기기로서
가정용환경에서사용하는경우 전파간섭의우려가있습니다.

Russia Electromagnetic Interference Class A Statement

This statement explains the Russia Electromagnetic Interference (EMI) statement.

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать
радиопомехи, для снижения которых необходимы
дополнительные меры

rusemi

Index

Numerics

10 Gbps Ethernet adapter
 activity LED 9
2145-92F
 cable-management arm 70, 75
2145-92F2147-92F
 power supply
 removing 112
 replacing 91
 replacing in rack 62
 support rails 58

A

about this guide xxvii
AC and DC LEDs 8
accessibility 159
 repeat rate
 up and down buttons 159
accessing
 publications 159

B

back-panel assembly
 SAN Volume Controller 2145-SV1
 connectors 11
 indicators 6
battery status LED 5
browsers
 See web browsers

C

cable management arm assembly 22
cable-management arm
 removing 70
 replacing 75
Canadian electronic emission notice 170
caution ix
caution notices x
charts and tables
 for planning 15
checking grounding xxiv
clustered systems
 adding nodes 155
 comments xxx
configuration
 web browsers
 settings 151
connectors
 SAN Volume Controller 2145-SV1 11
console
 SAN Volume Controller
 master console 2
contact information
 Taiwan 172

controls and indicators on the front panel
 SAN Volume Controller 2145-SV1
 illustration 3
 operator-information panel 4

D

danger ix
danger notices xiv
Deutschsprachiger EU Hinweis 170

E

electronic emission notices
 Deutschsprachiger EU Hinweis 170
 European Union (EU) 170
 Federal Communications Commission (FCC) 169
 Germany 170
 Industry Canada 170
 Japanese Voluntary Control Council for Interference (VCCI) 172
 Korean 173
 New Zealand 170
 People's Republic of China 171
 Taiwan 172
EMC statement, People's Republic of China 171
emergency power-off (EPO) event xxiv
environmental notices ix, xxv
EPO (emergency power-off) event xxiv
Ethernet
 activity LED 9
 connecting to 25
 link LED 9
 SAN Volume Controller 2145-SV1 25
European Union (EU), EMC Directive
 conformance statement 170
expansion canister
 LEDs
 2145-92F 144
expansion enclosure
 attachment cables 34, 136
 rails 29
expansion enclosure SAS cable
 2145-92F 97
 replacing 97
external device safety check xxiii

F

FCC (Federal Communications Commission) electronic emission notice 169
Federal Communications Commission (FCC) electronic emission notice 169
feedback xxx
Fibre Channel
 LEDs 6

G

Germany electronic emission compliance statement 170
guidelines, installation 18

H

hazards xxii
help xxx
homologation statement 169

I

identify LED 5
IEC 60950-1 ix
indicators and controls on the front panel
 SAN Volume Controller 2145-SV1
 illustration 3
 operator-information panel 4
indicators on the rear panel
 10 Gbps Ethernet adapter 9
 AC and DC LEDs 8
 Ethernet
 activity LED 9
 link LED 9
 Ethernet activity LED 9
 Fibre Channel LEDs 6
 identify 9
 power-supply error LED 8
 SAS LEDs 7
information help xxx
initializing the system 154
inspections, safety
 external device check xxiii
 internal device check xxiii
 SAN Volume Controller xxii
installation
 guidelines 18
 planning for SAN Volume Controller 163
 preparing for 15
 requirements 15
 verifying
 SAN Volume Controller 2145-SV1 26
installing
 2145-92F2147-92F
 support rails 58
 hardware 15
 overview xxxiii
 SAN Volume Controller 2145-SV1
 in a rack 21
 preparation 15
 steps 18
 support rails 18
steps
 SAN Volume Controller 2145-SV1 18
support rails
 2145-92F2147-92F 58

installing (*continued*)
 support rails (*continued*)
 SAN Volume Controller
 2145-SV1 18
internal device safety check xxiii

J

Japanese electronic emission notice 172

K

keyboards
 accessibility features 159
Knowledge Center xxviii
Korean electronic emission
 statement 173

L

labels ix
LEDs
 AC and DC 8
 Ethernet
 activity 9
 link 9
 expansion canister
 2145-92F 144
 Fibre Channel 6
 identify 9
 power-supply error 8
 rear-panel indicators 6
 SAN Volume Controller 2145-SV1 6
 SAS 7

M

moving
 cable-management arm 70

N

navigation
 accessibility 159
New Zealand electronic emission
 statement 170
node status LED 5
nodes
 adding 155
non-IBM Alteration form xxiii
not used
 location LED 9
notices ix
 environmental ix, xxv
 safety ix

O

operator-information panel
 SAN Volume Controller 2145-SV1 4
overview
 hardware installation 15
 installing xxxiii
 SAN Volume Controller 1

P

panel
 operator information
 SAN Volume Controller
 2145-SV1 4
 rear
 SAN Volume Controller
 2145-SV1 6
password 153
People's Republic of China, electronic
 emission statement 171
physical characteristics
 SAN Volume Controller 2145-SV1
 connectors 11
 service ports 12
 unused ports 12
planning
 charts and tables 15
 tables and charts 15
planning for SAN Volume Controller
 installation 163
ports
 Ethernet 9
 SAN Volume Controller 2145-SV1 11
power
 emergency power-off event xxiv
 requirements
 SAN Volume Controller
 2145-SV1 163
power button 5
power LED 4
power-supply error LED 8
preparing
 physical configuration 15
 physical environment 15
publications
 accessing 159

R

rails 33
 expansion enclosure 29
reader feedback xxx
rear-panel indicators
 SAN Volume Controller 2145-SV1 6
related information xxviii
removing
 2145-92F2147-92F
 power supply 112
 support rails 57
 cable-management arm 70
replacing
 2145-92F 97
 2145-92F2147-92F
 top covers 80
 cable-management arm 75
 expansion enclosure SAS cable 97
 top cover 2145-92F2147-92F 80
replacing 2145-92F2147-92F 91
requirements
 ac voltage 163
 electrical 163
 power 163
 SAN Volume Controller
 2145-SV1 163

S

safety ix
 caution notices x
 danger notices xiv
 environmental notices ix
safety information labels ix
safety notices ix
SAN (storage area network)
 connecting to 25
SAN Volume Controller
 checking grounding xxiv
 features 2
 hardware 1
 installation guidelines 18
 installing
 overview xxxiii
 minimum requirements 2
 node, components 15
 overview 1
 physical configuration 15
 planning tables and charts 15
 safety notices x, xiv
 software
 overview 1
SAN Volume Controller 2145-SV1
 additional space requirements 164
 air temperature without redundant ac
 power 163
 connecting
 ethernet 25
 to a SAN 25
 connectors 11
 controls and indicators on the front
 panel 3
 dimensions and weight 164
 Fibre Channel
 LEDs 6
 port number 13
 heat output of node 164
 humidity without redundant ac
 power 163
 identify
 LEDs 9
 indicators and controls on the front
 panel 3
 indicators on the rear panel
 Fibre Channel LEDs 6
 SAS LEDs 7
 input-voltage requirements 163
 installation, verifying 26
 installing in a rack 21
 LEDs
 Fibre Channel 6
 identify 9
 SAS 7
nodes
 heat output 164
operator-information panel 4
ports 11
power requirements for each
 node 163
product characteristics 163
rear-panel indicators 6
requirements 163
SAS
 LEDs 7
service ports 12

- SAN Volume Controller 2145-SV1
 - (continued)
 - specifications 163
 - support rails 18
 - unused ports 12
 - weight and dimensions 164
- SAN Volume Controller library
 - related publications xxviii
- SAN Volume Controller nodes
 - adding to clustered systems 155
- SAS
 - LEDs 7
- SAS cables 34, 136
- SAS expansion enclosure
 - installing 33
- send a comment xxx
- service ports
 - SAN Volume Controller 2145-SV1 12
- shortcut keys
 - keyboard 159
- software
 - overview 1
- space requirements
 - SAN Volume Controller 2145-SV1 164
- Statement of Limited Warranty 161
- static-sensitive devices xxiv
- superuser 153
- support rails
 - 2145-92F2147-92F 58
 - SAN Volume Controller 2145-SV1 18
- system status LED 5

T

- tables and charts, planning 15
- Taiwan
 - contact information 172
 - electronic emission notice 172
- technical assistance xxx
- top covers
 - replacing
 - 2145-92F2147-92F 80
- trademarks 169

U

- unused ports
 - SAN Volume Controller 2145-SV1 12
- user name 153

V

- verifying
 - installation
 - SAN Volume Controller 2145-SV1 26

W

- web browsers
 - configuring 151
 - requirements 151
- websites xxx
- who should read this guide xxvii



Printed in USA

GI13-4547-02

