

IBM System Storage SAN Volume Controller



# Host Attachment User's Guide - Errata

*Version 4.2.0*

*June 6, 2007*

SC26-7905-01\_errata



---

# Contents

<b>Contents</b> .....	<b>1</b>
<b>Introduction</b> .....	<b>3</b>
Who should use this guide .....	3
Last Update .....	3
Change History .....	3
<b>Chapter 13. Attaching to a Sun SPARC host</b> .....	<b>5</b>
Setting the Sun SPARC host parameters for use with MPxIO .....	5



# Introduction

This guide provides errata information that pertains to release 4.2.0 of the *IBM System Storage SAN Volume Controller Host Attachment User's Guide*.

This guide contains the corrections and additions on a per chapter basis. The chapter numbers in this guide correspond directly with the chapter numbers in the *Host Attachment User's Guide* supplied with your SAN Volume Controller.

---

## Who should use this guide

Before using the IBM System Storage SAN Volume Controller, you should review the errata contained within this guide and note the details with respect to the copy of the *Host Attachment User's Guide* supplied with you SAN Volume Controller.

---

## Last Update

This document was last updated: June 6, 2007

---

## Change History

The following revisions have been made to this document:

Revision Date	Sections Modified
May 29, 2007	Chapter 13: Attaching to a Sun SPARC host

Table 1: Change History



## Chapter 13. Attaching to a Sun SPARC host

*The following correction should be noted.*

---

### Setting the Sun SPARC host parameters for use with MPxIO

*Page 87, the following should be added immediately below 'Setting the Sun SPARC host parameters for use with MPxIO.'*

**Note:** Configure your SVC host object with the type attribute set to tpgs if you wish to run MPxIO on your Sun SPARC host.

