

IBM Spectrum Connect
3.8.0

User Guide



Note

Before using this document and the product it supports, read the information in [“Notices” on page 171](#).

Edition notice

Publication number: SC27-5999-34. This publication applies to version 3.8.0 of IBM Spectrum Connect and to all subsequent releases and modifications until otherwise indicated in a newer publication.

© **Copyright International Business Machines Corporation 2013, 2021.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Figures.....	vii
Tables.....	xiii
About this guide.....	xv
Who should use this guide.....	xv
Conventions used in this guide.....	xv
Related information and publications.....	xv
Getting information, help, and service.....	xvi
IBM Publications Center.....	xvi
Feedback.....	xvi
Chapter 1. Introduction.....	1
Included cloud interfaces.....	1
Storage space and service management.....	2
Management options.....	4
Web-based user interface (UI).....	4
Command-line interface (CLI).....	4
Chapter 2. Installation.....	5
Compatibility and requirements.....	5
Downloading IBM Spectrum Connect software.....	5
Performing first-time installation of Spectrum Connect.....	5
Changing firewall and SELinux settings for Spectrum Connect.....	10
Upgrading an existing installation.....	10
Uninstalling the Spectrum Connect software.....	14
Chapter 3. Operation and management.....	15
Required and optional initial tasks.....	15
Logging in.....	17
Web-based UI.....	18
Running initial setup.....	21
Managing high-availability groups.....	25
Defining a high-availability group.....	25
Managing server certificates.....	27
Managing Spectrum Connect users and groups.....	30
Adding a new user.....	31
Changing the password of a Spectrum Connect user.....	33
Deleting a user.....	34
Adding an LDAP group.....	34
Deleting an LDAP group.....	35
Managing storage systems.....	36
Entering the storage system credentials.....	37
Adding a storage system.....	38
Working with storage system views.....	40
Modifying the IP address or hostname of a storage system.....	42
Removing a storage system.....	43
Managing storage spaces and services.....	44
Adding a storage space.....	44

Removing a storage space.....	45
Adding a storage service.....	46
Removing a storage service.....	48
Defining and attaching storage resources.....	49
Defining and attaching replicated storage resources (IBM FlashSystem A9000 and IBM FlashSystem A9000R only).....	52
Modifying storage resources.....	56
Modifying storage resource attachments.....	57
Chapter 4. Administration.....	59
Checking and controlling the Spectrum Connect Linux service.....	59
Checking and modifying the configuration files.....	59
Adjusting system update interval.....	60
Configuring alarm reporting.....	61
Configuring metrics scope.....	61
Enabling SSL verification	61
Changing the Spectrum Connect communication port.....	62
Chapter 5. Best practices and use cases.....	63
Distributing volumes evenly on DS8000 systems.....	63
Setting the multipath policy enforcement for DS8000 Family and Spectrum Virtualize Family systems.....	63
Working with multiple storage systems.....	63
Configuring an LDAP user for an IBM FlashSystem A9000 or A9000R managed domain.....	64
Additional reference information.....	68
Chapter 6. Management from the command-line interface.....	69
CLI – Switching to 'IBMSC' user mode.....	69
CLI - Configuring the LDAP server.....	70
CLI – Managing Spectrum Connect users and groups.....	74
CLI – Managing server certificates.....	77
CLI – Adding or removing storage system credentials.....	78
CLI – Managing storage systems.....	80
CLI – Setting the VASA credentials.....	82
CLI – Managing integration with vRealize Operations Manager.....	83
CLI – Backing up or restoring Spectrum Connect configuration.....	86
Chapter 7. Troubleshooting IBM Spectrum Connect.....	89
Checking the log files.....	89
Configuring event forwarding.....	91
Self-assist options for IBM Spectrum Connect.....	92
Chapter 8. VMware environment.....	93
IBM Storage Provider for VMware VASA.....	94
VMware virtual volumes.....	94
VMware Storage Policy Based Management (SPBM).....	95
Managing and monitoring VASA access.....	96
Using the IBM Storage Provider for VMware VASA.....	97
Best practices.....	100
IBM Storage Enhancements for VMware vSphere Web Client.....	104
Managing integration with vSphere Web Client.....	104
Using the IBM Storage Enhancements for VMware vSphere Web Client.....	108
Best practices.....	125
IBM Storage Plug-in for VMware vRealize Orchestrator.....	126
Managing integration with vRealize Orchestrator.....	126
Using the IBM Storage Plug-in for VMware vRealize Orchestrator.....	131
IBM Storage Management Pack for VMware vRealize Operations Manager.....	133

Managing integration with vRealize Operations Manager.....	134
Using the IBM Storage Management Pack for VMware vRealize Operations Manager.....	138
Chapter 9. IBM Storage Automation Plug-in for PowerShell.....	157
Managing integration with Microsoft PowerShell.....	158
Downloading and installing the plug-in package for PowerShell.....	159
Delegating storage services to the PowerShell interface.....	160
Canceling service delegation to PowerShell.....	160
Using the IBM Storage Automation Plug-in for PowerShell.....	161
Notices.....	171
Trademarks.....	172

Figures

1. Integration of IBM storage systems with different virtualization and automation environments.....	1
2. Storage elements without VVol utilization.....	2
3. Single service per space and storage system.....	3
4. Multiple services per storage space and single service per storage system.....	3
5. Multiple services per storage space and storage systems.....	3
6. Spectrum Connect version number.....	13
7. Spectrum Connect login screen in a standard web browser.....	18
8. Spaces/Storage Services and Storage Systems panes.....	19
9. Interfaces and Spaces/Services panes.....	19
10. Storage Systems and Monitoring panes.....	20
11. Initial setup wizard, defining HA group.....	22
12. Initial setup wizard, defining SSL certificate.....	23
13. Initial setup wizard, defining storage system credentials.....	24
14. Initial setup wizard, defining Spectrum Connect credentials.....	24
15. High-availability group concept.....	25
16. General Settings option on the Settings menu.....	25
17. General Settings dialog box.....	26
18. Connection security warning in the Mozilla FireFox web browser.....	28
19. Generate option on Server Certificate dialog box.....	29
20. Upload files option on Server Certificate dialog box.....	30
21. Users and Groups option in the Settings menu.....	31
22. Users list view in the Users and Groups dialog box.....	32
23. New User dialog box.....	32

24. Change Password dialog box.....	33
25. Groups list view in the Users and Groups dialog box.....	35
26. New LDAP Group dialog box.....	35
27. Storage Systems pane.....	36
28. Settings button.....	37
29. Current storage system username (for all storage systems).....	37
30. Add button.....	38
31. Add New IBM Storage System dialog box.....	38
32. Storage Systems pane, bar view.....	39
33. Storage Systems pane, table view.....	39
34. Storage Systems pane with storage elements arranged according to descending space usage.....	40
35. Storage Systems pane with highlighted search string results.....	41
36. Advanced filtering tool.....	41
37. Storage Systems pane with storage elements filtered according to software version.....	42
38. Array Settings dialog box.....	43
39. Spaces/Storage Services pane.....	44
40. New Storage Space dialog box.....	45
41. List of storage spaces.....	45
42. New Storage Service dialog box.....	46
43. Add New Resource dialog box.....	49
44. Storage Resources table.....	51
45. Service Storage Resources table.....	52
46. Add New Resource for replicated service dialog box, Create New option.....	53
47. Add New Resource for replicated service dialog box, Choose Existing option.....	53
48. Paired pools.....	55

49. Storage Resources table.....	55
50. Service Storage Resources table.....	56
51. Edit Resource dialog box.....	57
52. Manage Resources dialog box.....	58
53. Hyper-Scale System Properties configuration view.....	65
54. System LDAP configuration view.....	66
55. USER CREDENTIALS section of the System LDAP configuration view.....	66
56. ROLE MAPPING section of the System LDAP configuration view.....	67
57. LDAP TESTING AND ACTIVATION section of the System LDAP configuration view.....	67
58. Storage Credentials dialog box.....	67
59. Connection security warning in the Mozilla FireFox web browser.....	77
60. Collect log option.....	90
61. Integration of IBM storage systems with a VMware environment.....	93
62. Using virtual volumes with IBM Spectrum Connect.....	95
63. Storage Policy Based Management (SPBM) concept.....	95
64. VASA Provider settings dialog box.....	96
65. Registered VASA servers (vCenter servers that employ VASA services).....	97
66. vSphere Web Client – Storage Providers list.....	98
67. New Storage Provider dialog box for VASA 2.0 / VASA 3.0.....	99
68. vCenter certificate thumbprint dialog box.....	99
69. Storage Providers list displaying Spectrum Connect.....	100
70. Defining vvol-db, as HA group name.....	103
71. Add vCenter Server for vWC dialog box.....	105
72. Interfaces pane.....	105
73. vCenter Server Settings dialog box.....	106

74. vCenter server with delegated service.....	108
75. VMware vSphere Web Client – New Role dialog box.....	110
76. IBM Storage categories in vSphere Web Client.....	110
77. IBM Storage Service information.....	111
78. IBM Storage Space information.....	112
79. IBM Storage Volume information.....	113
80. IBM Storage VVol information.....	114
81. Create new IBM storage volume option.....	115
82. New Volume wizard	115
83. Creating multiple volumes	116
84. Selecting storage service.....	116
85. Custom Host Mapping dialog box.....	117
86. Selecting LUN.....	117
87. Selecting consistency group.....	118
88. New Volume dialog box with all fields filled out.....	118
89. Extend Volume option in the pop-up menu.....	119
90. Extend Volume dialog box.....	119
91. Rename Volume option.....	120
92. Rename Volume dialog box.....	120
93. Set Multipath Policy option.....	121
94. Multipath Policy dialog box.....	121
95. Unmap volume.....	122
96. Delete volume.....	123
97. Adding volume to consistency group.....	124
98. Selecting a consistency group.....	124

99. Removing volume from consistency group.....	124
100. VVol information.....	125
101. vRO server on the Interfaces pane.....	126
102. Download plug-in package button.....	127
103. Current vRO Token.....	127
104. Successful installation of IBM Storage plug-in.....	128
105. Restarting vRO Server service.....	128
106. vRealize Orchestrator HTML5 client Set Server and Token dialog box.....	129
107. vRO server with delegated services.....	130
108. vRealize Orchestrator HTML5 client– available workflows.....	132
109. vRealize Orchestrator HTML5 client– available objects.....	133
110. Monitoring pane.....	134
111. Download PAK File button.....	135
112. Deploying the management package on the vROps	136
113. Adding the vROps server to Spectrum Connect.....	137
114. Storage system monitored by the vROps server.....	138
115. vROps GUI – IBM Storage option.....	139
116. IBM Spectrum Virtualize Storage Systems pane.....	141
117. IBM Spectrum Virtualize vDisk health status.....	141
118. Alert widget.....	142
119. Virtual Machines and Spectrum Virtualize and vCenter Relationships.....	143
120. HEALTH TREE pane.....	143
121. Metric Selector and Metric Graph panes of the Performance dashboard.....	144
122. IBM Spectrum Virtualize Top 10 dashboards.....	151
123. Overview of an IBM Spectrum Virtualize child pool.....	151

124. Add Symptom Definition dialog box.....	152
125. Selecting base object type for alert definition.....	153
126. Selecting impact for alert definition.....	153
127. Adding symptom for alert definition.....	153
128. Editing default monitoring policy.....	154
129. Enabling KPI for a storage object metrics.....	155
130. Integration of IBM storage systems in PowerShell environment.....	157
131. Add New PowerShell Interface dialog box.....	158
132. PowerShell interface on the Interfaces pane.....	159
133. PowerShell interface with a delegated service.....	160

Tables

1. Configuration files renamed during Spectrum Connect installation.....	9
2. Configuration files renamed during Spectrum Connect upgrade.....	14
3. Required tasks in sequential order.....	15
4. Optional tasks.....	16
5. Spectrum Connect UI elements.....	20
6. Service parameters.....	47
7. Storage resource parameters.....	50
8. Paired pool parameters.....	54
9. Configuration files.....	60
10. Arguments for sc_ldap.....	71
11. ldap.ini configuration parameters.....	73
12. Arguments for sc_users.....	75
13. Arguments for sc_ldap_groups.....	76
14. User-related arguments for sc_setting.....	76
15. Arguments for sc_ssl.....	78
16. Arguments for sc_storage_credentials.....	79
17. Arguments for sc_storage_array.....	81
18. Storage resource-related arguments for sc_setting.....	82
19. Arguments for sc_vasa_admin.....	82
20. Arguments for sc_vrops_server.....	84
21. Arguments for sc_vrops_adapter.....	85
22. Arguments for sc_configuration.....	87
23. VMware log file locations.....	91

24. Required vSphere privileges.....	109
25. IBM storage objects and events in vRO.....	131
26. IBM Storage Icons in vROps.....	139
27. Health metrics.....	145
28. Counter metrics.....	145
29. Performance metrics.....	146
30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell	161

About this guide

This guide describes how to install, configure, and use IBM Spectrum Connect and its solution components.

Who should use this guide

This guide is intended for system administrators who are familiar with the VMware vCenter and vSphere environments, Microsoft PowerShell, container technology, and with the specific IBM storage system that is in use.

Conventions used in this guide

These notices are used in this guide to highlight key information.

Note: These notices provide important tips, guidance, or advice.

Important: These notices provide information or advice that might help you avoid inconvenient or difficult situations.



Attention: These notices indicate possible damage to programs, devices, or data. An attention notice appears before the instruction or situation in which damage can occur.

Related information and publications

You can find additional information and publications related to IBM Spectrum Connect on the following information sources.

- [IBM Knowledge Center \(ibm.com/support/knowledgecenter\)](http://ibm.com/support/knowledgecenter)
- [IBM DS8870 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/ST8NCA\)](http://ibm.com/support/knowledgecenter/ST8NCA)
- [IBM DS8880 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/ST5GLJ\)](http://ibm.com/support/knowledgecenter/ST5GLJ)
- [IBM DS8900 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/SSHGBU\)](http://ibm.com/support/knowledgecenter/SSHGBU)
- [IBM FlashSystem 9100, 9200 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STSLR9\)](http://ibm.com/support/knowledgecenter/STSLR9)
- [IBM FlashSystem V9000 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STKMQV\)](http://ibm.com/support/knowledgecenter/STKMQV)
- [IBM SAN Volume Controller on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STPVGU\)](http://ibm.com/support/knowledgecenter/STPVGU)
- [IBM Storwize® V3500 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STLM6B\)](http://ibm.com/support/knowledgecenter/STLM6B)
- [IBM Storwize V3700 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STLM5A\)](http://ibm.com/support/knowledgecenter/STLM5A)
- [IBM Storwize V5000, V5000E, V5100 and IBM FlashSystem 5000, 5100 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STHGJ\)](http://ibm.com/support/knowledgecenter/STHGJ)
- [IBM Storwize V7000 on IBM and IBM FlashSystem 7200 Knowledge Center \(ibm.com/support/knowledgecenter/ST3FR7\)](http://ibm.com/support/knowledgecenter/ST3FR7)
- [IBM Storwize V7000 Unified on IBM Knowledge Center \(ibm.com/support/knowledgecenter/ST5Q4U\)](http://ibm.com/support/knowledgecenter/ST5Q4U)
- [IBM FlashSystem® A9000 on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STJKMM\)](http://ibm.com/support/knowledgecenter/STJKMM)
- [IBM FlashSystem A9000R on IBM Knowledge Center \(ibm.com/support/knowledgecenter/STJKN5\)](http://ibm.com/support/knowledgecenter/STJKN5)
- [IBM block storage CSI \(Container Storage Interface\) driver \(ibm.com/support/knowledgecenter/SSRQ8T\)](http://ibm.com/support/knowledgecenter/SSRQ8T)
- [IBM Cloud Private \(ibm.com/cloud/private\)](http://ibm.com/cloud/private)

- [VMware Documentation](http://vmware.com/support/pubs) (vmware.com/support/pubs)
- [VMware Product Support](http://vmware.com/support) (vmware.com/support)
- [VMware Knowledge Base](http://kb.vmware.com) (kb.vmware.com)
- [Microsoft PowerShell](http://msdn.microsoft.com/en-us/powershell) (msdn.microsoft.com/en-us/powershell)
- [Persistent volumes on Kubernetes](http://kubernetes.io/docs/concepts/storage/volumes) (kubernetes.io/docs/concepts/storage/volumes)

Getting information, help, and service

If you need help, service, technical assistance, or want more information about IBM products, you can find various sources to assist you. You can view the following websites to get information about IBM products and services and to find the latest technical information and support.

- [IBM website](http://ibm.com) (ibm.com®)
- [IBM Support Portal website](http://ibm.com/support/entry/portal/support?brandind=Hardware~System_Storage) (ibm.com/support/entry/portal/support?brandind=Hardware~System_Storage)
- [IBM Directory of Worldwide Contacts website](http://ibm.com/planetwide) (ibm.com/planetwide)

Use the Directory of Worldwide Contacts to find the appropriate phone number for initiating voice call support. Select the Software option, when using voice response system.

When asked, provide your Internal Customer Number (ICN) and/or the serial number of the storage system that requires support. Your call will then be routed to the relevant support team, to whom you can provide the specifics of your problem.

IBM Publications Center

The IBM Publications Center is a worldwide central repository for IBM product publications and marketing material.

The [IBM Publications Center website](http://ibm.com/shop/publications/order) (ibm.com/shop/publications/order) offers customized search functions to help you find the publications that you need. You can view or download publications at no charge.

Sending comments

Your feedback is important in helping to provide the most accurate and highest quality information.

Procedure

To submit any comments about this publication or any other IBM storage product documentation:

- Send your comments by email to ibmdocs@us.ibm.com. Be sure to include the following information:
 - Exact publication title and version
 - Publication form number (for example, GA32-1234-00)
 - Page, table, or illustration numbers that you are commenting on
 - A detailed description of any information that should be changed

Chapter 1. Introduction

IBM Spectrum Connect provides a single-server backend location and enables centralized management of IBM storage resources for different virtualization, cloud and container platforms.

By implementing advanced storage provisioning techniques, IBM Spectrum Connect allows storage and hybrid cloud administrators to supply and integrate IBM storage with a range of VMware solutions, Kubernetes container clusters, and Microsoft PowerShell automation methods. IBM Spectrum Connect provides a web-based UI that makes this entire administration easy and straightforward, and saves a significant amount of time in setting up, connecting, and integrating the required storage resources into your cloud environment. To enable this wide range of functional integration possibilities, the IBM Spectrum Connect suite includes the following individual cloud interfaces

- VMware vCenter Server
- VMware vSphere Web Client (vWC)
- VMware vSphere APIs for Storage Awareness (VASA)
- VMware vRealize Operations Manager (vROps)
- VMware vRealize Orchestrator (vRO)
- Kubernetes
- Microsoft PowerShell

Through its user credential, storage system, storage space and service management options, Spectrum Connect facilitates the integration of IBM storage system resources with the supported virtualization, cloud and container platforms, while providing the foundation for integration with future IBM systems and Independent Software Vendor (ISV) solutions, as illustrated below. Storage profiles (services), defined in Spectrum Connect, are delegated for use in VMware or Kubernetes environment for simplified profile-based volume provisioning.

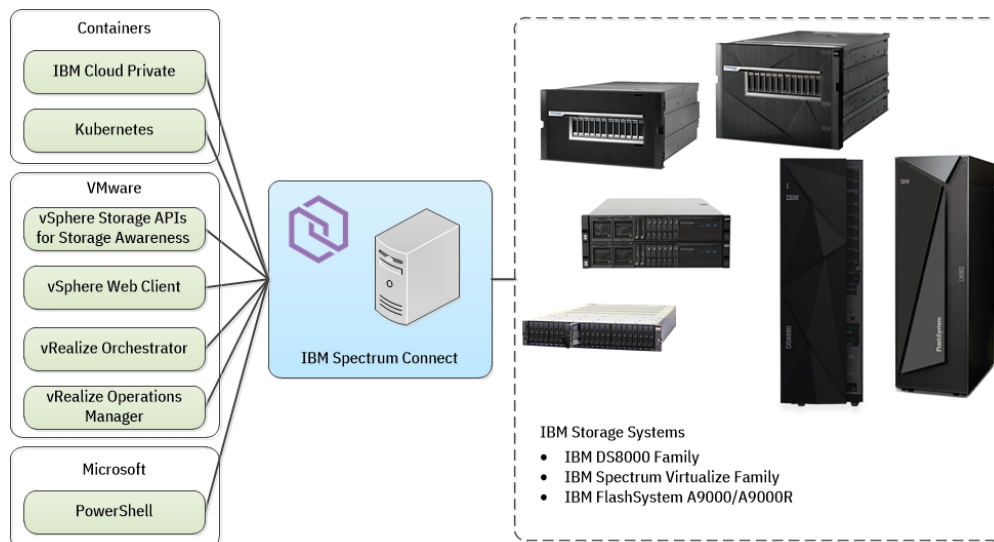


Figure 1. Integration of IBM storage systems with different virtualization and automation environments

Included cloud interfaces

The following cloud interfaces are compatible with the IBM Spectrum Connect software package:

- [IBM Storage Provider for VMware VASA](#)
- [IBM Storage Enhancements for VMware vSphere Web Client](#)
- [IBM Storage Plug-in for VMware vRealize Orchestrator](#)

- [IBM Storage Management Pack for VMware vRealize Operations Manager](#)
- [IBM Storage Automation Plug-in for PowerShell](#)

In addition, the [IBM Spectrum Connect lifecycle and compatibility matrix](#) on IBM Knowledge Center details the Spectrum Connect lifecycle with compatible storage system microcodes and supported cloud interfaces.

Storage space and service management

After deployment and storage system attachment, the IBM Spectrum Connect administrators must define the new virtual entities, resulting in simpler and more flexible storage management.

Note: The virtual volume functionality is supported by storage systems that run IBM Spectrum Virtualize (7.6 or later).

The virtual storage entities include:

- **Storage service** – A combination of assigned storage resources (pools) and user-defined policies (capabilities). The storage resources which are assigned to the service may reside on any storage system, as illustrated below. The policies are additional capabilities, or storage requirements for the service. They are compression, encryption, etc.
- **Storage space** – A logical grouping of several storage services. Usually, a single space is assigned to a specific organization (storage tenant).

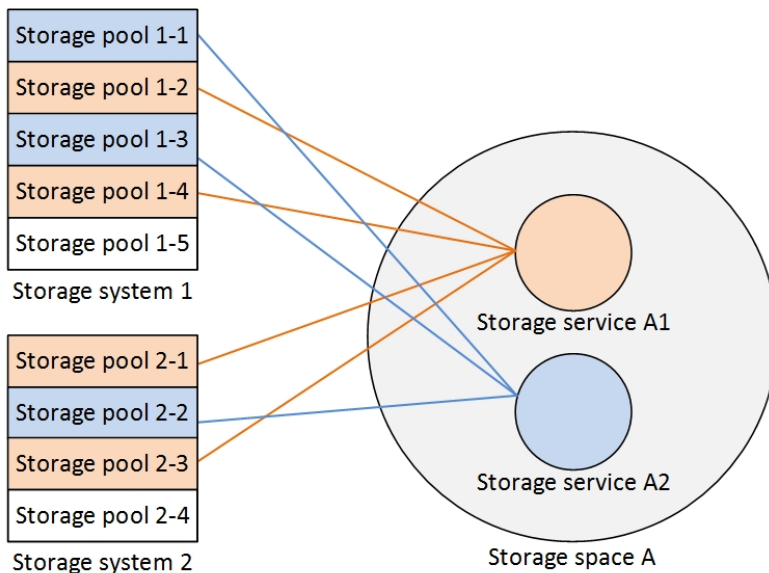


Figure 2. Storage elements without VVol utilization

When the use of VMware virtual volumes (VVols) is enabled for a service, its storage resources contain child pools on storage systems that run IBM Spectrum Virtualize.

Figures below illustrate different deployment scenarios for VVol-enabled services.

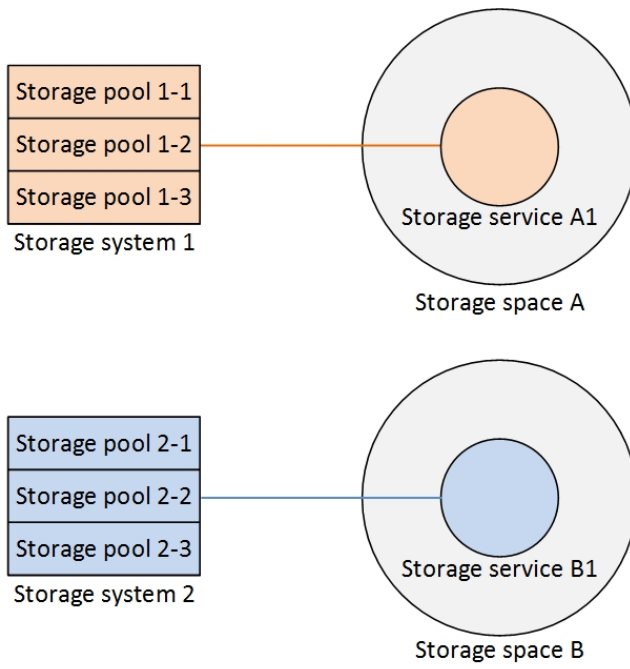


Figure 3. Single service per space and storage system

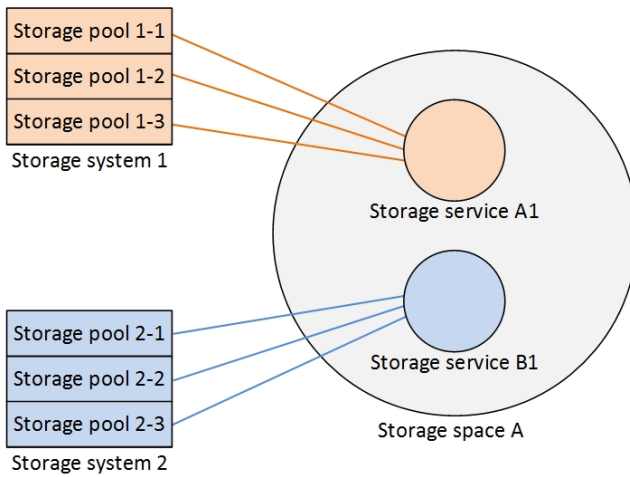


Figure 4. Multiple services per storage space and single service per storage system

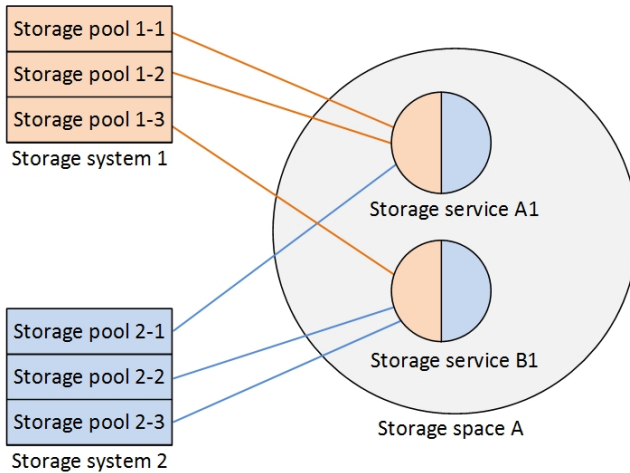


Figure 5. Multiple services per storage space and storage systems

The combination of storage space and service is created by storage administrators to include the required resource capacity and storage capabilities on a matching storage system. Then the space/service combination is used by VMware administrators for volume provisioning instead of physical objects.

Management options

IBM Spectrum Connect can be managed using the following methods:

- Graphical user interface (GUI).
- Command line interface (CLI).

Web-based user interface (UI)

IBM Spectrum Connect includes a simple user-friendly web-based graphical user interface (UI) for storage management.

The Spectrum Connect web UI simplifies storage provisioning, delivering a single control instance for all available resources. The UI has the following management capabilities:

- Addition and management of the physical storage resources (storage systems and pools)
- Creation and configuration of virtual storage entities (spaces and services)
- Integration with cloud interfaces (VMware VASA, vWC, vRO, vROps, PowerShell, Kubernetes)
- User administration
- Certificate management

Command-line interface (CLI)

IBM Spectrum Connect can be managed via a command-line interface (CLI).

The Spectrum Connect CLI is used for user and storage system management, as well as for integration of the cloud interfaces. However, the CLI application scope is limited, and the use of the web-based user interface (UI) is advised.

The CLI tool is supplied as a part of the Spectrum Connect package. It can be run locally from the Linux command prompt environment, or from a remote terminal connection.

Chapter 2. Installation

Download and install IBM Spectrum Connect software package as described in the following sections.

- “[Compatibility and requirements](#)” on page 5
- “[Downloading IBM Spectrum Connect software](#)” on page 5
- “[Performing first-time installation of Spectrum Connect](#)” on page 5
- “[Upgrading an existing installation](#)” on page 10

For information about uninstallation, see “[Uninstalling the Spectrum Connect software](#)” on page 14.

Compatibility and requirements

For the complete and up-to-date information about the compatibility and requirements of IBM Spectrum Connect, refer to its latest release notes.

You can find the latest Spectrum Connect release notes on [IBM Knowledge Center](http://www.ibm.com/support/knowledgecenter/SS6JWS) (www.ibm.com/support/knowledgecenter/SS6JWS) or on [IBM Fix Central](http://www.ibm.com/support/fixcentral) (www.ibm.com/support/fixcentral).

Note: Refer to the relevant VMware documentation for information about how to install the compatible versions of vSphere Web Client Server. You should also refer to the latest installation and configuration instructions for ESXi and vCenter servers.

Downloading IBM Spectrum Connect software

IBM Spectrum Connect is available as a free software solution for IBM storage system customers.

About this task

You can download the latest version of the Spectrum Connect at any time from the [IBM Fix Central](http://www.ibm.com/support/fixcentral) (www.ibm.com/support/fixcentral). Fix Central provides fixes and updates for your systems software, hardware, and operating system. This procedure describes how to locate the Spectrum Connect package on the website.

Procedure

To download the Spectrum Connect:

1. Go to the [Spectrum Connect welcome page on IBM Knowledge Center](http://www.ibm.com/support/knowledgecenter/SS6JWS) (www.ibm.com/support/knowledgecenter/SS6JWS).
2. Click **Download the latest Spectrum Connect package from IBM Fix Central**.
The IBM Fix Central page for Spectrum Connect is displayed.
3. Download the required software version.

Performing first-time installation of Spectrum Connect

You can install the IBM Spectrum Connect software on a compatible version of Red Hat Enterprise Linux (RHEL) or CentOS. For more information, refer to the release notes.

Before you begin

- Verify that the following TCP ports are open to ensure network connectivity between VMware resources, Spectrum Connect and IBM storage systems:
 - 8440 (vCenter, vROps and vRO servers). Refer to the installation procedure below for details on opening the 8440 port for the `firewall -cmd`. In addition, Spectrum Connect must be allowed to bind to port 8440, if Security-Enhanced Linux (SELinux) is enabled.

- 7778 (FlashSystem A9000/A9000R).
- 22 (storage systems that run IBM Spectrum Virtualize).
- 8452 (DS8000).

Note: You can change the default TCP port (8440) at any time by running a script, as explained in [“Changing the Spectrum Connect communication port”](#) on page 62.

- Verify that the TCP ports 5672 and 4369 are open. These ports are used by the 'rabbitmq' and 'ampq' internal processes, respectively. Refer to the installation procedure below for the port opening procedures.
- Check that the 'zlib' library has been installed.
- Check that the 'libsemanage-static' library has been installed for CentOS.
- Check that the 'bzip2' program has been installed for all operating systems.
- Verify that the 'postgresql' package is not installed on your host. Your server may have a package of 'postgresql' version 8 installed, as a part of operation system distribution. This may result in a conflict with version of the package, installed during the Spectrum Connect deployment. Use the **rpm -qa | grep postgres** command to search for the 'postgresql' package.
- A new Linux username – **ibmsc** – is created during installation to be used for Spectrum Connect management operations.

Note: In an Active Directory environment where a local user is not permitted, you must create **ibmsc** as a Domain user prior to the package installation.

You can customize the user ID for **ibmsc** by adding a Linux user (**useradd** command in RHEL) prior to the package installation. In this case, create the /home/ibmsc directory before starting the installation process.

- Make sure that the '**ibmsc**' user can access the /opt/ibm and /var/log/sc folders.

Procedure

Follow these steps to install Spectrum Connect:

1. Download the installation package and the IBM_Spectrum_Connect_Signing_Key_Pub.key file, used for the package validation. See [“Downloading IBM Spectrum Connect software”](#) on page 5).
2. Copy the installation package and the public key files to a local folder on the Linux host that will be used as Spectrum Connect.
3. Go to the local folder and then use the **gpg --import IBM_Spectrum_Connect_Signing_Key_Pub.key** to import the IBM GNU Privacy Guard (GPG) public key to validate the installation files. This ensures that the files were received from IBM and were not manipulated in any way by a third party.

Note: Downloading the install package from a trusted, SSL-protected resource, such as Fix Central, ensures its authenticity and integrity. However, you can mark the key as trusted by entering **gpg --edit-key "IBM Spectrum Connect Signing Key"**, typing the **trust** command and selecting option 5.

4. Extract the installation package file ('*' represents the build number):

```
# tar -xvzf IBM_Spectrum_Connect-3.8.0-*-x86_64.tar.gz
```

Depending on the operating system type, the following files are extracted:

- RHEL 7.x:
 - erlang-19.3.0-1.el7.centos.x86_64.rpm
 - jemalloc-3.6.0-1.el7.x86_64.rpm
 - nginx-1.10.3-1.el7.ngx.x86_64.rpm
 - postgresql96-9.6.17-1PGDG.rhel7.x86_64.rpm

- postgresql96-contrib-9.6.17-1PGDG.rhel7.x86_64.rpm
- postgresql96-docs-9.6.17-1PGDG.rhel7.x86_64.rpm
- postgresql96-libs-9.6.17-1PGDG.rhel7.x86_64.rpm
- postgresql96-server-9.6.17-1PGDG.rhel7.x86_64.rpm
- rabbitmq-server-3.6.0-1.noarch.rpm
- redis-3.2.5-1.el7.x86_64.rpm
- uuid-1.6.2-26.el7.x86_64.rpm
- CentOS 7.x:
 - erlang-19.3.0-1.el7.centos.x86_64.rpm
 - jemalloc-3.6.0-1.el7.x86_64.rpm
 - libxslt-1.1.28-5.el7.x86_64.rpm
 - nginx-1.10.3-1.el7.ngx.x86_64.rpm
 - postgresql96-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-contrib-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-docs-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-libs-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-server-9.6.17-1PGDG.rhel7.x86_64.rpm
 - rabbitmq-server-3.6.0-1.noarch.rpm
 - redis-3.2.5-1.el7.x86_64.rpm
 - uuid-1.6.2-26.el7.x86_64.rpm
- RHEL 8.x:
 - erlang-22.1.2-1.el8.x86_64.rpm
 - jemalloc-5.2.1-2.el8.x86_64.rpm
 - nginx-1.16.1-1.el8.ngx.x86_64.rpm
 - postgresql96-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-contrib-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-docs-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-libs-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-server-9.6.17-1PGDG.rhel8.x86_64.rpm
 - rabbitmq-server-3.7.24-1.el8.noarch.rpm
 - redis-5.0.3-1.module_el8.0.0+6+ab019c03.x86_64.rpm
 - socat-1.7.3.2-6.el8.x86_64.rpm
 - uuid-1.6.2-42.el8.x86_64.rpm
- CentOS 8.x:
 - erlang-22.1.2-1.el8.x86_64.rpm
 - jemalloc-5.2.1-2.el8.x86_64.rpm
 - nginx-1.16.1-1.el8.ngx.x86_64.rpm
 - postgresql96-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-contrib-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-docs-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-libs-9.6.17-1PGDG.rhel8.x86_64.rpm
 - postgresql96-server-9.6.17-1PGDG.rhel8.x86_64.rpm
 - rabbitmq-server-3.7.24-1.el8.noarch.rpm

- redis-5.0.3-1.module_el8.0.0+6+ab019c03.x86_64.rpm
 - socat-1.7.3.2-6.el8.x86_64.rpm
 - uuid-1.6.2-42.el8.x86_64.rpm
 - `ibm_spectrum_connect-3.8.0-*.*.bin` – product BIN file.
 - `ibm_spectrum_connect-3.8.0-*.*.bin.asc` – digital signature file for the BIN file verification.
5. Enter `gpg --verify ibm_spectrum_connect-3.8.0-*.*.bin.asc ibm_spectrum_connect-3.8.0-*.*.bin` to verify the digital signature of the installation files.
 6. Go to the extracted directory and then use the `rpm -iv *.rpm` command to run and install all the complementary RPM files.
 7. Enter `chmod +x ibm_spectrum_connect-3.8.0-*.*.bin` to authorize the installation of the product BIN file.
 8. Enter `./ibm_spectrum_connect-3.8.0-*.*.bin` to start the installation.
Note: Make sure you login as root, or use `sudo` for the command.
 9. Review the license agreement which is displayed after you run the installation file.
 10. Enter 1 at the following prompt to accept the license agreement and complete the installation:

Press Enter to continue viewing the license agreement, or enter "1" to accept the agreement, "2" to decline it, "3" to Print, "4" to Read non-IBM terms, or "99" to go back.

Installation progress messages are displayed:

```
Preparing for new install of SC 3.8.0
Creating system user ibmsc
Extract Python according to OS version
Starting rabbitmq-server (via systemctl): [ OK ]
Configuring rsyslog
Setting up nginx
Generating SSL Certificate
Configuring new service [ibm_spectrum_connect]
Configuring postgresql database
Create default settings
Creating IBM Spectrum Connect user
```

Once installation is complete, the following notes and installation completion messages are displayed:

SECURITY NOTES:

=====

The following ports must be opened on this host:

- Port 5672 for rabbitmq on the internal interface (lo).
- Port 4369 for amqp on the internal interface (lo).
- Port 8440 on the external interface.

If you are using the linux default firewall, you can use the following commands to open the port:

```
firewall-cmd --permanent --zone=trusted --add-interface=lo
firewall-cmd --permanent --add-port=8440/tcp
firewall-cmd --permanent --zone=trusted --add-port=4369/tcp
firewall-cmd --permanent --zone=trusted --add-port=5672/tcp
firewall-cmd --reload
```

If you are using a different firewall software please refer to the software documentation for help.

If SELinux is enabled on this machine, nginx must be allowed to bind network interfaces and connect to ibmsc socket. This can be done using the following commands:

```
semodule -i /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel7/ibmsc.pp
```

```
systemctl restart nginx
```

To display ibmsc selinux policy:

```
cat /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel7/ibmsc.te
```

If the rabbitmq-server service is reported as not running it can be restarted by the following command:

```
systemctl restart rabbitmq-server
```

NOTE: An initial username 'admin' with an initial password 'admin1!' has been defined for the initial access (via the CLI or GUI) to the IBM Spectrum Connect.

IMPORTANT: To avoid unauthorized access to the IBM Spectrum Connect, the password for this username should be changed as soon as possible.

You can control IBM Spectrum Connect services using the shell command 'service ibm_spectrum_connect {start|stop|status}'.

Installation completed successfully.

Once the IBM Spectrum Connect service has been installed, the – **ibmsc** – user can be used for Spectrum Connect management operations, as stated under **Before you begin**.

If the firewall and SELinux were disabled prior to installation, the IBM Spectrum Connect service starts automatically once installation has completed successfully. (To check on the status of the Spectrum Connect service, see [“Checking and controlling the Spectrum Connect Linux service”](#) on page 59.) If so, skip to step 12. If not, first complete step 11.

11. In cases where the firewall and SELinux are enabled, perform the steps under [“Changing firewall and SELinux settings for Spectrum Connect”](#) on page 10 and then manually start the Spectrum Connect service using the steps under [“Checking and controlling the Spectrum Connect Linux service”](#) on page 59.
12. To avoid unauthorized access to Spectrum Connect via GUI, it is strongly recommended to change the default password for the 'admin' user as soon as possible, as described in [“Changing the password of a Spectrum Connect user”](#) on page 33.

Note: During installation, IBM Spectrum Connect overwrites several configuration files. The previous versions of these files are renamed and kept in their original locations. A backup version is renamed as file_name.pre_previous_SCB_version_number. For example, sc_nginx.conf from Spectrum Control Base (3.0.3) installation is renamed as sc_nginx.conf.pre_3.0.3. The table below specifies the files renamed during installation.

Table 1. Configuration files renamed during Spectrum Connect installation	
File name	Location
40-ibmsyslog.conf	/etc/rsyslog.d/
500.html	/etc/nginx/conf.d/
sc_fastcgi_params	/etc/nginx/conf.d/
sc_nginx.conf	/etc/nginx/conf.d/

Changing firewall and SELinux settings for Spectrum Connect

You can change the firewall and SELinux settings for IBM Spectrum Connect after installing it to allow the Spectrum Connect service to be started in cases where the firewall and SELinux are enabled..

Procedure

Follow these steps to change the firewall and SELinux settings for Spectrum Connect post-installation to allow the Spectrum Connect service to be started in cases where the firewall and SELinux are enabled.:

1. Open the 8440 TCP port:

- RHEL 7.x, CentOS 7.x or RHEL 8.x, CentOS 8.x:
 - **firewall-cmd --permanent --add-port=8440/tcp**
 - **firewall-cmd --reload**

Note: If you are using a different firewall software, please refer to that software documentation for help.

2. Open the 5672 and 4369 TCP ports under RHEL 7.x and CentOS 7.x or RHEL 8.x and CentOS 8.x:

- **firewall-cmd --permanent --zone=trusted --add-interface=lo**
- **firewall-cmd --permanent --zone=trusted --add-port=5672/tcp**
- **firewall-cmd --permanent --zone=trusted --add-port=4369/tcp**
- **firewall-cmd --reload**

Note: If you are using a different firewall software, please refer to that software documentation for help.

3. If you are using SELinux, allow nginx to bind network interfaces and connect to the ibmsc socket:

- RHEL 7.x, CentOS 7.x:
 - **semodule -i /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel7/ibmsc.pp**
 - **systemctl restart nginx**
- RHEL 8.x, CentOS 8.x:
 - **semodule -i /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel8/ibmsc.pp**
 - **systemctl restart nginx**

To display ibmsc selinux policy:

- RHEL 7.x: **cat /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel7/ibmsc.te**
- RHEL 8.x: **cat /opt/ibm/ibm_spectrum_connect/conf.d/selinux/rhel8/ibmsc.te**

Upgrading an existing installation

If you are already using an earlier release of IBM Spectrum Connect, you can upgrade to the newer version without having to uninstall the previous one.

Before you begin

- If needed, back up the current Spectrum Control Base or Spectrum Connect database by entering the following command.

- **sc_configuration backup -f /var/tmp/backup -k <key value>** for IBM Spectrum Connect.

Note: The backup and restore procedure is allowed within the same version only. This means that it is not possible to back up files from Spectrum Control Base version 2.2.1 and restore them in version 3.0.3.

- If you are using RHEL 6.x, upgrade to RHEL 7.x before upgrading Spectrum Connect.

Important: RHEL 6.x is no longer supported.

- Verify that the following communication ports are open to ensure network connectivity between VMware resources, Spectrum Connect and IBM storage systems:
 - 8440 (vCenter, vROps and vRO servers)
 - 7778 (FlashSystem A9000/A9000R).
 - 22 (storage systems that run IBM Spectrum Virtualize)
 - 8452 (DS8000)

Note: The 8443 port remains open after the Spectrum Connect upgrade, if the previous version was configured to use this port. If you install the software package anew, the 8440 port is used. You can change the default TCP port at any time by running a script, as explained in [“Changing the Spectrum Connect communication port”](#) on page 62. Moreover, certain upgrade scenarios, such as using SELinux, may require additional configuration steps, as detailed in [“Performing first-time installation of Spectrum Connect”](#) on page 5.

- Make sure that the '**ibmsc**' user can access the `/opt/ibm` and `/var/log/sc` folders.
- Verify the version of your current Spectrum Connect installation. IBM Spectrum Control Base Edition versions released before version 3.0.0 cannot be upgraded to version 3.1.0 or later. This includes the IBM Storage Integration Server releases. You must first upgrade the earlier release to version 3.0.3 and restart vSphere Web Client. Then you can upgrade it to version 3.1.0 or later.

Important: To ensure proper transition from physical to abstracted storage provisioning, refer to the [IBM Spectrum Control Base Edition version 3.0.3 "Upgrading an existing installation" procedure](#).

Procedure

Perform the following procedure to upgrade Spectrum Connect:

1. Log out of the Spectrum Connect GUI and close the browser.
2. On the Spectrum Connect side: download the newer installation package and the `IBM_Spectrum_Connect_Signing_Key_Pub.key` file, used for the package validation. See [“Downloading IBM Spectrum Connect software”](#) on page 5).
3. Copy the installation package and the public key files to a local folder on a current Spectrum Connect server.
4. Go to the local folder and then use the **gpg --import IBM_Spectrum_Connect_Signing_Key_Pub.key** to import the IBM GNU Privacy Guard (GPG) public key to validate the installation files. This ensures that the files were received from IBM and were not manipulated in any way by a third party.

Note: Downloading the install package from a trusted, SSL-protected resource, such as Fix Central, ensures its authenticity and integrity. However, you can mark the key as trusted by entering **gpg --edit-key "IBM Spectrum Connect Signing Key"**, typing the **trust** command and selecting option 5.

5. Extract the installation package file ('*' represents the build number) :

```
# tar -xzf IBM_Spectrum_Connect-3.8.0-*x86_64.tar.gz
```

Depending on the operating system type, the following files are extracted:

- RHEL 7.x:
 - `erlang-19.3.0-1.el7.centos.x86_64.rpm`
 - `jemalloc-3.6.0-1.el7.x86_64.rpm`
 - `nginx-1.10.3-1.el7ngx.x86_64.rpm`
 - `postgresql96-9.6.17-1PGDG.rhel7.x86_64.rpm`
 - `postgresql96-contrib-9.6.17-1PGDG.rhel7.x86_64.rpm`
 - `postgresql96-docs-9.6.17-1PGDG.rhel7.x86_64.rpm`

- postgresql96-libs-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-server-9.6.17-1PGDG.rhel7.x86_64.rpm
 - rabbitmq-server-3.6.0-1.noarch.rpm
 - redis-3.2.5-1.el7.x86_64.rpm
 - uuid-1.6.2-26.el7.x86_64.rpm
 - CentOS 7.x:
 - erlang-19.3.0-1.el7.centos.x86_64.rpm
 - jemalloc-3.6.0-1.el7.x86_64.rpm
 - libxslt-1.1.28-5.el7.x86_64.rpm
 - nginx-1.10.3-1.el7ngx.x86_64.rpm
 - postgresql96-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-contrib-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-docs-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-libs-9.6.17-1PGDG.rhel7.x86_64.rpm
 - postgresql96-server-9.6.17-1PGDG.rhel7.x86_64.rpm
 - rabbitmq-server-3.6.0-1.noarch.rpm
 - redis-3.2.5-1.el7.x86_64.rpm
 - uuid-1.6.2-26.el7.x86_64.rpm
 - `ibm_spectrum_connect-3.8.0-*.bin` – product BIN file.
 - `ibm_spectrum_connect-3.8.0-*.x86_64.bin.asc` – digital signature file for the BIN file verification.
6. Enter **`gpg --verify ibm_spectrum_connect-3.8.0-*.x86_64.bin.asc ibm_spectrum_connect-3.8.0-*.x86_64.bin`** to verify the digital signature of the installation files.
 7. Go to the extracted directory and then use the **`rpm -U *.rpm`** command to run and install all the complementary RPM files.
 8. Enter **`chmod +x ibm_spectrum_connect-3.8.0-*.bin`** to authorize the installation of the product BIN file.
 9. Enter **`./ibm_spectrum_connect-3.8.0-*.bin`** to start the upgrade.

Note: Make sure you login as root, or use **`sudo`** for the command.

Note: During the upgrade several configuration files are overwritten by newer versions (as illustrated by the screen output below). If these files were changed in the previous versions, you must apply the same changes to the new files, if you want to preserve the settings.

10. Review the license agreement which is displayed after you run the installation file.
11. Enter 1 at the following prompt to accept the license agreement and complete the installation:

Press Enter to continue viewing the license agreement, or Enter "1" to accept the agreement, "2" to decline it, "3" to Print, "4" to Read non-IBM terms, or "99" to go back.


```

1
warning: /tmp/isis-2kvpNq/ibm_spectrum_connect.rpm: Header V4 RSA/SHA1 Signature, key ID
6d5e9449: NOKEY
Preparing for upgrade to SC 3.8.0
warning: /opt/ibm/ibm_spectrum_connect/conf.d/hsgsvr/hsgsvr_config.ini saved as /opt/ibm/
ibm_spectrum_connect/conf.d/hsgsvr/hsgsvr_config.ini.rpmsave
Extract Python according to OS version
Upgrading from Spectrum Connect
Starting rabbitmq-server (via systemctl): [ OK ]
Configuring rsyslog
Configuring new service [ibm_spectrum_connect]
Upgrading database, this may take a couple of minutes to complete...
Configuring the nginx port to: 8440.
No need to change Spectrum Connect port
Create default settings
Upgrading the extension of all registered vCenter servers...
Initiate refresh array task
Installation completed successfully.

```

12. Log in (see “Logging in” on page 17) and click **Settings > About** to verify that the Spectrum Connect version number has been updated.

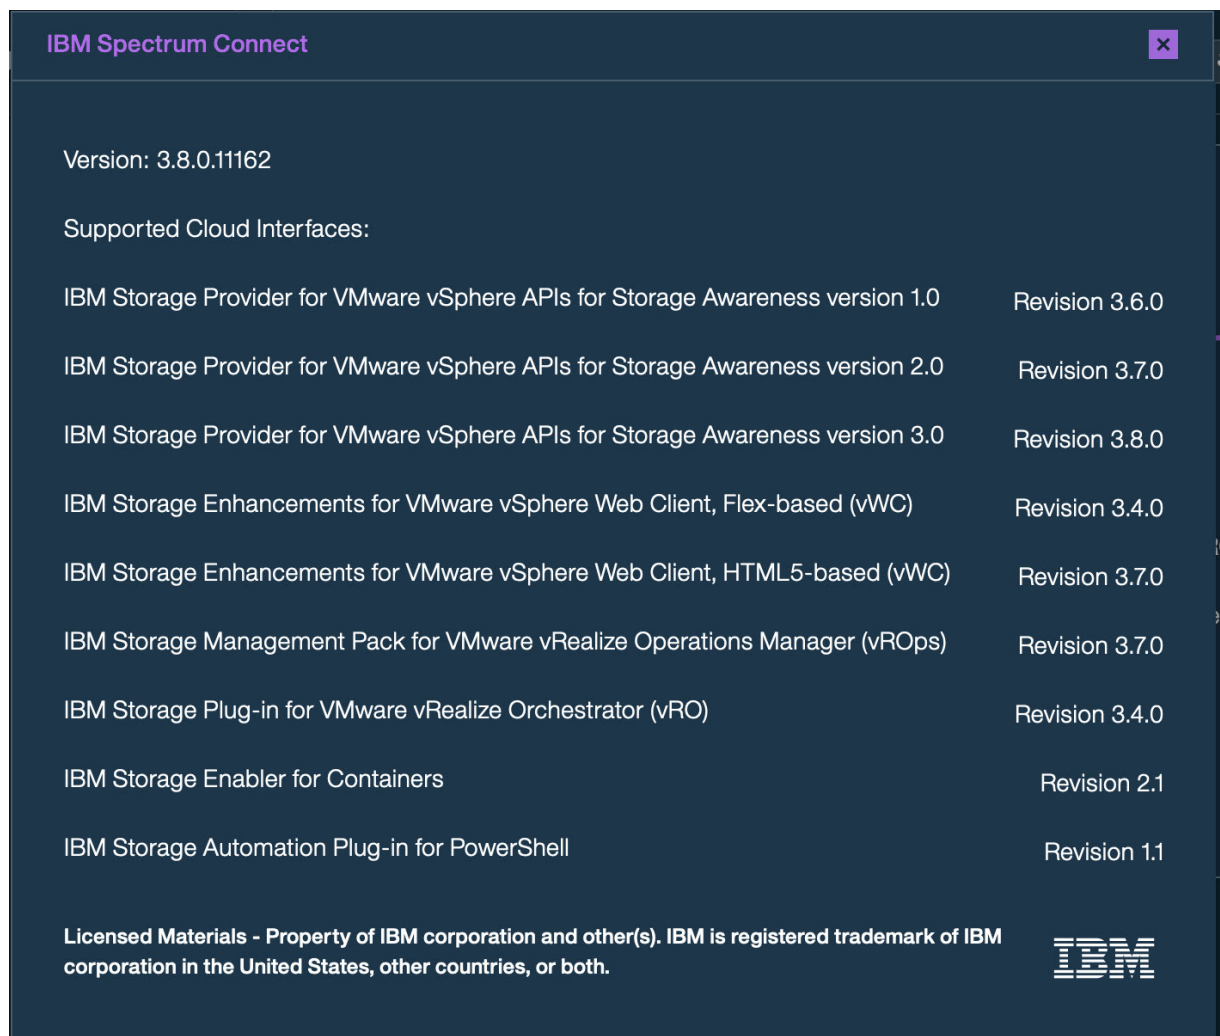


Figure 6. Spectrum Connect version number

13. To avoid unauthorized access to Spectrum Connect via GUI, it is strongly recommended to change the default password for the 'admin' user as soon as possible, as described in “Changing the password of a Spectrum Connect user” on page 33.

With the Spectrum Connect update, the IBM Storage Enhancements for VMware vSphere Web Client is upgraded automatically for all connected vCenter servers. However, the following components must be updated manually:

- IBM Storage Plug-in for VMware vRealize Orchestrator. See [“Managing integration with vRealize Orchestrator”](#) on page 126.
- IBM Storage Management Pack for VMware vRealize Operations Manager. See [“Managing integration with vRealize Operations Manager”](#) on page 134.
- Registration of Spectrum Connect as a VASA storage provider on the vCenter server. Re-register Spectrum Connect, as detailed in [“Registering Spectrum Connect as a storage provider on vCenter server”](#) on page 98.

Note: During upgrade, Spectrum Connect overwrites several configuration files. The previous versions of these files are renamed and kept in their original locations. A backup version is renamed as `file_name.pre_previous_SCB_version_number`. For example, `sc_nginx.conf` from Spectrum Control Base (3.0.3) installation is renamed as `sc_nginx.conf.pre_3.0.3`. [Table 2](#) on [page 14](#) specifies the files renamed during upgrade.

Table 2. Configuration files renamed during Spectrum Connect upgrade	
File name	Location
40-ibmsyslog.conf	/etc/rsyslog.d/
500.html	/etc/nginx/conf.d/
sc_fastcgi_params	/etc/nginx/conf.d/
sc_nginx.conf	/etc/nginx/conf.d/

Uninstalling the Spectrum Connect software

If you want to completely remove the IBM Spectrum Connect software from the Linux host upon which it is installed, follow the steps in the following procedure.

Before you begin

Important:

- Before removing Spectrum Connect software, remove all vCenter servers that were registered for vSphere Web Client, as explained in [“Removing a vCenter server”](#) on page 106. If any vCenter server is not removed prior to the uninstallation, the IBM Storage Enhancements will remain visible but not functional for that vCenter server.
- To avoid loss of user accounts, credentials, storage system configurations, storage pool attachments, and vCenter server associations – always back up the Spectrum Connect configuration before any uninstallation.
- Uninstalling the software on the Spectrum Connect side causes the following features to cease functioning:
 - All CLI and GUI management options on the Spectrum Connect side.
 - IBM Storage Enhancements on the vSphere Web Client side.
 - VASA-related operations on the vCenter server side.

Procedure

To uninstall the Spectrum Connect software from the Linux host:

1. Log on to the Linux command prompt environment as a root user.
2. Stop the Spectrum Connect service, as explained in [“Checking and controlling the Spectrum Connect Linux service”](#) on page 59.
3. Run the standard Linux uninstallation command for each installed package (as detailed in [“Performing first-time installation of Spectrum Connect”](#) on page 5).

Chapter 3. Operation and management

This chapter describes the initial operation tasks, as well as the full range of management options that are available on IBM Spectrum Connect.

- [“Required and optional initial tasks” on page 15](#)
- [“CLI - Configuring the LDAP server” on page 70](#)
- [“Logging in” on page 17](#)
- [“Web-based UI” on page 18](#)
- [“Running initial setup” on page 21](#)
- [“Managing high-availability groups ” on page 25](#)
- [“Managing server certificates” on page 27](#)
- [“Managing Spectrum Connect users and groups” on page 30](#)
- [“Managing storage systems” on page 36](#)
- [“Managing storage spaces and services” on page 44](#)
- [Chapter 4, “Administration,” on page 59](#)
- [Chapter 6, “Management from the command-line interface,” on page 69](#)
- [Chapter 7, “Troubleshooting IBM Spectrum Connect,” on page 89](#)

Required and optional initial tasks

After IBM Spectrum Connect is installed, different tasks are required before the server can become fully operational.

Refer to the following tables for information about the required and optional management tasks.

Note: Unless specified otherwise in the 'Management method' column, you can initiate tasks from either the web user interface (UI) or command-line interface (CLI) .

Table 3. Required tasks in sequential order				
Step	Required task	Management method	Relevant cloud interface	Refer to
1.	Set a password for the ' ibmsc ' user if necessary (a Linux root user action), and then switch to the ' ibmsc ' user.	CLI	All	<ul style="list-style-type: none">• “CLI – Switching to 'IBMSC' user mode” on page 69
2.	Run initial setup to define high-availability groups, add SSL certificate and set storage system credentials. If you complete the initial setup, you can skip steps 3–6 below.	UI	All	<ul style="list-style-type: none">• “Running initial setup” on page 21
3.	Log in to the UI and then change the password of the initial admin user.	UI	All	<ul style="list-style-type: none">• “Logging in” on page 17• “Changing the password of a Spectrum Connect user” on page 33
4.	Define a high-availability group	UI	IBM Storage Provider for VMware VASA	<ul style="list-style-type: none">• “Managing high-availability groups ” on page 25

Table 3. Required tasks in sequential order (continued)

Step	Required task	Management method	Relevant cloud interface	Refer to
5.	Add SSL certificate for the Spectrum Connect server	CLI or UI	All	<ul style="list-style-type: none"> • “CLI – Managing server certificates” on page 77 • “Managing server certificates” on page 27
6.	Add the storage system access credentials	CLI or UI	All	<ul style="list-style-type: none"> • “CLI – Adding or removing storage system credentials” on page 78 • “Entering the storage system credentials” on page 37
7.	Add the storage systems to be used	CLI or UI	All	<ul style="list-style-type: none"> • “CLI – Managing storage systems” on page 80 • “Adding a storage system” on page 38

Table 4. Optional tasks

Step	Optional task	Management method	Relevant cloud interface	Refer to
1.	Set the VASA access credentials ("VASA Secret") to allow connection of vCenter servers that require VASA functions.	CLI or UI	IBM Storage Provider for VMware VASA	<ul style="list-style-type: none"> • “CLI – Setting the VASA credentials” on page 82 • “Setting the VASA credentials” on page 96
2.	Define storage spaces and services.	UI	<ul style="list-style-type: none"> • IBM Storage Enhancements for VMware vSphere Web Client • IBM Storage Plug-in for VMware vRealize Orchestrator • IBM Storage Provider for VMware VASA 	<ul style="list-style-type: none"> • “Adding a storage space” on page 44 • “Adding a storage service” on page 46 • “Defining and attaching storage resources” on page 49
3.	Add vCenter servers.	CLI or UI	IBM Storage Enhancements for VMware vSphere Web Client	<ul style="list-style-type: none"> • “Adding a vCenter server” on page 104
4.	If you want to use vWC plug-in for managing volumes created on storage resources attached to specific services, delegate the services to the previously added vCenter servers.	CLI or UI	IBM Storage Enhancements for VMware vSphere Web Client	<ul style="list-style-type: none"> • “Delegating storage services to a vCenter server” on page 107
5.	Establish integration with vRealize Orchestrator (vRO).	UI	IBM Storage Plug-in for VMware vRealize Orchestrator	<ul style="list-style-type: none"> • “Managing integration with vRealize Orchestrator” on page 126
6.	Delegate storage services to the previously added vRO server.	UI	IBM Storage Plug-in for VMware vRealize Orchestrator	<ul style="list-style-type: none"> • “Managing integration with vRealize Orchestrator” on page 126

Table 4. Optional tasks (continued)				
Step	Optional task	Management method	Relevant cloud interface	Refer to
7.	Establish integration with vRealize Operations Manager (vROps). Note: Not applicable for the DS8000 family storage systems.	CLI or UI	IBM Storage Management Pack for VMware vRealize Operations Manager	<ul style="list-style-type: none"> • “CLI – Managing integration with vRealize Operations Manager” on page 83 • “Managing integration with vRealize Operations Manager” on page 134
8.	Configure LDAP-based directory user access to Spectrum Connect.	CLI	-	<ul style="list-style-type: none"> • “CLI - Configuring the LDAP server” on page 70
9.	Manage the Spectrum Connect users.	CLI	-	<ul style="list-style-type: none"> • “CLI – Managing Spectrum Connect users and groups” on page 74 • “Managing Spectrum Connect users and groups” on page 30
10.	Automate storage provisioning, host mapping, volume expansion and other storage-related tasks by using Microsoft PowerShell cmdlets.	UI	IBM Storage Automation Plug-in for PowerShell	<ul style="list-style-type: none"> • “Managing integration with Microsoft PowerShell” on page 158
11.	Back up or restore a Spectrum Connect configuration, including the data of all existing user accounts, credentials, storage systems, and storage resources.	CLI	-	<ul style="list-style-type: none"> • “CLI – Backing up or restoring Spectrum Connect configuration” on page 86

Logging in

To log in to Spectrum Connect from a browser, you need to enter the web address (URL) of the Linux host upon which Spectrum Connect is installed.

Procedure

1. Enter the web address (URL) of the Linux host upon which IBM Spectrum Connect is installed. Use the following format `https://[Spectrum Connect IP address]:8440`.

Note: You can change the default TCP port (8440) at any time by running a script, as explained in [“Changing the Spectrum Connect communication port” on page 62](#).

The Spectrum Connect login page is loaded.

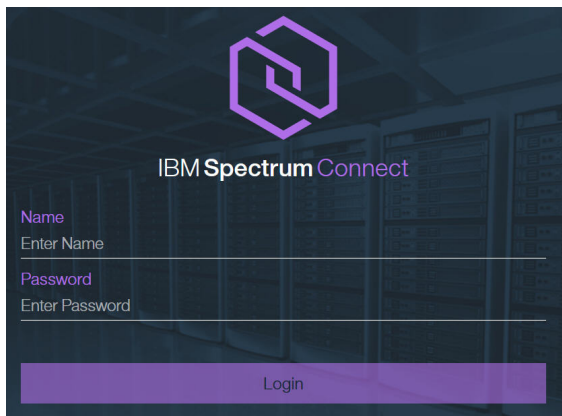


Figure 7. Spectrum Connect login screen in a standard web browser

Note: If your web browser displays a connection security message after entering the web address instead of the Spectrum Connect login page, see [“Managing server certificates” on page 27](#).

2. Log in by entering your Spectrum Connect username and password.



Attention:

- After the installation, the initial username is **admin** and the initial password is **admin1!**. To avoid unauthorized access to Spectrum Connect, the default username and password are changed during the initial setup procedure, as explained in [“Running initial setup” on page 21](#). You can also create a new user account and then delete the **admin** account (see [“Managing Spectrum Connect users and groups” on page 30](#)).
- If the Spectrum Connect service is stopped on the Linux host (see [“Checking and controlling the Spectrum Connect Linux service” on page 59](#)), it is not possible to log in or perform any GUI operation.

What to do next

After successful login, complete the initial setup wizard, which includes the following mandatory configuration steps:

- Setting up a high-availability group.
- Providing SSL certificate.
- Defining storage system credentials.
- Changing default Spectrum Connect credentials.

Web-based UI

The IBM Spectrum Connect UI provides an intuitive easy-to-use browser-based interface for managing IBM storage resources.

The Spectrum Connect web UI consists of the four panes:

- **Interfaces** – integration with vCenter and vRO PowerShell servers.

Note: The Storage IBM Enabler for Containers plugin is described in a separate documentation set available on [IBM Knowledge Center](#)

- **Spaces/Storage Services** – handling storage spaces and services. These entities are described in the [“Storage space and service management” on page 2](#) section.
- **Storage Systems** – management of storage systems and storage resources.
- **Monitoring** integration with vROps server.

After successful login, the Spaces/Storage Services and Storage Systems panes are displayed.

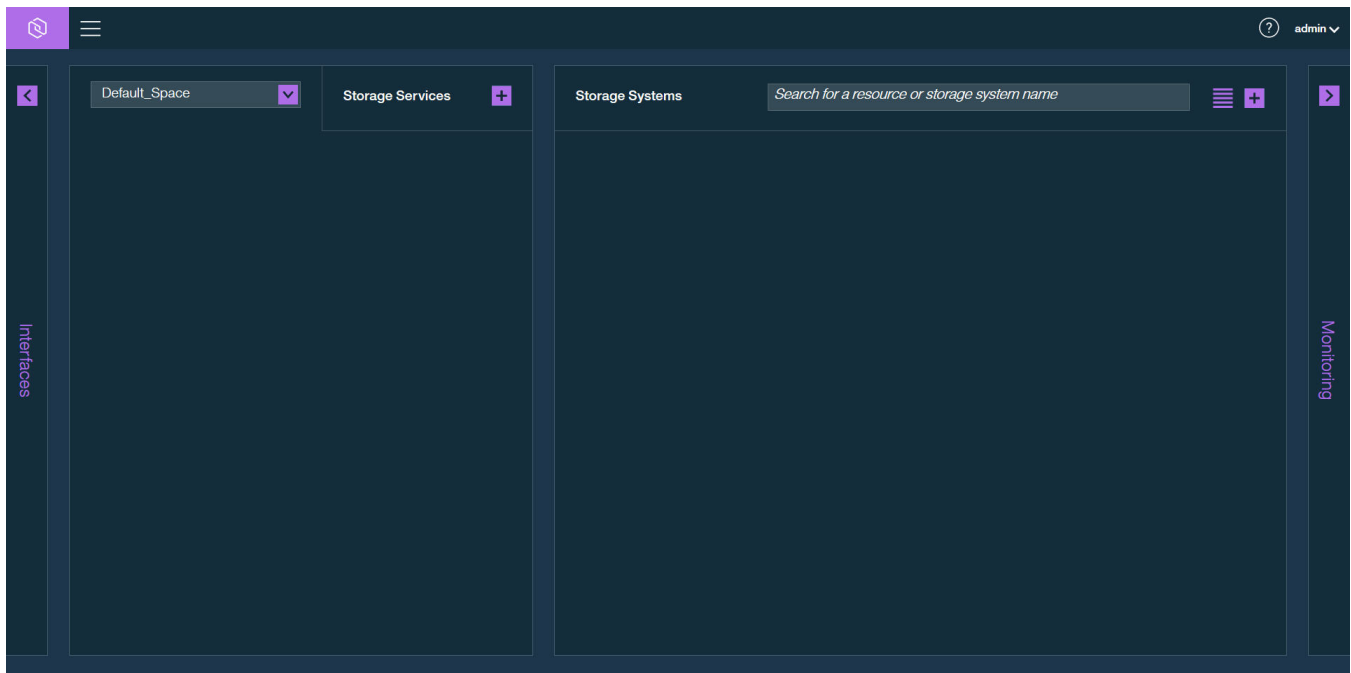


Figure 8. Spaces/Storage Services and Storage Systems panes

Click **Interfaces** on the left of the screen to go to the **Interfaces** pane, or click **Monitoring** on the right to display the Monitoring pane. When the Interfaces pane is displayed, click **Allocation** to return to the initial view (Spaces/Storage Services and Storage Systems panes).

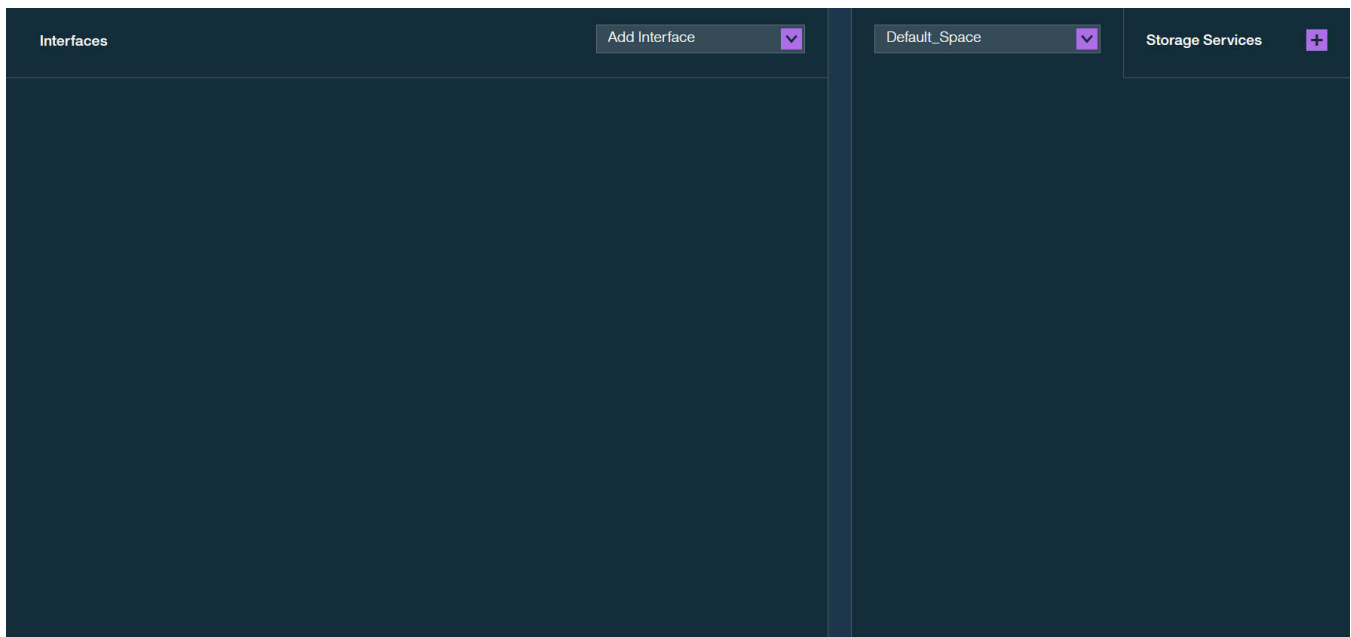


Figure 9. Interfaces and Spaces/Services panes

To return to the initial view from the Monitoring pane, click **Storage Space**.

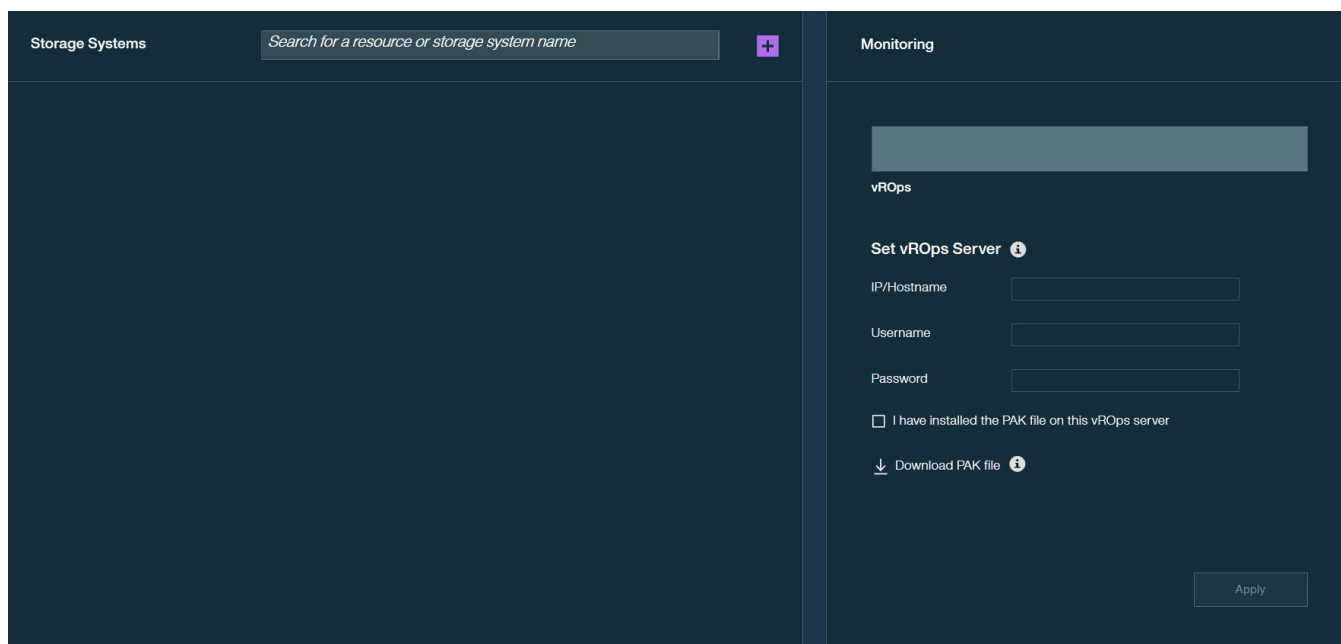








Figure 10. Storage Systems and Monitoring panes

The table below summarizes functionality of the UI elements.

Table 5. Spectrum Connect UI elements	
UI element	Description
	Add button. Click this button to add a new object (server, storage service, system, etc).
	Edit button, which is displayed a row in a table is selected. Click this button to configure the object in the table row (user, storage space, etc).
	Home button. Click this button to display the home screen (Spaces/Services and Storage Systems panes).
	Settings button. Use this button to access the Settings menu to: <ul style="list-style-type: none"> • Define storage credentials • Define VASA Provider credentials • Manage certificates • Add and change the Spectrum Connect users • Add and edit storage spaces • Collect logs, display additional help options • Display version number of Spectrum Connect and included applications • Access product documentation
	Remove button. Click this button to remove a storage element or delete a user from the User List.
	Help button. Click this button to display the guided tour, which is also available after the initial login.
	Right and left navigation pointers. They indicate if additional panes are available to the right or to the left of the current display.

Table 5. Spectrum Connect UI elements (continued)

UI element	Description
	Attach/Delegate button. It is available, when an unattached storage object is selected. Click this button to: <ul style="list-style-type: none"> • Delegate a storage service to a previously selected interface (vCenter, vRO, PowerShell, Enabler for Containers) • Attach a storage resource to a previously selected storage service
	Detach/Cancel Delegation button. It is available, when an attached storage resource is selected. Click this button to: <ul style="list-style-type: none"> • Cancel delegation of a storage service to a previously selected interface • Detach a storage resource from a previously selected storage service
	Bar View button. Click this button to display the available storage systems and resources as vertical bars.
	Table View button. Click this button to display the available storage systems and resources as a table.
	Start Monitoring button. It is available, when the mouse pointer is moved over a storage system, which is not monitored via vROps. Click this button to start the monitoring process.
	Stop Monitoring button. It is available, when the mouse pointer is moved over a storage system, which is monitored via vROps. Click this button to stop the monitoring process.

Running initial setup

After you log in to Spectrum Connect, the program invokes a setup wizard to facilitate with the initial configuration.

Procedure

Follow the procedure below to complete the initial setup process, which is run automatically after the first successful login. This procedure is mandatory for subsequent storage provisioning, using Spectrum Connect.

Note: This operation is not available from the CLI .

1. Enter the name of the high-availability (HA) group and the FQDN of the Spectrum Connect server. For detailed description of high-availability groups, see [“Managing high-availability groups ” on page 25.](#)

The screenshot shows the 'IBM Spectrum Connect - Initial Setup' wizard. On the left is a sidebar with four radio buttons: 'General Settings' (selected), 'SSL Certificate', 'Storage System Credentials', and 'Spectrum Connect Credentials'. The main area is titled 'General Settings' and contains two input fields. The first is labeled 'VASA high-availability group' with an information icon to its right; the text 'ha_group_86' is entered in the field. The second is labeled 'FQDN' and is currently empty. At the bottom right of the main area are two buttons: 'Back' and 'Next'.

Figure 11. Initial setup wizard, defining HA group

2. Generate or upload SSL certificate, required for establishing a secure communication link with the Spectrum Connect server. For detailed description of SSL certificates, see [“Managing server certificates”](#) on page 27.

The screenshot shows the 'IBM Spectrum Connect - Initial Setup' wizard. On the left, a sidebar lists four steps: 'General Settings' (completed, marked with a checkmark), 'SSL Certificate' (current step, marked with a circle), 'Storage System Credentials' (marked with a circle), and 'Spectrum Connect Credentials' (marked with a circle). The main area is titled 'SSL Certificate' with an information icon and a note: 'The new certificate will be applied during next login.' Below this, there are two radio buttons for 'Method': 'Generate' (selected) and 'Upload'. The 'Common Name' field contains the text 'Test'. The 'Hostname/IP address' field is empty and has a red asterisk indicating a required field. The 'Validity' field is set to '3' years. At the bottom right, there are 'Back' and 'Next' buttons.

Figure 12. Initial setup wizard, defining SSL certificate

3. Define credentials to be used to connect to the IBM storage systems. For detailed description of storage system credentials, see [“Entering the storage system credentials”](#) on page 37.

Important: An identical storage admin user account with identical credentials (the same username and password) must already be predefined on all the IBM storage systems that you intend to use. Spectrum Connect can use only **a single system management account** for accessing all the different storage systems that you use. For storage systems, running Spectrum Virtualize, ensure that the credentials belong to a user account with *VASAProvider* role, if you intend to use VVols. For non-VVol applications, you can use the *Administrator* role.

IBM Spectrum Connect - Initial Setup

General Settings
SSL Certificate
Storage System Credentials
Spectrum Connect Credentials

Storage System Credentials
The credentials must be the same for all connected storage systems.

User name

Password

☐ Directory account

Back Next

Figure 13. Initial setup wizard, defining storage system credentials

4. Change default credentials for accessing the Spectrum Connect server.

IBM Spectrum Connect - Initial Setup

General Settings
SSL Certificate
Storage System Credentials
Spectrum Connect Credentials

Credentials for Spectrum Connect login
Change default credentials

User Name

Old Password

Password

Confirm Password

admin

Back Finish

Figure 14. Initial setup wizard, defining Spectrum Connect credentials

What to do next

After successful login, take a guided tour, which is invoked automatically, to familiarize yourself with the main interface elements and principles of operation.

Managing high-availability groups

IBM Spectrum Connect implements VMware's high-availability architecture for multiple VASA providers.

Multiple Spectrum Connect instances that manage the same storage system can be combined into high-availability (HA) group for VASA provider redundancy. The HA technology is implemented in the active/passive mode. In this mode, one Spectrum Connect acts as active and the other acts as standby for transfer of responsibility if the active Spectrum Connect fails or becomes unreachable, as illustrated below.

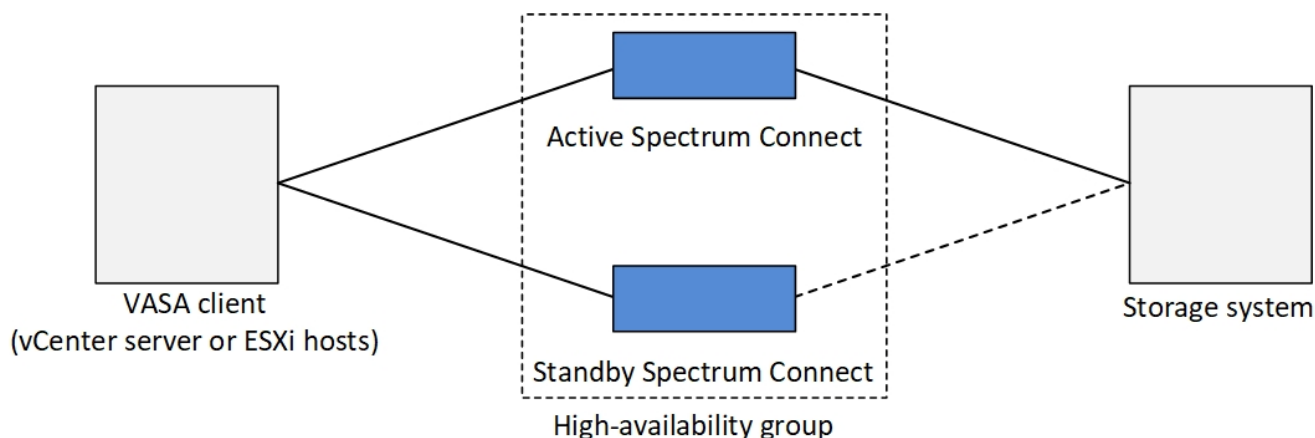


Figure 15. High-availability group concept

To configure an HA group, open the **Settings** menu. For configuration instructions, see [“Defining a high-availability group”](#) on page 25.

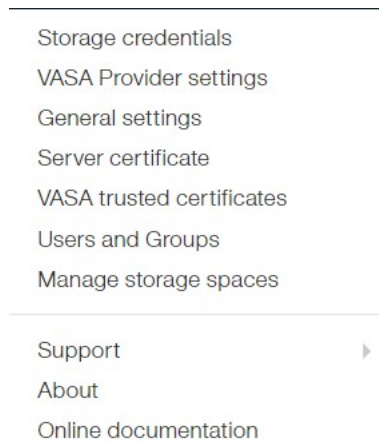


Figure 16. General Settings option on the Settings menu

Defining a high-availability group

To ensure continuous storage management, multiple Spectrum Connect instances must be activated and combined into a high-availability (HA) group.

Before you begin

You must define an HA group before adding storage systems to Spectrum Connect. In addition, verify that both Spectrum Connect servers have a network connection and can communicate with each other.

About this task

An HA group is a combination of two Spectrum Connect instances, operating in the active/standby mode. Active Spectrum Connect instances are backed up by the standby ones to provide uninterruptible service if one of them becomes unavailable. A default HA group (*ha_group_<1–100>*) is created automatically during Spectrum Connect installation.

Procedure

1. Click **General settings** on the Settings menu.
The General Settings dialog box is displayed.
2. Enter the FQDN of the first Spectrum Connect and the name of the HA group that you want to create, and then click **Apply**.

Note:

- The FQDN, which you enter, is automatically copied to the Hostname field of the Server Certificate dialog box during the generation of the Spectrum Connect server certificate, as explained in [“Managing server certificates” on page 27](#).
- A default HA group name is assigned automatically by Spectrum Connect in the *ha_group_number* format. The *number* is randomly selected from 1 to 100. If you intend to change the default HA group name of any storage system connected to Spectrum Connect, which is the default HA group member, must be removed from Spectrum Connect before the group name change.

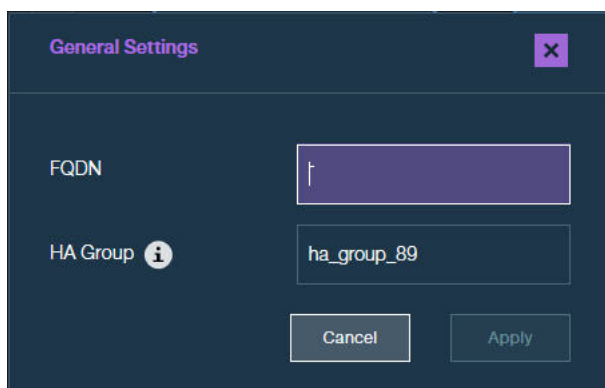


Figure 17. General Settings dialog box

3. Log in to the standby instance of Spectrum Connect and add its FQDN, as explained above. The HA group name must be identical to the value that was provided when registering the active Spectrum Connect instance.

Important:

- The Spectrum Connect software must be installed and configured separately for each HA group member. This is required for obtaining a unique VASA key which is generated during installation.
 - **Do not clone an existing instance of an active Spectrum Connect for use as a standby member.** However, cloning the VM which will host Spectrum Connect **prior** to installation is acceptable.
 - When deploying a Spectrum Connect virtual machine in a VMware HA cluster, use the Fault Tolerance feature to ensure its continuous availability. If the fault tolerance cannot be achieved, use the VMware High Availability, as the second best choice.
 - Back up your Spectrum Connect configuration regularly, using the **sc_configuration** CLI command. See [“CLI – Backing up or restoring Spectrum Connect configuration” on page 86](#).
4. Define storage credentials for all Spectrum Connect instances, as explained in [“Entering the storage system credentials” on page 37](#).
 5. Add the same storage system for all Spectrum Connect instances. Spectrum Connect redundancy is available only if active and standby members manage the same storage system. See [“Adding a storage system” on page 38](#).

6. Configure the server certificates. See [“Managing server certificates” on page 27](#).
7. Register all HA group members as storage providers in the vCenter server. See [“Registering Spectrum Connect as a storage provider on vCenter server” on page 98](#).
8. Add storage spaces and services to the active Spectrum Connect.

There is no need to configure these settings for a standby HA member. See [“Managing storage spaces and services” on page 44](#). Storage spaces and services defined on an active instance of Spectrum Connect do not appear on the standby instance immediately. Any VVol-enabled storage services defined on the active Spectrum Connect are populated on the standby server's GUI during system failover.

A failover to a standby HA group member occurs when the active Spectrum Connect service is stopped or reset. See [“Checking and controlling the Spectrum Connect Linux service” on page 59](#).

Managing server certificates

During the installation, a self-signed Secure Sockets Layer (SSL) certificate is generated to create a secure communication channel for servers and clients. If you already have a trusted certificate that you want to use, you can replace the self-signed certificate with an existing trusted certificate or generate a new certificate.

About this task

A self-signed certificate file, **vp.crt**, and a certificate key file, **vp.key**, are stored in the following directory:

```
/opt/ibm/ibm_spectrum_connect/settings/ssl_cert.
```

Because the self-signed certificate is not automatically recognized by the web browser that you use to log in to Spectrum Connect, you might encounter a connection security warning before you can access the Spectrum Connect login page (see [“Logging in” on page 17](#)).

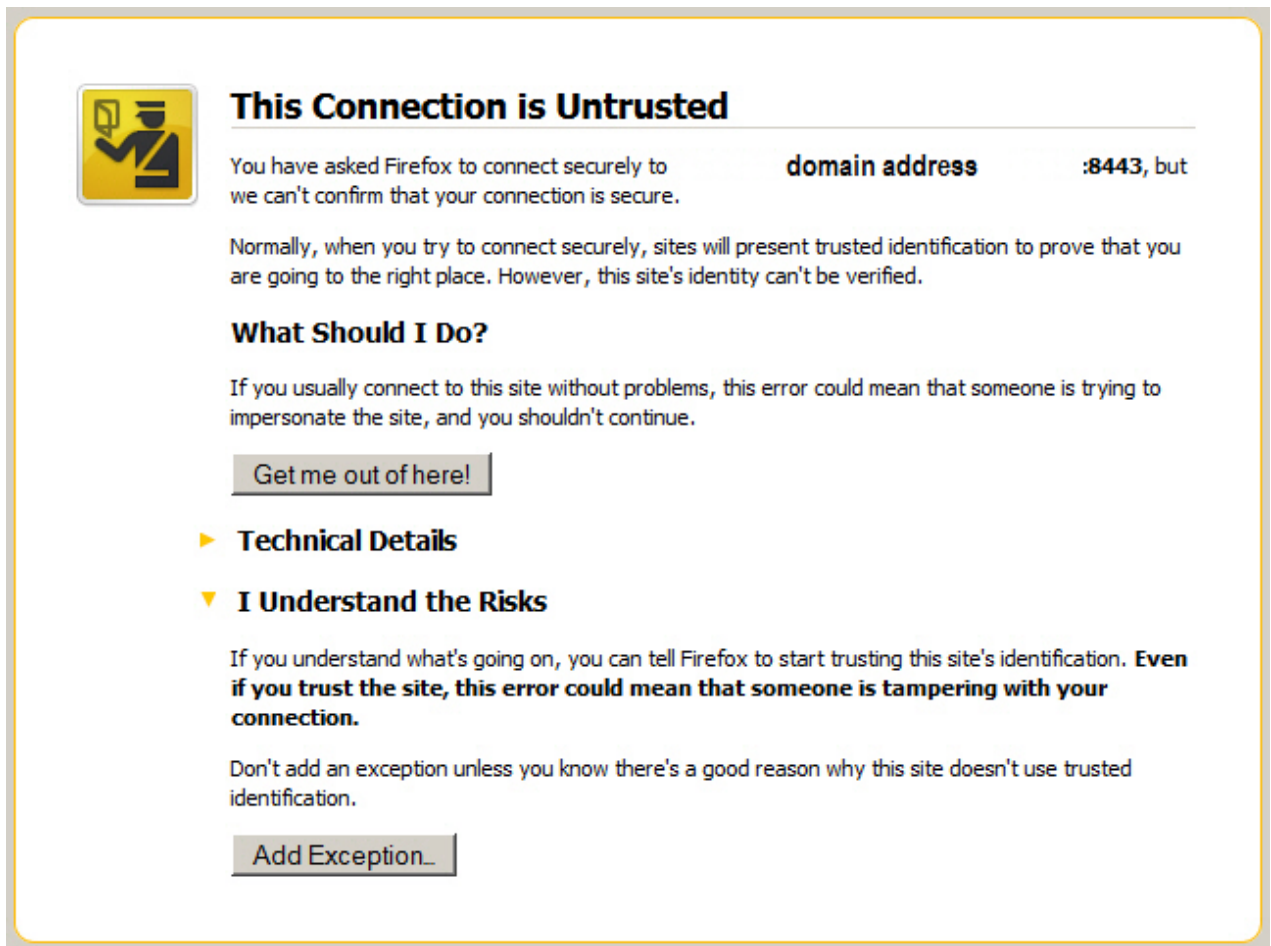


Figure 18. Connection security warning in the Mozilla FireFox web browser

To avoid such warning messages, you need to upload a server certificate which is signed by a public certificate authority (CA), such as VeriSign, or by a CA whose root certificate was imported to your web browser. In addition, you can generate an SSL certificate.

Procedure

1. Click **Server certificate** in the Settings menu.
The Server Certificate dialog box is displayed.

Server Certificate ⓘ

Certificate: 14270682351615191000

Issued to: N/A

Valid from: 2020-07-20 04:23:56

Valid to: 2021-07-21 04:23:56

Common Name: 9.115.247.71

Hostname/IP Address: 9.115.247.71

Change Certificate

☒ Generate ☐ Upload files

Common Name

Hostname/IP Address

Validity (years)

Figure 19. Generate option on Server Certificate dialog box

2. Enter the common name, hostname/IP address of the Spectrum Connect server and certificate validity period, and then click **Generate**.

Note:

- The Spectrum Connect hostname is automatically copied from the FQDN field of the Settings menu. The value is entered during high-availability group definition, as explained in [“Defining a high-availability group”](#) on page 25.
- The common name of the Spectrum Connect server must match the hostname/IP address in the URL, which is used, when registering Spectrum Connect as a storage provider on a vCenter server. See [“Registering Spectrum Connect as a storage provider on vCenter server”](#) on page 98.
- To support a VMCA subordinate CA, the **ssl_verify_depth** parameter in the `/etc/nginx/conf.d/sc_nginx.conf` file is set to 2 by default. This is sufficient for a single customer root CA and a VMCA, as subordinate CA. If you require more than one CA in the trust chain, increase the value accordingly, and restart the Nginx service. See example below.

```
ssl_verify_client optional;
```

```
ssl_verify_depth 3;
```

```
ssl_client_certificate ssl_cert/trusted_clients.pem;
```

Spectrum Connect generates the SSL certificate and key files, restarts the Nginx process and refreshes the web browser.

3. Log out and log into Spectrum Connect to complete the certificate generation.
4. To upload a certificate and a certificate key files, select **Upload files** on the Server Certificate dialog box.

Server Certificate ⓘ

Certificate: 1519052347

Issued to: N/A

Valid from: 2018-02-19 14:59:07

Valid to: 2028-02-17 14:59:07

Common Name: 9.151.161.146

Hostname: N/A

Change Certificate

☐ Generate ☒ Upload files

Attach Customer Certificate File:

Attach Key File:

Figure 20. Upload files option on Server Certificate dialog box

- Click **Browse** and attach your certificate **vp.crt**, and a certificate key files, **vp.key**, and then click **Upload**.

Spectrum Connect overwrites the existing SSL certificate and key files, restarts the Nginx process and refreshes the web browser.

- Log out and log into Spectrum Connect to complete the procedure.

Managing Spectrum Connect users and groups

At any time, you can add new Spectrum Connect user accounts or groups, change user account passwords, or delete existing user accounts or groups.

To access the user management options, click the **Settings** button and select **Users and Groups** in the Settings menu (see [Figure 21 on page 31](#)). From there, you can view, add, and manage users and groups as needed.

Note: To configure user or group access with LDAP, use the CLI command **sc_ldap** to configure the LDAP server first (see [CLI - Configuring the LDAP server](#)) and then add users or groups as explained in the following sections.

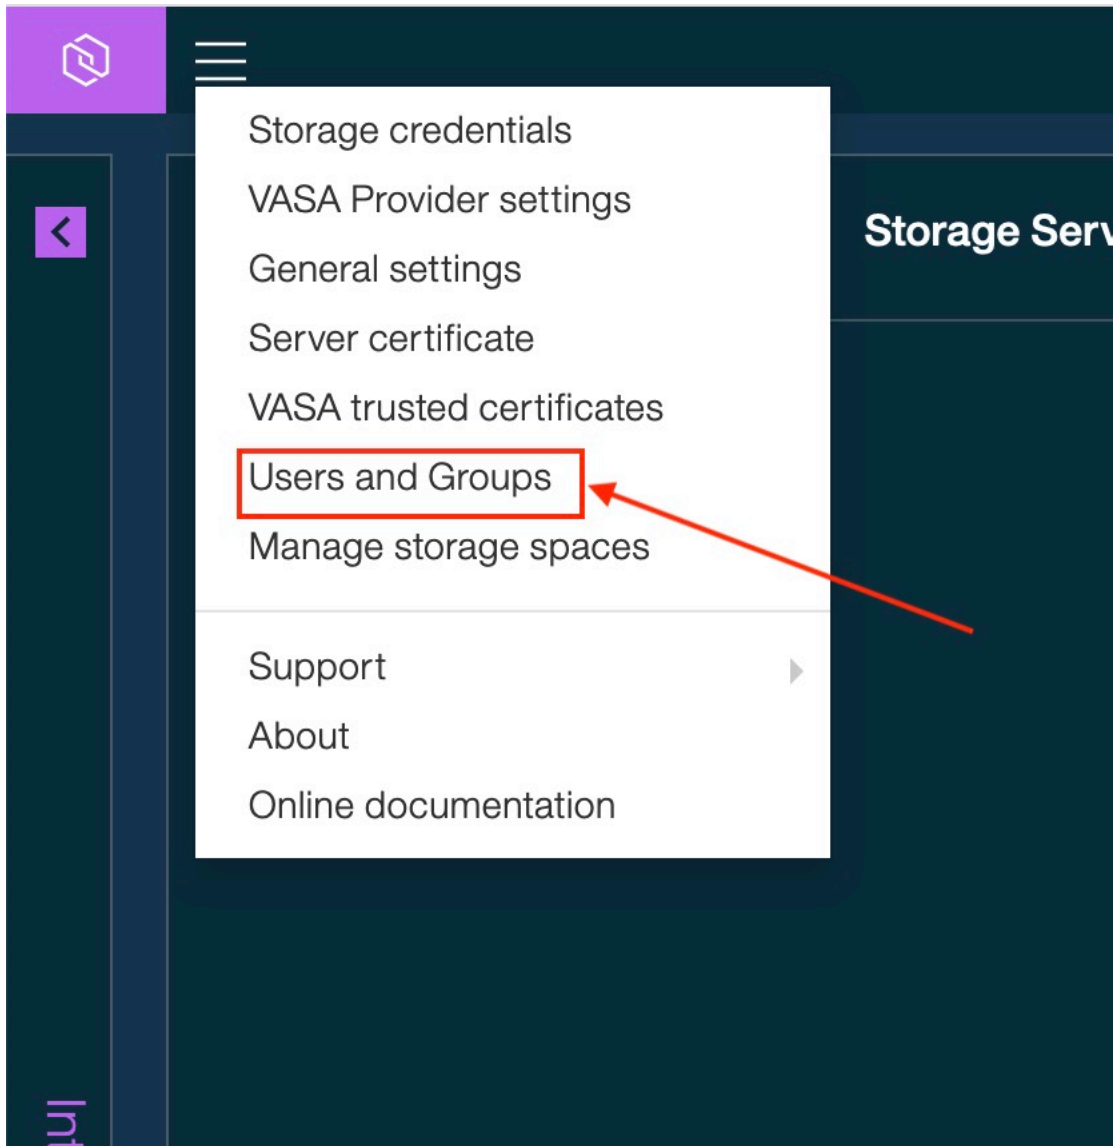


Figure 21. Users and Groups option in the Settings menu

Note: The same operations are available from the CLI as well, as explained in [“CLI – Managing Spectrum Connect users and groups”](#) on page 74.

- [“Adding a new user”](#) on page 31
- [“Changing the password of a Spectrum Connect user”](#) on page 33
- [“Deleting a user”](#) on page 34
- [“Adding an LDAP group”](#) on page 34
- [“Deleting an LDAP group”](#) on page 35

Adding a new user

You can add a user account for any authorized user that requires access to Spectrum Connect.

About this task

In addition to storage system credentials, you can define a user for logging into Spectrum Connect and performing GUI or CLI management actions.

Note: All Spectrum Connect users have the same permission level, and can undo any setting or action made by another user.

Procedure

1. Click **Users and Groups** in the Settings menu.

The Users and Groups dialog box is displayed, open to the Users list view.

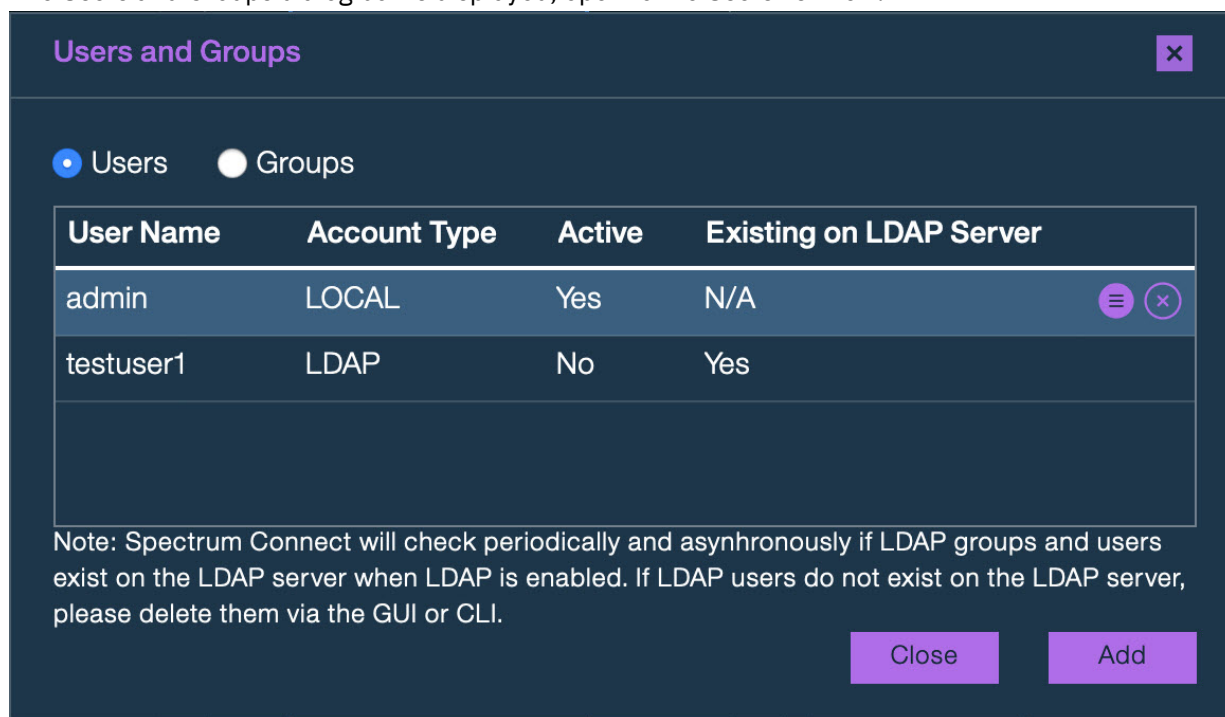


Figure 22. Users list view in the Users and Groups dialog box

2. Click **Add**.

The New User dialog box is displayed.

The screenshot shows the 'NEW USER' dialog box with three input fields: 'User Name', 'Password', and 'Confirm Password'. At the bottom right are 'Cancel' and 'Apply' buttons.

Figure 23. New User dialog box

3. Enter the username and password for the account that you want to create.

Note: The minimum password length is seven characters and it must include at least one letter and one digit.

4. Click **Apply**.

The user account is created, and the name of the new user account is added to the Users list view.

Changing the password of a Spectrum Connect user

At any time, you can change the password of a Spectrum Connect local user account.

About this task

You can modify a user account only by changing its password. Periodic password change is recommended on a regular basis.

Note:

- Spectrum Connect user names cannot be changed. Instead, you can delete a user account (see [“Deleting a user” on page 34](#)) and then create a new one (see [“Adding a new user” on page 31](#)).
- This operation is available from the CLI as well, as explained in [“CLI – Managing Spectrum Connect users and groups” on page 74](#).

Procedure

1. Click **Users and Groups** in the Settings menu.

The Users and Groups dialog box is displayed, open to the Users list view. (See [Figure 22 on page 32](#).)

2. Click the **Edit** button on the row of the user account that you want to update.

The **Change Password** dialog box is displayed.

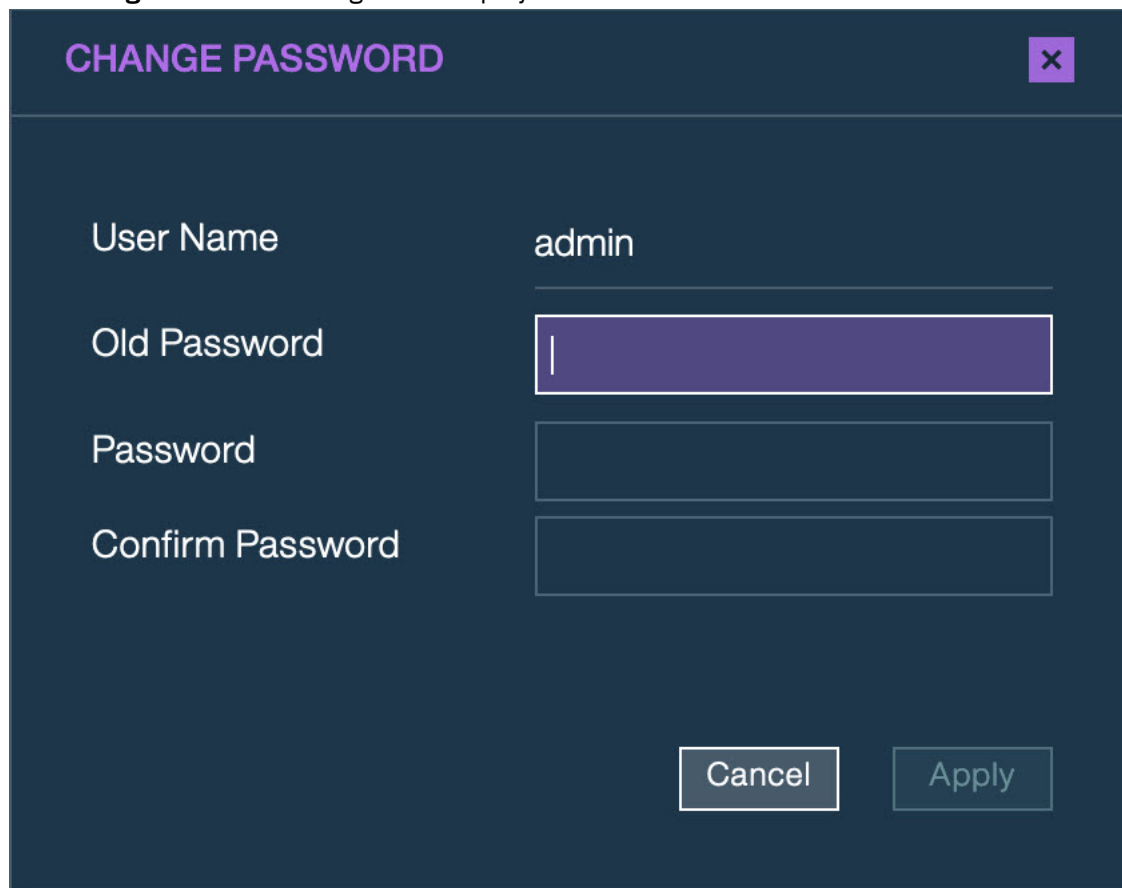
The image shows a 'CHANGE PASSWORD' dialog box with a dark blue background. At the top, the title 'CHANGE PASSWORD' is in white, and there is a close button (X) in a red square. Below the title, there are four input fields arranged vertically. The first field is labeled 'User Name' and contains the text 'admin'. The second field is labeled 'Old Password' and is empty. The third field is labeled 'Password' and is empty. The fourth field is labeled 'Confirm Password' and is empty. At the bottom right of the dialog box, there are two buttons: 'Cancel' and 'Apply', both in white text on a dark blue background.

Figure 24. Change Password dialog box

3. Enter the current password for the user account and then the new password as required.

Note: The minimum password length is seven characters and it must include at least one letter and one digit.

4. Click **Apply**.

The password for the selected user account is changed.

Deleting a user

When necessary, you can delete any user account.

About this task

After you delete a *Spectrum Connect admin* user account from the GUI, the specific user can no longer log in to the IBM Spectrum Connect server from either the GUI or the CLI. Although the user deletion is a non-reversible operation, you can redefine the same username as explained in [“Adding a new user” on page 31](#).

Note: Deleting a IBM Spectrum Connect user does not affect the storage credentials.

Procedure

1. Click **Users and Groups** in the Settings menu.
The Users and Groups dialog box is displayed, open to the Users list view. (See [Figure 22 on page 32](#).)
2. Click the **Remove** button on the row of the user account that you want to remove.
A confirmation request message is displayed.
3. Click **Yes** to delete the user or **No** to cancel the operation.
If you selected **Yes**, the name of the deleted user is removed from the Users list view.

Adding an LDAP group

If LDAP is enabled, you can add an LDAP group that will provide any users that belong to that group access to Spectrum Connect.

About this task

You can add LDAP groups to authorize any user that belongs to that group for logging into Spectrum Connect and performing GUI or CLI management actions.

Procedure

1. Click **Users and Groups** in the Settings menu.
The Users and Groups dialog box is displayed.
2. Select **Groups** at the top.
The Groups list view displays and shows information for any existing LDAP groups.

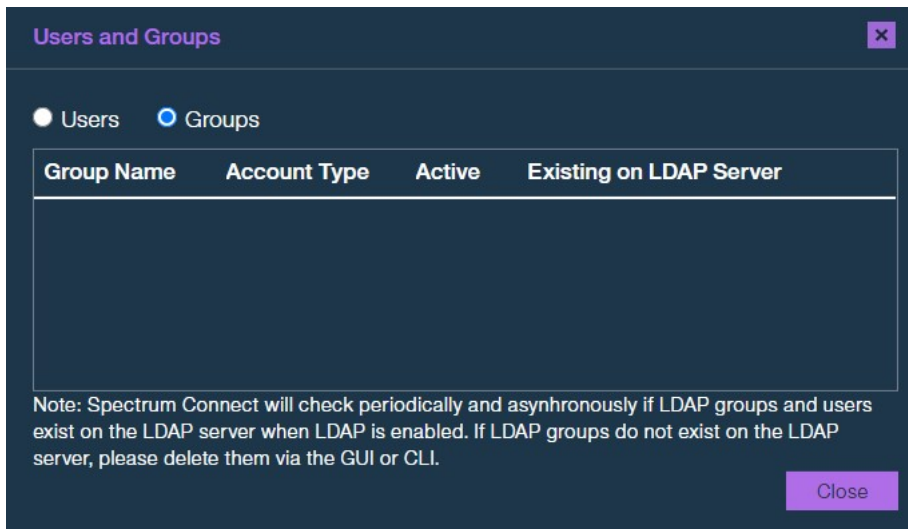


Figure 25. Groups list view in the Users and Groups dialog box

3. Click **Add**.

The New LDAP Group dialog box is displayed.

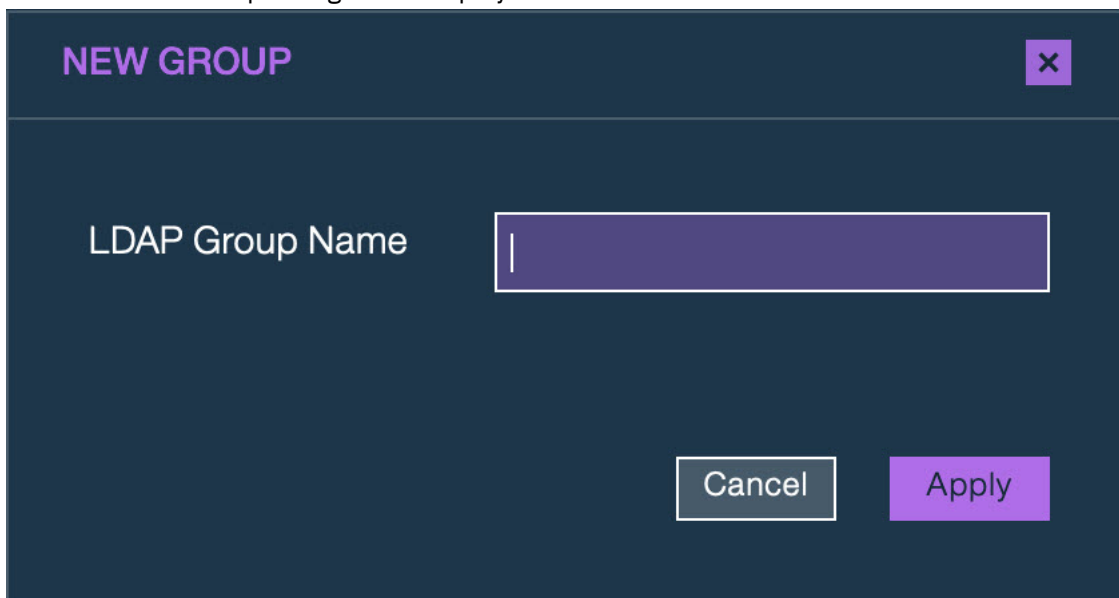


Figure 26. New LDAP Group dialog box

4. Enter the group name that is defined on the LDAP server and then click **Apply**.

The name of the new group is added to the Groups list view.

Deleting an LDAP group

When necessary, you can delete an LDAP group that was previously added to Spectrum Connect.

About this task

When you delete an LDAP group, the LDAP users that belonged to that group can no longer log in to the Spectrum Connect server from either the GUI or the CLI.

Procedure

1. Click **Users and Groups** in the Settings menu.

The Users and Groups dialog box is displayed.

2. Select **Groups** at the top.

The Groups list view is displayed and shows information for any existing LDAP groups. (See [Figure 25](#) on page 35.)

3. Click the **Remove** button on the row of the group that you want to remove.

A confirmation request message is displayed.

4. Click **Yes** to delete the group or **No** to cancel the operation.

If you selected **Yes**, the name of the deleted group is removed from the Groups list view.

Managing storage systems

All IBM storage systems that provide storage resources to your VMware platforms must be defined as storage systems on IBM Spectrum Connect.

To access the storage system management options, go to the **Storage Systems** pane of the Spectrum Connect GUI, illustrated below. You can then view, add, manage the storage systems and their resources, as explained in the following sections.

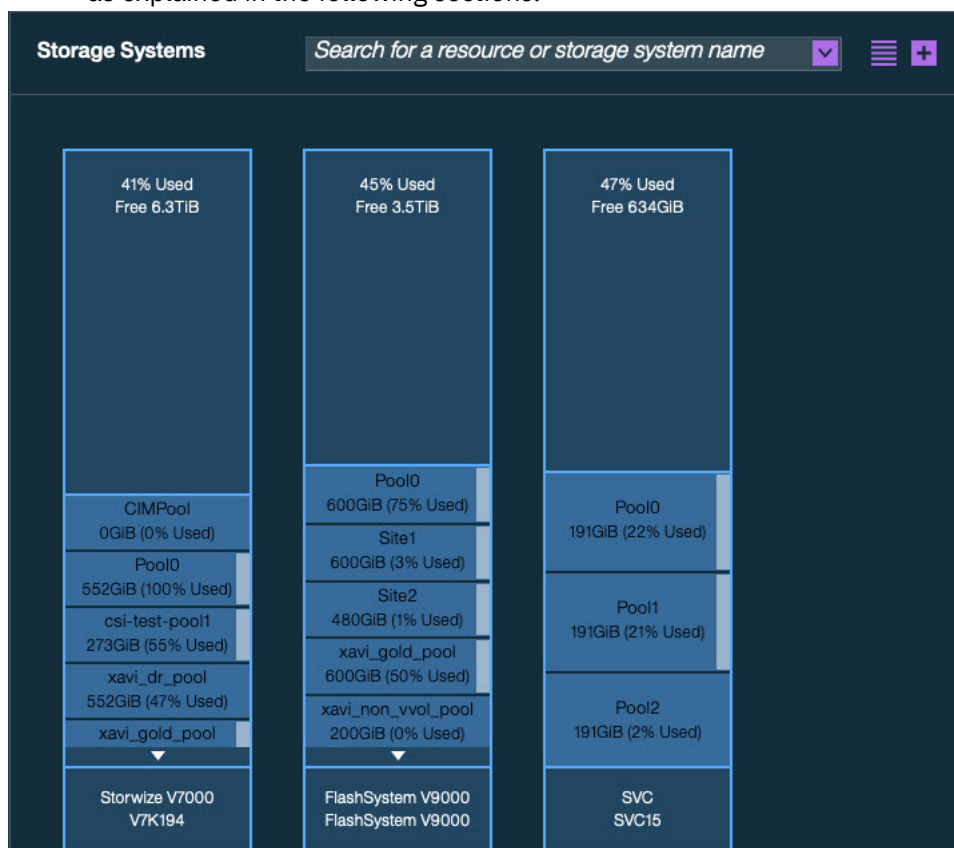


Figure 27. Storage Systems pane

Note: The same operations are available from the CLI as well, as explained “CLI – Adding or removing storage system credentials” on page 78 and in “CLI – Managing storage systems” on page 80.

- “Entering the storage system credentials” on page 37
- “Adding a storage system” on page 38
- “Working with storage system views” on page 40
- “Modifying the IP address or hostname of a storage system” on page 42
- “Removing a storage system” on page 43

Entering the storage system credentials

The storage system credentials are used to connect to the IBM storage system or systems, which your cloud interfaces use for storage provisioning.

About this task

From the Spectrum Connect GUI you can set or change the current storage system access credentials that are used for accessing all the IBM storage systems.

Important:

- An identical storage admin user account with identical credentials (the same username and password) must already be predefined on all the IBM storage systems that you intend to use. Spectrum Connect can use only **a single system management account** for accessing all the different storage systems that you use. For storage systems, running Spectrum Virtualize, ensure that the credentials belong to a user account with *VASAProvider* role.

For more information about how to define a storage admin account on your IBM storage systems, refer to the relevant storage system management tools documentation.

- Setting the storage credentials on Spectrum Connect allows you to add the IBM storage systems on the next step.

Note: The same operations are available from the CLI as well, as explained in [“CLI – Adding or removing storage system credentials” on page 78](#).

Procedure

1. Click the **Settings** button and select **Storage credentials** from the Settings menu.



Figure 28. Settings button

The **Storage Credentials** dialog box is displayed. The dialog box presents the currently defined storage system username in the **User name** configuration box.

A screenshot of the 'Storage Credentials' dialog box. It has a dark blue background with a title bar at the top containing the text 'Storage Credentials' and a close button (X). Below the title bar, there are two input fields: 'User Name' and 'Password'. The 'User Name' field contains a single character 't'. Below these fields is a checkbox labeled 'Directory account', which is currently unchecked. At the bottom of the dialog are two buttons: 'Cancel' and 'Apply'.

Figure 29. Current storage system username (for all storage systems)

2. Enter the username and password of the storage admin user that was defined on all your IBM storage systems.
3. If the storage admin user account is defined on a directory server, select the **Directory account** check box. If the storage admin user account is locally-defined on the storage system, clear the check box.
4. Click **Apply**.

What to do next

You can now start adding storage systems. Spectrum Connect will use the credentials that you have set in order to connect to the storage systems that you add.



Attention: During regular operation, whenever a directory-based storage admin fails to log in (from the Spectrum Connect side) to any storage system that is in use, Spectrum Connect immediately locks the storage admin user account and all storage systems become inaccessible on the Spectrum Connect side. This is to prevent repeated login attempt failures after which the directory server blocks that user account. In such a case, set the storage system credentials again to unlock the storage admin account on the Spectrum Connect side, with either the same credentials or with updated credentials. The equivalent action in the Spectrum Connect CLI is to use the force credentials options, as described in [“CLI – Adding or removing storage system credentials”](#) on page 78.

Adding a storage system

After the storage system credentials are set, you can start adding storage systems to Spectrum Connect.

About this task

The storage systems that you add can be used by the solution components that are included in the Spectrum Connect package (see [“Included cloud interfaces”](#) on page 1). You can add each individual storage system separately, as described in the following procedure.

Procedure

1. Click the **Add** button on the Storage Systems pane.




Figure 30. Add button

The **Add New IBM Storage System** dialog box is displayed.

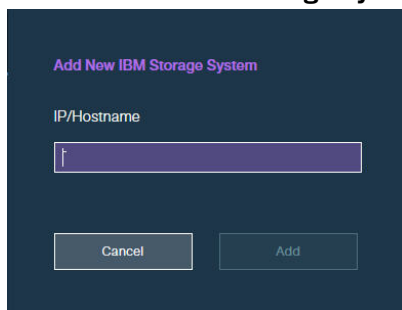


Figure 31. Add New IBM Storage System dialog box

2. Enter the management IP address or hostname of the array.
3. Click **Add**.

If the credentials are correct (as previously defined; see [“Entering the storage system credentials”](#) on page 37) and the IP connection is established, the storage system is added to the **Storage Systems** pane.

If the storage system includes previously defined storage pools, you can view their names and sizes on the system. If no pools exist on the system, you can define them, as explained in [“Defining and attaching storage resources”](#) on page 49.

Spectrum Connect fetches information about storage resources on a system every ten minutes by default. You can refresh the storage resource information immediately by right-clicking a system that you want to refresh, and then selecting **Refresh**.

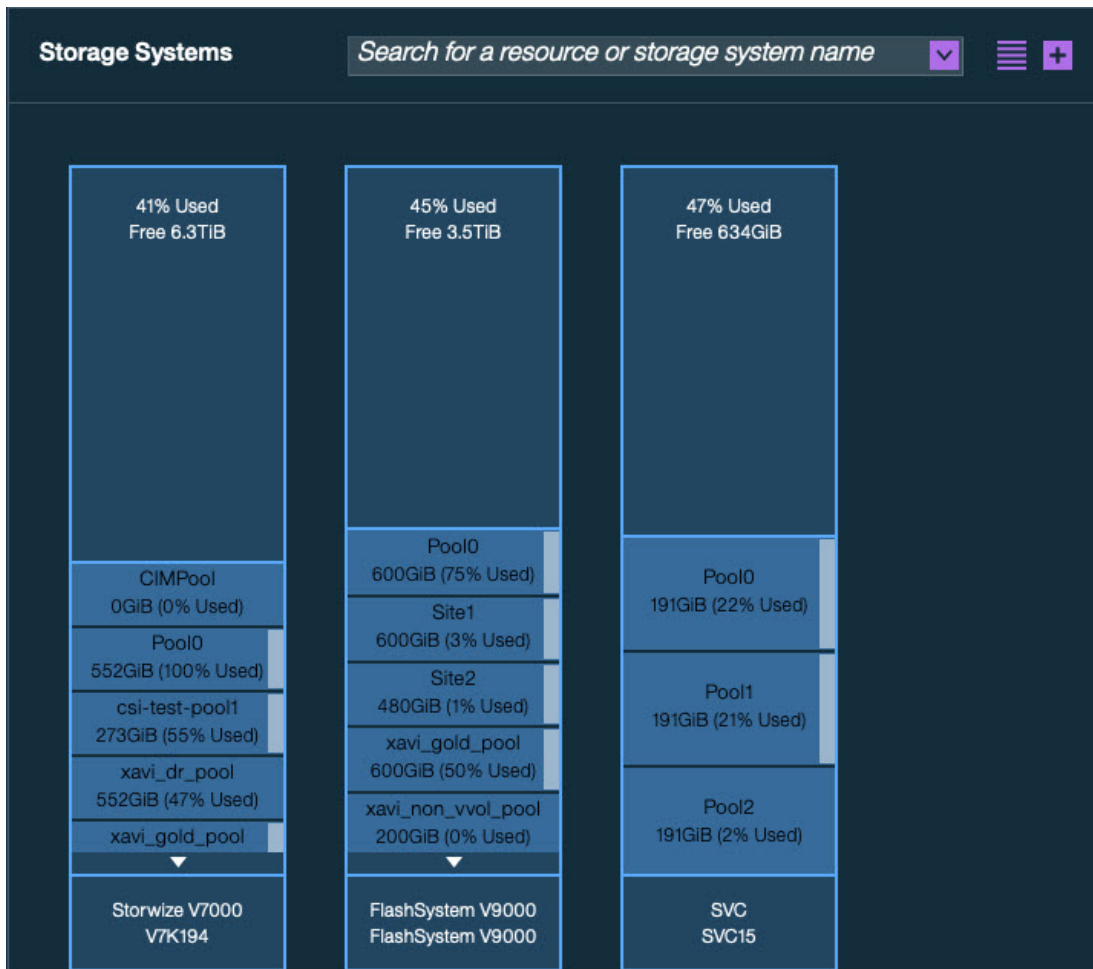


Figure 32. Storage Systems pane, bar view

If a storage system connectivity problem occurs, Spectrum Connect displays a red frame around the system. Move the mouse pointer over the system, and click the red triangle to display the error message.

4. Click the **Table View** button to display the existing storage systems as a table.

RESOURCE	STORAGE ARRAY	USAGE	SIZE(GiB)	SERVICE	TYPE
your_resource2-your_resour...	XIV 6003304	50%	192.53	your_service1	FlashSystem ..
your_resource2-your_resour...	XIV gen4-09	50%	192.53	your_service1	FlashSystem ..
your_resource3-your_resour...	XIV 6003304	33%	288.79	your_service3	FlashSystem ..
your_resource3-your_resour...	XIV gen4-09	33%	288.79	your_service3	FlashSystem ..
your_resource_1-your_resou...	XIV 6003304	25%	385.06	your_service1	FlashSystem ..
your_resource_1-your_resou...	XIV gen4-09	25%	385.06	your_service1	FlashSystem ..

Figure 33. Storage Systems pane, table view

What to do next

See “Working with storage system views” on page 40 to learn how arrange storage systems in the table view or search for a specific storage system or resource.

Working with storage system views

Spectrum Connect offers powerful search tools to help you locate a specific storage system or resource, according to its name or other attributes.

About this task

After the storage systems become visible on the Storage System pane of Spectrum Connect, you can arrange the way they appear in the table view. In addition, you can use the search box on the top of the Storage System pane to locate a specific storage system or resource, as described below.

Procedure

1. In the table view mode, click on an attribute column header to arrange the existing storage systems and resources, according to one on the following criteria:

- Resource name
- Parent pool name
- Storage array name
- Storage space usage in %
- Size in GiB
- Storage service it is attached to, if any
- Storage system type

You can change the item order by clicking the arrow in the column header.

Storage Resources							
Search for a resource or storage system name							
RESOURCE	PARENT POOL	STORAGE AR...	USAGE	SIZE(G...	SERVICE	TYPE	
csi-test-pool1		V7K194	54%	273		Storwize V7..	
xavi_gold_pool		FlashSystem V9000	50%	600		FlashSyste...	
xavi_dr_pool		V7K194	46%	552		Storwize V7..	
test3_Pool1	Pool1	SVC15	35%	20		SVC	
Pool0_SRA_P	Pool0	FlashSystem V9000	33%	450.65		FlashSyste...	
Pool0		SVC15	21%	191		SVC	
Pool1		SVC15	20%	191		SVC	
test3_Pool0	Pool0	SVC15	15%	20		SVC	
test_mirror_Pool1	Pool1	SVC15	10%	20		SVC	
xavi_child_pool_19..	xavi_pool	V7K194	7%	70		Storwize V7..	
kouichi	Pool0	V7K194	5%	40		Storwize V7..	
test_mirror_Pool0	Pool0	SVC15	5%	20		SVC	

Figure 34. Storage Systems pane with storage elements arranged according to descending space usage

2. Enter a full or partial name of a storage system or resource into the search box.

Spectrum Connect displays search results, highlighting the names that match the search string.

The screenshot shows a table titled 'Storage Resources' with a search bar at the top containing the text 'gold'. The table has columns: RESOURCE, PARENT POOL, STORAGE AR..., USAGE, SIZE(G..., SERVICE, and TYPE. There are four rows of data, each representing a storage resource and its usage.

RESOURCE	PARENT POOL	STORAGE AR...	USAGE	SIZE(G...	SERVICE	TYPE
xavi_gold_pool		V7K194	63%	831		Storwize V7..
xavi_gold_pool		FlashSystem V9000	50%	600		FlashSyste...
xavi_k8s_113_gold... xavi_gold_pool		FlashSystem V9000	0%	300		FlashSyste...
xavi_k8s_113_gold... xavi_gold_pool		V7K194	0%	500		Storwize V7..

Figure 35. Storage Systems pane with highlighted search string results

- Click the arrow in the search box to display the advanced filtering tool.

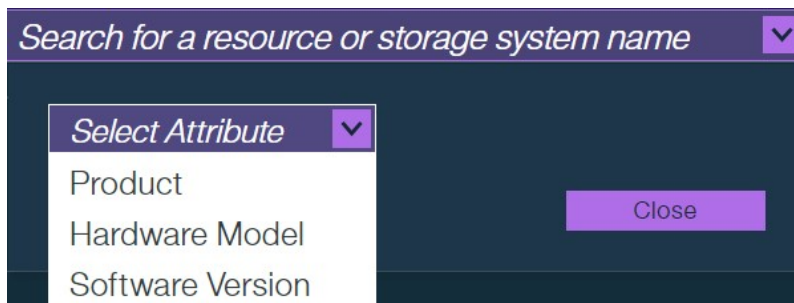


Figure 36. Advanced filtering tool

- In the advanced filtering tool, select one or more of the following filtering attributes and their values from the drop-down lists. The available attributes may vary, depending on a storage system in use.
 - Software version
 - Hardware model
 - Product type

Spectrum Connect arranges storage elements according to the selected filtering attributes and their values. The best matching results are grouped at the left in the bar view mode and at the top in the table view.

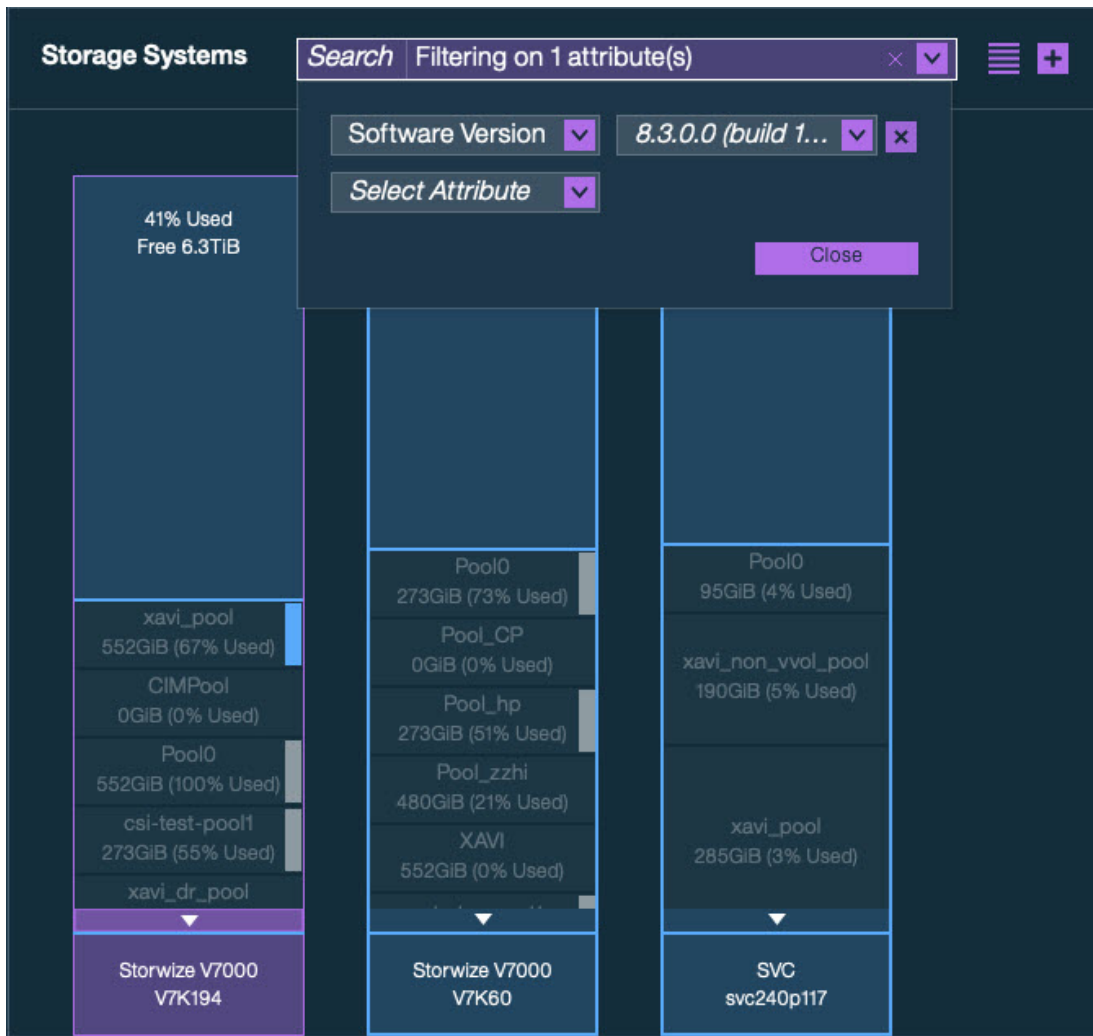


Figure 37. Storage Systems pane with storage elements filtered according to software version

Modifying the IP address or hostname of a storage system

At any time, you can modify the IP address or hostname of an added storage system.

About this task

If the management IP address or hostname of a storage system changes, you can update this change on Spectrum Connect without having to remove or re-add the storage system.

Procedure

1. In the Storage Systems pane, right-click a storage system that you want to update, and then select **Modify**.

The **Array Settings** dialog box is displayed.

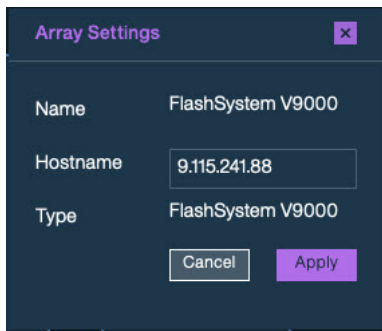


Figure 38. Array Settings dialog box

Note: If a storage system has multiple management IP addresses, you can display all of them by moving the mouse pointer over the **Hostname** field in the **Array Settings** dialog box.

2. Enter the new management IP address or hostname of the storage system, and then click **Apply**.

Removing a storage system

If a storage system is no longer needed, you can remove and disconnect it from Spectrum Connect.

About this task

- A removed storage system, along with its storage pools and volumes, can no longer be managed by the included solution components (see [“Included cloud interfaces”](#) on page 1).
- If the removed storage system contains working storage resources and volumes, the information of these storage pools and volumes is no longer displayed in vSphere Web Client. However, **vSphere data access and service level for these storage pools and volumes is not affected**. In addition, the removed system and its storage resources and volumes can be managed from the standard IBM storage system management tools.
- After the removal, you can add the storage system back again to fully restore its management.

Procedure

1. In the **Storage Systems** pane, right-click a storage system that you want to remove, and then select **Delete**.

The confirmation message is displayed.

2. Click **OK** to confirm your action.

The storage system is removed.

Important: Do not change VVol-related configuration on Spectrum Connect, after the storage system holding the VVol metadata information was detached from Spectrum Connect, and then connected again.

- If Spectrum Connect is not registered as a storage provider on vCenter, perform the registration (this recovers the metadata) and then connect the storage system.
- If Spectrum Connect is registered as a storage provider on vCenter, wait until vCenter finishes VASA Provider activation for this storage system (it happens automatically). The activation is completed after the storage system appears under Spectrum Connect in the vCenter. To verify that activation is successful, refresh the Spectrum Connect GUI. The storage resource that had been attached to a VVol-enabled service before the storage system was removed, appears as attached to this service.

Managing storage spaces and services

After defining physical storage resources on Spectrum Connect you must add virtual storage elements: spaces and services.

Spectrum Connect administers storage at the virtual level, using spaces and services. This simplifies storage provisioning, and allows users to allocate their own storage resources to suit requirements of a specific VM.

Storage spaces and services are described in the [“Storage space and service management”](#) on page 2 section of Chapter 1.

Storage spaces are added and managed, using the **Manage Spaces** option in the Settings menu. You can also add a new space via the drop-down menu of the Default Space tab on the **Spaces/Storage Services** pane.

Storage services are added and configured via the Spaces/Storage Services pane of the Spectrum Connect UI.

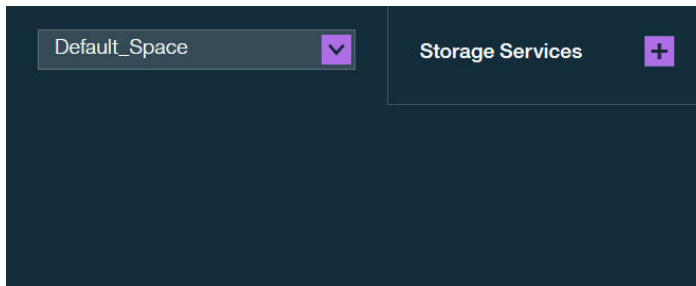


Figure 39. Spaces/Storage Services pane

- [“Adding a storage space”](#) on page 44
- [“Removing a storage space”](#) on page 45
- [“Adding a storage service”](#) on page 46
- [“Removing a storage service”](#) on page 48
- [“Defining and attaching storage resources”](#) on page 49
- [“Defining and attaching replicated storage resources \(IBM FlashSystem A9000 and IBM FlashSystem A9000R only\)”](#) on page 52
- [“Modifying storage resources”](#) on page 56
- [“Modifying storage resource attachments”](#) on page 57

Adding a storage space

Once physical storage elements are defined in the IBM Spectrum Connect, you can continue by adding the first virtual entity – a storage space.

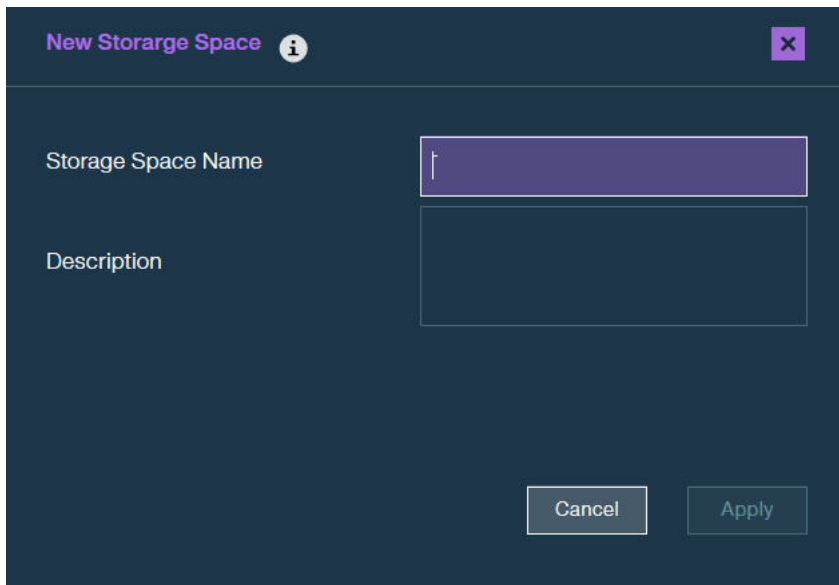
About this task

A storage space is a logical grouping of storage services and underlying physical storage resources. This combination determines the storage that is available when a user requests a storage service provisioning.

A storage space is added by providing it with a meaningful name and description.

Procedure


1. Click the **Settings** button and select **Manage storage spaces** from the Settings menu.
The list of storage spaces is displayed.
2. Click **Add** .
The **New Storage Space** dialog box is displayed.



The dialog box has a title bar with 'New Storage Space' and an information icon. It contains two input fields: 'Storage Space Name' and 'Description'. At the bottom, there are 'Cancel' and 'Apply' buttons.

Figure 40. New Storage Space dialog box

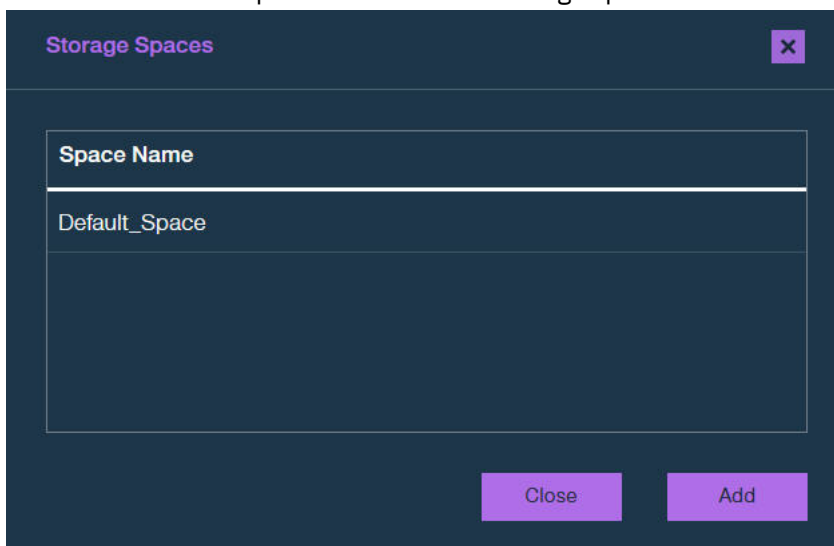3. Enter the name and description of the storage space that you want to create, and then click **Apply**. The name and description of the created storage space is added to the Spaces list.



The dialog box shows a table with one row: 'Default_Space'. Below the table are 'Close' and 'Add' buttons.

Space Name
Default_Space

Figure 41. List of storage spaces

Note: You can also add a new space by clicking **Add New Space** in the drop-down menu of the **Default Space** tab on the **Spaces/Storage Services** pane.



The drop-down menu shows 'All Storage Services' selected, with options for 'All Storage Services', 'Default_Space', and 'Add New Storage Space'.

Removing a storage space

If a storage space is no longer needed, you can remove it from Spectrum Connect.

Before you begin

Before removing a storage space, delete all services that are defined on this space. See [“Removing a storage service”](#) on page 48

About this task

A removed storage system, along with its services and pools, can no longer be available for storage service provisioning.

Procedure

1. Click the **Settings** button and select **Manage spaces** from the Settings menu.
The Spectrum Connect space list is displayed, detailing all existing storage spaces.
2. Click the **Remove** button on the row of the storage space that you want to remove.
A confirmation message appears.
3. Click **OK** to remove the space, or **Cancel** to cancel the operation.

Adding a storage service

After a storage space is defined, you can start adding storage services to the space.

About this task

Storage services contain one or more physical storage pools. In addition to storage capacity, a service has a set of capabilities, defining the storage quality, such as thin/thick provisioning, compression, encryption, etc.

The services that you add become available for the solution components included in the Spectrum Connect package (see [“Included cloud interfaces” on page 1](#)). When provisioning storage, the end users consume it from the spaces and services without dealing underlying physical storage infrastructure.

You can add each individual storage service separately, as described in the following procedure.

Procedure

1. In the Spaces tab of the **Spaces/Storage Services** pane, select a space on which you want to create a new service.
2. Click **Add** button on the Spaces/Storage Services pane.

The **New Storage Service** dialog box is displayed.

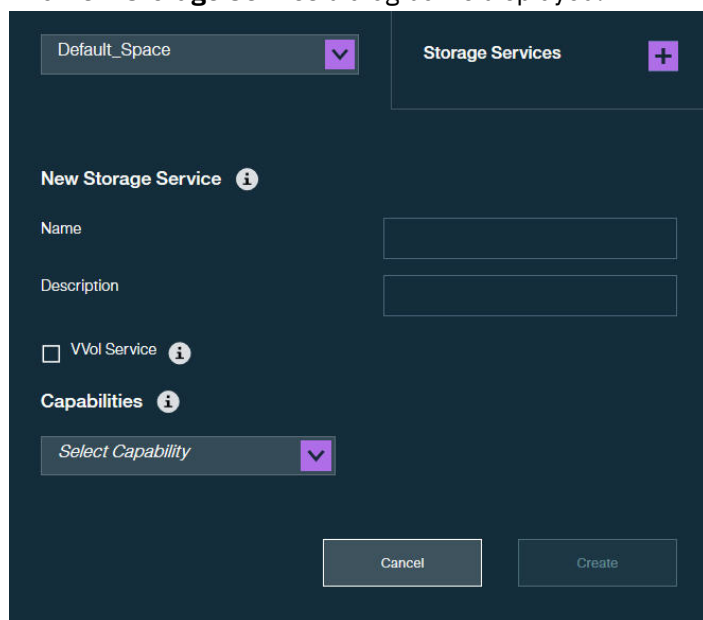


Figure 42. New Storage Service dialog box

3. Use the **Select Capability** drop-down box to define the new service attributes and their values. See table below for details.

Important: Spectrum Connect uses dynamic filtering to simplify selection of a storage system and a resource, which provides the best match for selected service attributes. When a service is created, Spectrum Connect groups the best matching storage systems in the left section of the Storage Systems pane. Also, the matching storage resources are grouped at the top of the respective storage system. In addition, storage system and resources that do not support the selected service attributes are grayed out in the bar view or removed from the list in the table view.

Table 6. Service parameters	
Parameter	Description and values
Name	Alphanumeric string for service identification. This is a mandatory field. The service name must not contain spaces.
Description	Alphanumeric string for service description.
QoS	<p>Enables the use of the Quality of Service (QoS) feature for the service. QoS is applicable to volumes (Max Independent Performance) or storage resources (Max Shared Performance), setting the IOPS and bandwidth limits within the following ranges:</p> <ul style="list-style-type: none"> • IOPS: 0-100000 • BW (bandwidth): 0-10000 MB/s <p>Currently, the QoS capability is not available for IBM Spectrum® Virtualize Family storage systems or for IBM FlashSystem A9000 or A9000R storage systems that use domain administrator storage credentials.</p>
Encryption	Enables encryption for the service. If enabled, you can attach only encrypted storage resource to the service.
Flash	Enables utilization of a storage resource, located on a flash-based storage resource. This can be an IBM Spectrum Virtualize Family storage system or an IBM FlashSystem A9000 or A9000R storage system.
Replication	Enables synchronous mirroring for the service provisioned on IBM FlashSystem A9000 and A9000R. Additional service capabilities, such as encryption or compression, are applied to both primary and secondary storage pools if they are attached to the replicated service. See “Defining and attaching replicated storage resources (IBM FlashSystem A9000 and IBM FlashSystem A9000R only)” on page 52.
Availability	<p>Enables the use of IBM high-availability technologies for HA storage deployments of IBM Spectrum Virtualize Family storage systems. Select one of the following HA methods:</p> <ul style="list-style-type: none"> • Stretched – Stretched cluster topology. The data is mirrored across two different locations, allowing for fast non-disruptive failover with no interruption of service and automatic re-synchronization in the event of small-scale outages. • HyperSwap® – Local HyperSwap topology. The local HyperSwap is similar to the stretched cluster method, spreading the nodes of the system across two sites, with storage at a third site acting as a tie-breaking quorum device. However, it does not support VVols. The HyperSwap functionality is available for storage systems that support more than one I/O group. • Mirrored – Data mirroring. Two mirrored copies of the volume are maintained on the same storage system, while each copy of the volume is kept in a separate storage pool. <p>With the default Regular option, a storage system uses a single volume.</p>

Table 6. Service parameters (continued)

Parameter	Description and values
Space Efficiency	<p>Enables storage space efficiency features for the service. When selected, you can configure the service to be attached to a thick- or thin-provisioned storage resource.</p> <p>Configuration considerations</p> <p>When adding a VVol-enabled service, define its space efficiency during VM provisioning via the vSphere web client. To allow this, disable space efficiency in Spectrum Connect.</p>
Data Reduction	<p>Enables the use of compression and/or data deduplication as data reduction methods.</p> <p>Note: Compression only or deduplication only are not supported for FlashSystem A9000 or A9000R. Only compression + deduplication is supported for those storage systems.</p> <ul style="list-style-type: none"> • Compression – A storage resource must have data compression enabled prior to service attachment (via product CLI or UI). • Deduplication – The deduplication process eliminates duplicate data copies, resulting in substantial reduction in amount of stored information. • Compression + Deduplication – A combination of compression and deduplication techniques for additional data reduction. <p>Configuration considerations</p> <p>For storage services with deduplication or compression + deduplication data reduction capabilities, you can attach only data reduction pools (DRPs) as storage resources.</p> <p>Note: Currently, DS8000® storage systems do not support data reduction capability.</p>
VVol Service	<p>Enables virtual volume functionality for the service.</p> <p>The virtual volume functionality is supported by storage systems that run IBM Spectrum Virtualize (7.6 or later).</p>

4. Click **Create** to finish the procedure.

A new service is added to the current **Spaces** tab. The yellow frame and the exclamation mark indicate that the service has not been delegated to an interface yet, or it has no storage resources attached to it.

5. You can edit the service properties by right-clicking a service which you want modify, and then selecting **Modify Properties**.

What to do next

Define and attach storage resources (pools) to the service, as explained in [“Defining and attaching storage resources”](#) on page 49. For replicated serviced, define and attach paired pools, which contain primary and secondary pools, as detailed in [“Defining and attaching replicated storage resources \(IBM FlashSystem A9000 and IBM FlashSystem A9000R only\)”](#) on page 52.

Removing a storage service

If a storage service is no longer needed, you can remove it.

About this task

- A removed storage service, along with its pools, can no longer be managed by the included solution components.

- If the removed storage service contains working storage resources, these resources become available for allocation by other existing services.

Procedure

1. On the **Spaces/Storage Services** pane, right-click a service that you want to remove, and then select **Remove**.

A confirmation message is displayed.

2. Click **OK** to confirm the removal.

Defining and attaching storage resources

After the storage systems and services are added, you can start defining resources on the systems.

Before you begin

Verify that the storage resource, which you intend to define and attach, will be compatible with the service in terms of space efficiency, compression mode or any other attribute defined for the service.

About this task

If no resources (pools) exist on the storage systems, you can define the resources and attach them to a service to make the physical storage available for the Spectrum Connect components and end users. You can attach several resources that belong to the same or different storage systems to a single service. However, a specific resource can be added to one service only.

Note: For VVol-enabled services, the minimum recommended storage resource size is 500 GiB.

Procedure

1. On the **Spaces/Storage Services** pane, select the storage space from which you want to choose storage services.

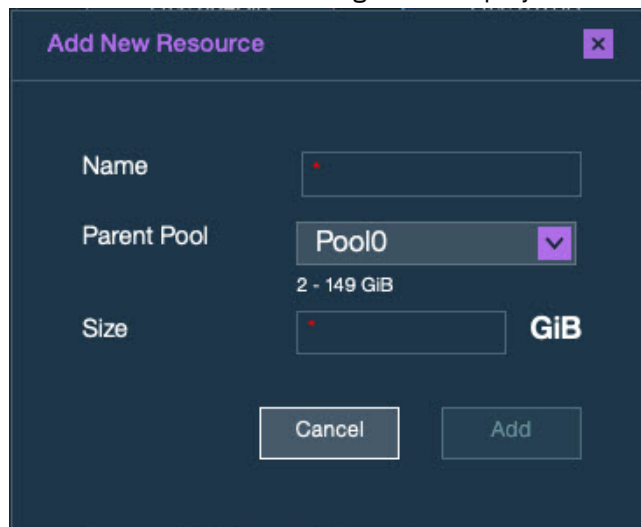
The available services that reside on the selected storage space are immediately displayed.

2. Click on a service to which you want to attach a resource.

The service color changes to blue to indicate selection.

3. On the Storage Systems pane, right-click a storage system on which you want to define a new resource, and then select **Add Resource**.

The Add New Resource dialog box is displayed.



The image shows a dark-themed dialog box titled "Add New Resource" with a close button (X) in the top right corner. It contains three input fields: "Name" with a red asterisk indicating it is required, "Parent Pool" with a dropdown menu showing "Pool0" and a range of "2 - 149 GiB", and "Size" with a red asterisk and a unit label "GiB". At the bottom, there are two buttons: "Cancel" and "Add".

Figure 43. Add New Resource dialog box

4. In the **Add New Resource** dialog box, enter configuration parameters for a new resource. See table below for details.

Table 7. Storage resource parameters	
Parameter	Description and values
Name	Alphanumeric string for storage resource identification. The name must not contain spaces. This is a mandatory field.
Domain	Management domain of the pool IBM FlashSystem A9000 and A9000R storage systems. Configuration considerations To use management domains, verify that: <ul style="list-style-type: none">• Domains are already defined on your storage system.• Default credentials of a storage admin user are assigned to the domain.
Parent Pool	The name of the parent pool for the new resource.
Size	Storage resource size in GiB.
Snapshot reserve	Percentage of storage space on the service reserved for snapshots.

Note: EasyTier-enabled parent pools defined on storage systems, running Spectrum Virtualize software, can be attached to storage services to create a compatible service. IBM EasyTier is a pool-level feature and it is transparent to Spectrum Connect. As a result, all volumes in the EasyTier-enabled service retain this capability.

5. Click **Add**.

The storage resource is created on the storage system and attached to the service. The resource color changes to blue to indicate the successful attachment.

The resources defined on the system before the system was attached to Spectrum Connect, can be allocated to a service by selecting the service and clicking an unattached resource.

A storage service provides indication for the allocated and used storage space.

- Allocated – amount of storage space available on all pools connected to the service.
- Used – amount of storage space used by all storage elements connected to the service (datastores, servers, etc).

Important:

- When attaching a resource to an over-provisioned service, verify that a storage system which hosts the pool has enough capacity to accommodate the service space requirements.
- Datastores created on VVol-enabled services always display the meta and thick pools of its group pool to be 100% full. You can disregard this alert.

6. You can display detailed information for all storage resources defined on a storage system by switching to the table view.

The **System Storage Resources** table is displayed.

Storage Resources					
Search for a resource or storage system name					
RESOURCE	STORAGE ARRAY	USAGE	SIZE(GiB)	SERVICE	TYPE
your_resource2-your_resour...	XIV 6003304	50% <div></div>	192.53	your_service1	FlashSystem ..
your_resource2-your_resour...	XIV gen4-09	50% <div></div>	192.53	your_service1	FlashSystem ..
your_resource3-your_resour...	XIV 6003304	33% <div></div>	288.79	your_service3	FlashSystem ..
your_resource3-your_resour...	XIV gen4-09	33% <div></div>	288.79	your_service3	FlashSystem ..
your_resource_1-your_resou...	XIV 6003304	25% <div></div>	385.06	your_service1	FlashSystem ..
your_resource_1-your_resou...	XIV gen4-09	25% <div></div>	385.06	your_service1	FlashSystem ..

Figure 44. Storage Resources table

The table lists all storage resources defined on the storage system, including their sizes, free and used storage space, parent pool for storage systems that run IBM Spectrum Virtualize, and a service that the resource is attached to. When you click on a storage resource row to select it, you can complete the following:

- Click the **Attach/Delegate** button to attach the storage resource to a previously selected storage service.
- Click the **Detach/Cancel Delegation** button to detach the storage resource from a previously selected storage service.
- Right-click and select **Modify** to resize the resource or remove it.
- Right-click and select **Delete** button to delete child pools. This option does not exist for parent pools or DS8000 pools.

Note: If you intend to use data-reduction (DR) pools, use this procedure to migrate a volume from a non-DR to a DR-enabled pool:

- In Spectrum Connect, add a DR-enabled storage resource to a storage system that supports this feature.
 - Attach the new storage resource to a service.
 - Use the **addvdiskcopy** CLI command with autodelete option to migrate a volume to the DR pool.
 - Detach the non-DR storage resource from the service, then remove the resource.
7. You can display detailed information for all storage resources attached to a service on a storage system by right-clicking the service on which you want zoom, and then selecting **View Resources**. The **Service Storage Resources** table is displayed.

your_service1 Storage Resources					
Name	▲	Size (GiB)	Free (GiB)	Used (GiB)	Storage system
your_resource2-your_resource2		192.53	96.26	96.26	XIV gen4-09
your_resource2-your_resource2		192.53	96.26	96.26	XIV gen4-09
your_resource_1-your_resource_1		385.06	288.79	96.26	XIV gen4-09
your_resource_1-your_resource_1		385.06	288.79	96.26	XIV gen4-09

Figure 45. Service Storage Resources table

The table lists all storage resources attached to the storage service, including their sizes, free and used storage space and a system that the resource was created on. When you click on a storage resource row to select it, you can complete the following:

- Click the **Resource Detach** button to detach the storage resource from a storage service.
- Click the **Resource Settings** button to resize the resource or remove it.
- Click the **Remove** button to delete child pools. This option is not functional for parent pools or DS8000 pools.

Defining and attaching replicated storage resources (IBM FlashSystem A9000 and IBM FlashSystem A9000R only)

For IBM FlashSystem A9000 and IBM FlashSystem A9000R mirrored storage systems and services, you can define primary and secondary storage resources to be used for data replication.

Before you begin

Verify that:

- Primary and secondary storage systems were added to Spectrum Connect.
- A storage service to use the replicated storage resources has the replication capability enabled.
- A target has been defined on a storage system for the management domain to be used by the paired pool. The storage system credentials must be valid for both primary and secondary pool domains.

Note: This procedure only applies to IBM FlashSystem A9000 and IBM FlashSystem A9000R storage systems.

About this task

You can define paired storage resource (pool), which contains a primary (source) pool and secondary (target) pool. Then, the paired pool is attached to a replicated service. This process will create a storage volume and its mirror on the target pool. You can use the IBM Storage Enhancements for VMware vSphere Web Client to provision the volume as a part of a consistency group. The primary and secondary pools reside on the source and target storage systems, which can be located at different sites.

Procedure

1. On the **Spaces/Storage Services** pane, select the storage space from which you want to choose storage services.

The available services that reside on the selected storage space are immediately displayed.

2. Click on a service with replication capabilities to which you want to attach the resources.

The service color changes to blue to indicate selection.

3. On the Storage Systems pane, right-click a compatible storage system on which you want to define a new resource, and then select **Add Resource**.

The Add New Resource dialog box is displayed.

You can choose to create a new paired resource, or select existing ones.

The screenshot shows the 'Add New Resource' dialog box with the 'Create new' option selected under 'Resource Pool'. The 'Resource Setting' section includes fields for Name, Resource Pool (with 'Create new' selected), Size (in GiB), Snapshot reserve (15%), and Type (Paired Pool). The 'Primary Resource' section has dropdowns for Array and Domain. The 'Secondary Resource' section also has dropdowns for Array and Domain. 'Cancel' and 'Add' buttons are at the bottom right.

Figure 46. Add New Resource for replicated service dialog box, Create New option

The screenshot shows the 'Add New Resource' dialog box with the 'Choose existing' option selected under 'Resource Pool'. The 'Resource Setting' section includes fields for Name, Resource Pool (with 'Choose existing' selected), Size (in GiB), Snapshot reserve (N/A), and Type (Paired Pool). The 'Primary Resource' section has dropdowns for Array, Domain, and Pool. The 'Secondary Resource' section also has dropdowns for Array, Domain, and Pool. 'Cancel' and 'Add' buttons are at the bottom right.

Figure 47. Add New Resource for replicated service dialog box, Choose Existing option

4. In the **Add New Resource** dialog box, enter configuration parameters for a new resource (paired pool). See table below for details.

Table 8. Paired pool parameters	
Parameter	Description and values
Name	Alphanumeric string for identification of the replication relationship. The name must not contain spaces.
Create new	New primary and secondary storage resources to be created for the paired pool.
Choose existing	Existing primary and secondary storage resources to be selected for the paired pool.
Array	A storage system to include the primary or secondary storage resource.
Domain	Management domain of the pool on the storage systems,. Configuration considerations To use management domains, verify that: <ul style="list-style-type: none">• Domains are already defined on your storage system.• Default credentials of a storage admin user are assigned to the domain.
Size	Storage resource size in GiB. The size of the replicated pool cannot be larger than the size of the smallest pool of the paired resources (primary or secondary). When you select existing pools for replication, the pool size cannot be changed.
Snapshot reserve	Percentage of storage space on the service reserved for snapshots.

5. Click **Add**.

The storage resource is created on the storage system and attached to the service. The resource color changes to blue to indicate the successful attachment.

You can check pool pairing by hovering your mouse pointer over a primary or secondary storage resource. The paired pool colors change to purple and a coupling line is displayed to indicate the connection.

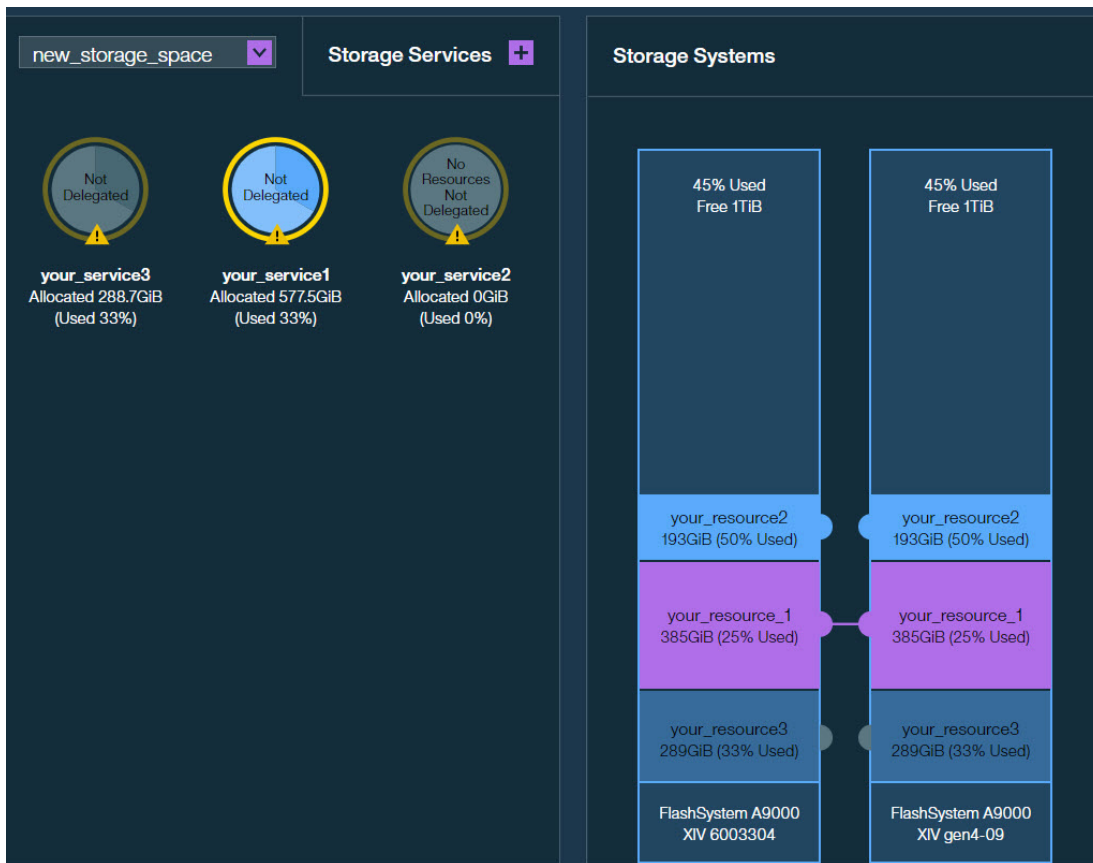


Figure 48. Paired pools

The resources defined on the system before the system was attached to Spectrum Connect, can be allocated to a service by selecting the service and clicking an unattached resource.

A storage service provides indication for the allocated and used storage space.

- Allocated – amount of storage space available on all pools connected to the service.
- Used – amount of storage space used by all storage elements connected to the service (datastores, servers, etc).

Important: When attaching a resource to an over-provisioned service, verify that a storage system which hosts the pool has enough capacity to accommodate the service space requirements.

6. You can display detailed information for all storage resources defined on a storage system by switching to the table view.


The **System Storage Resources** table is displayed.

Storage Resources						
Search for a resource or storage system name						
RESOURCE	STORAGE ARRAY	USAGE	SIZE(GiB)	SERVICE	TYPE	
your_resource2-your_resour...	XIV 6003304	50% <div></div>	192.53	your_service1	FlashSystem ..	
your_resource2-your_resour...	XIV gen4-09	50% <div></div>	192.53	your_service1	FlashSystem ..	
your_resource3-your_resour...	XIV 6003304	33% <div></div>	288.79	your_service3	FlashSystem ..	
your_resource3-your_resour...	XIV gen4-09	33% <div></div>	288.79	your_service3	FlashSystem ..	
your_resource_1-your_resou...	XIV 6003304	25% <div></div>	385.06	your_service1	FlashSystem ..	
your_resource_1-your_resou...	XIV gen4-09	25% <div></div>	385.06	your_service1	FlashSystem ..	

Figure 49. Storage Resources table

The table lists all storage resources defined on the storage system, including their sizes, free and used storage space, and a service that the resource is attached to. When you click on a storage resource row to select it, you can complete the following:

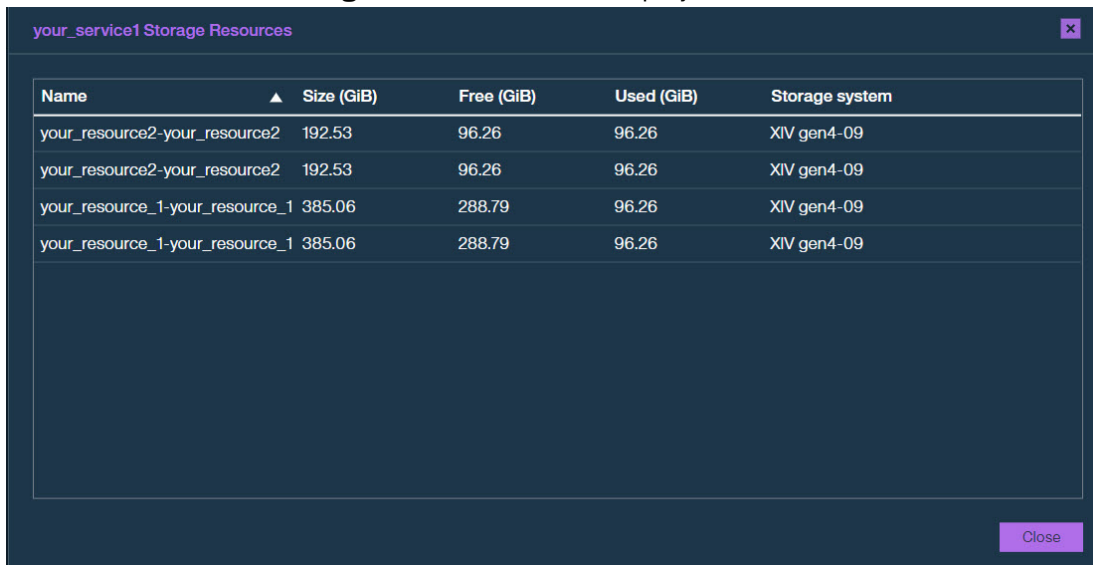- Click the **Attach/Delegate** button to attach the storage resource to a previously selected storage service.
 - Click the **Detach/Cancel Delegation** button to detach the storage resource from a previously selected storage service.
 - Right-click and select **Modify** to resize the resource or remove it.
 - Right-click and select **Unlink** to break the replication connection between the storage resources of the paired pool. The primary and secondary pools themselves remain intact.
7. You can display detailed information for all storage resources attached to a service on a storage system by right-clicking the service on which you want zoom, and then selecting **View Resources**. The **Service Storage Resources** table is displayed.



The screenshot shows a dark-themed dialog box titled "your_service1 Storage Resources" with a close button (X) in the top right corner. Inside the dialog is a table with the following data:

Name	Size (GiB)	Free (GiB)	Used (GiB)	Storage system
your_resource2-your_resource2	192.53	96.26	96.26	XIV gen4-09
your_resource2-your_resource2	192.53	96.26	96.26	XIV gen4-09
your_resource_1-your_resource_1	385.06	288.79	96.26	XIV gen4-09
your_resource_1-your_resource_1	385.06	288.79	96.26	XIV gen4-09

Below the table is a large empty rectangular area. A "Close" button is located in the bottom right corner of the dialog box.

Figure 50. Service Storage Resources table

The table lists all storage resources attached to the storage service, including their sizes, free and used storage space and a system that the resource was created on. When you click on a storage resource row to select it, you can complete the following:

- Click the **Resource Detach** button to detach the storage resource from a storage service.
- Click the **Resource Settings** button to resize the resource or remove it.
- Click the **Remove** button to delete a pool.

Modifying storage resources

If needed, you can modify any resource (pool) defined on a storage system.

About this task

Storage resources can be renamed and resized to match the requirements of the connected services.

Note: Pool resizing does not function for parent or DS8000 pools.

Procedure

1. On the **Storage Systems** pane, right-click a pool which you intend to edit and select **Modify** to edit the pool settings or **Unlink** to unlink replicated pools.
The **Edit Resource** dialog box is displayed.

EDIT RESOURCE [X]

Name

Parent Pool

Size **GiB**

Figure 51. Edit Resource dialog box

2. Configure the following:

- In the **Name** text box, enter the new name for the pool.
- In the **Size** text box, enter the new size for the pool.
- For replicated pools, select **Replicate storage pool and size** to copy the primary pool name and size to the secondary pool in the mirroring relationship.

3. Click **Modify** to save the change.

Note: You can also access the **Resource Settings** dialog box by selecting a storage resource row in the **System Storage Resource** or **Service Storage Resource** table. Refer to [“Defining and attaching storage resources”](#) on page 49 for details.

Modifying storage resource attachments

When required, you can modify a storage resource (pool) service attachments.

About this task

Storage resources can be detached from the service or attached to it.

- A detached storage pool can no longer be managed by the included solution components.
- A detached storage pool becomes available for allocation by other existing services.
- After the detachment, you can attach the pool again to fully restore its management.

Procedure

1. On the **Spaces/Storage Services** pane, right-click a storage service and select **Manage Resources**.

The pools that are currently attached to the service and those that can be attached to it are highlighted on the **Storage Systems** pane.

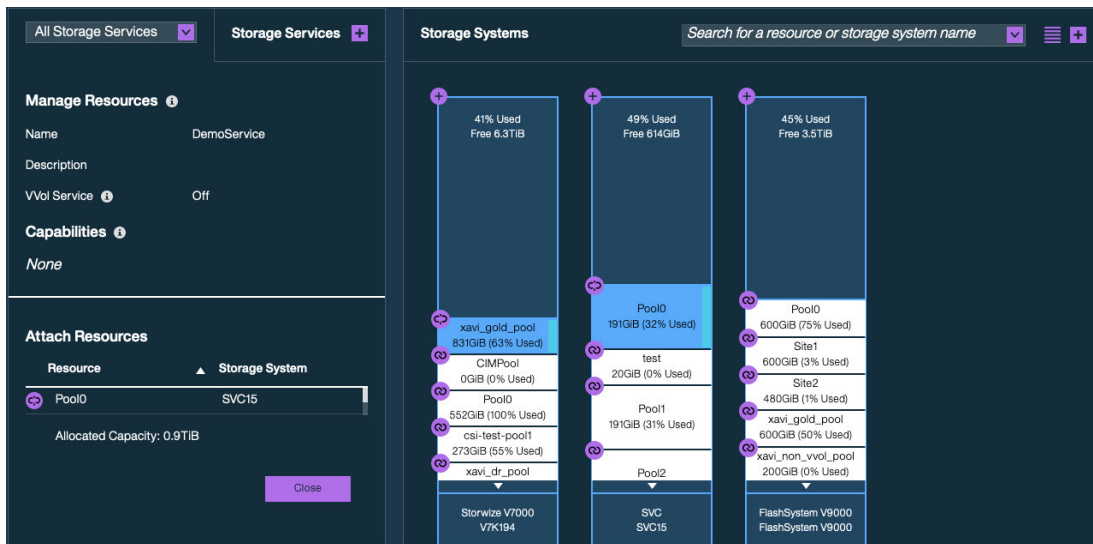


Figure 52. Manage Resources dialog box

2. From the **Storage Systems** pane:

- Click the **Attach/Delegate** button to attach the storage resource to the storage service. The pool color changes to indicate the successful attachment.
- Click the **Detach/Cancel Delegation** button to detach the storage resource from the storage service. The pool color changes to indicate the successful detachment.

Chapter 4. Administration

This chapter details common administrative tasks that can be performed when using the IBM Spectrum Connect.

See the following sections for more information:

- [“Checking and controlling the Spectrum Connect Linux service” on page 59](#)
- [“Checking and modifying the configuration files” on page 59](#)
- [“Changing the Spectrum Connect communication port” on page 62](#)

Checking and controlling the Spectrum Connect Linux service

At any time, you can check whether the Spectrum Connect service runs properly on the Linux host. You can also stop and then start the service if needed.

Procedure

1. Log on to the Linux command prompt environment as a root user.

Important: Only root users can complete service operations.

2. Enter the following command: **service ibm_spectrum_connect status**.

The status of the Celery and Django services is displayed.

```
[root@ibmsc]# service ibm_spectrum_connect status
Celery services are running...
Django service is running...
vWC refresh service is running...
```

What to do next

If you want to stop the Spectrum Connect service, use the **stop** command:

```
[root@ibmsc]# service ibm_spectrum_connect stop
Stopping ibm_spectrum_connect (via systemctl): [ OK ]
```

To start the service again, use the **start** command:

```
[root@ibmsc]# service ibm_spectrum_connect start
Starting ibm_spectrum_connect (via systemctl): [ OK ]
```

If you want to stop and then start the Spectrum Connect service in one command, use the **restart** command:

```
[root@ibmsc]# service ibm_spectrum_connect restart
Restarting ibm_spectrum_connect (via systemctl): [ OK ]
```

Checking and modifying the configuration files

Spectrum Connect has several configuration files that store configuration settings that you can change manually if needed.

You can view and modify the contents of each file with any standard text editor, according to the purpose and contents of each file.

After modifying a configuration file, you must restart the Spectrum Connect service by running the following CLI command on the Linux host:

```
service ibm_spectrum_connect restart
```

For more information about this service, see [“Checking and controlling the Spectrum Connect Linux service”](#) on page 59.

Table 9. Configuration files		
File name	Directory location	Purpose or relevant parameters
ibmsyslog.conf	/opt/ibm/ibm_spectrum_connect/conf.d/	Defines the logging standard per application, as well as the target of the log messages.
ibmlogs-rotate	/opt/ibm/ibm_spectrum_connect/conf.d/	Controls the archive and renewal timing attributes of the log files. For the list of log files, see “Checking the log files” on page 89.
ldap.ini	/opt/ibm/ibm_spectrum_connect/conf.d/	See “CLI - Configuring the LDAP server” on page 70.
ldap.conf	/etc/openldap/	See “CLI - Configuring the LDAP server” on page 70.
vasa_config.ini	/opt/ibm/ibm_spectrum_connect/conf.d/vasa1/	<ul style="list-style-type: none">• populate_vasa_events_and_alarms – The time interval in minutes between each operation of filtering relevant events for each connected vCenter server. The default value is 2.
hsgsvr_config.ini	/opt/ibm/ibm_spectrum_connect/conf.d/hsgsvr/	<ul style="list-style-type: none">• populate_arrays_and_events – The time interval in minutes between each update of information (changes and events) received from each monitored storage system. The default value is 10. When using a large number of storage systems, the value might need to be higher than 10. See “Working with multiple storage systems” on page 63 for additional information.
vcops_config.ini	/opt/ibm/ibm_spectrum_connect/conf.d/vcops	<p>See “Adjusting system update interval” on page 60.</p> <p>See “Configuring alarm reporting” on page 61.</p> <p>See “Configuring metrics scope” on page 61.</p> <p>See “Enabling SSL verification” on page 61.</p>

Adjusting system update interval

The IBM Storage adapter pushes the storage system information to the vRealize Operations Manager Adapter, using RESTful API requests.

About this task

By default, the update occurs every five minutes. The system information includes the following:

- Resource definition and all its relevant matrices

- Relationship between the storage resources
- Relationship between storage volumes and VMware datastores
- Storage system events

Procedure

To change the system update interval:

- In the `vcops_config.ini` file, change the **`vcops_push_interval`** parameter to a desired value in minutes.

Configuring alarm reporting

System events are relayed to the vRealize Operations Manager via the IBM Storage adapter.

About this task

By default, the IBM Storage adapter reports only immediate and critical events to the vRealize Operations Manager. You can select a lowest severity level, instructing the IBM Storage adapter to deliver events that are equal or above the specified value. In addition, you can disable event reporting altogether.

Procedure

To configure alarm reporting:

- In the `vcops_config.ini` file, set the **`event_level`** parameter to one of the following values:
 - **`none`** – no events are reported
 - **`info`** – all events are reported
 - **`warning`** – warning, immediate and critical events are reported
 - **`immediate`** – immediate and critical events are reported
 - **`critical`** – only critical events are reported

Configuring metrics scope

The IBM Storage adapter relays the storage system metrics data to the vRealize Operations Manager.

About this task

You can adjust the scope of metrics data that is pushed by the IBM Storage adapter. By default, the detailed metrics are reported, but you can change the setting to deliver only summary of the performance counters.

Procedure

To change the scope of statistics data:

- In the `vcops_config.ini` file, change the **`push_detailed_statistics`** parameter to True (detailed performance metrics) or False (performance metrics summary).

Enabling SSL verification

SSL protocol provides an encrypted communication link between the vROps server and the IBM Spectrum Connect.

About this task

To ensure a secure communication channel between the vROps server and IBM Spectrum Connect, you can enable the SSL certification, which is disabled by default. If you enable the SSL verification, make sure to provide a valid certificate via Linux.

Procedure

To enable SSL verification:

- In the `vcops_config.ini` file, change the **`verify_ssl_certificate`** parameter to True (enable).

Changing the Spectrum Connect communication port

The TCP port used by Spectrum Connect to communicate with vCenter and vRO servers can be changed at any time.

About this task

By default, Spectrum Connect uses TCP ports 8443 or 8440 for communication with vCenter and vRO servers to access vWC, register as VASA storage provider and run orchestration workflows. The 8443 port is used if the current Spectrum Connect has been upgraded from a previous version. The 8440 port is used if the software package has been installed anew.

Procedure

To change the current Spectrum Connect communication port:

1. Verify that you have *root* access privileges.
2. Access the `/opt/ibm/ibm_spectrum_connect/bin/` directory.
3. Run the **`sc_port_change.sh -p <new_port_number>`** script, replacing *new_port_number* with the desired TCP port value.

The script changes the port number and restarts the Nginx and Spectrum Connect services for the changes to take effect.

What to do next

After running the script:

- Re-register a previously registered Spectrum Connect as a VASA storage provider on the vCenter server.
- If you are using vRO, re-run the configuration script to instruct Spectrum Connect to use the new port.

Chapter 5. Best practices and use cases

Refer to the general guidance and best practices that are described in the following sections.

- [“Distributing volumes evenly on DS8000 systems” on page 63](#)
- [“Setting the multipath policy for DS8000 Family and Spectrum Virtualize Family systems” on page 63](#)
- [“Working with multiple storage systems” on page 63](#)
- [“Additional reference information” on page 68](#)

Distributing volumes evenly on DS8000 systems

DS8000 storage systems have two rank groups, 0 and 1, each managed by a single server. In addition, each DS8000 extent pool is based on one rank group.

Accordingly, it is recommended to spread volumes evenly across the DS8000 systems. Spreading the volumes equally on the extent pools of rank groups 0 and 1 balances the workload across the DS8000 system.

Setting the multipath policy for DS8000 Family and Spectrum Virtualize Family systems

When using the IBM Storage Enhancements for VMware vSphere Web Client, the recommended multipath policy for DS8000 Family and Spectrum Virtualize Family storage systems is **Round Robin**.

For information about how to change the default multipath policy enforcement for earlier ESX or ESXi versions, refer to article 1017760 on the VMware Knowledge Base website (kb.vmware.com/selfservice/microsites/search.do?language=en_US&cmd=displayKC&externalId=1017760).

Working with multiple storage systems

IBM Spectrum Connect, running on RHEL 64-bit operating systems, utilizes CPU and memory resources in accordance with the amount of objects monitored by the vROps server.

Before you begin

For best results, deploy Spectrum Connect on a dedicated server. The minimum hardware requirements are detailed in the latest release notes, available on the [IBM Knowledge Center](#) or on the [IBM Fix Central](#) (www.ibm.com/support/fixcentral).

About this task

Any increase in the amount of the monitored objects requires additional hardware resources and population interval adjustment. The recommended hardware and software requirements for different amounts of monitored objects are as follows:

- Up to 1000 objects per storage system:
 - Up to 20 storage systems – 64-bit dual-core CPU, 4 GB of RAM
 - Up to 40 storage systems – 64-bit quad-core CPU, 6 GB of RAM
 - Up to 100 storage systems – 64-bit six-core CPU, 6 GB of RAM
- Up to 5000 objects per storage system:
 - Up to 20 storage systems – 64-bit quad-core CPU, 4 GB of RAM
 - Up to 40 storage systems – 64-bit six-core CPU, 6 GB of RAM, 15 min. population interval
 - Up to 100 storage systems – 64-bit six-core CPU, 6 GB of RAM, 25 min. population interval

The procedure for adjusting population interval is detailed below.

Procedure

To adjust a population interval:

1. Go to the `/opt/ibm/ibm_spectrum_connect/conf.d/hsgsvr` directory.
2. Edit the `hsgsvr_config.ini` file and change the population interval in the **populate_arrays_and_events** parameter to a desired value in minutes.
3. Save the changes.
4. Restart the Spectrum Connect service (`service ibm_spectrum_connect restart`).

Configuring an LDAP user for an IBM FlashSystem A9000 or A9000R managed domain

To ensure that proper LDAP authentication is used in an IBM FlashSystem A9000 or A9000R managed domain, you must prepare a user on the Active Directory server and configure it as the storage admin role on the FlashSystem A9000 or A9000R system.

Before you begin

- Prepare an operational Microsoft Active Directory service with at least one group and one user for the usage of the storage admin role on the LDAP server. Make a note of the group Distinguished Name (DN) that is generated.

Note: The following procedure uses a group named `A9000_Admins` and a user in that group named `testUser` as examples.

Procedure

First, configure the storage admin role in IBM Hyper-Scale Manager.

1. Log in to the IBM Hyper-Scale Manager Web GUI as a storage administrator.
2. Click **Systems & Domains View > Systems**.
The SYSTEM view is displayed.
3. In the system list pane on the left side of the screen, select the FlashSystem A9000 or A9000R system the LDAP user needs to be configured for.
The System Properties configuration view for the selected system is displayed on the right.



Figure 53. Hyper-Scale System Properties configuration view

4. Click the **LDAP** icon.

The System LDAP configuration view is displayed.

The screenshot shows the 'System LDAP' configuration window. At the top, there is a navigation bar with icons for System, Belonging, Hosts, Targets, Quorum, Ports, Support, and LDAP. The 'LDAP' icon is highlighted. Below the navigation bar, the 'GENERAL' section is active. It contains a message: 'Want to better understand how to configure LDAP? Click [here](#) for a guided tour.' Below this, there are two rows of settings. The first row has 'LDAP Status' set to 'Inactive' and 'Server Type' with two radio buttons: 'Sun Directory' (unselected) and 'Microsoft Active Directory' (selected). The second row has 'Server Bind Timeout (sec)' set to '20' and 'Session Cache Period (min)' set to '20'. Below these is a section for 'LDAP SERVERS' with a '+' button to add more. At the bottom, there is a 'Current Server IP' field. At the very bottom of the window are 'Cancel' and 'Apply' buttons.

Figure 54. System LDAP configuration view

5. In the GENERAL section of the System LDAP configuration view, select **Server Type: Microsoft Active Directory**.
6. In the USER CREDENTIALS section, define the service user and its password. This user is bound to the Active Directory service. It retrieves credentials data, which is stored in the LDAP directory.

The screenshot shows the 'USER CREDENTIALS' section of the System LDAP configuration view. It contains a message: 'Provide your Service User DN (Distinguished Name) and credentials configured on your Directory Services. This field is case-sensitive and must be completed in full. If necessary, go back and review your configuration before applying.' Below this message are three input fields: 'Service User DN', 'Password', and 'Confirm Password'. The 'Password' and 'Confirm Password' fields are masked with dots.

Figure 55. USER CREDENTIALS section of the System LDAP configuration view

7. In the ROLE MAPPING section, do the following:
 - a) In the **Storage Admin Role** field, enter the group Distinguished Name (DN) generated prior to beginning this procedure, as in the example shown in [Figure 56 on page 67](#).
 - b) In the **Read Only Role** field, enter an appropriate group DN, as in the example shown in [Figure 56 on page 67](#).

ROLE MAPPING

Enter the full Distinguished Name (DN) of the LDAP groups connected to the roles with the desired StorageAdmin and ReadOnly permissions. These fields are case-sensitive. Customizing LDAP groups with Directory Services offers LDAP users access to the proper information stored on the system.

Storage Admin Role	Read Only Role
CN=A9000_Admis,OU=XIVLAB,DC=A9000,DC=com	CN=A9000_ReadOnly,OU=XIVLAB,DC=A9000,DC=com
Storage Integration Admin Role	Security Admin Role

Figure 56. ROLE MAPPING section of the System LDAP configuration view

8. In the LDAP TESTING AND ACTIVATION section, enter the username and password to be used for verifying the LDAP connection, as in the example shown in Figure 57 on page 67.

LDAP TESTING AND ACTIVATION

Testing your configuration needs to succeed first before you can activate LDAP. Supply any user credentials that are permitted to use this System according to the above LDAP configuration.

User name for testing LDAP: testUser

Password: [Masked]

☒ Activate upon success

Figure 57. LDAP TESTING AND ACTIVATION section of the System LDAP configuration view

9. Click **Apply**.

The storage admin role is configured in IBM Hyper-Scale Manager.

Next, configure Spectrum Connect with the user name associated with the storage admin role in IBM Hyper-Scale Manager.

10. Start IBM Spectrum Connect and go to **Setting > Storage Credentials**.

The Storage Credentials dialog box is displayed.

Storage Credentials

User Name: testUser

Password: [Masked]

☒ Directory account

Cancel Apply

Figure 58. Storage Credentials dialog box

11. In the Storage Credentials dialog box, enter the user name defined on the Active Directory server (**testUser** in the above example), enter a password, and select the **Directory account** check box to specify that the credentials are stored on the Active Directory server.
12. Click **Apply** to finish.

Additional reference information

IBM provides additional reference documentation to help users integrate, implement and operate realistic scenarios that include Spectrum Connect and various IBM storage systems.

IBM Redbooks are technical documents where IBM experts share their expertise and best practices for using Spectrum Connect. Among others, you can refer to these publications:

- [Enabling LDAP for IBM FlashSystem A9000 and A9000R with Microsoft Active Directory](#)
- [Using the IBM Spectrum Accelerate Family in VMware Environments](#) (only supported for IBM FlashSystem A9000 and A9000R)
- [IBM Storage for Red Hat OpenShift Container Platform V3.11 Blueprint Version 1 Release 1](#)
- [IBM Storage Solutions for IBM Cloud Private Blueprint](#)
- [Multicloud Storage as a Service using vRealize Automation and IBM Spectrum Storage](#)
- [IBM block storage CSI \(Container Storage Interface\) driver](#)

Chapter 6. Management from the command-line interface

You can access and control Spectrum Connect by using its command-line interface (CLI) functions locally from the Linux command prompt environment, or from a remote terminal connection.

The Spectrum Connect CLI is used for user and storage system management, as well as for integration of the cloud interfaces. However, the CLI application scope is limited. To employ the full functionality range of Spectrum Connect, use the web-based graphical user interface (GUI).

The following sections describe all the CLI configuration and management functions:

- [“CLI – Switching to 'IBMSC' user mode” on page 69](#)
- [“CLI – Managing Spectrum Connect users and groups” on page 74](#)
- [“CLI – Adding or removing storage system credentials” on page 78](#)
- [“CLI – Managing storage systems” on page 80](#)
- [“CLI – Setting the VASA credentials” on page 82](#)
- [“CLI – Managing integration with vRealize Operations Manager” on page 83](#)

CLI – Switching to 'IBMSC' user mode

To start configuring Spectrum Connect, you must be logged in as the **ibmsc** user in the Linux command prompt environment.

About this task

ibmsc is a user account that is automatically created after the installation, allowing you to carry out the Spectrum Connect CLI-based configuration and management operations.

If needed, you can set the password for accessing the **ibmsc** user account externally (for example, from a remote computer over SSH), as described in the following procedure.

Procedure

To set a password for the **ibmsc** user:

1. Log in to the Linux command prompt environment as a root user.
2. Enter **passwd ibmsc** and then enter the password for the user account:

```
[root]# passwd ibmsc
Changing password for user ibmsc.
New password: *****
Retype new password: *****
passwd: all authentication tokens updated successfully.
[root]#
```

What to do next

To switch to the IBMSC user, enter the **su - ibmsc** command:

```
[root]# su - ibmsc
```

CLI - Configuring the LDAP server

You can allow external directory users to connect to Spectrum Connect and manage it without having a locally-defined user account.

The connection to the directory server is established through Lightweight Directory Access Protocol (LDAP) authentication. When directory server access is enabled, any login attempt (attempt to log in to Spectrum Connect) is authenticated against the defined directory server.

Use the **sc_ldap** CLI command to configure the LDAP server. Then add the LDAP-based directory user or group access via the Spectrum Connect web UI (see [Managing Spectrum Connect users](#)) or the command line using the **sc_users/sc_ldap_groups** command (see [CLI – Managing Spectrum Connect users](#)).

Note:

- When directory user access is enabled and configured through **sc_ldap**, the directory users can access and manage only Spectrum Connect. A separate and unrelated authentication system may be used on the storage system side for directory-based management of the storage system. For more information, refer to [“CLI – Adding or removing storage system credentials”](#) on page 78 and to your storage system documentation.

Table 10. Arguments for **sc_ldap**

Argument	Use after sc_ldap to:
configure -e -a -s <server URI> -t <directory server type> -r <user search DN> -k <user search key> -g <user group DN> -o <user group object class> or configure --enable --anonymous --server_uri <server URI> --server_type <directory server type> --user_search_dn <user search DN> --user_search_key <user search key> --group_search_dn <user group DN> --group_object_class <user group object class>	<p>Enable directory access and establish a connection to a directory server as an anonymous user with the following parameters specified after the -a argument on the command line:</p> <ul style="list-style-type: none"> • Server URI (-s; --server_uri) – Uniform resource identifier (URI) of the directory server. This parameter determines which directory server should be accessed and used for directory user management of Spectrum Connect. • Server type (-t; --server_type) – Type of the directory server. One of the following types can be specified: <ul style="list-style-type: none"> – Active Directory (ACTIVE_DIRECTORY) – Open LDAP (OPEN_LDAP) – Custom (CUSTOM) • User search DN (-r; --user_search_dn) – Distinguished name (DN) to be used for the user search. • User search key (-k; --user_search_key) – Search key of the directory user. Valid only if the specified server type (-t; --server_type) is CUSTOM. • Group search DN (-g; --group_search_dn) – Distinguished name (DN) of the user group for search purposes. • Group object class (-o; --group_object_class) – Object class of the user group. Valid only if the specified server type (-t; --server_type) is CUSTOM. <p>For example:</p> <pre>sc_ldap configure -e -a -s ldap://ad1.ibm.com -t ACTIVE_DIRECTORY -r "CN=Users,DC=mydomain,DC=test,DC=com" -g "CN=sc_TestGrp,CN=Users,DC=mydomain,DC=test,DC=com"</pre> <p>When prompted to enter a password, press Enter without entering any password:</p> <pre>Please enter the BIND_DN password (password not shown): The following changes were applied to the LDAP configuration: ENABLED Please restart the IBM Spectrum Connect to apply the new configuration.</pre> <p>After enabling the directory access, test the directory connection by using the test option (see below). After testing, restart the Spectrum Connect service as explained in “Checking and controlling the Spectrum Connect Linux service” on page 59.</p> <p>Then, use the sc_users command to add LDAP administrators to enable them to access the Spectrum Connect GUI, see “CLI – Managing Spectrum Connect users and groups” on page 74.</p>

Table 10. Arguments for **sc_ldap** (continued)

Argument	Use after sc_ldap to:
configure -e -u <Bind DN username> -p <Bind DN password>	<p>Enable directory access and establish a connection to a directory server by using the Bind DN user account that was predefined on the directory server (predefined by the directory server administrator). For this command, specify these two parameters in addition to the entries listed for the anonymous user:</p> <ul style="list-style-type: none"> Bind DN username (-u; --bind_dn) – Username of the Bind DN user through which access to the directory server is established. Spectrum Connect uses this username to log in to the directory server and establish the connection with it. Bind DN password (-p; --bind_password) – Password of the Bind DN username. <p>For example:</p> <pre>sc_ldap configure -e -s ldap://myad1.ibm.com -t ACTIVE_DIRECTORY -r "CN=Users,DC=sc,DC=test,DC=com" -g "CN=Users,DC=sc,DC=test,DC=com" -u mybinduser -p mypassw0rd</pre> <p>When prompted to enter a password, enter the directory server's Bind DN user password:</p> <pre>Please enter the BIND_DN password (password not shown): ***** The following changes were applied to the LDAP configuration: ENABLED Please restart the IBM Spectrum Connect to apply the new configuration.</pre>
configure -d or configure --disable	<p>Disable directory user access.</p> <p>After disabling the directory access, restart the Spectrum Connect service as explained in “Checking and controlling the Spectrum Connect Linux service” on page 59.</p>
list	<p>Display the current directory server configuration status (on Spectrum Connect) and Bind DN username.</p>
test -u <directory username> -p <password>	<p>Test a directory user account by specifying the username and password of that account. You can test any user account that came up as configured user search DN on the directory server (the test is not for the Bind DN user account, but for an actual directory account).</p> <p>For example:</p> <pre>sc_ldap test -u mytestuser -p mytestuserpassw0rd IBM Spectrum Connect LDAP configuration has been verified successfully.</pre>
-h or --help	<p>Display help information that is relevant to sc_ldap.</p> <p>You can also display help for the configure, list, or test argument if it is typed on the command line as well.</p>

Adding a directory server certificate

If the directory server uses Transport Layer Security (TLS), you must edit the `ldap.conf` file and specify the trusted certificate directory location and filename on Spectrum Connect. Complete the following steps to update Spectrum Connect:

1. Log in to the directory server and issue the following command: **`certutil -ca.cert client.crt`**. This command generates the server certificate.
2. Go to the `/etc/openldap/` directory and edit the `ldap.conf` file by setting the value for the `TLS_CACERT` parameter. The following example shows the contents of the `ldap.conf` file:

```
#LDAP Defaults
#
#BASE    dc=example,dc=com
#URI     ldap://ldap.example.com ldap://ldap-master.example.com:port#
#SIZELIMIT 12
#TIMELIMIT 15
#DEREF   never
#TLS_CACERT /etc/openldap/certs/trusted_ldap.pem
```

Make sure that the `TLS_CACERT` parameter has the directory and file name of the new certificate that you generated. After editing the `ldap.conf` file, the `ldap.ini` file is automatically updated.

Editing the `ldap.ini` configuration file

In addition to using the **`sc_ldap`** CLI command, you can edit the `ldap.ini` configuration file to manually change the directory user access settings.



Attention:

- Do not edit the `ldap.ini` file if you are not familiar with directory setting conventions.
- Restart Spectrum Connect after editing the `ldap.ini` file to apply the changes.

The following example shows the editable parameters and their values specified after the '=' sign:

```
enable_ldap = True
server_uri = ldap://servername.domainname:389
server_type = OPEN_LDAP
user_search_dn = ou=users,dc=dcname,dc=com
user_search_key =
group_search_dn = dc=dcname,dc=com
group_object_class =
bind_dn =
bind_password = <encrypted password>=
bind_pwd_verification = <encrypted key>=
```

The following table summarizes the parameters and their indication.

Table 11. <i>ldap.ini</i> configuration parameters	
Parameter	Indication
enable_ldap	True or False. When True and enabled, the login attempt is authenticated against the directory server.
server_uri	Uniform resource identifier (URI) of the directory server.
server_type	Type of the directory server: <ul style="list-style-type: none">• Active Directory• Open LDAP• Custom
user_search_dn	Distinguished name (DN) to be used for user search.

Table 11. *ldap.ini* configuration parameters (continued)

Parameter	Indication
user_search_key	Search tag for obtaining a unique relative distinguished name (RDN). Commonly used values: uid, preferredId
group_search_dn	Distinguished name (DN) to be used for user group search.
group_object_class	Type of the user group. Commonly used values: GroupOfNames, NestedGroupOfNames, GroupOfUniqueNames, NestedGroupOfUniqueNames, ActiveDirectoryGroup, NestedActiveDirectoryGroup
bind_dn	Username of the Bind DN user through which access to the directory server is established.
bind_password	Password of the Bind DN username. The password is displayed in its encrypted form.
bind_pwd_verification	Verification string for the Bind DN password. The string is displayed in its encrypted form.

Note:

- **user_search_key** and **user_search_dn** return unique results. For example:

```
user_search_key=uid
user_search_dn=ou=users,dc=dcname,dc=com
```

In this case, if the user name is "John", the resulting DN for matching the user over LDAP would be: uid=John,ou=users,dc=dcname,dc=com

- When **server_type** type is Active Directory, the following parameters are used by default:

```
user search key = sAMAccountName
user group object class = NestedActiveDirectoryGroup
```

- When **server_type** type is Open LDAP, the following parameters are used by default:

```
user search key = uid
user group object class = GroupOfUniqueNames
```

- You can use a valid username and password (defined on the LDAP server) with the **sc_ldap test** command to test your LDAP configuration.

CLI – Managing Spectrum Connect users and groups

User accounts that can be used to access Spectrum Connect must be individually defined.

Use the **sc_users** CLI command to add, delete, or display user accounts and to change the password of any specific account. Use the **sc_ldap_groups** CLI command to add, delete, or display LDAP groups.

Use the required argument after the command, as specified in the following tables. In addition, you can configure the password reuse policy and security timeout using the **sc_setting** CLI command.

Note:

- All CLI command arguments are case-sensitive.
- The same operations are available from the GUI as well, as explained in [“Managing Spectrum Connect users and groups” on page 30](#).

- To define LDAP users or groups, you first need to configure the LDAP server. See [“CLI - Configuring the LDAP server”](#) on page 70.

Table 12. Arguments for sc_users	
Argument	Use after sc_users to:
add -n <username> or add --user_name <username>	Add the username of the user that may access Spectrum Connect without creating a password for it. You can add more than one user. For example: sc_users add -n johnvc
add -n <username> -p <password> or add --user_name <username> --user_password <password>	Add the username and password of the user that may access Spectrum Connect. You can add more than one user. The minimum password length is seven characters and it must include at least one letter and one digit. For example: sc_users add -n johnvc -p *****
change_password -n <username> -p <new password> or change_password --user_name <username> --user_password <password>	Change the password of a user account that was already added. The password that you type for the specified username is set as the new password. The minimum password length is seven characters and it must include at least one letter and one digit. For example: sc_users change_password -n johnvc -p *****
delete -n <username> or delete --user_name <username>	Delete a user account from the server. For example: sc_users delete -n johnvc
list	Display the names of currently defined user accounts. For example: sc_users list User Name Account Type Last Activity Existing on LDAP Server ----- admin LOCAL 20-04-30 03:27:04 N/A xavi1 LDAP 20-04-30 03:27:13 N/A xavi_admin LDAP 20-04-30 03:37:20 True
-h or --help	Display help information that is relevant to sc_users . You can also display help for the add , change_password , or delete argument if it is typed on the command line as well.

Table 13. Arguments for sc_ldap_groups																
Argument	Use after sc_ldap_groups to:															
add -n <groupname> -f or add --group_name <groupname> --force	<p>Add the groupname of the LDAP group from the LDAP server that may access Spectrum Connect without creating a password for it. You can add more than one group.</p> <p>For example:</p> <pre>sc_ldap_groups add -n testgroup1</pre> <p>Important: It is not recommended to add both a parent LDAP group and its child user/group at the same time. If you really need to do this, however, use the -f or --force argument to add the group.</p>															
delete -n <groupname> or delete --group_name <groupname>	<p>Delete an LDAP group from the server.</p> <p>For example:</p> <pre>sc_ldap_groups delete -n testgroup1</pre>															
list	<p>Display the names of currently defined LDAP groups.</p> <p>For example:</p> <pre>sc_ldap_groups list</pre> <table><tr><th>LDAP Group Name</th><th>Last Activity</th><th>Existing on LDAP Server</th></tr><tr><td>-----</td><td>-----</td><td></td></tr><tr><td>testgroup1</td><td>20-04-30 03:37:30</td><td></td></tr><tr><td>True</td><td></td><td></td></tr><tr><td>xavi_nest_g</td><td>N/A</td><td>N/A</td></tr></table> <p>Note: Spectrum Connect will check periodically and asynchronously if LDAP groups and users exist on the LDAP server when LDAP is enabled. If LDAP groups do not exist on the LDAP server, please delete them from Spectrum Connect via the web GUI or CLI.</p>	LDAP Group Name	Last Activity	Existing on LDAP Server	-----	-----		testgroup1	20-04-30 03:37:30		True			xavi_nest_g	N/A	N/A
LDAP Group Name	Last Activity	Existing on LDAP Server														
-----	-----															
testgroup1	20-04-30 03:37:30															
True																
xavi_nest_g	N/A	N/A														
-h or --help	<p>Display help information that is relevant to sc_ldap_groups.</p> <p>You can also display help for the add or delete argument if it is typed on the command line as well.</p>															

Table 14. User-related arguments for sc_setting	
Argument	Use after sc_setting to:
modify -n USER_PASSWORD_HISTORY_LEN -v <password retention number>	Prevent the user to submit a new password that is the same as any of the prior passwords for that account. For example, to prevent the user to submit a new password that is the same as the last four prior passwords, enter: <pre>sc_setting modify -n USER_PASSWORD_HISTORY_LEN -v 4</pre>

Table 14. User-related arguments for **sc_setting** (continued)

Argument	Use after sc_setting to:
modify -n TOKEN_INACTIVITY_TIMEOUT -v <inactivity timeout in minutes>	<p>Define a time period in minutes after which the Spectrum Connect GUI management session is terminated, if no user input is detected. By default, the timeout is set to 15 minutes.</p> <p>For example, to set the inactivity timeout to 20 minutes, enter:</p> <pre>sc_setting modify -n TOKEN_INACTIVITY_TIMEOUT -v 20</pre>

CLI – Managing server certificates

During the installation, a self-signed Secure Sockets Layer (SSL) certificate is generated to create a secure communication channel for servers and clients. If you already have a trusted certificate that you want to use, you can replace the self-signed certificate with an existing trusted certificate or generate a new certificate.

A self-signed certificate file, **vp.crt**, and a certificate key file, **vp.key**, are stored in the following directory:

`/opt/ibm/ibm_spectrum_connect/settings/ssl_cert.`

Because the self-signed certificate is not automatically recognized by the web browser that you use to log in to Spectrum Connect, you might encounter a connection security warning before you can access the Spectrum Connect login page (see “Logging in” on page 17).

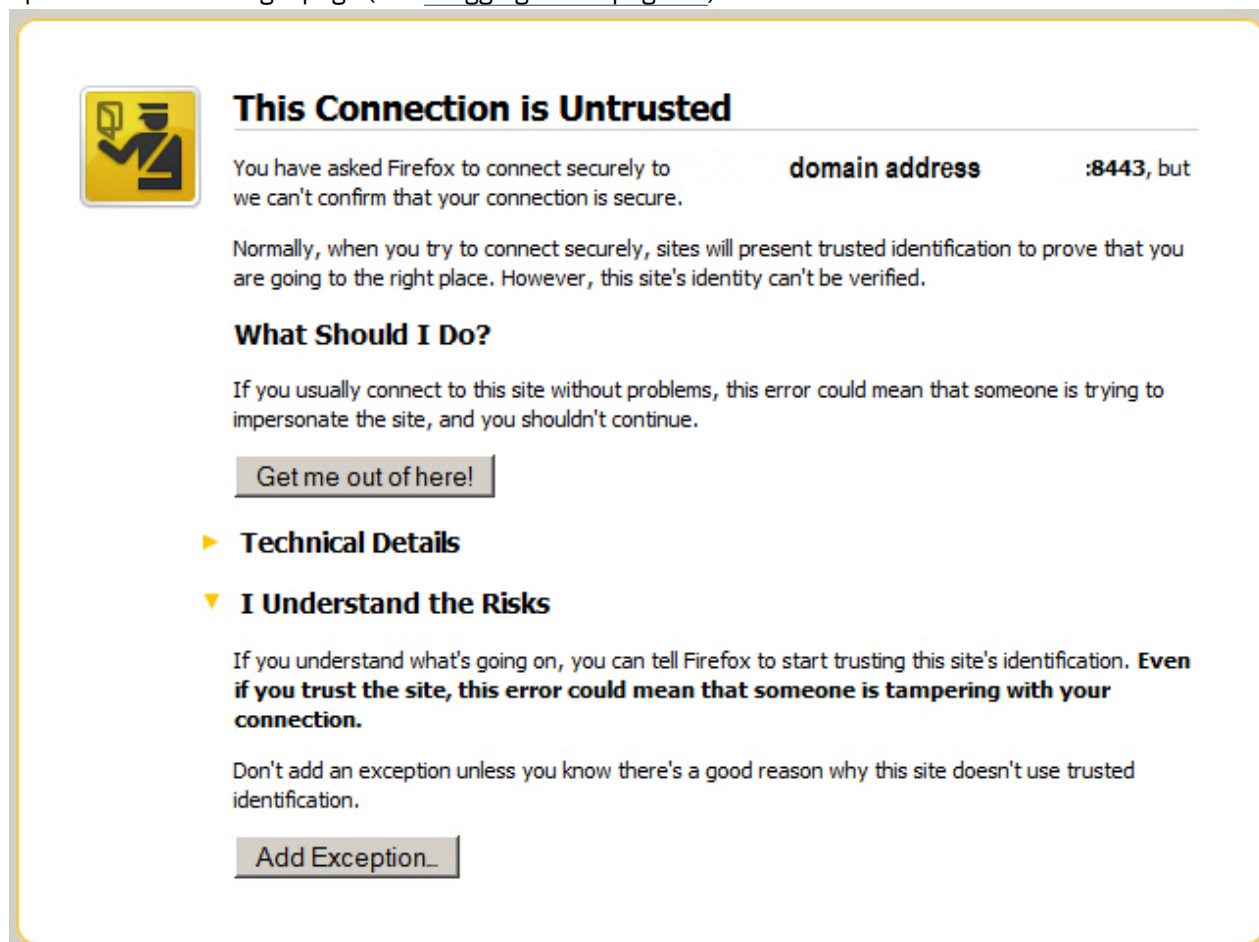


Figure 59. Connection security warning in the Mozilla FireFox web browser

To avoid such warning messages, use the **import** option of the **sc_ssl** command to upload a server certificate which is signed by a public certificate authority (CA), such as VeriSign, or by a CA whose root certificate was imported to your web browser. In addition, you can use the other options of the **sc_ssl** command to generate or to trust an SSL certificate.

Note:

- All CLI command arguments are case-sensitive.
- The same operations are available from the GUI as well, as explained in [“Managing server certificates”](#) on page 27.

Table 15. Arguments for sc_ssl	
Argument	Use after sc_ssl to:
generate -c <common_name> -n <host_name> -i <ip_address> -e <expiration_period>	Enter the hostname, common name, IP address of the Spectrum Connect server and certificate validity period (in days). For example: <pre>sc_ssl generate -c mycommonname -n "sc_serverhostname" -i 1.0.0.200 -e 5000</pre>
trust -c <certificate_path>	Select an SSL certificate to be trusted, by providing a path to its location. For example: <pre>sc_ssl trust -c CA_certificate.crt</pre>
import -c <certificate_path> -k <key_path>	Import a SSL certificate and a key file, by providing paths to their locations. For example: <pre>sc_ssl import -c self_signed_certificate.crt -k private_key.key</pre>
-h	Display help information that is relevant to sc_ssl . You can also display help for the generate , trust , or import argument if it is typed on the command line as well.

CLI – Adding or removing storage system credentials

This section explains how to set the credentials that will be used to connect to the IBM storage system, or systems, that your VMware platforms use for storage provisioning.

Important:

- An identical storage admin user account with identical credentials (the same username and password) must already be predefined on all the IBM storage systems that you intend to use. Spectrum Connect can use only **a single system management account** for accessing all the different storage systems that you use. For more information about how to define a storage admin account on your IBM storage systems, refer to the relevant storage system management tools documentation.
- Setting the storage credentials on Spectrum Connect allows you to add the IBM storage systems on the next step.

Use the **sc_storage_credentials** CLI command to set (add), remove, or display the current storage system access credentials that Spectrum Connect uses in order to access all the IBM storage systems. Use the required argument after the command, as specified in the following table.

Note:

- All CLI command arguments are case-sensitive.
- The same operations are available from the GUI as well, as explained in [“Entering the storage system credentials”](#) on page 37.



Argument	Use after <code>sc_storage_credentials</code> to:
<p>set -u <storage system username> -p <storage system password> -f -a <user type></p> <p>or</p> <p>set --user <storage system username> --password <storage system password> --force --user_account <user type></p>	<p>Set the username and password for accessing all the relevant IBM storage systems, and specify whether the storage admin user is locally-defined on the storage system or on a directory server. For storage systems running Spectrum Virtualize, ensure that the credentials belong to a user account with <i>VASAProvider</i> role.</p> <p>For example, if the storage admin user is locally defined on the storage system, enter:</p> <pre>sc_storage_credentials set -u john21 -p ***** -a local</pre> <p>And if the storage admin user is defined on a directory server, enter:</p> <pre>sc_storage_credentials set -u john21 -p ***** -a directory</pre> <div data-bbox="667 905 721 953"></div> <p>Attention: During regular operation, whenever a directory-based storage admin fails to log in (from the Spectrum Connect side) to any storage system that is in use, Spectrum Connect immediately locks the storage admin user account and all storage systems become inaccessible on the Spectrum Connect side. This is to prevent repeated login attempt failures after which the directory server blocks that user account. In such a case, use the -f or --force argument on the command line to unlock the storage admin account on the Spectrum Connect side, with either the same credentials or with updated credentials. For example:</p> <pre>sc_storage_credentials set -u john21 -p ***** -f -a directory</pre> <p>The equivalent action in the Spectrum Connect GUI is to update the account credentials, as described in “Entering the storage system credentials” on page 37.</p>
<p>remove</p>	<p>Delete the existing storage system user account definition from the server.</p> <p>For example:</p> <pre>sc_storage_credentials remove</pre> <div data-bbox="667 1608 721 1656"></div> <p>Attention: If you already added storage systems to the server, deleting the user account disconnects all these storage systems.</p>

Table 16. Arguments for **sc_storage_credentials** (continued)

Argument	Use after <code>sc_storage_credentials</code> to:												
<code>list</code>	<p>Display the username of the existing storage system user account definition.</p> <p>The following example shows the command output when the storage admin user account is defined locally on the storage system:</p> <pre>sc_storage_credentials list</pre> <table><tr><th>Username Source</th><th>Array Alias</th><th>User Category</th><th>Account</th></tr><tr><td>-----</td><td>-----</td><td>-----</td><td></td></tr><tr><td>superuser</td><td>V9K</td><td>SecurityAdmin</td><td>local</td></tr></table>	Username Source	Array Alias	User Category	Account	-----	-----	-----		superuser	V9K	SecurityAdmin	local
Username Source	Array Alias	User Category	Account										
-----	-----	-----											
superuser	V9K	SecurityAdmin	local										
<code>-h</code> or <code>--help</code>	<p>Display help information that is relevant to <code>sc_storage_credentials</code>.</p> <p>You can also display help for the <code>set</code> argument if it is typed on the command line as well.</p>												

CLI – Managing storage systems

All IBM storage systems that provide storage resources to your VMware platforms must be defined as storage systems on the IBM Spectrum Connect.

Use the **sc_storage_array** CLI command to add, remove, configure or list these IBM storage systems (referred to as *arrays* in the command syntax and output). Use the required argument after the command, as specified in the following table. In addition, you can set a threshold for alerting the user, when a storage resource capacity is running low, using the **sc_setting** CLI command.

Important:

- IBM storage systems can be added only after the storage credentials are set, as explained in [“CLI – Adding or removing storage system credentials”](#) on page 78.
- If you want to remove existing storage systems:
 - A removed storage system, along with its storage pools and volumes, can no longer be managed by the included solution components (see [“Included cloud interfaces”](#) on page 1).
 - If the removed storage system contains working storage pools and volumes, the information of these storage pools and volumes is no longer displayed in vSphere Web Client. However, **vSphere data access and service level for these storage pools and volumes is not affected**. In addition, the removed system and its storage pools and volumes can be managed from the standard IBM storage system management tools.
 - After the removal, you can add the storage system back again to fully restore its management.

Note:

- All CLI command arguments are case-sensitive.
- The same operations are available from the GUI as well, as explained in [“Managing storage systems”](#) on page 36.

Table 17. Arguments for sc_storage_array	
Argument	Use after sc_storage_array to:
add -i <management IP address> -a <system alias name> or add --mgmt_ip <management IP address> --storage_type <storage system type> --alias <system alias name>	Add a storage system specified by an IP address or DNS. For example: <pre>sc_storage_array add -i 10.100.155.200</pre> Optional: you can define an alias for the added storage system, by adding -a <alias name> or --alias <alias name> to the command. For example: <pre>sc_storage_array add -i 10.100.155.200 -a mystorage1</pre> Note: If you choose not to define an alias, the alias that is already defined (if one was defined) on the IBM storage system side is automatically assigned as the alias.
remove -a <system alias name> or remove --alias <system alias name>	Remove a storage system specified by its alias (alias that was given by you or was automatically assigned). For example: <pre>sc_storage_array remove -a mystorage1</pre>
list	List the names and details of all the IBM storage systems that are currently added (and were not removed). The displayed information includes: <ul style="list-style-type: none"> • Array alias • Array identifier • Management IP address • Elapsed time since last update • Connected • Notes See the example after this table.
full_metadata_recovery -a <system alias name>	Perform full VVol metadata restoration on a secondary Spectrum Connect in a high-availability (HA) group. The metadata disparity might occur during recovery in the HA group due to timestamp inconsistencies. The timestamp inconsistencies are possible on a storage system, when its internal clock is changed to comply with time zone settings or daylight saving time requirements.
refresh	Refresh information about all managed IBM storage systems.
-h or --help	Display help information that is relevant to sc_storage_array . You can also display help for the add or remove argument if it is typed on the command line as well.

The following example shows the displayed information and format of the **sc_storage_array list** command output.

```
sc_storage_array list
```

Array Alias	Array Identifier	Management IP Addresses	Elapsed time since last update	Connected	Notes
array1000 array 2810	2810-114-MN65026	9.100.150.155	16 minutes	False	Failed to log in to with the provided credentials.
array2000	2810-114-MN65027	9.200.155.155	27 minutes	True	

Table 18. Storage resource-related arguments for **sc_setting**

Argument	Use after sc_setting to:
modify -n RESOURCE_CAPACITY_THRESHOLD -v <capacity threshold in %>	<p>Define a threshold for a VVol-based storage resource capacity. When this threshold is reached, an alarm is generated to indicate that the storage capacity is running low. By default, the threshold is set at 70%.</p> <p>For example, to alert the user, when the storage resource has reached 80% of its capacity, enter:</p> <pre>sc_setting modify -n RESOURCE_CAPACITY_THRESHOLD -v 80</pre>

CLI – Setting the VASA credentials

The VASA credentials comprise a user name and a password that VMware vCenter servers can use to connect to the IBM Spectrum Connect and employ VMware vSphere APIs for Storage Awareness (VASA) functions.

Use the **sc_vasa_admin** CLI command to set or display the VASA credentials. vCenter servers can then use these credentials to connect to Spectrum Connect and utilize VASA functions, as explained in [“Registering Spectrum Connect as a storage provider on vCenter server” on page 98](#). Use the required argument after the command, as specified in the following table.

Note:

- Only one set of a username and a password can be used for the VASA credentials, which applies to all vCenter servers that require VASA functions.
- All CLI command arguments are case-sensitive.
- The same operations are available from the GUI as well, as explained in [“Setting the VASA credentials” on page 96](#).

Table 19. Arguments for **sc_vasa_admin**

Argument	Use after sc_vasa_admin to:
set_secret -n <username> -p <password> or set_secret --user_name <username> --user_password <password>	<p>Set the username and password that the VASA credentials should comprise.</p> <p>For example:</p> <pre>sc_vasa_admin set_secret -n johnvasa -p *****</pre> <p>The secret key for the VASA Provider has been set successfully.</p>

Table 19. Arguments for sc_vasa_admin (continued)	
Argument	Use after sc_vasa_admin to:
list_secret	<p>Display the username of the currently defined VASA credentials.</p> <p>For example:</p> <pre>sc_vasa_admin list_secret Secret key username for the VASA Provider: johnvasa</pre>
-h or --help	<p>Display help information that is relevant to sc_vasa_admin.</p> <p>You can also display help for the set_secret argument if it is typed on the command line as well.</p>

CLI – Managing integration with vRealize Operations Manager

Before you can use the IBM Storage Management Pack for VMware vRealize Operations Manager, you must set a connection to at least one vRealize Operations Manager (vROps) server, and then define which storage systems should be monitored in vROps.

After a vROps server connection is defined and storage systems (referred to as *arrays* in the command syntax and output) are associated with the vROps server, detailed monitoring information for these storage systems becomes available in vROps (for more information, see [“IBM Storage Management Pack for VMware vRealize Operations Manager”](#) on page 133).

Use the **sc_vrops_server** CLI command to add, remove, or disable connections to vROps servers, or to list the current server connections. An adapter is automatically created for each vROps server that you add.

Use the **sc_vrops_adapter** command to attach storage systems to any created adapter. A storage system that is attached to an adapter can be monitored by the vROps server for which the adapter was created. You can use the **sc_vrops_adapter** command for additional options as described below.

Use the required argument after each command, as specified in the following tables.

Important:

- Storage systems can be attached to adapters only after the storage systems have been added to Spectrum Connect, as explained in [“CLI – Managing storage systems”](#) on page 80.
- If the IBM Storage PAK file was not deployed on the vROps server, IBM Storage monitoring information is not displayed with dedicated dashboards, graphic icons, and user-friendly attribute names in vROps. For information about how to deploy the IBM Storage PAK file, see [“Downloading the vROps management package”](#) on page 135.
- If you want to detach storage systems:
 - A detached storage system can no longer be monitored through vRealize Operations Manager.
 - After the detachment, you can reattach the storage system to fully restore its monitoring through vRealize Operations Manager.

Note:

- All CLI command arguments are case-sensitive.
- Apart from the ability to add more than one vROps server and additional adapters from the CLI, the same operations are available from the GUI as well, as explained in [“Managing integration with vRealize Operations Manager”](#) on page 134.

Table 20. Arguments for sc_vrops_server									
Argument	Use after sc_vrops_server to:								
add -n <hostname> -u <username> -p <password> or add --hostname <hostname> --username <username> --password <password>	Add a vROps server connection by specifying the following parameters on the command line: <ul style="list-style-type: none"> • IP address or hostname of the vROps server that you want to add (connect to). • Username for accessing the vROps server. • Password for accessing the vROps server. For example: <pre>sc_vrops_server add -n vrops1.domain -u john1 -p *****</pre> <p>Note: The local adapter is added automatically after the vROps server is added.</p>								
remove -n <hostname> or remove --hostname <hostname>	Remove a vROps server connection by specifying its IP address or hostname on the command line. For example: <pre>sc_vrops_server remove -n vrops1.domain</pre> <p>Note: A removed vROps server ceases to receive monitoring information regarding IBM storage resources that are in use. You can add a vROps server back by using the add option (see above).</p>								
disable -n <hostname> or disable --hostname <hostname>	Disable reporting to a vROps server (without removing its connection) by specifying its IP address or hostname on the command line. For example: <pre>sc_vrops_server disable -n vrops1.domain</pre> <p>Note: A vROps server for which reporting is disabled ceases to receive monitoring information regarding IBM storage resources that are in use. You can resume reporting to a vROps server by using the enable option (see below).</p>								
enable -n <hostname> or enable --hostname <hostname>	Resume reporting to a vROps server by specifying its IP address or hostname on the command line. For example: <pre>sc_vrops_server enable -n vrops1.domain</pre>								
list	List all the currently connected (added) vROps servers and their operation status (enabled or disabled). For example: <pre>sc_vrops_server list</pre> <table> <tr> <td>vROps Hostname</td><td>Status</td></tr> <tr> <td>-----</td><td>-----</td></tr> <tr> <td>vrops1.domain</td><td>Enabled</td></tr> <tr> <td>vrops2.domain</td><td>Disabled</td></tr> </table>	vROps Hostname	Status	-----	-----	vrops1.domain	Enabled	vrops2.domain	Disabled
vROps Hostname	Status								
-----	-----								
vrops1.domain	Enabled								
vrops2.domain	Disabled								

Table 20. Arguments for sc_vrops_server (continued)	
Argument	Use after sc_vrops_server to:
-h or --help	Display help information that is relevant to sc_vrops_server . You can also display help for the add , remove , enable , or disable argument if it is typed on the command line as well.

Table 21. Arguments for sc_vrops_adapter	
Argument	Use after sc_vrops_adapter to:
array_attach -a <alias> -n <hostname> or array_attach --alias <alias> --hostname <hostname>	Attach a storage system to a vROps adapter (of a vROps server) by specifying the following parameters on the command line: <ul style="list-style-type: none"> • Alias name of the storage system that you want to attach. • IP address or hostname of the storage system that you want to attach. For example: <pre>sc_vrops_adapter array_attach -a mySVC -n 9.150.200.100</pre> <p>Note: The storage system must already be added to Spectrum Connect, as explained in “CLI – Managing storage systems” on page 80.</p>
array_detach -a <alias> -n <hostname> or array_detach --alias <alias> --hostname <hostname>	Detach a storage system from a vROps adapter (of a vROps server) by specifying the following parameters on the command line: <ul style="list-style-type: none"> • Alias name of the storage system that you want to detach. • IP address or hostname of the storage system that you want to detach. For example: <pre>sc_vrops_adapter array_detach -a mySVC -n 9.150.200.100</pre>
add -s <server> -n <hostname> or add --server <server> --hostname <hostname>	Add an adapter for a vROps server by specifying the following parameters on the command line: <ul style="list-style-type: none"> • IP address or hostname of a currently added (connected) vROps server. • IP address or hostname of the adapter that you want to add. For example: <pre>sc_vrops_adapter add -s vrops1.domain -n adapter2.domain</pre>
remove -n <hostname> or remove --hostname <hostname>	Remove an adapter by specifying its IP address or hostname on the command line. For example: <pre>sc_vrops_adapter remove -n adapter2.domain</pre>
report_thresholds -n <hostname> or report_thresholds --hostname <hostname>	Report the thresholds to a vROps server by specifying its IP address or hostname on the command line. For example: <pre>sc_vrops_adapter report_thresholds -n vrops1.domain</pre>

Table 21. Arguments for sc_vrops_adapter (continued)													
Argument	Use after sc_vrops_adapter to:												
report_thresholds -a or report_thresholds -all	Report the thresholds to all vROps servers that are currently added (connected). Usually, this command can be omitted, because the thresholds are defined by default, when a vROps server is added. <pre>sc_vrops_adapter report_thresholds -a</pre>												
list	List all the currently defined adapters and display their associated vROps server, alias name of attached storage systems, last report time (report to the vROps server), and indication regarding whether the adapter is remote or locally defined. For example: <pre>sc_vrops_adapter list</pre> <table><thead><tr><th>vROps Hostname Reported</th><th>Adapter Hostname Storage array alias</th><th>Remote</th><th>Last</th></tr></thead><tbody><tr><td>9.115.241.190</td><td>9.115.241.190</td><td>No</td><td>1 minutes ago</td></tr><tr><td>V9K</td><td></td><td></td><td></td></tr></tbody></table>	vROps Hostname Reported	Adapter Hostname Storage array alias	Remote	Last	9.115.241.190	9.115.241.190	No	1 minutes ago	V9K			
vROps Hostname Reported	Adapter Hostname Storage array alias	Remote	Last										
9.115.241.190	9.115.241.190	No	1 minutes ago										
V9K													
-h or --help	Display help information that is relevant to sc_vrops_adapter . You can also display help for the array_attach , array_detach , add , remove , or report_thresholds argument if it is typed on the command line as well.												

CLI – Backing up or restoring Spectrum Connect configuration

At any point, you can back up the current Spectrum Connect configuration and save it to a file, or load a previously saved configuration to restore a configuration.

The configuration includes storage credentials, storage systems, vCenter credentials, and storage resource attachments.

Use the **sc_configuration** CLI command to save the existing configuration, or load a saved configuration to replace the existing one. Use the required argument after the command, as specified in the following table.

Note:



- All CLI command arguments are case-sensitive.
- The backup and restore operations are not available on the Spectrum Connect GUI.
-  **Attention:**
 - Before using the **restore** option, the IBM VASA Provider service must be stopped as explained in [“Checking and controlling the Spectrum Connect Linux service”](#) on page 59. Start the service again after the configuration has been loaded.
 - **restore** should be used only with a freshly installed Spectrum Connect that has not yet been configured.

Table 22. Arguments for sc_configuration	
Argument	Use after sc_configuration to:
backup -f <file name> -k <8 characters> or backup --file <file name> --key <8 characters>	<p>Save the current IBM Storage Provider configuration to the specified file using an AES-256 encryption key that comprises 8 characters.</p> <p>For example:</p> <pre>sc_configuration backup -f confbackup -k abcdefghijklmnop</pre> <p>Important: You will need to provide this key in any restore operation (see below).</p>
restore -f <file name> -k <8 characters> or restore --file <file name> --key <8 characters>	<p>Load a configuration from a specified file by providing the file name and the encryption key that was used in the creation of the file.</p> <p> Attention: See the notes above this table.</p> <p>For example:</p> <pre>sc_configuration restore -f confgbackup -k abcdefghijklmnop</pre>
-h or --help	<p>Display help information that is relevant to sc_configuration.</p> <p>You can also display help for the backup or restore argument if it is typed on the command line as well.</p>

Chapter 7. Troubleshooting IBM Spectrum Connect

This chapter can help you detect and solve problems that you might encounter when using the IBM Spectrum Connect.

Note:

- For up-to-date information about known issues and possible workarounds, refer to the latest release notes.
- When contacting IBM Support, specify the storage system you are managing, using Spectrum Connect.

See the following sections for more information:

- [“Checking the log files” on page 89.](#)
- [“Configuring event forwarding” on page 91.](#)
- [“Self-assist options for IBM Spectrum Connect” on page 92.](#)

Checking the log files

The IBM Spectrum Connect maintains log files that record different types of events.

You can find the following log files in the `/var/log/sc/` directory:

- `events.log` – Records Spectrum Connect events according to their type: **Info**, **Error**, or **Warning**. The event logging is compatible with the Rsyslog application, an open source utility for forwarding log messages over IP networks (for more information, see the [Rsyslog website](#)). The following example shows different events that might be recorded:

```
IBMSC-0001, INFO, "User {user_name} has logged in."
IBMSC-0002, INFO, "User {user_name} has logged out."
IBMSC-0003, WARNING, "User {user_name} login attempt failed."
IBMSC-0004, INFO, "IBM Spectrum Connect local user account {user_name} was created."
IBMSC-0005, INFO, "IBM Spectrum Connect local user account {user_name} was deleted."
IBMSC-0006, INFO, "IBM Spectrum Connect local user account {user_name} password was reset."
IBMSC-0007, INFO, "Storage credentials were set for user {user_name}."
IBMSC-0008, ERROR, "Storage credentials for user {user_name} were disabled. Reason: {reason}."
IBMSC-0009, INFO, "Storage array identified as {identifier} with IP address {ip_address} has been added."
IBMSC-0010, WARNING, "Storage array {identifier} was removed."
IBMSC-0011, WARNING, "Storage array {identifier} was modified. Its new IP address is {ip_address}."
IBMSC-0014, INFO, "vCenter server with IP address {ip_address} was added by user {user_name}."
IBMSC-0015, WARNING, "vCenter server with IP address {ip_address} was removed."
IBMSC-0016, WARNING, "Credentials for vCenter server with IP address {ip_address} were updated by user {user_name}."
IBMSC-0017, INFO, "Storage pool {pool_name} on storage array {identifier} was attached to vCenter server with IP address {ip_address}."
IBMSC-0018, WARNING, "Storage pool {pool_name} on storage array {identifier} was detached from vCenter server with IP address {ip_address}."
IBMSC-0019, ERROR, "Failed to connect to storage array {identifier}. Reason: {reason}."
IBMSC-0020, INFO, "Information retrieval from storage array {identifier} was completed."
IBMSC-0021, ERROR, "Failed to retrieve information from storage array {identifier}. Reason: {reason}."
IBMSC-0022, INFO, "LDAP authentication was enabled."
IBMSC-0023, INFO, "LDAP authentication was disabled."
IBMSC-0024, INFO, "Completed the vSphere Web Client extension task {task_name} with the following parameters: {parameter_list}."
IBMSC-0025, ERROR, "Failed to complete the vSphere Web Client extension task {task_name} with the following parameters {parameter_list}."
Reason: {reason}."
```

- `hsgsvr.log` – Records events regarding monitoring and operations on storage systems and volumes.
- `vasa1.log` – Records events regarding the communication between Spectrum Connect and the connected vCenter servers that utilize VASA 1.0 functions.
- `vasa2.log` – Records events regarding the communication between Spectrum Connect and the connected vCenter servers that utilize VASA 2.0 functions. In addition, several events related to the VASA 1.0 activity may be recorded in the `vasa2.log` file as well.
- `vasa3.log` – Records events regarding the communication between Spectrum Connect and the connected vCenter servers that utilize VASA 3.0 functions.

- `vwv.log` – Records events regarding the communication between Spectrum Connect and the vSphere Web Client Server on which the IBM Storage Enhancements are installed.
- `celery.log` – Records events regarding the Celery services on the Linux host on which Spectrum Connect is installed.
- `django.log` – Records events regarding the Django service on the Linux host on which Spectrum Connect is installed.
- `vco.log` – Records events regarding operation of the vSphere Orchestrator, complementing information stored in the `hsgsvr.log` file. The `vco.log` file can be accessed via the **Log** tab of the vCO plug-in interface. If the Inventory folder within the 'IBM Storage' context is empty and the following message is stored in the `vco.log`:

```
[SCRepository] com.sun.jersey.api.client.ClientHandlerException:
javax.net.ssl.SSLHandshakeException: java.security.cert.CertificateException:
No name matching sc8.cn.ibm.com found,
```

replace the default Spectrum Connect SSL certificate and key files as described in [“Managing server certificates”](#) on page 27.

- `vcops.log` – Records events regarding the communication between Spectrum Connect and the connected vROps servers.

You can retrieve and save the current Spectrum Connect log files in a compressed TAR archive file by using the **Collect Log** option on the Settings menu of the Spectrum Connect GUI, as shown in [Figure 60](#) on page 90. This option allows you to save different instances of the log files at different times. The download location is determined by your browser's default settings.

Note: Depending on the size of the log files, the log files collection and download operation may take several minutes.

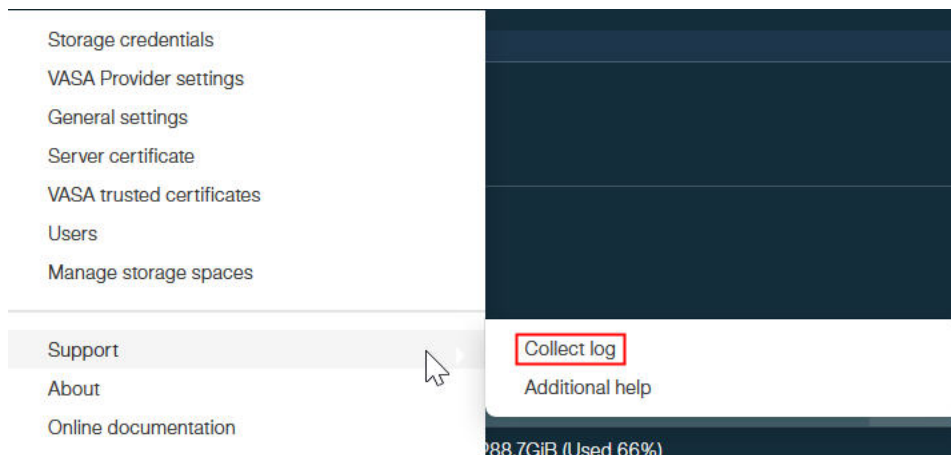


Figure 60. Collect log option

Additional information can be retrieved from other resources. For example, the **Failed to establish connection <hostname>** message stored in the `/var/log/vvold.log` file on an ESXi host indicates a loss of IP connectivity between the Spectrum Connect server and the ESXi host that uses a VVol. To resolve this issue, re-establish the connection with all ESXi host, consuming VVols via the Spectrum Connect web login port.

Also, vSphere components generate assorted logs that contain additional information about activities in vSphere environment. This information might help you resolve technical issues. The log files locations are detailed in the following table.

Note: The file locations refer to external resources and might change without prior notice. See VMware vSphere documentation for the current locations of the relevant system log files.

Table 23. VMware log file locations			
VMware component	Operating system		GUI
	Windows	Appliance	
vSphere Web Client	C:\ProgramData\VMware\VCenterServer\logs vsphere-client\logs	/var/log/vmware/ vsphere-client/logs	–
vRo	8.0: <ul style="list-style-type: none"> <instal_dir>\VMware\Orchestrator\app-server\logs, <instal_dir>\VMware\Orchestrator\apps <instal_dir>\VMware\Orchestrator\configuration\logs 	7.x: /var/log/vco 8.0: run command: vracli log-bundle	<ul style="list-style-type: none"> 7.x: Control center > Export Logs
vROps	–		<ul style="list-style-type: none"> 6.x, 7.x, 8.0: Administration > Support Bundles > + > Create log bundle > Download the bundle

Configuring event forwarding

Storage system level events generated by a storage system can be forwarded by the IBM Spectrum Connect to the VMware vRealize Log Insight for monitoring and analysis.

Procedure

To configure event forwarding:

1. Go to the /opt/ibm/ibm_spectrum_connect/conf.d/ directory.
2. Open the ibmsyslog.conf file for editing.
3. Look for the following code block:

```
if $programname == 'array_events' then ?SCLogFileName;SCLogFormat
& ~
```

4. Add the IP address of the VMware vRealize Log Insight server and UDP port in the following format: & @@<log_insight_address>:<port>.

Example

To forward the storage system events to the VMware vRealize Log Insight server with IP address 9.151.163.122 via UDP port 514 in addition to writing them to the /var/log/sc/array_events.log file, enter the following:

```
if $programname == 'array_events' then ?ISISLogFileName;ISISLogFormat
& @@9.151.163.122:514
& ~
```

To relay the storage system events to the VMware vRealize Log Insight server with IP address 9.151.163.122 via UDP port 514 without writing them to the local log file, enter the following:

```
if $programname == 'array_events' then @@9.151.163.122:514
& ~
```

Self-assist options for IBM Spectrum Connect

IBM Support provides several online self-service tools for IBM Spectrum Connect users.

You can try using the following tools to find information and resolve issues without having to contact IBM Support:

- [Spectrum Connect-related questions on IBM developerWorks](https://developer.ibm.com/answers/topics/spectrum%20control/#) (developer.ibm.com/answers/topics/spectrum%20control/#) – Allows you to ask questions online and get answers from IBM experts or other users. The issue of interest can also be searched for in older discussions.
- [IBM Redbooks®](https://redbooks.ibm.com) (redbooks.ibm.com) – Technical documents where IBM experts share their expertise and best practices for using Spectrum Connect. Among others, you can refer to the following publication:
 - [Using the IBM Spectrum Accelerate Family in VMware Environments](#) (only supported for IBM FlashSystem A9000 and A9000R)

The above resources are constantly being indexed by web search engines such as [Google](https://www.google.com) ([google.com](https://www.google.com)).

Chapter 8. VMware environment

The following concept diagram illustrates how IBM storage systems are accessed and utilized in the VMware environment through IBM Spectrum Connect.

The storage administrator uses Spectrum Connect to select which IBM storage systems (arrays) and what storage resources should be available for use in the VMware environment, and control which specific vCenter servers can utilize the IBM storage resources.

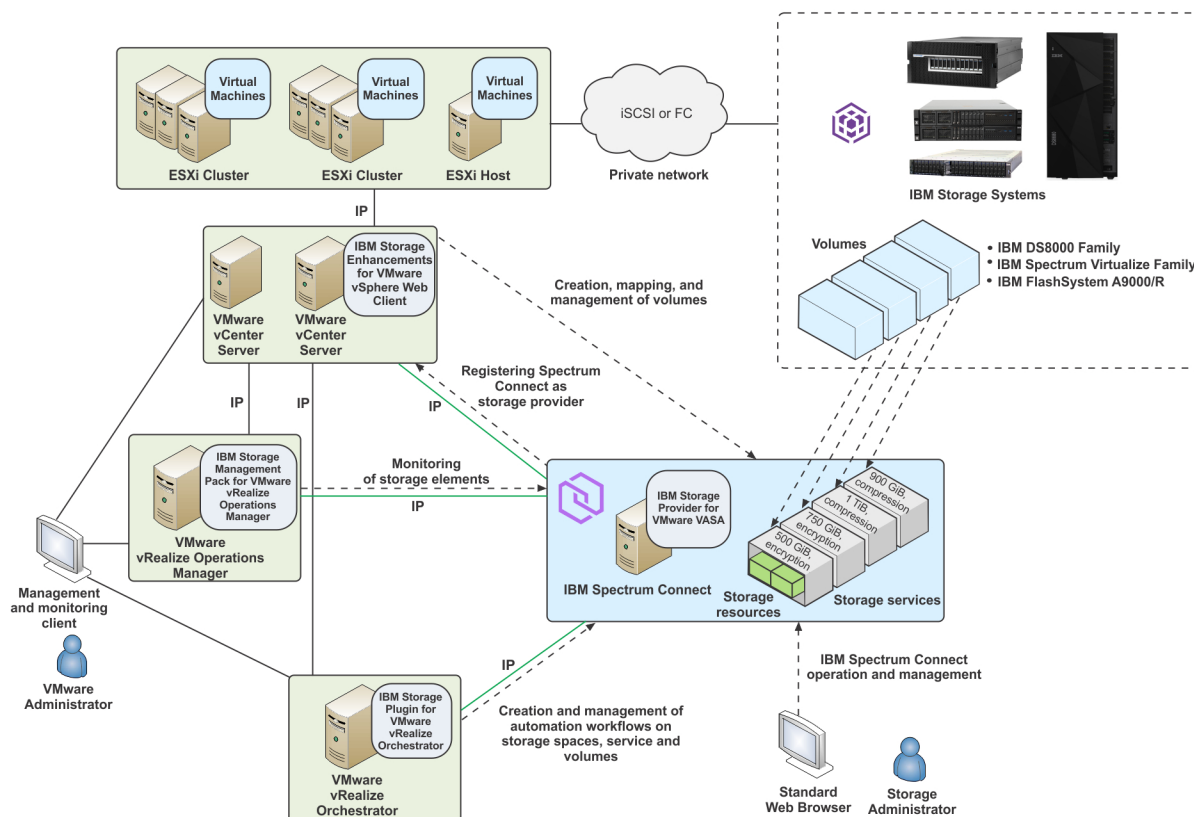


Figure 61. Integration of IBM storage systems with a VMware environment

Spectrum Connect allows registered VMware vCenter servers to utilize its VASA functions, which can be monitored on the vSphere Web Client station.

In parallel, the following operations are enabled on the VMware environment side:

- Through vSphere Web Client, administrators can manually create, map, and fully control storage volumes on the available storage systems and storage resources.
- Through vRealize Orchestrator, administrators can issue workflows for automating the same volumes operations that are available through vSphere Web Client. The automation is run by the VMware vCloud Automation Center (vCAC) platform.
- Through vRealize Operations Manager, administrators can obtain comprehensive monitoring information about the IBM storage resources that are utilized in their virtualized environment.

Note: New storage resources (pools) can be created in advance through the dedicated storage system management tools or from Spectrum Connect. New resources cannot be added from the VMware environment.

Version 3.0.0 introduced a new storage provisioning method, which replaces physical objects (pools and storage systems) with abstracted storage entities (spaces and services), as detailed in [“VMware Storage](#)

[Policy Based Management \(SPBM\)” on page 95](#) and [“Storage space and service management” on page 2](#).

IBM Storage Provider for VMware VASA

The IBM Storage Provider for VMware VASA improves the ability to monitor and automate storage-related operations on VMware platforms.

From its Spectrum Connect host, the IBM Storage Provider for VMware VASA provides a standard interface for any connected VMware vCenter server using the VMware vSphere APIs for Storage Awareness (VASA). It delivers information about IBM storage topology, capabilities, and state, together with storage events and alerts to vCenter server in real time. The storage capabilities are presented as a combination of space and service, facilitating in provisioning volumes based on a predefined set of storage capacities, as detailed in [“Storage space and service management” on page 2](#).

To visualize how this cloud interface is integrated in a VMware environment, see [Chapter 8, “VMware environment,” on page 93](#).

VMware virtual volumes

IBM Spectrum Connect delivers comprehensive storage virtualization support that use VMware vSphere Virtual Volume (VVol) technology.

Note: The virtual volume technology is supported only by storage systems that run IBM Spectrum Virtualize (7.6 or later).

The VVol architecture, introduced in VMware VASA 2.0, preserves the concept of a traditional datastore, maintaining familiarity and compatibility with previous data storage implementations. With VVol, the IBM storage systems become aware of individual VMs, allowing data operations, such as snapshot and replication, to be performed directly by the storage system at the VM level.

The storage system uses VASA provider to present VVols to the ESXi host and inform the vCenter of the availability of VVol-aware storage. Storage services are configured on VASA provider by the storage administrator and are used to manage storage resources (pools) and VVols. The services represent storage capacity with a set of attributes, such as encryption or provisioning type.

VVol usage improves system scalability, ensures granular management, leverages hardware features and performance of storage systems at the VM level, providing complete end-to-end cloud solution. An additional entity, a storage space, includes one or more services, and can be assigned to different storage customers.

As illustrated below, the IBM Storage Provider for VMware VASA implements the VMware Virtual Volume API, providing an out-of-band management bridge between vSphere and the storage system. Out-of-band link separates the management path from the data path, which connects the ESXi servers to the virtual disks in a VVol datastore through a Protocol Endpoint (PE). Instead of presenting a LUN to the hypervisor and allowing an ESXi host to perform data operations, a storage system takes on itself a bulk of storage-related functions.

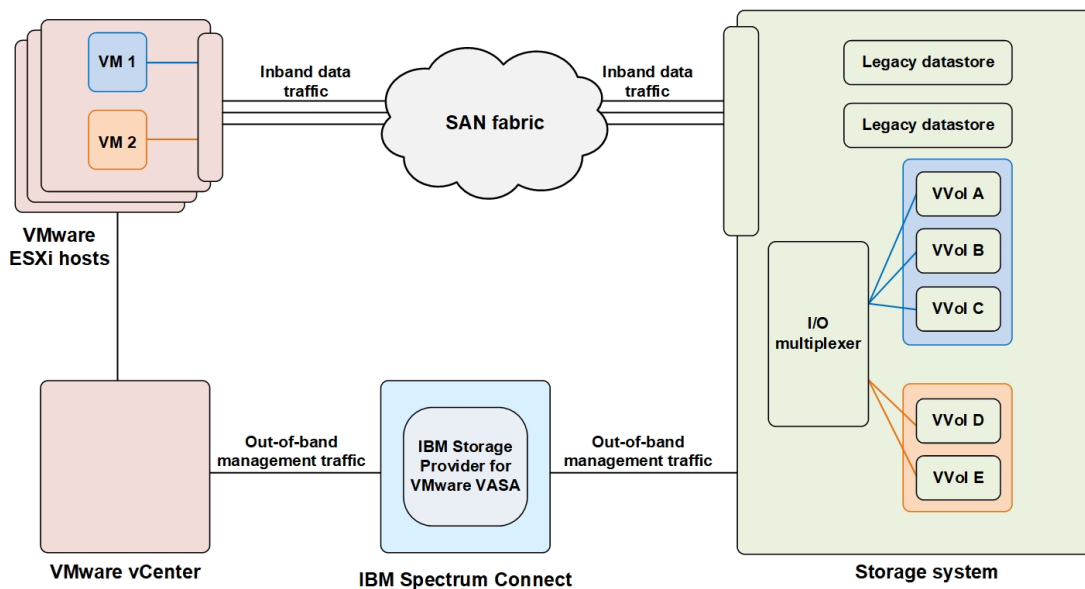


Figure 62. Using virtual volumes with IBM Spectrum Connect

For instructions about how to configure a VVol-enabled storage service, see [“Creating a VVol-enabled service on storage systems that run IBM Spectrum Virtualize”](#) on page 101.

VMware Storage Policy Based Management (SPBM)

IBM Spectrum Connect uses VMware vSphere Storage Policy Based Management (SPBM) technology for optimizing the virtual machine provisioning process.

Delivering only one service level, the traditional storage provisioning models fail to match storage consumer needs with storage provider capabilities. This results in misalignment between the system capacities and application requirements, leading to over-provisioning and waste of IT resources.

The SPBM approach allows dynamic definition of storage policies with their subsequent delivery on a per-VM basis. In this case, the storage consumer can pair an application with existing storage policies and provision storage resources exactly according to application requirements. Storage policies, referred to as storage services in this user guide, combine storage capacity with a set of attributes (encryption, provisioning type, etc.) to define storage spaces, which are used as virtual datastores to suit requirements of a specific VM, as illustrated below.

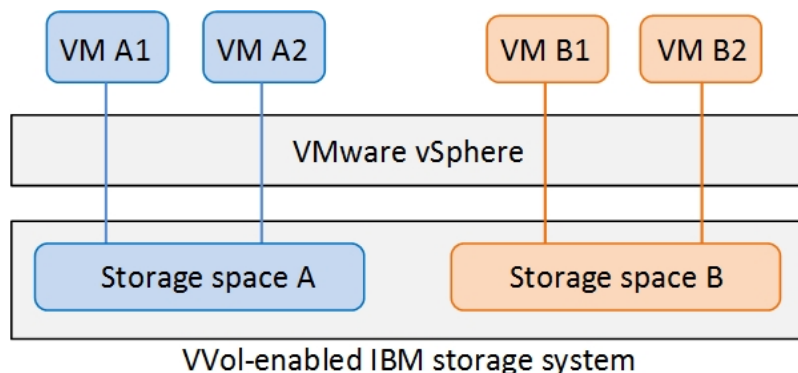


Figure 63. Storage Policy Based Management (SPBM) concept

Note: The virtual volume functionality is supported only by storage systems that run IBM Spectrum Virtualize (7.6 or later).

Managing and monitoring VASA access

You can control and monitor the utilization of the IBM Storage Provider for VMware VASA, which is part of the IBM Spectrum Connect solution.

Refer the following sections on details how to set VASA credentials and manage trusted certificates.

- [“Setting the VASA credentials” on page 96](#)
- [“Managing VASA trusted certificates” on page 97](#)

Setting the VASA credentials

The VASA credentials comprise a username and a password that is set separately from the Spectrum Connect user accounts, and separately from the storage system credentials.

About this task

VMware vCenter servers can use the VASA credentials to connect to Spectrum Connect and utilize VASA functions, as explained in [“Registering Spectrum Connect as a storage provider on vCenter server” on page 98](#).

From the Spectrum Connect UI you can set, change, or display these VASA credentials at any time.

Note:

- Only one set of a username and a password can be used for the VASA credentials, which applies to all vCenter servers that require VASA functions and connect to Spectrum Connect.
- The same operations are available from the CLI as well, as explained in [“CLI – Setting the VASA credentials” on page 82](#).

Procedure

1. Click **VASA Provider settings** on the Settings menu.
The **VASA Provider settings** dialog box is displayed.

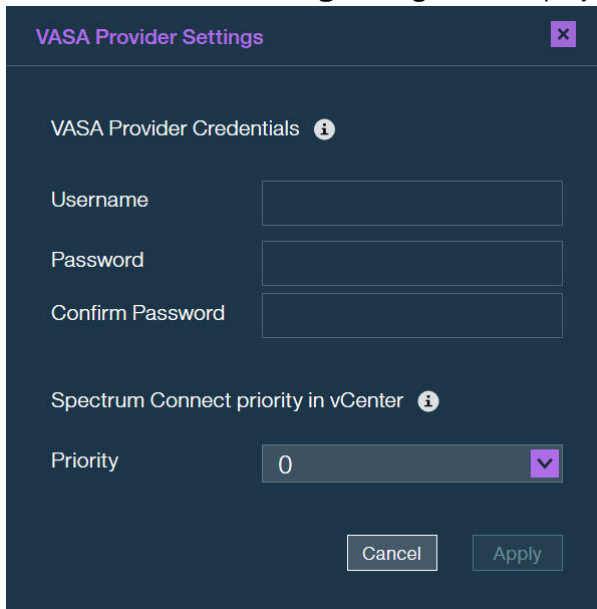


Figure 64. VASA Provider settings dialog box

2. Enter the username and password that you want to set, confirm the password and then click **Apply**.

Note: The VASA username must be different from any username stored in the Spectrum Connect user database. See [“Managing Spectrum Connect users and groups” on page 30](#).

3. In the **Priority** drop-down box, select a priority (0–255) of Spectrum Connect as a storage provider in vCenter. In its turn, it defines priority of all storage systems added to the current Spectrum Connect instance on the vCenter server.

Note: You can use the Priority setting for resolving an issue, when a Spectrum Connect instance defined for the same storage system is active on one vCenter server and passive on another vCenter. This might occur, when two SC instances with the same priority, managing the same storage system are registered as storage providers on two different vCenters. A loss of connectivity between any of the Spectrum Connect instances and vCenter servers might result in the following configuration:

- Spectrum Connect A is an active storage provider on vCenter 1.
- Spectrum Connect B is an active storage provider on vCenter 2.

This renders Spectrum Connect A to be the active storage provider on vCenter 1 and passive on vCenter 2. In its turn, Spectrum Connect B is active provider on vCenter 2 and passive on vCenter 1. To avoid this situation, use the Priority parameter to define the required Spectrum Connect instance to have a higher priority than another one. This ensures that it remains active after a failover.

Managing VASA trusted certificates

You can view and, if needed, remove all registered vCenter servers as well as upload new certificates.

Before managing VASA certificates, verify that the VASA credentials have been set, as explained in the previous section.

To display a list of all vCenter servers that are currently registered and are utilizing VASA functions, go to the **VASA Trusted Certificates** dialog box (**Settings > VASA trusted certificates**). Instructions on adding Spectrum Connect as a storage provider to the VMware vCenter Server are detailed in the “Registering Spectrum Connect as a storage provider on vCenter server” on page 98 section. During Spectrum Connect registration, the certificate validity is verified for VMware VASA 1.0, VASA 2.0, and VASA 3.0. Also, for VMware VASA 2.0 and VASA 3.0, it is verified that the certificate is signed by the VC root CA (when working with VMCA) or it is uploaded as a trusted certificate.

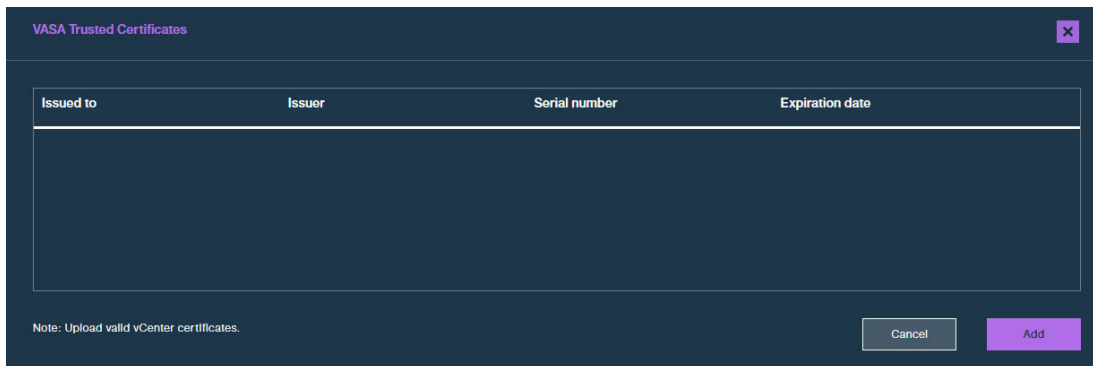


Figure 65. Registered VASA servers (vCenter servers that employ VASA services)

If you want to disconnect a vCenter server, click and highlight the row of the vCenter server that you want to disconnect, and then click the **Remove** button.

If you want to upload a new certificate, click **Add > Upload Certificate > Browse** and attach your certificate file.

Using the IBM Storage Provider for VMware VASA

This chapter focuses on how to use the IBM Storage Provider for VMware VASA after the required configuration on IBM Spectrum Connect has been completed.

After the IBM storage systems have been added to Spectrum Connect and after the VASA access credentials were set (see “Required and optional initial tasks” on page 15), you can start using the IBM Storage Provider for VMware VASA by registering Spectrum Connect on the relevant vCenter servers.

Registering Spectrum Connect as a storage provider on vCenter server

To use the IBM Storage Provider for VMware VASA solution component, you need to register Spectrum Connect as a storage provider on VMware vCenter server.

Before you begin

- When the IBM Storage Provider for VMware VASA and the IBM Spectrum Control storage provider, formerly known as IBM Tivoli® Storage Productivity Center (TPC), are registered on the same VMware vCenter server, while the same storage system is configured for both, vCenter uses IBM Spectrum Control provider **as the only source of information** for that system's storage views on vSphere Web Client.

In such a case, determine whether the IBM Spectrum Control capabilities are sufficient for replacing the IBM Storage Provider for VMware VASA. If the IBM Storage Provider for VMware VASA is still needed, IBM TPC 5.2.x provides a method of excluding storage systems from a specific storage provider, allowing you to remove the system association with the IBM TPC provider.

- The **date and time** that are defined on both the vCenter server and on Spectrum Connect must be identical. To accurately synchronize the date and time between the two servers, you can connect both to a Network Time Protocol (NTP) server.

Note:

- VMware VASA 2.0 is required for implementing virtual volume functionality.
- For Spectrum Virtualize Family storage systems, pools used for VVol must have vdisk protection disabled, which it is by default.

About this task

The following procedure describes how to register Spectrum Connect on a single vCenter server by using vSphere Web Client.

Procedure

To register Spectrum Connect on VMware vCenter server, complete the following steps.

- In vSphere Web Client, click **vCenter** > **vCenter Servers**, and click the vCenter server, on which you want to register the IBM storage provider.
- On the **Configure** tab, click **Storage Providers**.
- Click the plus sign to add a new storage provider.

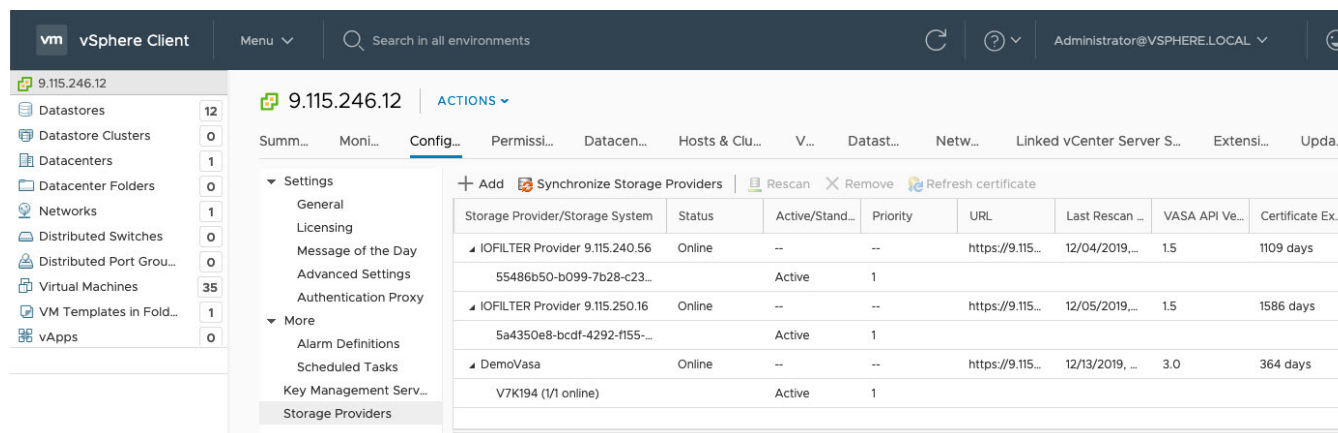


Figure 66. vSphere Web Client – Storage Providers list

The **New Storage Provider** dialog box is displayed.

4. Enter the name, URL, and pre-configured username and password (VASA Secret) for accessing Spectrum Connect (the VASA Secret is predefined as explained in [“Setting the VASA credentials”](#) on page 96).

The URL should be entered in the *ip:port* format, specifying the relevant IP address and port number of Spectrum Connect:

- `https://[Spectrum Connect IP address]:8440/services/vasa1` for VASA 1.0
- `https://[Spectrum Connect IP address]:8440/services/vasa` for VASA 2.0 and VASA 3.0

Note:

- The hostname/IP address in the URL must match the common name, which is used, when generating an SSL certificate for the Spectrum Connect server. See [“Managing server certificates”](#) on page 27.
- In this example, "Spectrum Connect IP address" stands for the IP address or domain namespace of Spectrum Connect.
- You can change the default TCP port (8440) at any time by running a script, as explained in [“Changing the Spectrum Connect communication port”](#) on page 62.

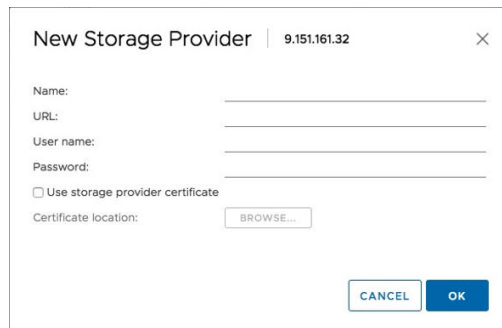
A dialog box titled "New Storage Provider" with a close button (X) in the top right corner. The title bar also displays the IP address "9.151.161.32". The dialog contains several input fields: "Name:", "URL:", "User name:", and "Password:". Below these is a checkbox labeled "Use storage provider certificate". Underneath the checkbox is a label "Certificate location:" followed by a "BROWSE..." button. At the bottom of the dialog are two buttons: "CANCEL" and "OK".

Figure 67. New Storage Provider dialog box for VASA 2.0 / VASA 3.0

5. Click **OK**. A security alert dialog box is displayed.


A "Security Alert" dialog box with a close button (X) in the top right corner. The main text reads "Unable to verify the authenticity of the host." Below this, it says "The SHA1 thumbprint of the certificate is:" followed by a long hexadecimal string: "92:C7:5D:0D:1F:A6:71:F2:50:EF:22:8D:35:86:4A:BB:AD:59:44:DC". There is a yellow warning triangle icon to the left of the text "Connect anyway?". Below this, there are two lines of instructional text: "Click Yes if you trust the host. The above information will be retained until the host is removed from the inventory." and "Click No to cancel connecting to the host." At the bottom are two buttons: "NO" and "YES".

Figure 68. vCenter certificate thumbprint dialog box

6. Click **Yes** to accept the certificate. Spectrum Connect is added to vCenter Server.

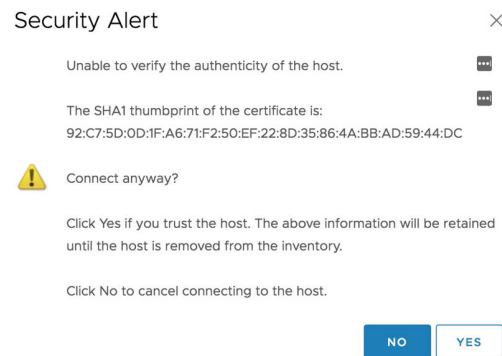Note: The certificate provides improved security by adding server authentication.

If, during the registration process, you have an active Spectrum Connect instance, restart your web browser or refresh the Spectrum Connect GUI window to ensure the successful acquisition of the new server certificate.

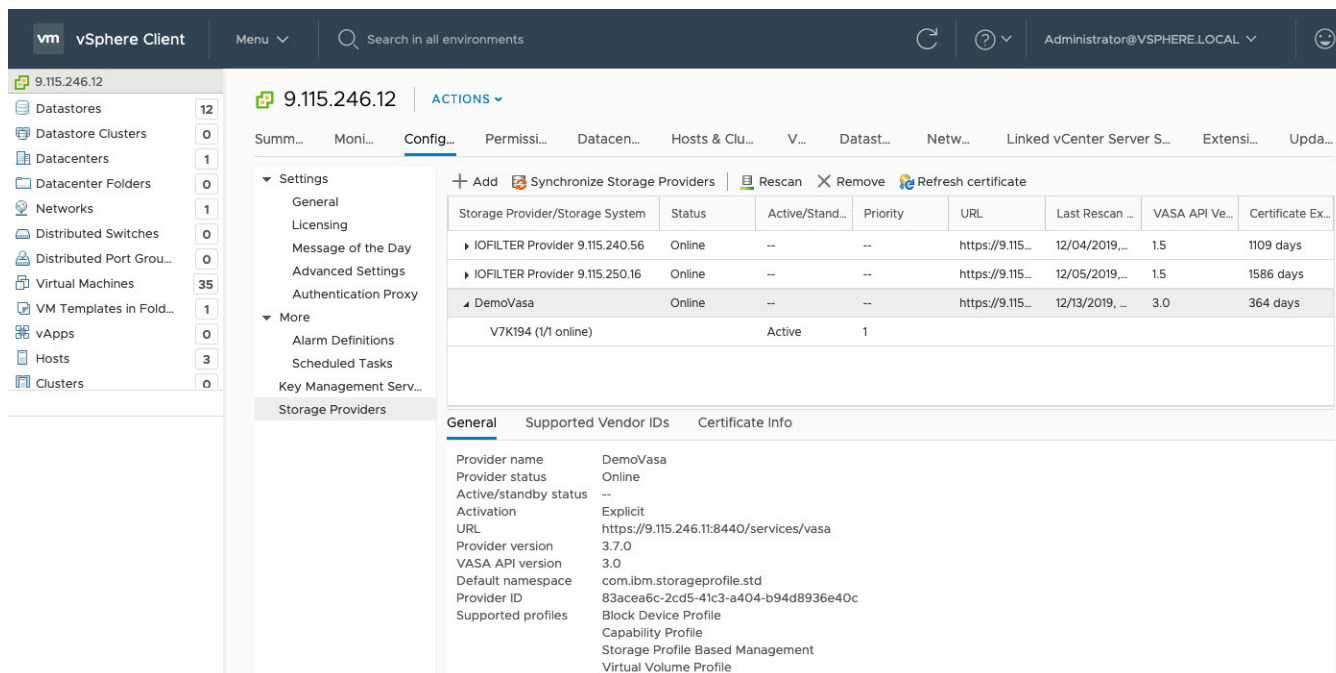


Figure 69. Storage Providers list displaying Spectrum Connect

7. You can ensure continuous storage management by combining multiple Spectrum Connect instances, registered as storage providers, into high-availability groups. This process is described in [“Defining a high-availability group”](#) on page 25.

Note: Storage spaces and services defined on an active storage provider do not appear on the standby Spectrum Connect. The spaces and services become visible on the Spaces/Services pane of the Spectrum Connect GUI, when it becomes active after system failover.

What to do next

After Spectrum Connect is registered as a storage provider on vCenter server, you can start managing VMware storage resources on IBM storage systems via vSphere Web Client. Complete the following tasks, referring to the relevant VMware documentation for details.

1. Create a new VM storage policy to set requirements for the storage resources.

Note: During a VM storage policy creation, a VVol-enabled storage service is exposed as a capability value of the IBM Storage Service entry. This information is displayed in the *storage container:storage system* format.

2. Add a new datastore.

Note: A VVol container is created for a single storage system on a storage space. For example, storage space A and storage system A are visible as container 1; storage space A and storage system B are visible as container 2.

3. Create a new virtual machine on the datastore.

Best practices

Refer to the general guidance and best practices for using IBM Storage Provider for VMware VASA as described in the following sections.

- [“Creating a VVol-enabled service on storage systems that run IBM Spectrum Virtualize”](#) on page 101
- [“Restoring VVol-based virtual machines”](#) on page 102
- [“Handling VVol-enabled datastores”](#) on page 102
- [“Upgrading or installing Spectrum Connect with vSphere failover”](#) on page 103

Creating a VVol-enabled service on storage systems that run IBM Spectrum Virtualize

IBM Spectrum Connect features comprehensive storage virtualization support, using VMware Virtual Volume (VVol) technology. The virtual volume functionality is supported by storage systems that run IBM Spectrum Virtualize (7.6 or later).

Before you begin

- Verify that all required ESXi hosts are connected and defined at the storage system side.
- Verify that the Spectrum Connect time is synchronized with the time used by the vCenter server

About this task

This section details how to create a VVol-enabled storage service on storage systems that run IBM Spectrum Virtualize (7.6 or later). The service or a group of services can be used to define storage spaces, serving as virtual datastores for VM deployment.

To create a VVol-enabled storage service:

- Enable VVol utilization at the side of a storage system that runs IBM Spectrum Virtualize.
- Create the service, using Spectrum Connect.

Procedure

1. Activate the storage system CLI utility and log in as *SecurityAdmin*, and then create a user group with role *VASAProvider* (**mkusergrp -name <vasa_group_name> -role VASAProvider**).
2. Create a *VASAProvider* user in the user group (**mkuser -name <user_name> -usergrp <vasa_group_name>**).
3. Create a metadata volume (**mkmetadatavdisk -mdiskgrp <pool_name>**). For the storage systems that run microcode 7.6.1.0 or later, this operation requires the *SecurityAdmin* access level. Also, on these storage systems, you can enable the VVol feature by toggling the Enable VVOL switch under Settings -> System -> VVOL, using the web GUI.
4. For each ESXi host, define the host on the storage system as *adminlun* type (**svctask mkhost -name <host_name> -fcwwpn <fibre_channel_wwpn> -iscsiname <iscsi_wwn> -type adminlun**).
5. Launch Spectrum Connect.
6. Define a high-availability group. See [“Defining a high-availability group”](#) on page 25.
7. Generate a self-signed Spectrum Connect server certificate. See [“Managing server certificates”](#) on page 27.
8. Set up VASA credentials. See [“Setting the VASA credentials”](#) on page 96.
9. Enable the *VASAProvider* user to access the storage resources. See [“Entering the storage system credentials”](#) on page 37.
10. Add the storage system with *VASAProvider* user to the Spectrum Connect. See [“Adding a storage system”](#) on page 38.
11. Add a new storage space. See [“Adding a storage space”](#) on page 44.
12. Add a VVol-enabled service to the storage space. See [“Adding a storage service”](#) on page 46.
13. Define a storage resource and attach it to the VVol-enabled service. See [“Defining and attaching storage resources”](#) on page 49.
14. Register Spectrum Connect as a storage provider on VMware vCenter server. See [“Registering Spectrum Connect as a storage provider on vCenter server”](#) on page 98.
15. Launch the vWC and create a VVol-enabled datastore. Select the storage space that you defined as an underlying storage resource for the datastore.

Note: The storage space is presented as a combination of a VVol container and a storage system. For example, storage space A and storage system A are visible as container 1; storage space A and storage system B are visible as container 2. This information is displayed in the *storage container:storage system* format.

Handling VVol-enabled datastores

For best performance, avoid storing static files in a VVol-enabled datastore.

When a new folder is created in the root path of a VVol-based datastore, a 4-GB virtual volume is defined, which cannot be extended.

Restoring VVol-based virtual machines

You can restore virtual machines deployed on virtual volumes in case of Spectrum Connect failure.

Before you begin

Verify that:

- VVol metadata database is available on a storage system.
- Spectrum Connect installation package is ready for deployment.

About this task

This section details how to restore VMs deployed on virtual volumes, if all Spectrum Connect instances have been permanently destroyed and no backups are available. This scenario may occur, when VMs, hosting Spectrum Connect, were migrated to VVols.

To restore VVol-based VMs:

- Obtain a name of the VVol metadata database located a storage system. This example illustrates procedure for storage systems that run IBM Spectrum Virtualize.
- Install and configure a new copy of Spectrum Connect.

Procedure

1. Activate the storage system CLI utility and log in as *VASAdmin*. The code example below uses the *vasa-admin* ID in the *VASAdmin* role.
2. Display the name of the VVol metadata database, by running the **svctask metadata_db_list** command.

```
IBM_Storwize:vasa-admin> svctask metadata_db_list
DB_name
vvol-db
```

Note: If you have several matching databases on your storage system, use the **svctask metadata_entry_list -db <db_name>** command to display the database contents. A database with multiple entries is the most likely candidate to store the VVol metadata information.

3. Install Spectrum Connect, as explained in the previous chapters.
4. In the **General Settings** dialog box, use the VVol metadata database name (vvol-db in example below), as the HA group designation.

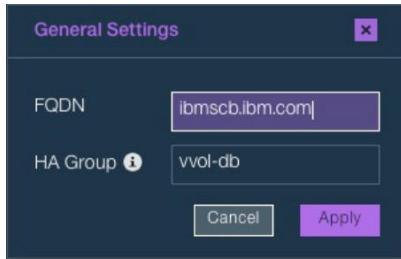


Figure 70. Defining *vvol-db*, as HA group name

5. In the **Storage Credentials** dialog box, define the user name, according to the ID name, defined in step 1 of this procedure. This allows the new Spectrum Connect instance to communicate with the storage system.

Spectrum Connect begins populating relevant storage space with the information recovered from the database on the storage system. Depending on the amount of information, this can take some time to complete. You may need to refresh your browser to see the updated information in the Spectrum Connect GUI.

6. Complete the Spectrum Connect configuration as usual, registering it as a storage provider on vCenter server.
7. Launch the vSphere Web Client for registered vCenter servers and power on your VVol-based VMs as normal.

Upgrading or installing Spectrum Connect with vSphere failover

Spectrum Connect can be upgraded or installed together with vSphere failover procedure.

Before you begin

- Verify that at least two Spectrum Connect instances are registered as storage providers on a vCenter server.
- Both Spectrum Connect instances must be online, one of them must be active and the other one – standby.

About this task

To minimize system downtime, you can upgrade the existing Spectrum Connect or install its new release along with completing failover between active and standby instances in vSphere environment.

Procedure

1. Copy the upgrade or installation package files to a temporary folder on a virtual machine that is hosting Spectrum Connect.
2. Upgrade or install the standby Spectrum Connect instance. See [“Upgrading an existing installation” on page 10](#) or [“Performing first-time installation of Spectrum Connect” on page 5](#).
3. Verify the standby instance connectivity to a storage system, by using the **sc_storage_array list** command.

A proper connectivity to a storage system is indicated by *Yes* in the *Connected* field, as illustrated in the following example.

Array Alias Connected	Array Identifier Notes	Management IP Addresses	Elapsed time since last update	
SVC232	0000020062A1D16C	9.115.246.232	7 minutes	Yes

4. Complete the active Spectrum Connect failover to the standby instance, by restarting the guest operation system of the virtual machine that is hosting the active Spectrum Connect.

The failover process can take up to 8 minutes to complete. As a result, the standby instance becomes active, running the newly upgraded or installed Spectrum Connect.

5. Repeat the upgrade/install and failover processes for the remaining Spectrum Connect instances.

IBM Storage Enhancements for VMware vSphere Web Client

The IBM Storage Enhancements for VMware vSphere Web Client integrate into the VMware vSphere Web Client platform and enable VMware administrators to independently and centrally manage their storage resources on IBM storage systems.

Depending on the IBM storage system in use, VMware administrators can self-provision volumes (LUNs) in selected storage services that were predefined by the storage administrators. The volumes are mapped to ESXi hosts, clusters, or datacenters as logical drives that can be used for storing VMware datastores (virtual machine data containers). See [“VMware Storage Policy Based Management \(SPBM\)” on page 95](#) and [“Storage space and service management” on page 2](#).

The IBM Storage Enhancements for vSphere Web Client are installed only on the vSphere Web Client Server, allowing multiple vCenter servers to utilize IBM storage resources. In addition, procedures for attaching and detaching storage resources to the services are performed on the Spectrum Connect side, rather than on the vSphere Web Client side.

The IBM Storage Enhancements for VMware vSphere Web Client are automatically deployed and enabled for each and every vCenter server that is registered for vSphere Web Client services on the connected Spectrum Connect.

To visualize how this cloud interface is integrated in a VMware environment, see [Chapter 8, “VMware environment,” on page 93](#).

Managing integration with vSphere Web Client

Before you can use the IBM Storage Enhancements for VMware vSphere Web Client on the web client side, you need to define on the Spectrum Connect side the vCenter servers for which you want to provide storage resources. Then, you can attach storage services that you want to make available to each vCenter server.

The storage services that you attach on the Spectrum Connect side become visible on vSphere Web Client, and can be used for volume creation by using the IBM Storage Enhancements for vSphere Web Client (for more information, see [“IBM Storage Enhancements for VMware vSphere Web Client” on page 104](#)).

- [“Adding a vCenter server” on page 104](#)
- [“Updating the credentials of a vCenter server” on page 106](#)
- [“Removing a vCenter server” on page 106](#)
- [“Delegating storage services to a vCenter server” on page 107](#)
- [“Canceling service delegation to a vCenter server” on page 108](#)

Adding a vCenter server

Add the VMware vCenter servers for which you want to provide storage resources through IBM Spectrum Connect.

Before you begin

Log out of any vSphere Web Client application connected to a vCenter server that you want to add to Spectrum Connect. If you stay logged in, you will be able to use the extension only after you log out and log into vCenter after the connection.

About this task

You need to connect to and add the vCenter servers for which you can later attach storage services that would be visible and accessible on the vSphere Web Client side. You can add a single vCenter server at a time, as described in the following procedure.

Note: For any vCenter server that you add, the IBM Storage Enhancements for VMware vSphere Web Client (see [“IBM Storage Enhancements for VMware vSphere Web Client” on page 104](#)) are automatically deployed and enabled on the vSphere Web Client Server side.

Procedure

1. Click **Add Interface** on the **Interfaces** pane and then select **Add vCenter**.

The **Add New vCenter Server for vWC** dialog box is displayed.

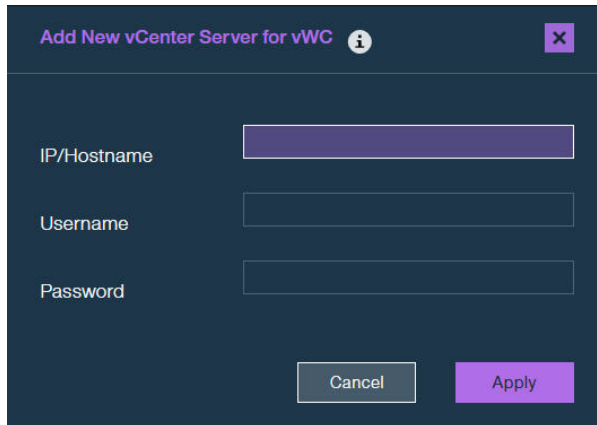
A dark-themed dialog box titled "Add New vCenter Server for vWC" with a close button (X) in the top right corner. It contains three input fields: "IP/Hostname", "Username", and "Password". At the bottom, there are two buttons: "Cancel" and "Apply".

Figure 71. Add vCenter Server for vWC dialog box

2. Enter the IP address or hostname of the vCenter server, as well as the username and password for logging into that vCenter server.

If the provided IP address and credentials are accepted by the vCenter server, it is added to the list of servers on the **Interfaces** pane. The yellow frame and the exclamation mark indicate that the interface has no storage services delegated to it yet.

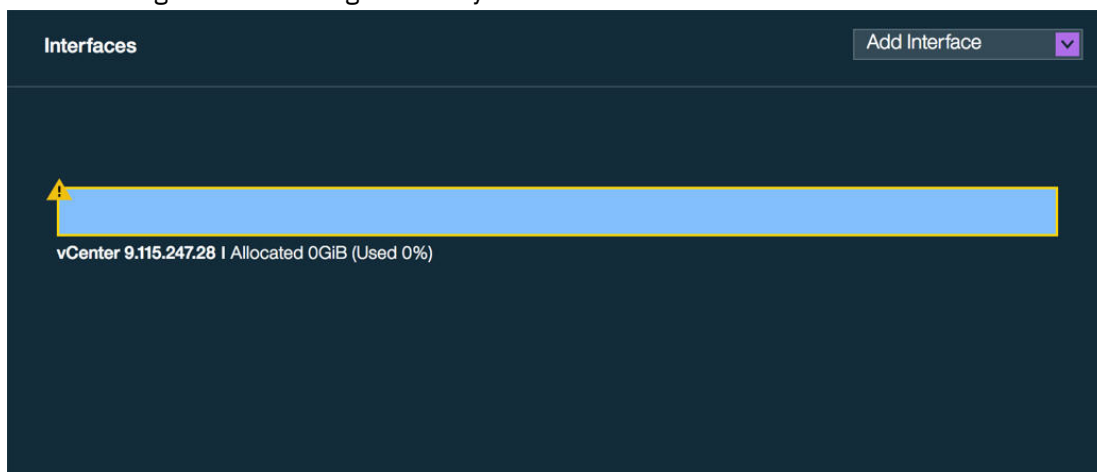
A dark-themed pane titled "Interfaces" with an "Add Interface" button in the top right corner. Below the title bar, there is a yellow-bordered box with a yellow exclamation mark icon on the left. Inside the box, the text reads "vCenter 9.115.247.28 | Allocated 0GiB (Used 0%)".

Figure 72. Interfaces pane

Note:

- If you want to use the vSphere Web Client extension on all vCenter servers that operate in linked mode, each server instance must be added to Spectrum Connect. This ensures that the extension is registered on all linked servers properly.

- The same vCenter server cannot be added to more than one Spectrum Connect instance. Any attempt to add an already registered vCenter server to another Spectrum Connect will override the primary connection.

What to do next

Attach storage services to the vCenter server, as explained in [“Delegating storage services to a vCenter server”](#) on page 107.

Updating the credentials of a vCenter server

At any time, you can update the credentials that are used by Spectrum Connect to access a vCenter server.

About this task

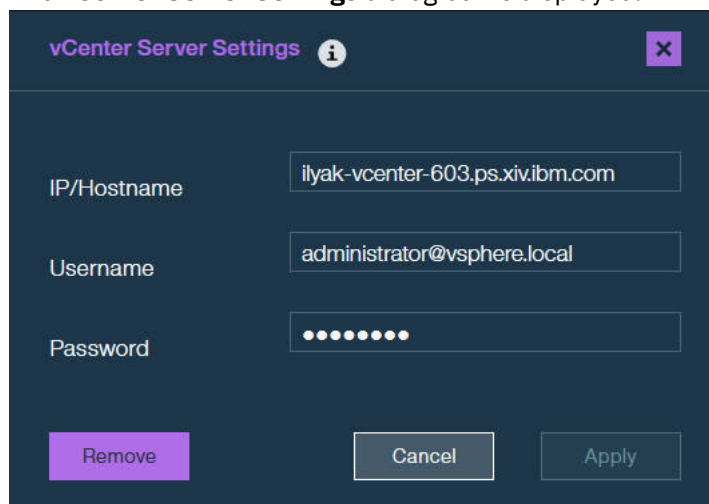
Whenever the credentials on the vCenter server side change, you can update these credentials on the Spectrum Connect side to allow continued management of storage resources on the vSphere Web Client side.

Note: Prior to changing the vCenter credentials on the Spectrum Connect side, verify that the vCenter user has sufficient access level to complete this procedure.

Procedure

1. On the **Interfaces** pane, right-click the vCenter server for which you want to update the credentials, and then select **Modify**.

The **vCenter Server Settings** dialog box is displayed.



The image shows a screenshot of the 'vCenter Server Settings' dialog box. The dialog has a title bar with the text 'vCenter Server Settings' and a close button (X). Below the title bar, there are three input fields: 'IP/Hostname' with the value 'ilyak-vcenter-603.ps.xiv.ibm.com', 'Username' with the value 'administrator@vsphere.local', and 'Password' with a masked password represented by dots. At the bottom of the dialog, there are three buttons: 'Remove' (highlighted in red), 'Cancel', and 'Apply'.

Figure 73. vCenter Server Settings dialog box

2. Enter the new username and password for accessing the vCenter server. Then, click **Apply**.

Removing a vCenter server

When a vCenter server is no longer needed, you can disconnect it from Spectrum Connect by removing it from the Interfaces pane.

About this task

- A removed vCenter server, along with the storage services attached to it, can no longer be managed by the IBM Storage Enhancements for VMware vSphere Web Client. Following the removal, the IBM Storage Enhancements become disabled for that vCenter on the vSphere Web Client Server side.

- If the removed vCenter server is attached to active storage service, the information for these services, as well as their pools is no longer displayed in vSphere Web Client. However, vSphere data access and service level for the services and pools is not affected.
- After the removal, you can add the vCenter server again to fully restore its management.

Procedure

1. On the Interfaces pane, right-click the vCenter server that you want to remove, and then select **Remove**.
A confirmation message is displayed.
2. Click **OK** to remove the vCenter server.

Delegating storage services to a vCenter server

You must delegate any storage service that you want to use for volume management operations on the vSphere Web Client side to the vCenter server.

Before you begin

- Storage services can be delegated only with *Spectrum Connect Admin*, *Storage Admin*, *System Admin*, or *Security Admin* storage credentials (see [“Entering the storage system credentials”](#) on page 37).
- When working with DS8000, services can be delegated only with *Spectrum Connect Admin* or *Logical Operator* storage credentials.
- Working with VMware VVols requires the *Storage Integration Admin* access level configured at the storage system side.

Any other type of storage credentials (read-only, application admin) cannot perform service delegation. If your credentials are not sufficient, contact your storage administrator for assistance.

About this task

The service delegation is done on the Spectrum Connect side, providing more control to storage administrators as opposed to the VMware administrators on the vSphere environment side. After the delegation, the services and their pools become visible and manageable on the vSphere Web Client side (by using the IBM Storage Enhancements).

Procedure

1. On the **Interfaces** pane, click the vCenter server to which you want to delegate one or more services.
2. On the **Spaces/Storage Services** pane, select the storage space from which you want to choose storage services.
The available services that reside on the selected storage space are immediately displayed.
3. Right-click on a service that you want to delegate to the vCenter server, and then select **Delegate to vCenter_IP_address**, or click the **Attach/Delegate** button on the service.
The service and its frame colors changes to indicate the successful delegation, as illustrated below.
You can continue the process by right-clicking available services under the current storage space.

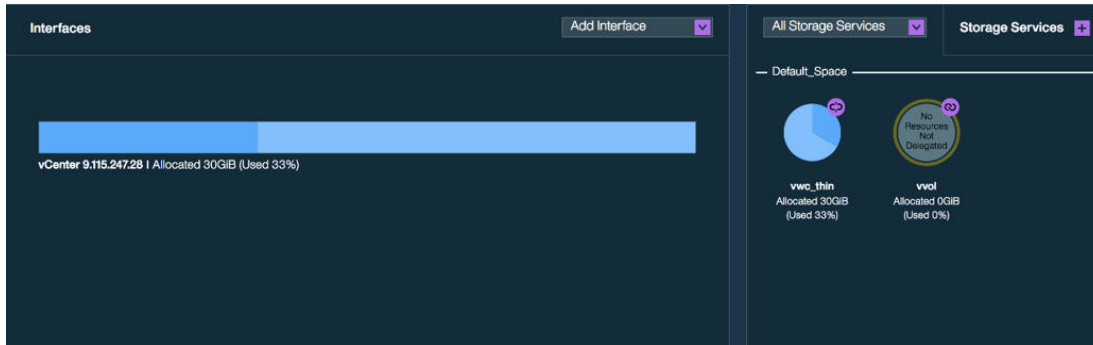


Figure 74. vCenter server with delegated service

The vCenter server provides indication for the allocated and used storage space.

- Allocated – amount of storage space available on all pools connected to the delegated services.
 - Used – amount of storage space used by volumes on all pools connected to the delegated services.
- The volumes are created using IBM Storage Enhancements for VMware vSphere Web Client.

Canceling service delegation to a vCenter server

When required, you can cancel a storage service delegation to the vCenter server.

About this task

- A storage service, which delegation has been canceled, can no longer be managed by the included solution components (see [“Included cloud interfaces”](#) on page 1).
- If the storage resources on such service contain working volumes, the information of these volumes is no longer displayed in vSphere Web Client. However, **vSphere data access and service level for these volumes is not affected**. In addition, the removed storage pools (including its volumes) can be managed from the standard IBM storage system management tools.
- The working volumes of such service remain visible in vSphere Web Client, as long as they are mapped to ESXi hosts. However, these volumes cannot be managed via vWC.
- At any time, you can delegate the storage service again to fully restore its management.

Procedure

1. On the **Interfaces** pane, click a vCenter server which service delegation you want to cancel.
The services that are currently delegated to the vCenter server are highlighted on the **Spaces/Storage Services** pane.
2. Right-click on a service which delegation you want cancel, and then select **Cancel delegation to vCenter_IP_address**, or click the **Detach/Cancel Delegation** button on the service.
The service color changes to indicate the successful cancellation of service delegation.
You can continue the process by right-clicking delegated services under the current space.

Using the IBM Storage Enhancements for VMware vSphere Web Client

Together with supported IBM storage systems that are managed by Spectrum Connect, the deployed IBM Storage Enhancements enable the following management features on vSphere Web Client for registered vCenter servers:

- Full control over storage volumes, including volume creation, resizing, renaming, mapping, unmapping, multipath policy enforcement, and deletion.
- Easy and integrated allocation of volumes to VMware datastores, used by virtual machines that run on ESXi hosts, clusters, or datacenters.

Note:

- The IBM Storage Enhancements are automatically deployed and made available for the vCenter servers that were registered (added) on IBM Spectrum Connect (see [“Adding a vCenter server”](#) on page 104).
- For information about the required vSphere user privileges, see [“Required vSphere privileges”](#) on page 109.

See the following sections for more information:

- [“Viewing the IBM storage object information”](#) on page 110
- [“Creating and mapping a new storage volume \(LUN\)”](#) on page 114
- [“Extending a volume”](#) on page 119
- [“Renaming a volume”](#) on page 120
- [“Setting multipath policy for a volume”](#) on page 120
- [“Unmapping a volume from one or more hosts”](#) on page 121
- [“Deleting an unused volume”](#) on page 122
- [“Managing consistency group attachment \(IBM FlashSystem A9000 and IBM FlashSystem A9000R only\)”](#) on page 123
- [“Displaying the virtual volume information”](#) on page 124

Note: Starting from version 6.7, vSphere Web Client supports both Flex- and HTML5-based user interfaces (UIs). Previous releases use Flex-based UI only.

Required vSphere privileges

To operate the IBM Storage Enhancements for VMware vSphere Web Client, you must have the minimum required privileges defined in your vSphere user role.

Use the **Role Manager** extension in vSphere Web Client to define the required privileges for your user role as detailed in the following table.

Table 24. Required vSphere privileges	
Task	Required vSphere user privilege
Adding a vCenter server to the IBM Spectrum Connect (see “Adding a vCenter server” on page 104)	<ul style="list-style-type: none"> • Extension – In this category, select Register extension, Unregister extension, and Update extension. • Global – In this category, select Log event and Cancel task. • Tasks – In this category, select Create task and Update task. • Sessions – In this category, select Impersonate user. • Host – In this category, select Configuration > Storage partition configuration.
Storage provisioning (volume creation and management) from vSphere Web Client (see “IBM Storage Enhancements for VMware vSphere Web Client” on page 104)	

New Role

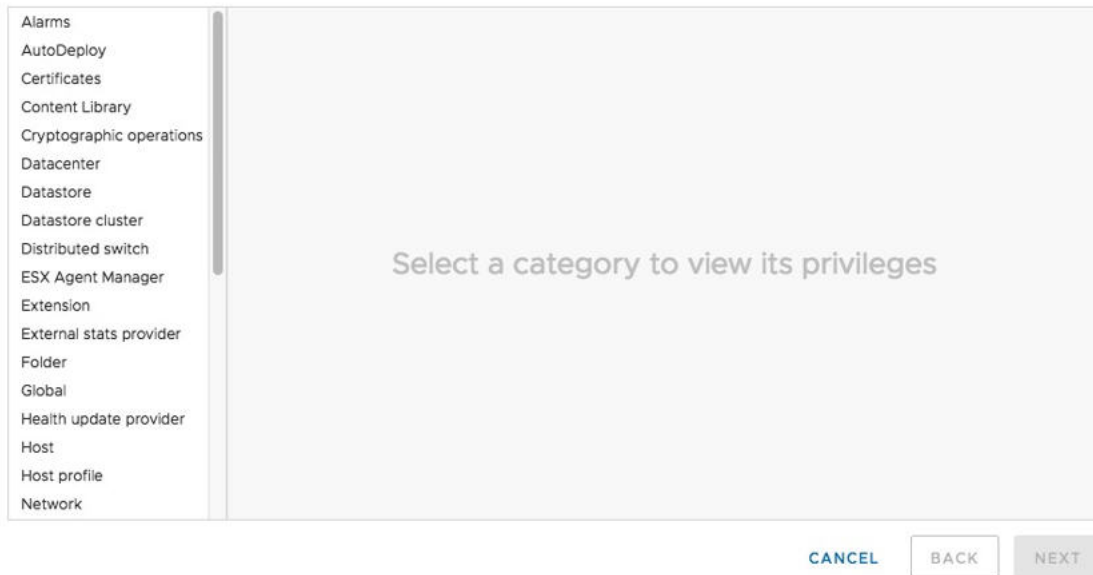


Figure 75. VMware vSphere Web Client – New Role dialog box

For more detailed information about how to set the vSphere Web Client privilege types, refer to the [VMware vSphere 5.1 Documentation Center](https://pubs.vmware.com/vsphere-51/index.jsp) (pubs.vmware.com/vsphere-51/index.jsp).

Viewing the IBM storage object information

After the IBM Storage Enhancements for VMware vSphere Web Client are properly installed, the IBM Storage categories are shown under the standard vSphere Web Client categories for each vCenter server, as shown in the following figure.

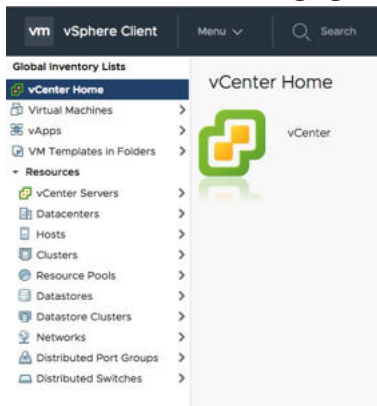


Figure 76. IBM Storage categories in vSphere Web Client

For each vCenter server, the following IBM Storage categories are available for that vCenter server:

- Storage services
- Storage spaces
- Storage volumes
- Consistency groups
- Storage virtual volumes (VVols)

You can click and open an IBM Storage category to view the entities which are currently available for the selected vCenter server.

vm vSphere Client

Menu

Search

9.115.241.213

Datstores2

Datastore Clusters0

IBM Consistency Grou...0

IBM Storage Services2

IBM Storage Spaces2

IBM Storage Volumes2

IBM Storage vVols2

Datacenters1

Datacenter Folders0

Networks1

Distributed Switches0

Distributed Port Grou...0

Virtual Machines16

VM Templates in Fold...0

vApps0

Hosts1

Clusters0

IBM Storage Services

vwc1>

thin

vwc1

ACTIONS

Service Name:

vwc1

Service Description :

Service Type:

regular

Space:

vwc

Max Volume Size For Provisioning:

966.67 GiB

Capabilities

Space Efficiency

Thin

Figure 77. IBM Storage Service information

vm vSphere Client

Menu

Search

9.115.241.213

Datastores

2

Datastore Clusters

0

IBM Consistency Grou...

0

IBM Storage Services

2

IBM Storage Spaces

2

IBM Storage Volumes

2

IBM Storage vVols

2

Datacenters

1

Datacenter Folders

0

Networks

1

Distributed Switches

0

Distributed Port Grou...

0

Virtual Machines

16

VM Templates in Fold...

0

vApps

0

Hosts

1

Clusters

0

IBM Storage Spaces

vwc

xy-vvol

VWC

ACTIONS

Space Name:

vwc

Space Description:

Number Of Attached Services:

1

Number Of Related Volumes:

1

Figure 78. IBM Storage Space information

vm vSphere Client

Menu

Search

Administrator@VSPHERE.LOCAL

9.115.241.213

Datastores

2

Datastore Clusters

0

IBM Consistency Grou...

0

IBM Storage Services

2

IBM Storage Spaces

2

IBM Storage Volumes

2

IBM Storage vVols

2

Datacenters

1

Datacenter Folders

0

Networks

1

Distributed Switches

0

Distributed Port Grou...

0

Virtual Machines

16

VM Templates in Fold...

0

vApps

0

Hosts

1

Clusters

0

IBM Storage Volumes

IBM iSCSI Disk (naa.6005076...

Demo_volume

Demo_volume

ACTIONS

Summary

Monitor

Configure

Storage Device Name: Demo_volume

Pool Name: xy-vwc-thin

System Name: V7K194

System Type: Storwize V7000

Volume Identifier: naa.600507640085028570...

Storage

Free: 11 GiB

Used: 0 GiB

Capacity: 11 GiB

Details

Volume Name	Demo_volume
Volume UID	600507640085028570000000000005CED
Usage	Not in use
LUN	1
Status	Online
Serial	01002140a15cXX00
Thin Provisioned	Yes
Data Compressed	No
Compression Savings	--
Data Deduplicated	No
FlashCopy Copies	0
Remote Copies	0
Mirrored Copies	0

Related Objects

Datastore	--
Storage Space	vwc
Storage Service	vwc1

Path Selection

Multipath Policy Enforce...	Disabled
Path Selection	Round Robin

Figure 79. IBM Storage Volume information

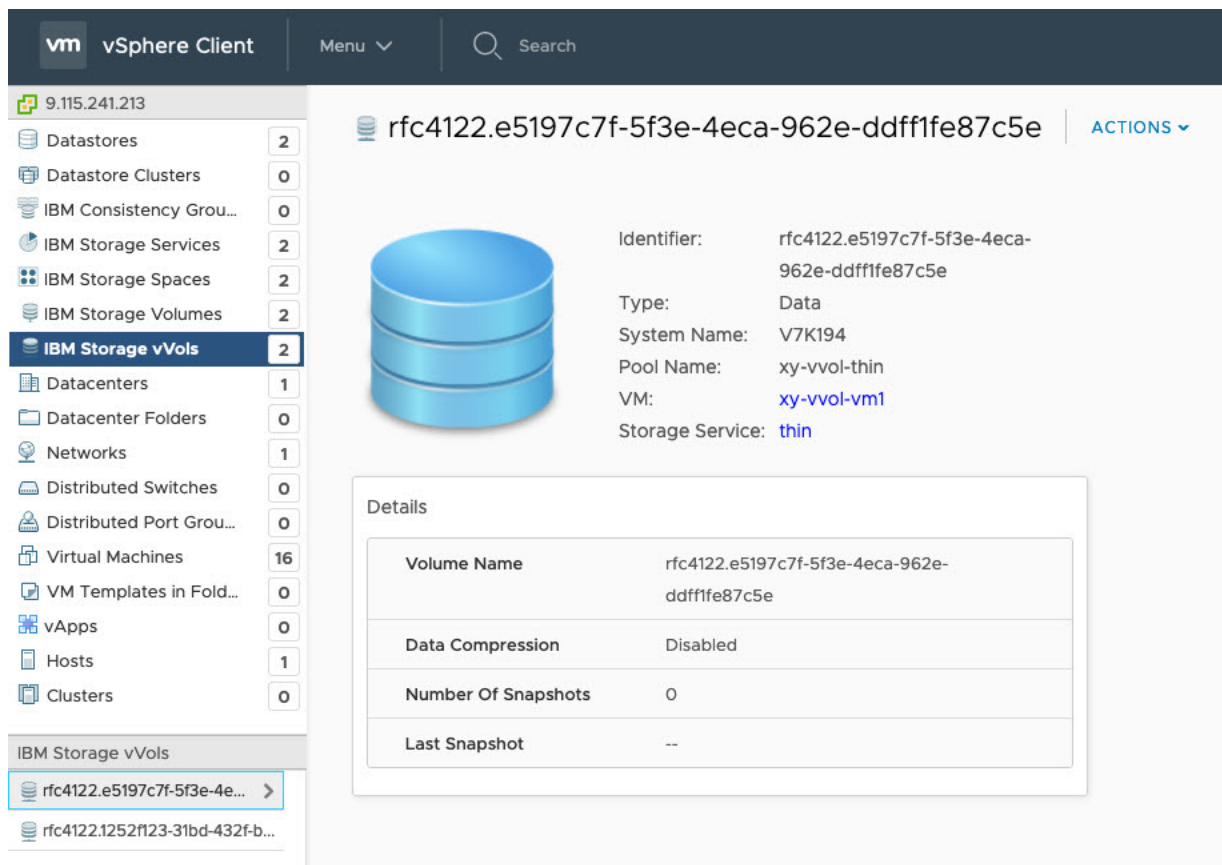


Figure 80. IBM Storage VVol information

Creating and mapping a new storage volume (LUN)

The IBM Storage Enhancements for VMware vSphere Web Client allow you to create new volumes (LUNs) directly from the vSphere Web Client interface. These volumes can be used as storage devices in the vSphere environment.

About this task

Any created volume is mapped to either ESXi hosts, clusters, or datacenters, so that the virtual machines on these hosts, clusters, or datacenters would be able to save datastore information on that volume. The volume is created on a storage service, according to the service definitions from Spectrum Connect.

In addition to single volume creation, you can create multiple volumes simultaneously. If you choose this option, the created volumes are appended with differently numbered suffixes that are automatically generated by the system in consecutive order.

Important:

- You can create volumes only on storage pools that have been attached to the relevant vCenter server on the Spectrum Connect side. For more information, see [“Managing integration with vSphere Web Client” on page 104](#)
- The ESXi hosts and clusters to which you map the created volumes must be predefined on the storage system side. For more information, refer to your IBM storage system documentation.

Procedure

- In vSphere Web Client, navigate to the relevant vCenter server and then to the specific IBM storage object (space, service or volume).

The IBM storage object and the relevant storage resources (pools) should already be associated with the vCenter server (see [“Viewing the IBM storage object information” on page 110](#)).

2. Select a storage object, and click **Actions** > **IBM Storage** > **Create new IBM storage volume**.

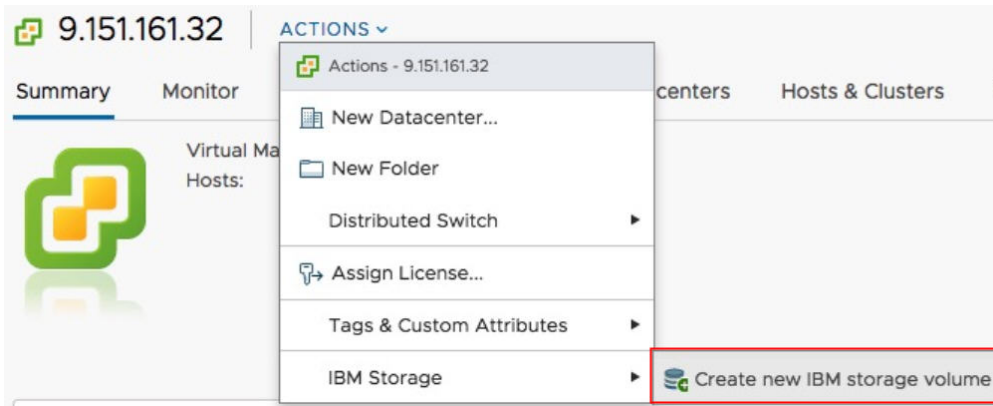


Figure 81. Create new IBM storage volume option

The **New Volume** dialog box is displayed.

A screenshot of a 'New Volume' dialog box. At the top, there's a title bar with 'New Volume' and a close button. Below it, a light blue box contains a note: 'According to selected hosts mapping, 1 volume(s) with a size of 100 GiB will be created on the storage service named 'vwc1''. Below the note, there are several input fields: 'Hosts Mapping' with a dropdown showing '9.115.241.197' and a 'CUSTOM' button; 'Volume Size(GB)' with a text box containing '100' and a 'Max Provision Size(GB)' label with a value of '1000'; 'Number of Volumes' with a text box containing '1'; 'Volume Name' with a text box containing 'demo_volume'; 'Storage Service' with a dropdown showing 'vwc1'; 'Storage LUN' with a dropdown showing 'Auto'; and 'Consistency Group' with a text box containing 'N/A'. At the bottom, there's a green box with the text 'Service Capabilities: spaceEfficiency:Thin'. To the right of this box are two buttons: 'CANCEL' and 'OK'.

Figure 82. New Volume wizard

Note: When you create a single volume, a LUN (logical unit number) is assigned to that volume, and you can later change the LUN assignment. If you create multiple volumes, LUNs (logical unit numbers) are automatically assigned to those volumes and cannot be modified later.

3. In the **Volume Size** text box, enter the size for the new volume.

Note: A storage resource with the largest amount of free space that is currently attached the service is automatically selected.

4. In the **Volume Name** text box, enter the name that you want to assign to the new volume.
5. If you want to create multiple volumes simultaneously: In the **Number of Volumes** text box, enter the number of volumes that you want to create simultaneously. The text box next to the **Volume Name** entry displays `vol_{1}` by default. The `{1}` represents the suffix value, and it must be kept as part of the volume name. You edit the volume name and also move the suffix value within the name (the `{1}` suffix does not have to be at the end of the volume name).

New Volume [Close]

① According to selected hosts mapping, 2 volume(s) with a size of 100 GiB will be created on the storage service named 'vwc1'.

Hosts Mapping:

Volume Size(GB): Max Provision Size(GB):

Number of Volumes:

Volume Name:

Storage Service:

Storage LUN:

Consistency Group:

Service Capabilities:
spaceEfficiency:Thin

Figure 83. Creating multiple volumes

- In the **Storage Service** text box, select a storage service, on which the volume will be created.

New Volume [Close]

① According to selected hosts mapping, 2 volume(s) with a size of 100 GiB will be created on the storage service named 'vwc1'.

Hosts Mapping:

Volume Size(GB): Max Provision Size(GB):

Number of Volumes:

Volume Name:

Storage Service:

Storage LUN:

Consistency Group:

Service Capabilities:
spaceEfficiency:Thin

Figure 84. Selecting storage service

- From **Host Mapping**, select the host(s), cluster(s), or datacenter(s) to which you want to map the new volume. You can click **Custom** to specify a custom mapping in the **Custom Host Mapping** dialog box and use the **Search** toolbar to locate a specific host.

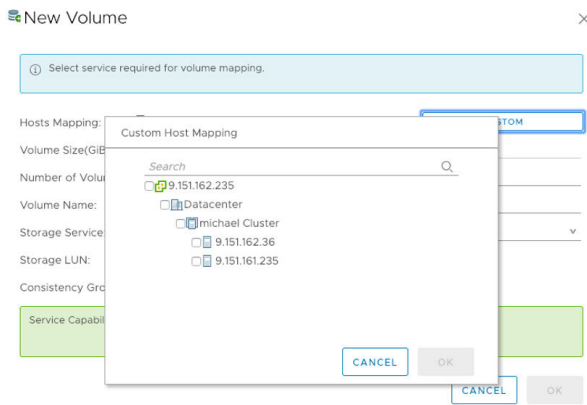


Figure 85. Custom Host Mapping dialog box

Note: Any ESXi host that is connected to the storage system can be selected. Hosts that are not connected to the storage system are marked and a message notifies you about any connectivity problem. If you select a datacenter, its member clusters and hosts are automatically selected under it.

Important: You must map the volume to at least one ESXi host, cluster, or datacenter in order to enable vSphere management of the created volume.

8. If you are creating a single volume, you can select the LUN that should represent the new volume on the storage system, or keep the automatically selected LUN. The LUNs are automatically selected when creating multiple volumes.

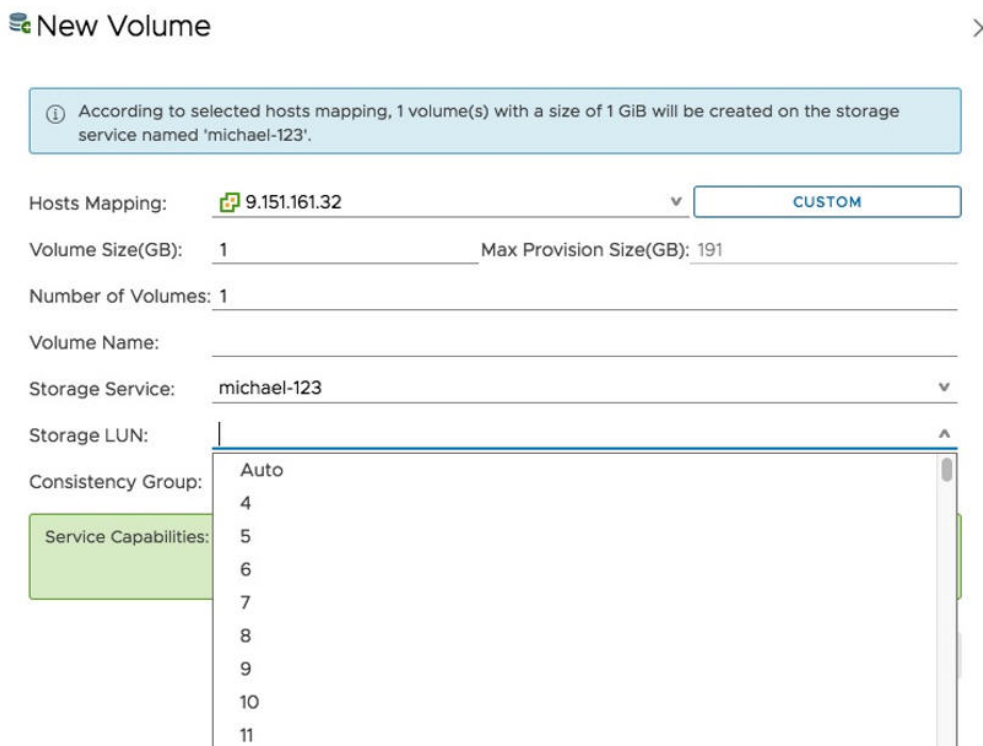


Figure 86. Selecting LUN

Note: After the volume is created, the specific LUN association cannot be changed, and the same number cannot be assigned to a different volume. The specific LUN can become available for reassignment only after its associated volume is deleted.

9. If you want to provision the volume in an existing consistency group, select the required group from the **Consistency Group** drop-down box.

Note: This step and steps 10 and 11 only apply to IBM FlashSystem A9000 and IBM FlashSystem A9000R storage systems.

New Volume [X]

According to selected hosts mapping, 1 volume(s) with a size of 1 GiB will be created on the storage service named 'replicated_service'.

Hosts Mapping: 9.151.163.232 [CUSTOM]

Volume Size(GiB): 1 Max Provision Size(GiB): 769

Number of Volumes: 1

Volume Name:

Storage Service: replicated_service

Storage LUN: Auto

Consistency Group: Select existing or create a new consistency group

Service Capabilities: Replication:Synch cg_for_ilyak

[CANCEL] [OK]

Figure 87. Selecting consistency group

10. If you want to provision the volume in a new consistency group, click the **Create** button.
11. Enter a name for the new consistency group and click **OK**.

The dialog box closes, and the consistency group name is displayed in the drop-down box, marked as **new**. Pay attention that the consistency group itself will be activated only after the volume is created.

New Volume [X]

According to selected hosts mapping, 1 volume(s) with a size of 1 GiB will be created on the storage service named 'michael-123'.

Hosts Mapping: 9.151.163.237 [CUSTOM]

Volume Size(GB): 1 Max Provision Size(GB): 191

Number of Volumes: 1

Volume Name: michael-rrr

Storage Service: michael-123

Storage LUN: Auto

Consistency Group: N/A

Service Capabilities:

[CANCEL] [OK]

Figure 88. New Volume dialog box with all fields filled out

12. Review the details of the new volume that is about to be created, and then click **OK** to confirm its creation as detailed.

Extending a volume

If enough free space is available on the relevant storage pool, you can extend the size of an existing volume.

Procedure

Complete the following procedure to extend the size of a volume.

1. In vSphere Web Client, locate a volume that you want to extend by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Extend Volume**.

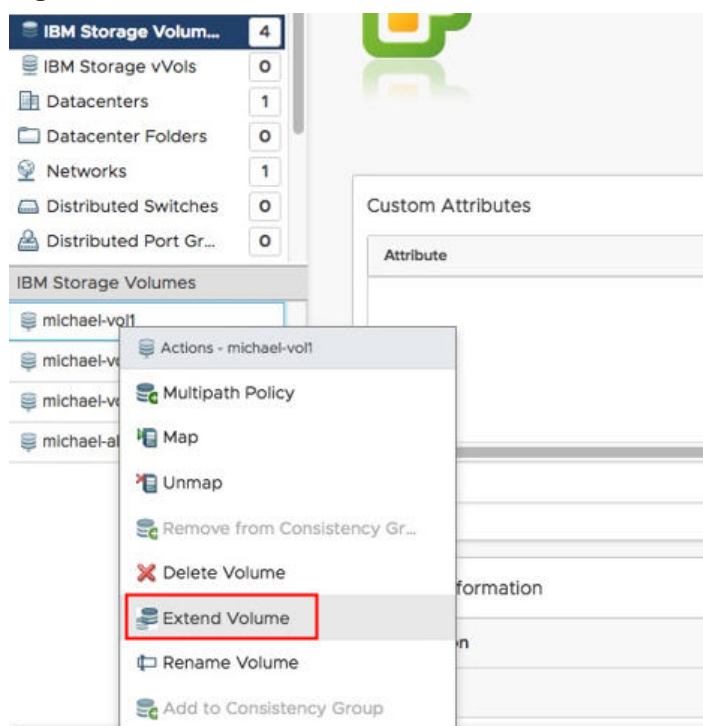


Figure 89. Extend Volume option in the pop-up menu

The Extend Volume dialog box is displayed.

3. In the **Volume Size** text box, enter the new size for the volume.



Figure 90. Extend Volume dialog box

4. Click **OK**.

Important: Extending the size of a volume does not automatically increase the datastore capacity.

Renaming a volume

Whenever required, you can rename any existing volume by performing the following procedure.

About this task

Renaming a volume is a logical action that does not have any physical effect on the volume or its logical connections. Renaming a volume also changes its displayed name in the vSphere environment.

Procedure

1. In vSphere Web Client, locate a volume that you want to rename by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Rename Volume**.

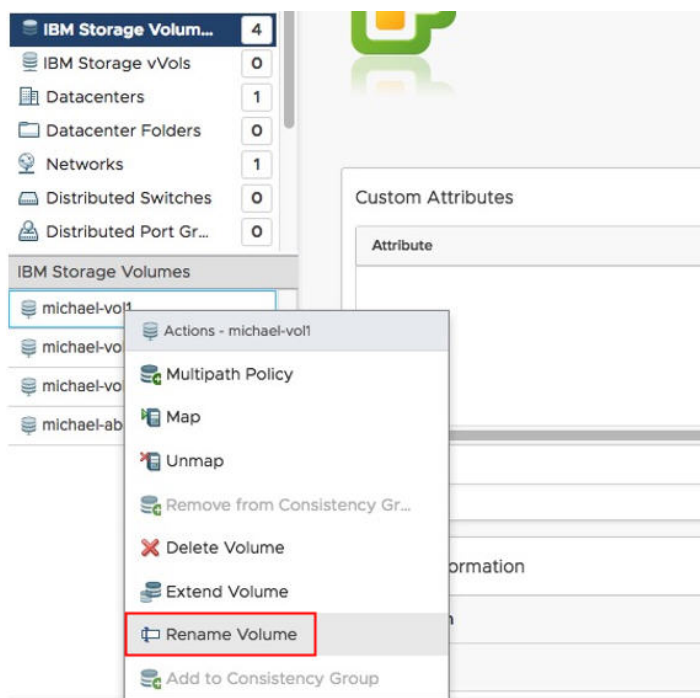


Figure 91. Rename Volume option

The Rename Volume dialog box is displayed.



Figure 92. Rename Volume dialog box

3. Enter the new name that you want to assign to the volume, and then click **OK**.

Setting multipath policy for a volume

You can set the multipath policy for a single volume.

About this task

By default, the **Round Robin** multipath policy is enforced on volumes. You can disable or change this policy for a specific volume if needed.

Note: If you are using ESXi version 5.1 or earlier with DS8000 Family or Spectrum Virtualize Family systems, see [“Setting the multipath policy for DS8000 Family and Spectrum Virtualize Family systems”](#) on page 63.

Procedure

1. In vSphere Web Client, locate a volume for which you want to change the multipath policy by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Multipath Policy**.

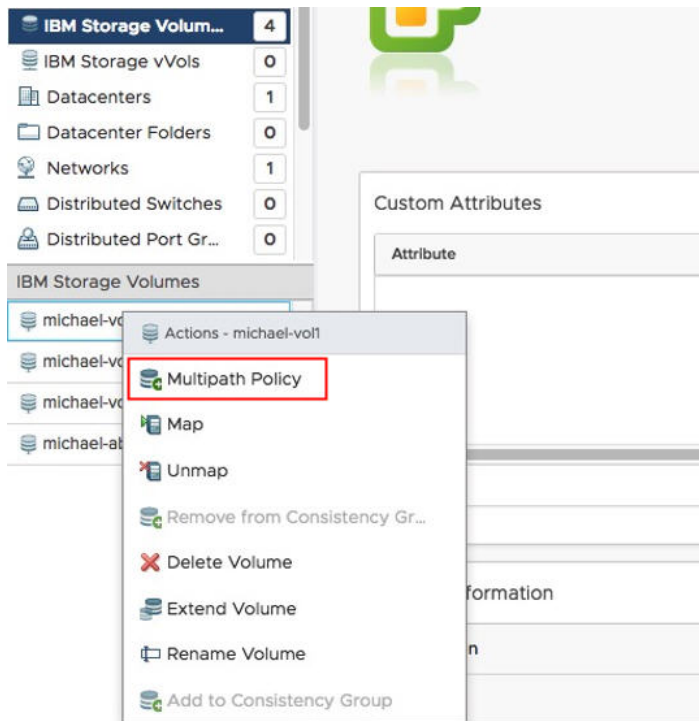


Figure 93. Set Multipath Policy option

The Multipath Policy dialog box is displayed.

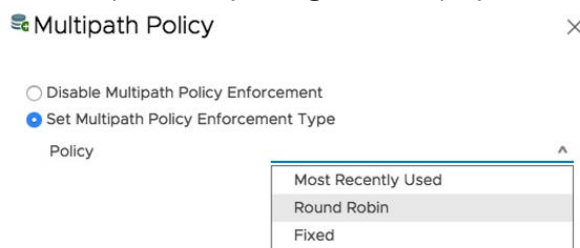


Figure 94. Multipath Policy dialog box

3. Select the required option and then click **OK**.

Important: After the policy is set, it is enforced by overriding any existing policy for this volume.

Unmapping a volume from one or more hosts

When volumes or ESXi hosts are no longer needed, or if new ones are to replace the current ones, you can unmap volumes from the hosts.

About this task

Important: A volume (LUN) must remain mapped to at least one host. Otherwise, you cannot view the volume or perform any actions on it from vSphere Web Client.

Procedure

1. In vSphere Web Client, locate a volume that you want to unmap by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Unmap**.

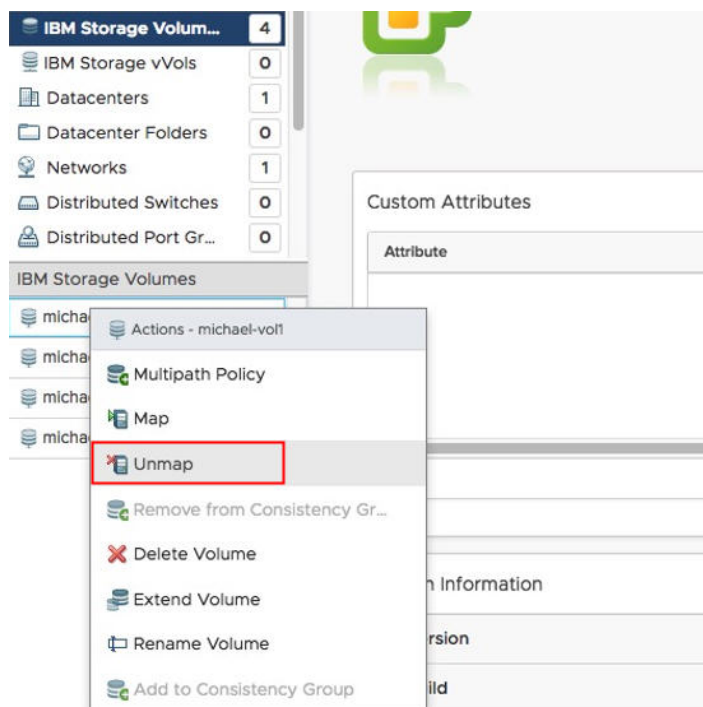


Figure 95. Unmap volume

The Unmap Volume dialog box is displayed.

3. Select the hosts or clusters from which you want to unmap the volume, and then click **OK**.

Deleting an unused volume

When a storage volume is unused and no longer required, you can delete it.

Before you begin

Important: You cannot delete volumes that are currently used by datastores or as a raw-mapped LUN.

Procedure

1. In vSphere Web Client, locate a volume that you want to delete by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Delete**.

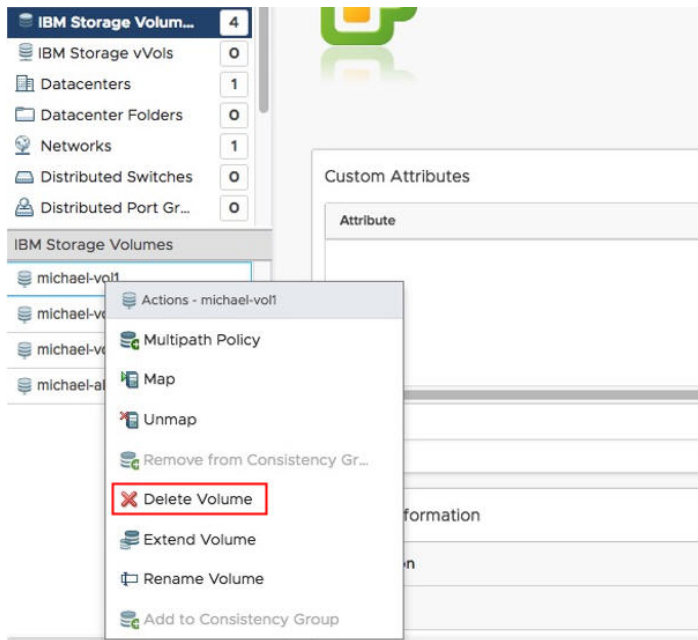


Figure 96. Delete volume

The Delete Volume confirmation message is displayed.

3. Click **OK** to confirm the deletion, or **Cancel** to exit without deleting the volume.

Note: A volume, whose deletion fails, disappears from the volume list. The volume reappears in the list after the next population.

Managing consistency group attachment (IBM FlashSystem A9000 and IBM FlashSystem A9000R only)

An IBM FlashSystem A9000 or IBM FlashSystem A9000R storage volume can be added to a consistency group or removed from it, if required.

About this task

This procedure only applies to IBM FlashSystem A9000 and IBM FlashSystem A9000R storage systems.

Procedure

1. In vSphere Web Client, locate a volume that you want to add to a consistency group, or remove it from the group by going to **IBM Storage Volumes** and selecting the required volume.
2. Right-click the volume and choose **Add to Consistency Group**.

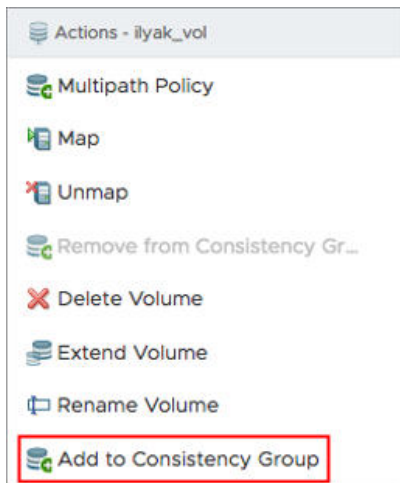


Figure 97. Adding volume to consistency group

The **Add to Consistency Group** dialog box is displayed.



Figure 98. Selecting a consistency group

3. Select the required consistency group and click **OK** to finish.
4. You can remove a volume from the existing consistency, by selecting the volume, as explained above, right-clicking the volume and choosing **Remove from Consistency Group**.

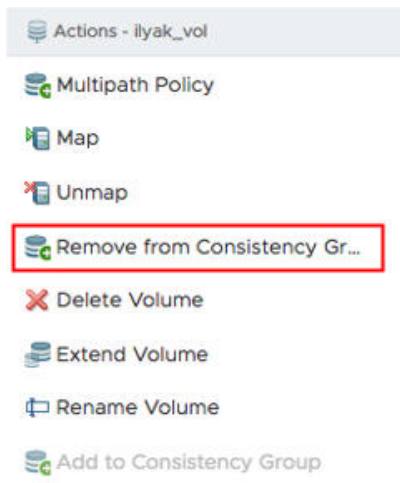


Figure 99. Removing volume from consistency group

A confirmation message is displayed.

5. Click **OK** to confirm the removal.

Displaying the virtual volume information

If virtual volumes are used as storage resources for virtual machines, you can view the VVol summary, snapshot information and details of VMs which are using them.

Before you begin

Verify that a virtual machine has been created on a VVol datastore.

Procedure

1. In vSphere Web Client Navigator, go to **IBM Storage VVols** and select a virtual volume that you intend to view.
2. In the right-hand pane, review the following VVol-related information:
 - General information about the virtual volume and its characteristics.
 - Names of the storage objects that use the VVol (storage system, pool, VMs, and storage service).
 - Snapshot status, if this functionality is enabled.

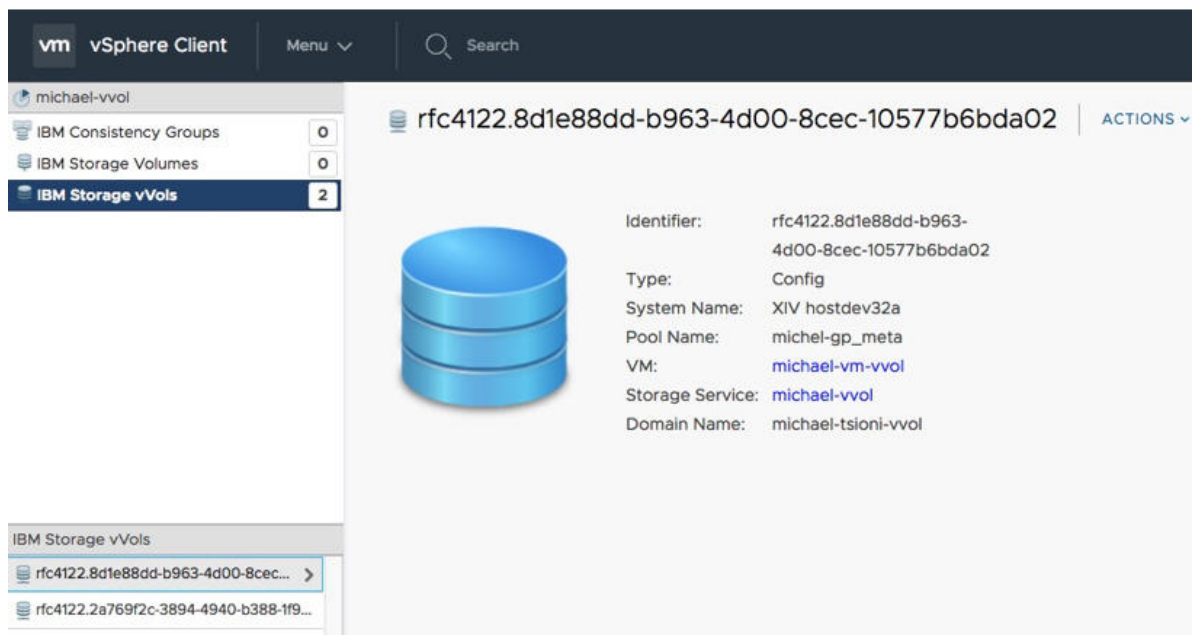


Figure 100. VVol information

Important: Some operations on VVol-based VMs with deployed Spectrum Connect instance, such as hard disk removal, may result in the Invalid Virtual Machine configuration message, displayed by the vWC. This message is not related to the VM functionality and indicates a loss of connectivity between Spectrum Connect and the vCenter server.

Best practices

Refer to the general guidance and best practices for using IBM Storage Enhancements for VMware vSphere Web Client as described in the following sections.

- [“Handling datastores” on page 125](#)
- [“Handling ESXi hosts that use storage volumes” on page 126](#)

Handling datastores

For best performance of VMware datastores:

- Create each datastore on a separate storage volume.
- If you use snapshots/mirroring for volumes, place all Datastore Extents volumes (the building block LUNs of a datastore) in a consistency group (defined by using the storage system GUI or CLI).
- Avoid storing static files in a VVol-enabled datastore. When a new folder is created in the root path of a VVol-based datastore, a 4-GB virtual volume is defined, which cannot be extended.

Handling ESXi hosts that use storage volumes

For the best performance of ESXi hosts that use volumes provisioned on a Spectrum Virtualize or IBM FlashSystem A9000 or A9000R storage system, define all ESXi hosts within a cluster as cluster hosts on the storage system as well.

Following this practice prevents complications associated with the mapping of a storage volume to different ESXi hosts in a cluster using different LUN numbers.

IBM Storage Plug-in for VMware vRealize Orchestrator

The IBM Storage Plug-in for VMware vRealize Orchestrator allows VMware administrators to include IBM storage discovery and provisioning in their vRealize Orchestrator (vRO) automation workflows.

The plug-in package can be downloaded from Spectrum Connect and can then be deployed on the vRealize Orchestrator server. The deployment includes the matching of a unique token key that is set on both servers.

Through vRealize Orchestrator Client, dedicated IBM Storage control elements become available, allowing the issuing of workflows with storage volumes that are attached to the vRealize Orchestrator server.

Rather than issuing volume operations manually and being limited to one manual operation at a time, VMware administrators can preplan and automate storage operations in their virtualized cloud environments, either directly from vRealize Orchestrator or through the VMware vCloud Automation Center (vCAC) platform.

To visualize how this cloud interface is integrated in a virtualized environment, see [Chapter 8, “VMware environment,”](#) on page 93.

Managing integration with vRealize Orchestrator

The IBM Storage Plug-in for the VMware vRealize Orchestrator is used for discovery of the IBM storage resources and provisioning automation workflows in the vRealize Orchestrator (vRO).

To access the vRO management options, add the vRO server (interface) on the **Interfaces** pane. The yellow frame and the exclamation mark indicate that the interface has no storage services delegated to it yet. You can then manage the integration with vRO as explained in the following sections:

- [“Downloading and installing the plug-in package for vRO”](#) on page 127.
- [“Delegating storage services to the vRO server”](#) on page 129.
- [“Canceling service delegation to a vRO server”](#) on page 130
- [“Regenerating the vRO token”](#) on page 130.

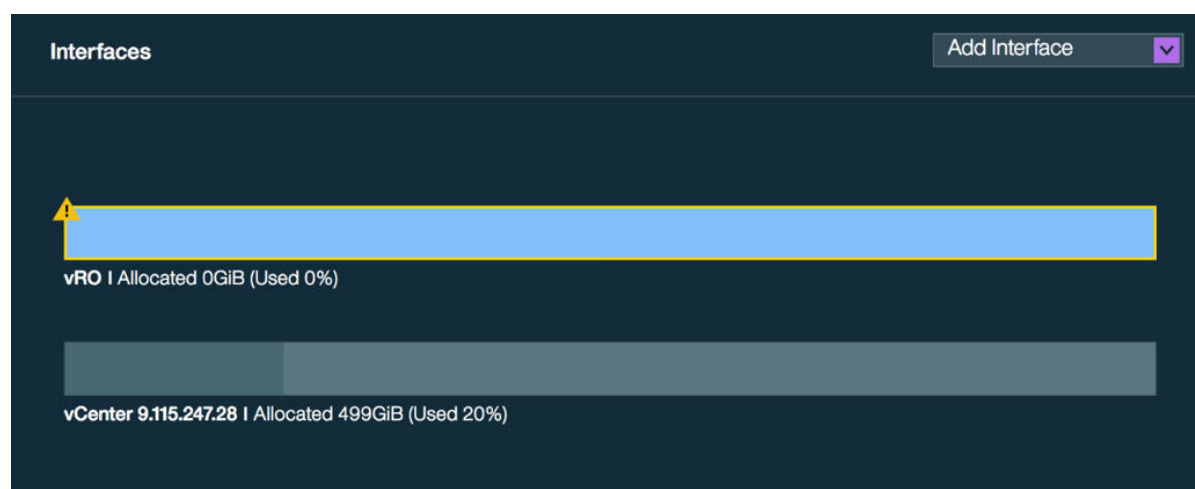


Figure 101. vRO server on the Interfaces pane

Downloading and installing the plug-in package for vRO

To enable the IBM Storage workflows in vRealize Orchestrator, you must first download the IBM Storage plug-in package from Spectrum Connect and install it on the vRealize Orchestrator server.

Before you begin

To allow the IBM Storage Plug-in to securely identify Spectrum Connect and work properly, the SSL certificate that is automatically created on Spectrum Connect upon installation must be replaced with a new one. For more information about how to replace the certificate, see [“Managing server certificates”](#) on page 27.

Important: After the IBM Storage Plug-in is installed on vRealize Orchestrator, the Java™ security APIs validate that the hostname received from Spectrum Connect is identical to the common name (CN) value that is in the server certificate.

About this task

The following procedure details how to download, install, and properly configure the IBM Storage Plug-in for VMware vRealize Orchestrator.

Procedure

1. On the **Interfaces** pane, right-click the vRO server, and then select **Modify**.
The **vRO Settings** dialog box is displayed.
2. On the bottom of the dialog box, click **Download plug-in package**.

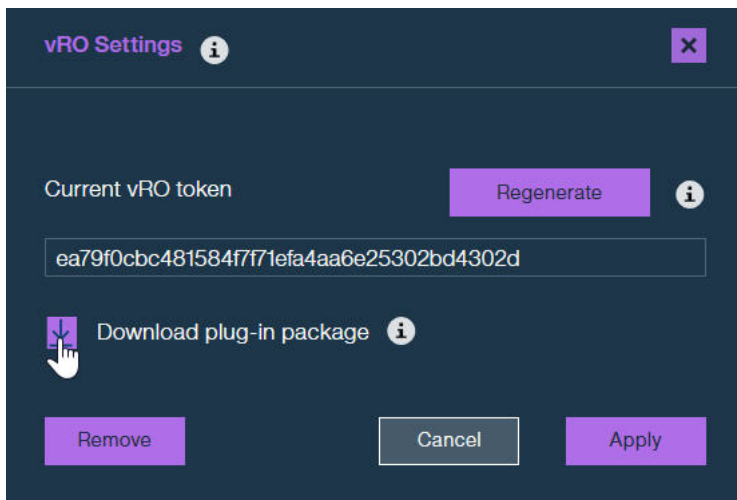


Figure 102. Download plug-in package button

Alternatively, you can download the package from the following directory on Spectrum Connect:

```
/opt/ibm/ibm_spectrum_connect/downloads/static/o11nplugin-ibm-storage.vmoapp
```

3. Copy the current vRO token key from the **Current vRO Token** box.

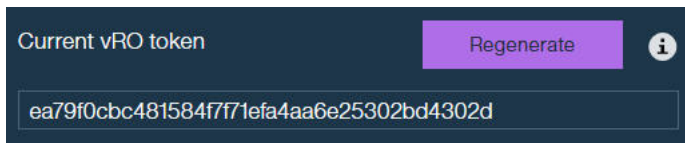


Figure 103. Current vRO Token

4. Launch the VMware vRealize Orchestrator configuration interface.
5. Click **Certificates** in the **Manage** category. Then import the Spectrum Connect certificate. The certificate URL format should be: `https://IP_address: TCP port in use`.

- Click **Manage Plug-Ins** in the **Plug-Ins** category. Then click **Browse > Install**. Continue by locating and choosing the downloaded plug-in file.

Accept the license agreement. The message Plug-in 'IBMStorage' (3.x.x build xxx) is installed. is displayed. Installation is completed and the IBM Storage plug-in is displayed in the list of vRO plug-ins.

Manage Plug-Ins

Install a new plug-in or manage already installed plug-ins. The preferred plug-in installation file format is .VMOAPP, but plug-ins can also be installed as .DAR files. When 'DEFAULT' logging level is selected for a specific plug-in the log level is inherited from the log level set in [Configure Logs](#) page.

Plug-in(s) installed:
 Plug-in 'IBMStorage' (3.4.0 build 533) is installed.

The Orchestrator server service will restart 2 minutes after the last configuration change.

Install plug-in

Plug-in file (*.dar or *.vmoapp)

Plug-In	Logging level	Enable plug-in	Delete
AD 3.0.9.14090940 Active Directory Download	DEFAULT	<input checked="" type="checkbox"/>	Delete
AMQP 1.0.4.14091426 AMQP Plug-in Download	DEFAULT	<input checked="" type="checkbox"/>	Delete
Configurator 8.0.0.14831299 Configuration plug-in for vRealize Orchestrator Download	DEFAULT	<input checked="" type="checkbox"/>	Delete
DynamicTypes 1.3.3.14662722 Dynamic Types plug-in for vRealize Orchestrator Download	DEFAULT	<input checked="" type="checkbox"/>	Delete
Enums 7.0.1.14690225 Common enumerated types Download	Select...	<input checked="" type="checkbox"/>	Delete
IBMStorage 3.4.0.533 IBM Storage Plug-in Download	DEFAULT	<input checked="" type="checkbox"/>	Delete

Figure 104. Successful installation of IBM Storage plug-in

- For vRO 7.4 or higher, the vRO Server service will restart automatically. For vRO versions before 7.4, go to the **Startup Options**, and click **Restart service** to restart the vRO Server service.

Home

Startup Options

Control the Orchestrator server service.

Current Status: RUNNING

```
Status-ing tcServer
Instance name:      app-server
Runtime version:    8.0.36.A.RELEASE
tc Runtime Base:    /var/lib/vco/app-server
Status:             RUNNING as PID=3995
```

```
Version: 7.1.0
Build number: 4262825
Build date: Aug 16, 2016
Database version: 1.77
Install path: /var/lib/vco
Active Configuration Fingerprint: 279acda2a59c55fbf51b9d7b2fd8609eee
Pending Configuration Fingerprint: 279acda2a59c55fbf51b9d7b2fd8609eee
```

Figure 105. Restarting vRO Server service

- Start the VMware vRealize Orchestrator client and go to the **Workflows** tab.
 - On the **Workflows** tab, go to **Library > IBM > Storage > Configuration**.
 - Select and run the **Set Server and Token** workflow.
- The **Start Workflow: Set Server and Token** dialog box is displayed.

Set Server and Token

Set Server, Port and Token

server *	scb-production.css.ibm.com
port *	8440
token *	aec5d4b1031b4f08294d7f455711d49c646e:

RUN **CANCEL**

Figure 106. vRealize Orchestrator HTML5 client Set Server and Token dialog box

11. Enter the Spectrum Connect IP address or hostname, TCP port in use and the token that you obtained earlier.
12. Click **Submit** or **Run** to finish the configuration workflow.

Delegating storage services to the vRO server

Before you can use the IBM Storage Plug-in for VMware vRealize Orchestrator on the vRealize Orchestrator (vRO) server side, you must delegate the storage services that you want to make available for vRealize Orchestrator.

About this task

The services and their storage resources that you delegate on Spectrum Connect can be used for issuing volume workflows through vRealize Orchestrator (for more information, see [“IBM Storage Plug-in for VMware vRealize Orchestrator”](#) on page 126).

Procedure

To delegate storage services to the vRO server:

1. On the **Interfaces** pane, click the vRO server to select it.
2. On the **Spaces/Storage Services** pane, select the storage space from which you want to choose storage services.
The available services that reside on the selected storage space are immediately displayed.
3. Right-click on a service that you want to delegate to the vRO server, and then select **Delegate to vRO**, or click the **Attach/Delegate** button on the service.

The service and its frame colors change to indicate the successful delegation.

You can continue the process by right-clicking available services under the current space.

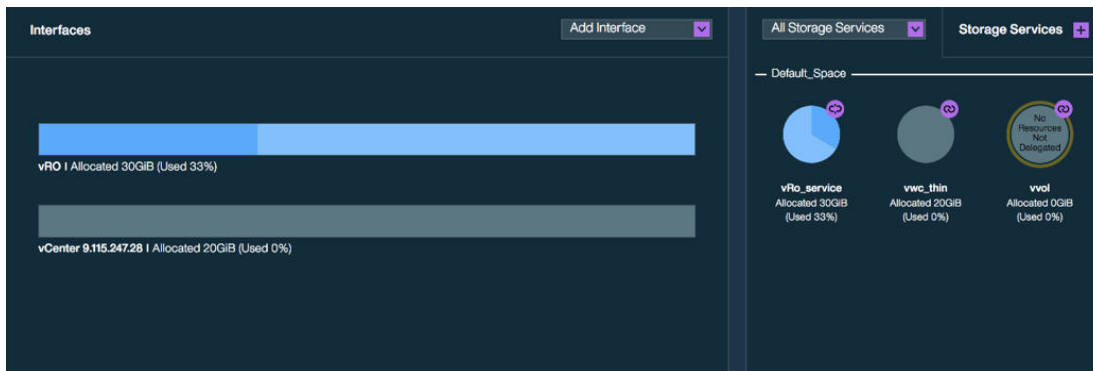


Figure 107. vRO server with delegated services

The vRO server provides indication for the allocated and used storage space.

- Allocated – amount of storage space available on all pools connected to the delegated services.
- Used – amount of storage space used by workflows on all pools connected to the delegated services.

Canceling service delegation to a vRO server

When required, you can cancel a storage service delegation to the vRO server.

About this task

Storage services, which delegation has been canceled, and their resources (pools) are removed from the vRO inventory and cannot be used for workflows. Any scheduled workflows, involving these elements, will fail to run.

Procedure

1. On the **Interfaces** pane, click the vRO server.
The services that are currently delegated to the vRO server are highlighted on the **Spaces/Storage Services** pane.
2. Right-click on a service which delegation you want cancel, and then select **Cancel delegation to vRO** , or click the **Detach/Cancel Delegation** button on the service.
The service color changes to indicate the successful detachment.
You can continue the process by right-clicking delegated services under the current space.

Regenerating the vRO token

The vRO token used during installation of the IBM Storage Plug-in for vRO can be regenerated.

About this task

If the communication link between the vRealize Orchestrator server and Spectrum Connect has been compromised, you can regenerate the vRO token and reconfigure the IBM Storage Plug-in for vRO. For the plug-in installation instructions, see [“Downloading and installing the plug-in package for vRO” on page 127](#).

Procedure

To regenerate the vRO token:

1. On the **Interfaces** pane, right-click the vRO server, and then select **Modify**.
The **vRO Settings** dialog box is displayed.
2. Click the **Regenerate** button.
A new vRO token is regenerated.

Using the IBM Storage Plug-in for VMware vRealize Orchestrator

Use the IBM Storage Plug-in for VMware vRealize Orchestrator to include IBM Storage discovery and provisioning in your vRealize Orchestrator (vRO) automation workflows.

After the IBM Storage Plug-in is deployed (see [“Downloading and installing the plug-in package for vRO”](#) on page 127), the IBM storage objects become available in the vRO, as detailed in the table below.

Table 25. IBM storage objects and events in vRO		
Object	Attribute	Type
StorageSpace	name	String
	description	String
	numServices	long
	numVolumes	long
	physicalSize	long
	physicalFree	long
StorageService	name	String
	description	String
	physicalSize	long
	physicalFree	long
	capabilityValues	String
	maxResourceLogicalFree	long
StorageVolume	name	String
	spaceName	String
	serviceName	String
	serviceCompliance	String
	poolName	String
	array	String
	storageModel	String
	logicalCapacity	long
	usedCapacity	long

The Orchestrator workflows, supported by the IBM storage objects are as follows:

- Create and map a volume
- Delete a volume
- Extend a volume
- Map a volume
- Unmap a volume

Follow these guidelines for vRO workflows:

- Volume creation: the allowed volume sizes are set in whole numbers. Any number after a decimal point is ignored by the vRO. For example, when the volume size is set to 1.6 GB, the 1 GB volume is created.

- Volume extension: the allowed volume sizes are set in whole numbers. Any number after a decimal point is ignored by the vRO. For example, when the volume size is extended to 3.6 GB, the volume size is set to 3 GB.
- Volume mapping is performed by passing initiators to the workflow. If a host definition at the storage system includes two initiators, only one of them is passed by the workflow, when it is run. Also, a volume must be mapped to all hosts using the same LUN.

The following figures display the IBM Storage workflows and elements in vRO.

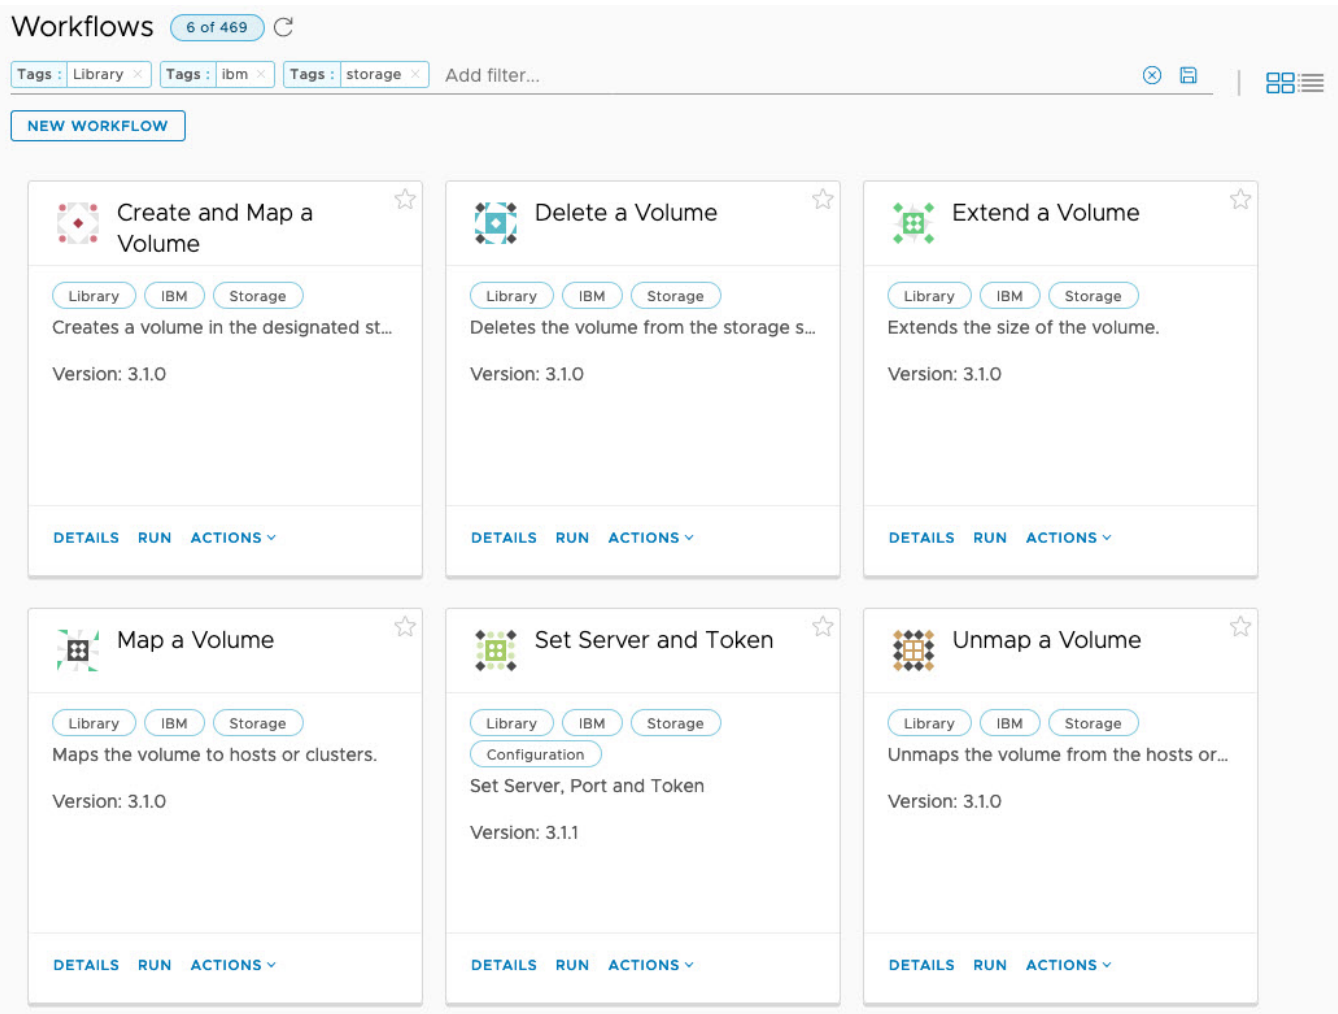


Figure 108. vRealize Orchestrator HTML5 client– available workflows

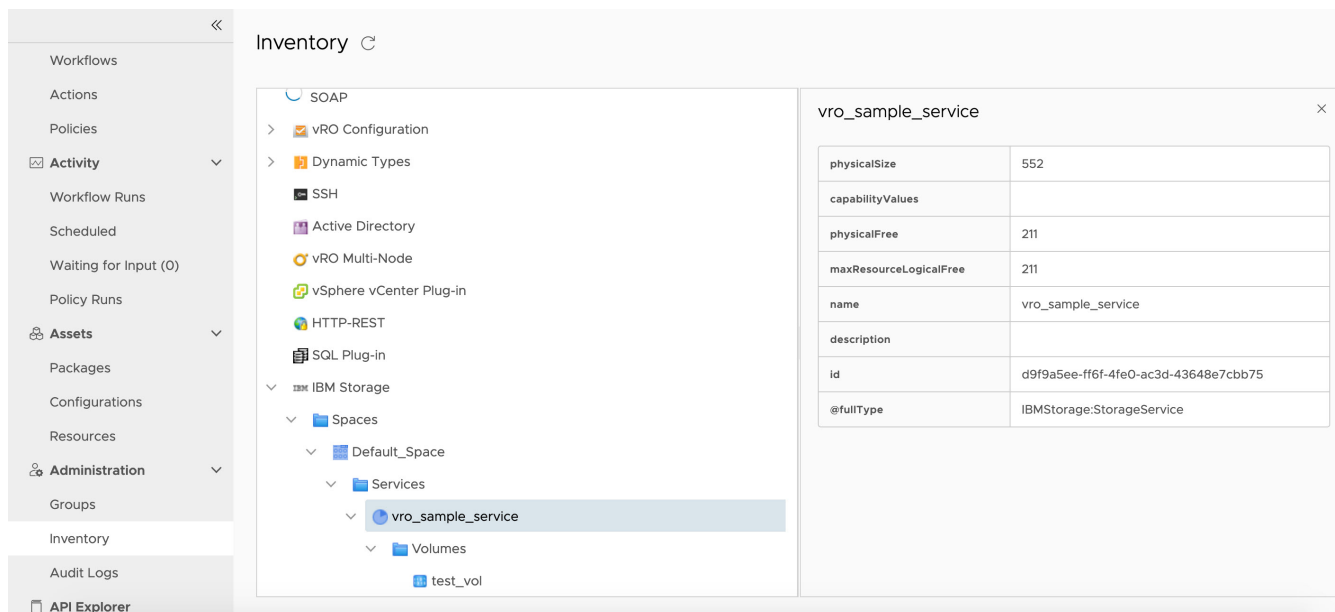


Figure 109. vRealize Orchestrator HTML5 client– available objects

For information about how to initiate workflows in vRealize Orchestrator, refer to the relevant VMware documentation.

IBM Storage Management Pack for VMware vRealize Operations Manager

The IBM Storage Management Pack for VMware vRealize Operations Manager allows Operations Manager users to obtain comprehensive monitoring information about the IBM storage resources that are utilized in their virtualized environment.

The management pack can be downloaded from Spectrum Connect and can then be deployed on the vRealize Operations Manager server.

After a VMware vRealize Operations Manager server is registered on Spectrum Connect that is configured with storage systems, storage spaces, services, and vRealize servers, storage-related data is pushed to the Operations Manager server every five minutes by default.

The dedicated IBM storage system adapter deployed on the vRealize Operations Manager server enables monitoring the supported IBM storage system via the vROps Manager. This adapter reports the storage-related information, such as monitoring data of all logical and physical elements, covering storage systems, storage domains, storage pools, volumes, hosts, modules, target ports, disks, health status, events, thresholds, and performance. It also provides the dashboards that display detailed status, statistics, metrics, and analytics data alongside hierarchical flowcharts with graphic representation of IBM storage system elements.

Relationships between the IBM storage elements (storage systems, ports, storage pools, volumes, host, host initiator, modules, domain) and datastores, virtual machines, and hosts are displayed graphically in a drill-down style, providing VMware administrators a complete and up-to-date picture of their utilized storage resources.

To visualize how this cloud interface is integrated in a virtualized environment, see [Chapter 8, “VMware environment,”](#) on page 93.

Managing integration with vRealize Operations Manager

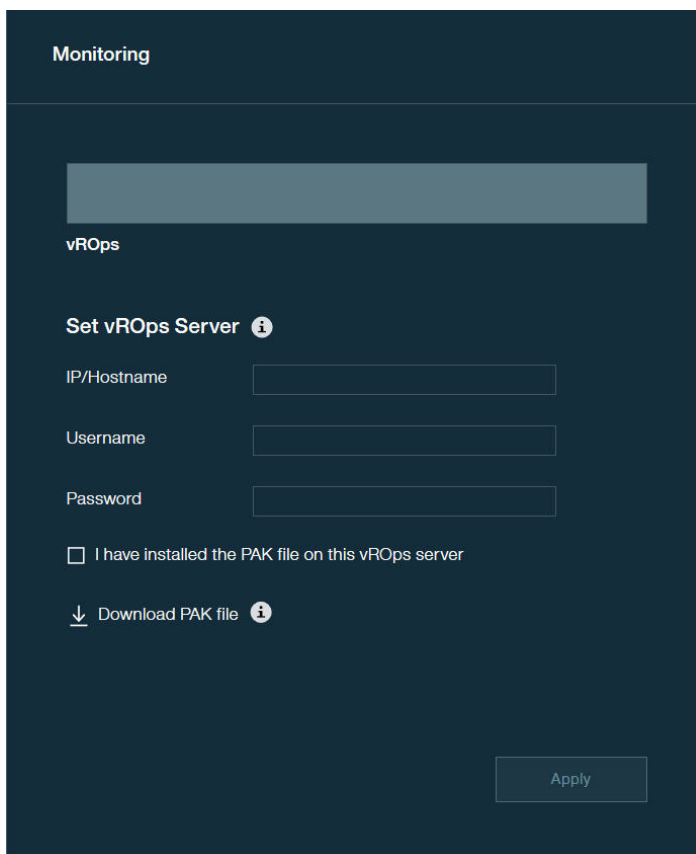
Before you can use the IBM Storage Management Pack for VMware vRealize Operations Manager, you must set a connection to at least one vRealize Operations Manager (vROps) server, and then define which storage systems should be monitored in vROps.

After a vROps server connection is defined and storage systems are associated with the vROps server, detailed monitoring information for these storage systems becomes available in vROps (for more information, see [“IBM Storage Management Pack for VMware vRealize Operations Manager”](#) on page 133).

Note: In version 3.6.x, the IBM Storage Management Pack for VMware vRealize Operations Manager does not support the DS8000 family storage systems.

To access these options, go to the **Monitoring** pane of Spectrum Connect GUI. You can then manage the integration with vROps as explained in the following sections:

- [“Downloading the vROps management package”](#) on page 135.
- [“Deploying the management package on vROps”](#) on page 135.
- [“Connecting the vROps server to Spectrum Connect”](#) on page 136.
- [“Controlling storage system monitoring on the vROps server”](#) on page 137.



Monitoring

vROps

Set vROps Server ⓘ

IP/Hostname

Username

Password

☐ I have installed the PAK file on this vROps server

↓ Download PAK file ⓘ

Apply

Figure 110. Monitoring pane

The vROps integration, except for the management package operations, can be performed from the CLI as well, as explained in [“CLI – Managing integration with vRealize Operations Manager”](#) on page 83.

Downloading the vROps management package

IBM Spectrum Connect provides management package in the form of a PAK file which can be deployed on the vRealize Operations Manager.

About this task

Although vROps can display IBM Storage information even without the management package (storage adapter) installation, the IBM Storage adapter is required for displaying the dedicated dashboards, graphic icons, and user-friendly attribute names for the IBM storage elements. The adapter is provided through a PAK file that you need to download, as described in the following procedure.

Procedure

To download the PAK file from Spectrum Connect:

1. Go to **Monitoring** pane of the Spectrum Connect GUI.
The **Set vROps Server** dialog box is displayed.
2. On the bottom of the dialog box, click **Download PAK file**.



Figure 111. Download PAK File button

Alternatively, you can download the package from the following directory on Spectrum Connect:

`/opt/ibm/ibm_spectrum_connect/downloads/static/IBM_Storage_Adapter-3.x.x-xxx_signed.pak`, where x.x is the release and mod number, and xxx designates the current build number.

3. Save the file to your computer to later upload it to the vRealize Operations Manager.

What to do next

See [“Deploying the management package on vROps” on page 135](#).

Deploying the management package on vROps

After the management package is downloaded to the computer, it must be deployed on the vRealize Operations Manager.

About this task

The management package must be deployed on the vROps, as described below.

Procedure

To deploy the management package on the vROps:

1. After the management package is downloaded to the computer, access the vRealize Operations Manager administrative web console using `https://hostname` or IP address of the vROps UI.
2. Go to **Administration > Solutions > Repository**.
3. In the **Repository** pane, click **ADD/UPGRADE** to add a new management package.
The **Add Solution** dialog box is displayed.
4. In the **Add Solution** dialog box, click **Browse** and select the management package downloaded from Spectrum Connect. After that, click **Upload** to start deployment.

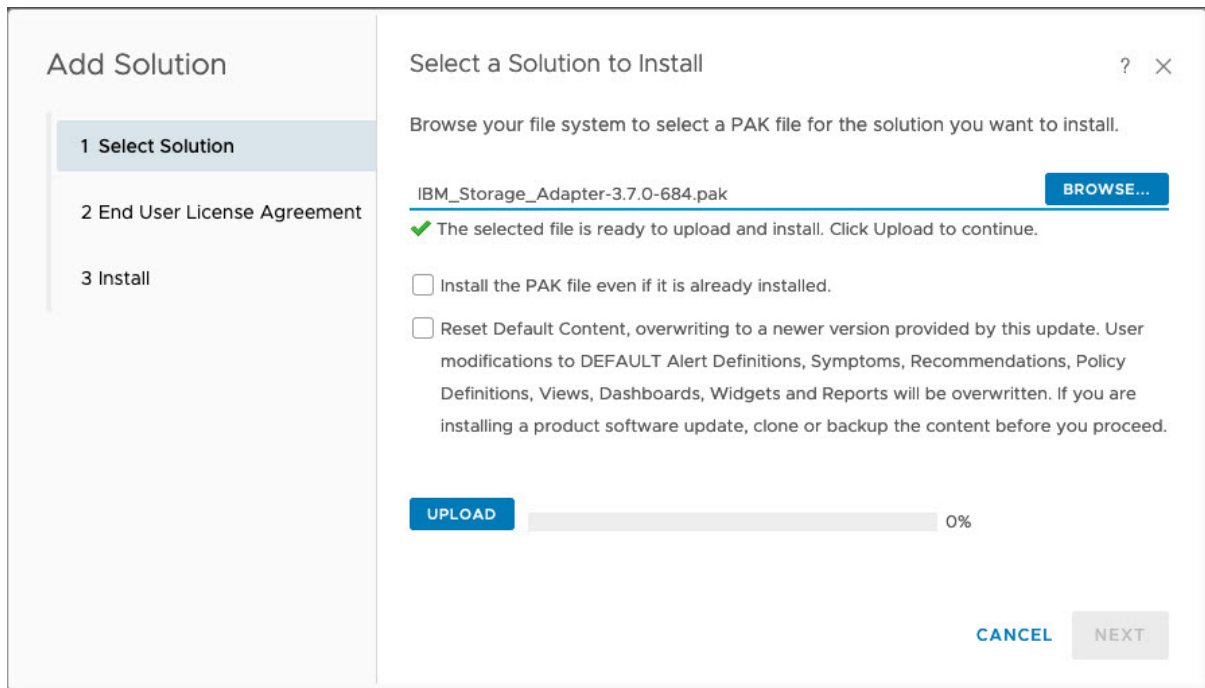


Figure 112. Deploying the management package on the vROps

After the package is uploaded, the package information is displayed.

5. Click **Next**.

The IBM license agreement is displayed.

6. Accept the IBM license agreement, click **Next** to continue.

The Installation Solution progress is displayed.

7. Click **FINISH** to complete the installation.

No additional configuration of the management package is required on the vROps. Under certain conditions, its status may appear as **Not configured** on the vROps. You can disregard this information.

Connecting the vROps server to Spectrum Connect

After the management package is successfully deployed and described, you must add the vROps Manager server to Spectrum Connect.

About this task

The vRealize Operations Manager server must be connected to Spectrum Connect, as explained below.

Procedure

1. Go to the **Monitoring** pane.
2. Enter IP address or FQDN of the vRealize Operations Manager server, user name, password and select the check box to confirm you have installed the PAK file on the vROps Manager server; click **Apply** to save the settings.

Figure 113. Adding the vROps server to Spectrum Connect

If the vROps server connection is successful, its color changes from gray to blue.

What to do next

See [“Controlling storage system monitoring on the vROps server” on page 137.](#)

Controlling storage system monitoring on the vROps server

The IBM storage systems connected to Spectrum Connect must be added to the vROps Manager as well to enable their monitoring.

About this task

To enable monitoring of the IBM storage systems, they must be added to the vROps server. You can also remove the systems that do not require monitoring by the vROps.

Procedure

To monitor the storage systems on the vROps server:

1. On the **Monitoring** pane, click the vROps server which you want to use for monitoring.
2. In the **Storage Systems** pane, right-click a storage system that you intend to monitor, and select **Start vROps monitor...**, or click the **Start Monitoring** button on the storage system.

The monitored system color changes to indicate the connection to the vROps server. Spectrum Connect starts pushing the information to vRealize Operations Manager, using RESTful API requests.

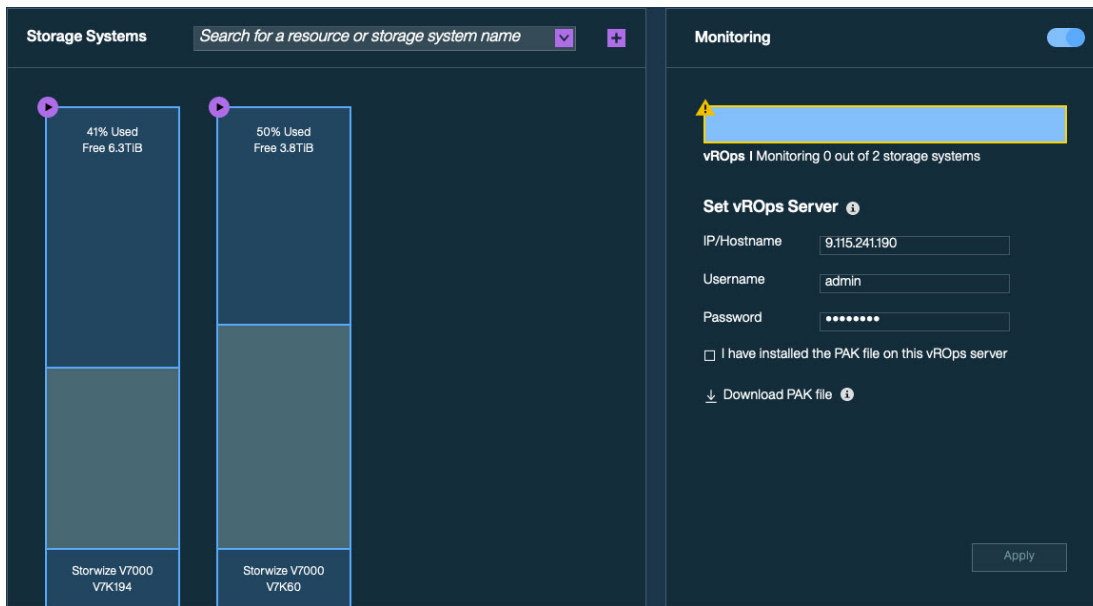


Figure 114. Storage system monitored by the vROps server

You can stop monitoring a storage system by clicking the **Stop Monitoring** button on the monitored system.

You can prevent the vROps server from collecting performance data from the monitored storage systems by toggling the **Activate** switch ().

The legend below the vROps server specifies how many storage systems are being monitored by the server out of total number of systems defined on Spectrum Connect. The color of the vROps server changes from dark to bright blue in accordance with the number of monitored systems.

Using the IBM Storage Management Pack for VMware vRealize Operations Manager

Use the IBM Storage Management Pack for VMware vRealize Operations Manager to obtain comprehensive monitoring information about the IBM storage resources that are utilized in your virtualized environment.

About this task

After successfully configuring Spectrum Connect with vRealize Operations Manager, it periodically starts sending the storage system information to vRealize Operations Manager. You can view the detailed IBM storage dashboards, together with the graphical relationships between the storage elements (storage systems, ports, storage pools, volumes) and virtual elements (datastores, virtual machines, hosts) in a drill-down interactive style. Three main dashboards are available for XIV® storage systems:

- [“Overview dashboard” on page 140](#)
- [“Performance dashboard” on page 142](#)
- [“Top 10 dashboard” on page 150](#)

In addition, you can:

- Monitor storage system resources. See [“Displaying the overview of IBM storage objects” on page 151](#).
- Define thresholds and alerts for storage resources and metrics in the Overview and Performance dashboards. See [“Defining thresholds and alerts for storage objects” on page 152](#).

Note: Not all informational-level severity events are reported by Spectrum Connect to vRealize Operations Manager. All other severity events (Warning, Minor, Major, Critical) are reported.

Procedure

To view the IBM storage dashboards, complete the following steps.

1. Log in to vRealize Operations Manager user interface.
2. On the Dashboards page, select the required dashboard from the left menu or from **All Dashboards > IBM Storage**.

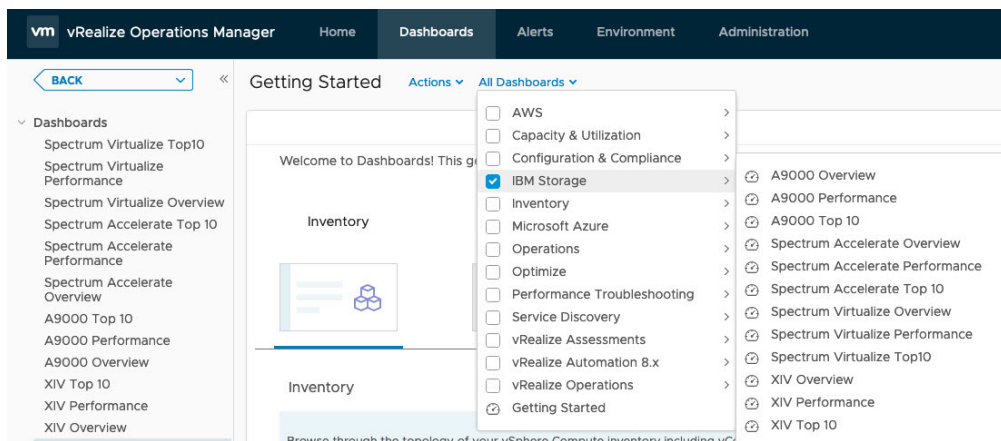


Figure 115. vROps GUI – IBM Storage option

The selected dashboard is displayed. The following icons are used to represent the IBM storage elements.


















Table 26. IBM Storage Icons in vROps	
Icon	Description
	IBM storage adapter
	IBM storage system
	IBM storage system, running Spectrum Virtualize
	IBM disk
	IBM MDisk
	IBM domain
	IBM host
	IBM Host Fibre Channel (FC) initiator

Table 26. IBM Storage Icons in vROps (continued)

Icon	Description
	IBM host iSCSI initiator
	IBM module
	Flash canister
	Flash enclosure
	Flash card
	IBM module FC port
	IBM module iSCSI port
	IBM pool
	IBM child pool
	IBM volume
	IBM I/O group

Overview dashboard

The Overview dashboard presents relationships between all virtual elements and storage elements that are in use.

Procedure

To display IBM storage resource overview:

1. In the Overview dashboard, click a storage system in the **Storage Systems** pane.

The list of all the resources related to the selected storage system are displayed in the right pane of the Overview dashboard. The resources include virtual machines, host systems, datastores, volumes, pools, storage systems (arrays), hosts, FC initiators, FC ports, iSCSI initiators, iSCSI ports, modules, flash canisters, flash enclosures, flash cards and disks.

The alert widget is detailed in [“Using the alert widget”](#) on page 142.

Spectrum Virtualize Storage System...			
Name	Adapter Type	Object Type	Policy
V7K60	IBM Storage Adapter	IBM Spectrum Virtua...	vSph
1 - 1 of 1 items			

Figure 116. IBM Spectrum Virtualize Storage Systems pane

2. Move the mouse pointer over a resource element or click on it to select it.

A tooltip is displayed, detailing the element name and its health score. The health score is calculated automatically by the vROps Manager, according to the number of alarms and statistic information. However, disk health score is based on the *health.requires service* metric.

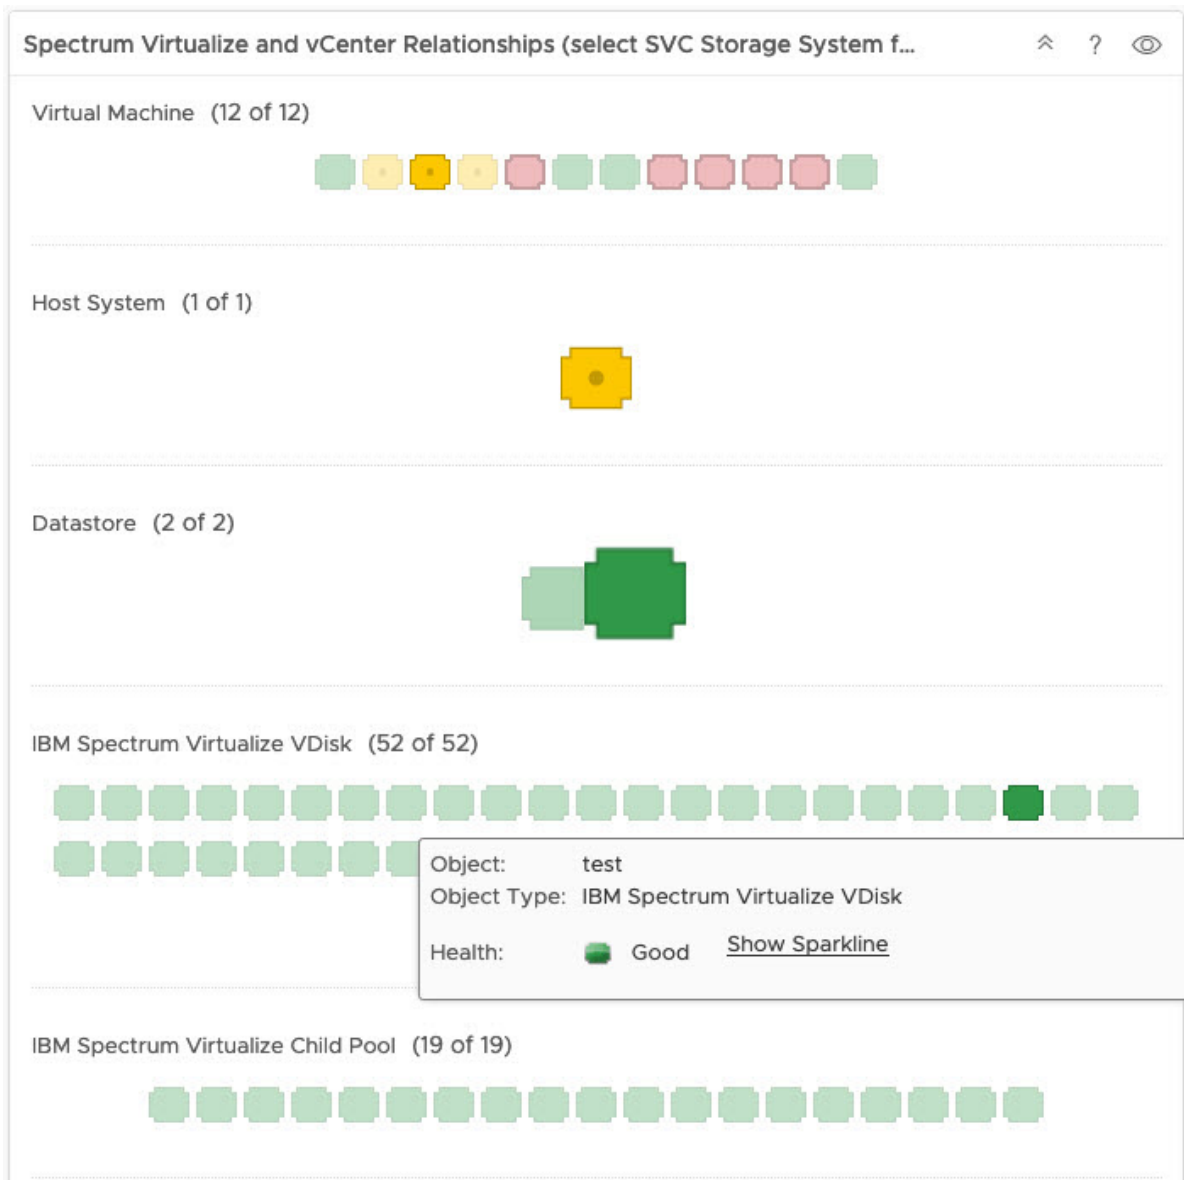


Figure 117. IBM Spectrum Virtualize vDisk health status

3. Double-click on a selected resource element to display the resource details (health tree, metrics, etc). These are detailed in the Performance dashboard below.

Using the alert widget

The Storage System Alerts (All Arrays) widget is located at the lower-left pane of the Overview dashboard. This widget displays alerts generated by all storage systems, monitored by the vROps server.

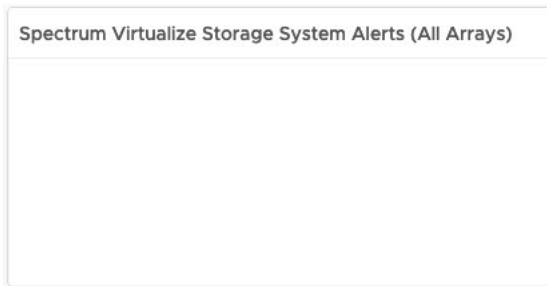


Figure 118. Alert widget

By default, the events are pushed by the IBM storage adapter to the vRealize Operations Manager every 10 minutes.

Performance dashboard

Performance dashboard provides health and performance information for the IBM storage resources.

About this task

Performance information presented in the dashboard is collected for a time period defined by the **vcops_push_interval** parameter in the `vcops_config.ini` file (the default time period is 5 minutes). This period can be changed, as explained in [“Adjusting system update interval” on page 60](#).

Procedure

To display performance information:

1. In the **Virtual Machines** pane of the Performance dashboard, locate a relevant virtual machine and select it.
2. In the **Storage System and vCenter Relationships** pane, select an object, which performance you intend to monitor.

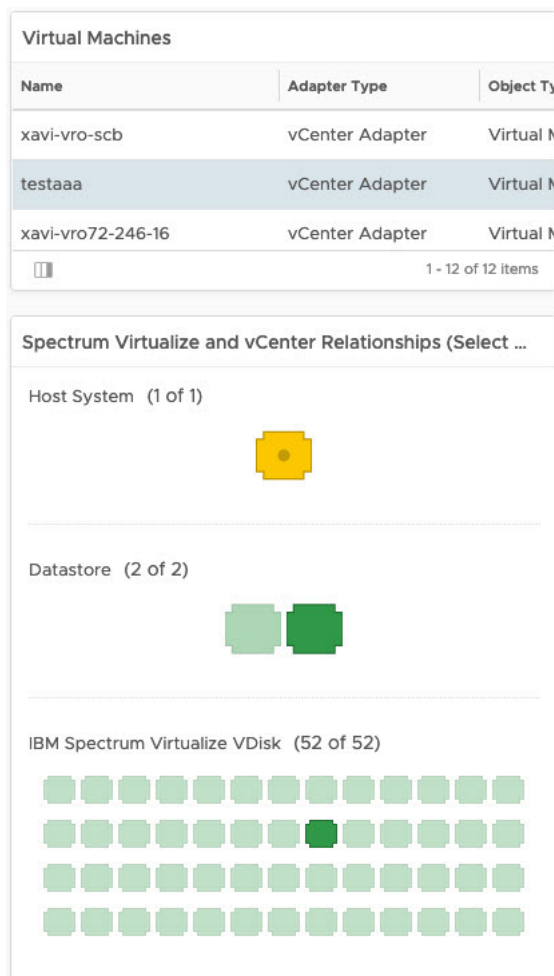


Figure 119. Virtual Machines and Spectrum Virtualize and vCenter Relationships

The **HEALTH TREE** pane displays the selected element and its relation to other storage resources in an hierarchical manner.

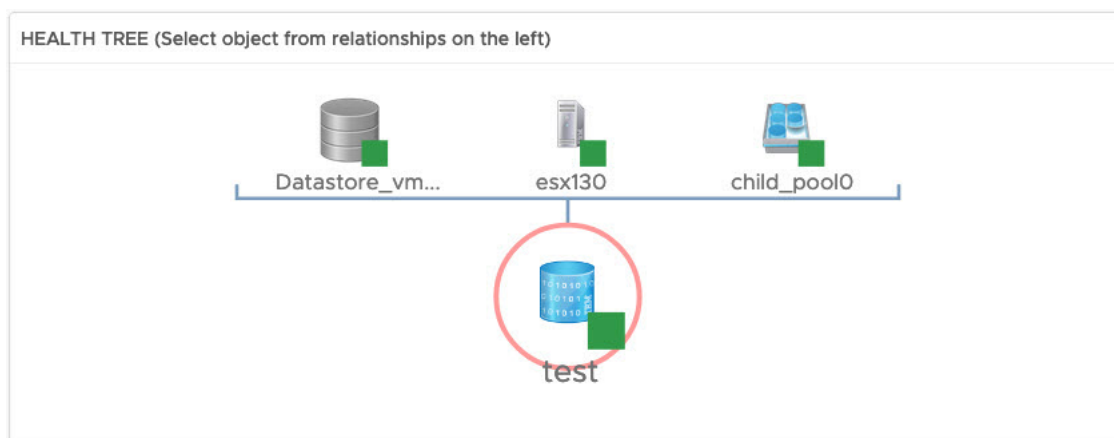


Figure 120. HEALTH TREE pane

3. In the **HEALTH TREE** pane, select a resource element to display all relevant performance metrics in the **METRIC SELECTOR** pane. Different metric types are available for different resource elements, as detailed in [“Performance metrics”](#) on page 144.
4. Select a metrics of an element to display its metric graph in the **METRIC GRAPH** pane.

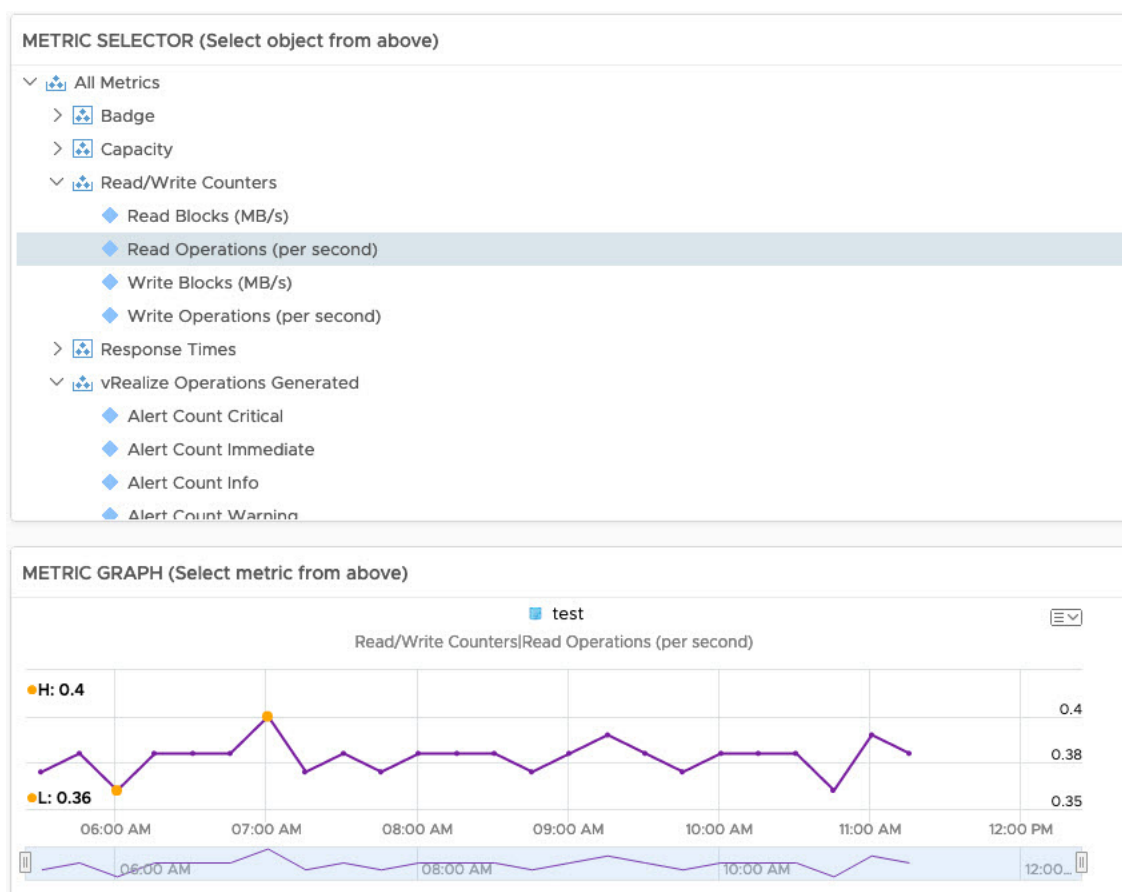


Figure 121. Metric Selector and Metric Graph panes of the Performance dashboard

Performance metrics

Metrics data available in the Performance dashboard provides health and performance information for the IBM storage objects.

Different metric types are available for different storage elements, as detailed in tables below.

Metrics	Description	Relevant storage object
Hard (GB)	Hard size (actual physical capacity) of the storage object	Volume, Pool, Array
Soft (GB)	Soft size (maximum capacity) of the storage object, as seen by the hosts	
Utilization Hard (%)	Utilization ratio of the hard capacity	
Utilization Soft (%)	Utilization ratio of the soft capacity	
Free Hard (GB)	Free hard size of the storage system (array)	Array
Free Soft (GB)	Free soft size of the storage system	
Over Provisioning Ratio (%)	The ratio between virtual capacity and real capacity of the pool	Pool

Metrics	Description	Relevant storage object
Compression Ratio (%)	Volume compression ratio, calculated as 1– (compressed volume size/uncompressed volume size)	Volume
Compression Saving (GB)	Volume compression savings, calculated as (number of 17GB uncompressed partitions in use – number of 17GB partitions in use)/1000	

Table 27. Health metrics

Metrics	Description	Relevant storage object
Connected	Connection status of the object	Host, Host FC Initiator, Host iSCSI Initiator
Status	Health status of the module	Module, IBM Spectrum Virtualize MDisk
Requires Service	Health status of the disk. The REPLACE value indicates disk failure.	Disk
Online	Connection status of the object. For IBM Spectrum Virtualize Host, the status can be as follows: <ul style="list-style-type: none"> • 0 – Offline • 5 – Excluded • 10 – Degraded • 20 – Is Online 	Module FC Port, Module iSCSI Port, IBM Spectrum Virtualize Node FC Port, IBM Spectrum Virtualize Node iSCSI Port, IBM Spectrum Virtualize Host

Table 28. Counter metrics

Metrics	Description	Relevant storage object
Hosts Count	Total number of hosts connected to the storage system	Array, IBM Spectrum Virtualize I/O Group
Volumes Count	Total number of volumes existing in the storage system	
Mirror Relations Count	Total number of mirror relations (master or slave) existing in the storage system	Array
Pools Count	Total number of pools existing in the storage system	
Snapshots Count	Total number of snapshots existing in the storage system	
Volumes and Snapshots Count	Total number of volumes and snapshots existing in the storage system	
Nodes Count	Total number of nodes in the I/O group	IBM Spectrum Virtualize I/O Group

Table 29. Performance metrics

Metrics	Description	Relevant storage object
Total IOPS	Total number of IOPS performed by the object	Array, Host FC Initiator, Host iSCSI Initiator, Module FC Port, Module iSCSI Port
Total Read IOPS	Total number of read IOPS performed by the object	
Total Write IOPS	Total number of write IOPS performed by the object	
Read Hit Large IOPS	Number of IOPS for 64–512 KB packets read from cache	
Read Hit Medium IOPS	Number of IOPS for 8–64 KB packets read from cache	
Read Hit Small IOPS	Number of IOPS for 0–8 KB packets read from cache	
Read Hit Very Large IOPS	Number of IOPS for over 512 KB packets read from cache	
Read Miss Large IOPS	Number of IOPS for 64–512 KB packets read from disk	
Read Miss Medium IOPS	Number of IOPS for 8–64 KB packets read from disk	
Read Miss Small IOPS	Number of IOPS for 0–8 KB packets read from disk	
Read Miss Very Large IOPS	Number of IOPS for over 512 KB packets read from disk	
Write Hit Large IOPS	Number of IOPS for 64–512 KB packets written to cache	
Write Hit Medium IOPS	Number of IOPS for 8–64 KB packets written to cache	
Write Hit Small IOPS	Number of IOPS for 0–8 KB packets written to cache	
Write Hit Very Large IOPS	Number of IOPS for over 512 KB packets written to cache	
Write Miss Large IOPS	Number of IOPS for 64–512 KB packets written to disk	
Write Miss Medium IOPS	Number of IOPS for 8–64 KB packets written to disk	
Write Miss Small IOPS	Number of IOPS for 0–8 KB packets written to disk	
Write Miss Very Large IOPS	Number of IOPS for over 512 KB packets written to disk	
Average Latency	Average response time	
Average Write Latency	Average response time of a write operation	
Average Read Latency	Average response time of a read operation	
Read Hit Large Latency	Response time of cache read operations for 64–512 KB packets	

<i>Table 29. Performance metrics (continued)</i>		
Metrics	Description	Relevant storage object
Read Hit Medium Latency	Response time of cache read operations for 8–64 KB packets	Array, Host FC Initiator, Host iSCSI Initiator, Module FC Port, Module iSCSI Port
Read Hit Small Latency	Response time of cache read operations for 0–8 KB packets	
Read Hit Very Large Latency	Response time of cache read operations for over 512 KB packets	
Read Memory Hit Large Latency	Response time of DRAM cache read operations for 64–512 KB packets	Array
Read Memory Hit Medium Latency	Response time of DRAM cache read operations for 8–64 KB packets	
Read Memory Hit Small Latency	Response time of DRAM cache read operations for 0–8 KB packets	
Read Memory Hit Very Large Latency	Response time of DRAM cache read operations for over 512 KB packets	

Table 29. Performance metrics (continued)

Metrics	Description	Relevant storage object
Read Miss Large Latency	Response time of disk read operations for 64–512 KB packets	Array, Host FC Initiator, Host iSCSI Initiator, Module FC Port, Module iSCSI Port
Read Miss Medium Latency	Response time of disk read operations for 8–64 KB packets	
Read Miss Small Latency	Response time of disk read operations for 0–8 KB packets	
Read Miss Very Large Latency	Response time of disk read operations for over 512 KB packets	
Write Hit Large Latency	Response time of cache write operations for 64–512 KB packets	
Write Hit Medium Latency	Response time of cache write operations for 8–64 KB packets	
Write Hit Small Latency	Response time of cache write operations for 0–8 KB packets	
Write Hit Very Large Latency	Response time of cache write operations for over 512 KB packets	
Write Miss Large Latency	Response time of disk write operations for 64–512 KB packets	
Write Miss Medium Latency	Response time of disk write operations for 8–64 KB packets	
Write Miss Small Latency	Response time of disk write operations for 0–8 KB packets	
Write Miss Very Large Latency	Response time of disk write operations for over 512 KB packets	
Total Throughput	Total bandwidth	
Total Read Throughput	Total bandwidth used by read operations	
Total Write Throughput	Total bandwidth used by write operations	
Read Hit Large Throughput	Bandwidth used by cache read operations for 64–512 KB packets	
Read Hit Medium Throughput	Bandwidth used by cache read operations for 8–64 KB packets	
Read Hit Small Throughput	Bandwidth used by cache read operations for 0–8 KB packets	
Read Hit Very Large Throughput	Bandwidth used by cache read operations for over 512 KB packets	

<i>Table 29. Performance metrics (continued)</i>		
Metrics	Description	Relevant storage object
Read Memory Hit Large Throughput	Bandwidth used by DRAM cache read operations for 64–512 KB packets	Array
Read Memory Hit Medium Throughput	Bandwidth used by DRAM cache read operations for 8–64 KB packets	
Read Memory Hit Small Throughput	Bandwidth used by DRAM cache read operations for 0–8 KB packets	
Read Memory Hit Very Large Throughput	Bandwidth used by DRAM cache read operations for over 512 KB packets	
Read Miss Large Throughput	Bandwidth used by disk read operations for 64–512 KB packets	Array, Host FC Initiator, Host iSCSI Initiator, Module FC Port, Module iSCSI Port
Read Miss Medium Throughput	Bandwidth used by disk read operations for 8–64 KB packets	
Read Miss Small Throughput	Bandwidth used by disk read operations for 0–8 KB packets	
Read Miss Very Large Throughput	Bandwidth used by disk read operations for over 512 KB packets	
Write Hit Large Throughput	Bandwidth used by cache write operations for 64–512 KB packets	
Write Hit Medium Throughput	Bandwidth used by cache write operations for 8–64 KB packets	
Write Hit Small Throughput	Bandwidth used by cache write operations for 0–8 KB packets	
Write Hit Very Large Throughput	Bandwidth used by cache write operations for over 512 KB packets	
Write Miss Large Throughput	Bandwidth used by disk write operations for 64–512 KB packets	
Write Miss Medium Throughput	Bandwidth used by disk write operations for 8–64 KB packets	
Write Miss Small Throughput	Bandwidth used by disk write operations for 0–8 KB packets	
Write Miss Very Large Throughput	Bandwidth used by disk write operations for over 512 KB packets	
Aborts	Total number of I/Os aborted during the current mirroring operation	
Failures	Total number of I/Os failed during the current mirroring operation	

<i>Table 29. Performance metrics (continued)</i>		
Metrics	Description	Relevant storage object
Read Operations	Number of read operations per second	IBM Spectrum Virtualize Vdisk
Write Operations	Number of write operations per second	
Read Blocks	Number of blocks read per second (in MB)	
Write Blocks	Number of blocks written per second (in MB)	
Average Read Response Time	Average response time for disk reads per read operation	
Average Write Response Time	Average response time for disk writes per write operation	
Worst Read Response Time Since Last Statistics Collection	Worst response time for disk reads within the last statistics collection sample period	
Worst Write Response Time Since Last Statistics Collection	Worst response time for disk writes within the last statistics collection sample period	
Average Transfer Response Time	Average transfer latency for both read and write operations	
System CPU Utilization	CPU busy percentage for I/O process cores	IBM Spectrum Virtualize Node
Compression CPU Utilization	CPU busy percentage for compression process cores	

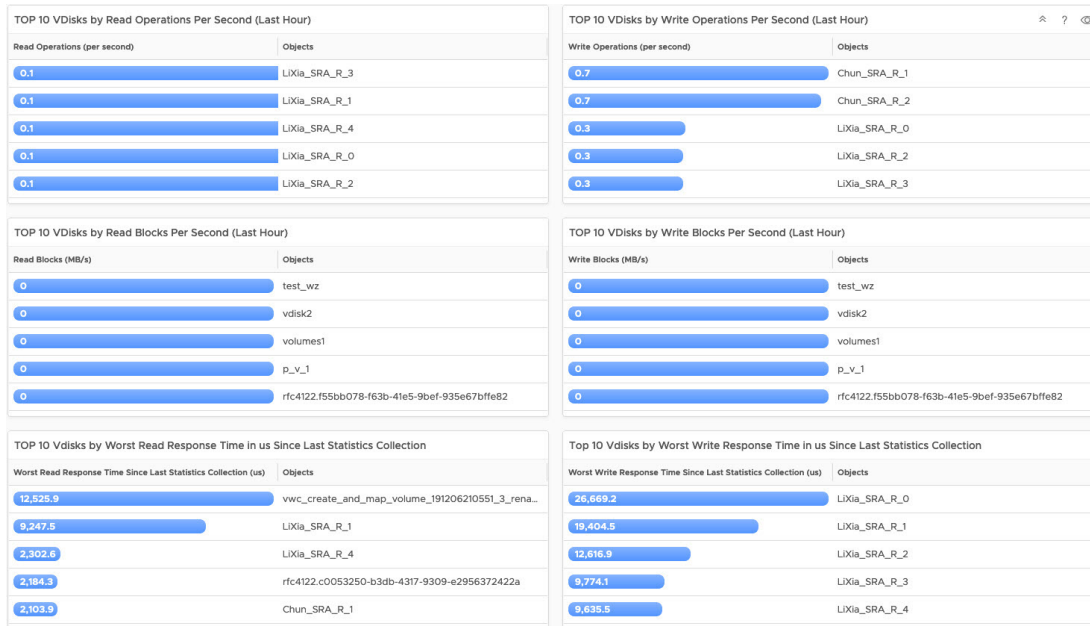
Top 10 dashboard

The IBM Top 10 dashboard represents top ten IBM volumes and hosts in all storage systems monitored by the vROps Manager.

The Top 10 dashboards for the storage systems that run Spectrum Virtualize include the following information:

- Top 10 VDisks by read operations per second (last hour)
- Top 10 VDisks by write operations per second (last hour)
- Top 10 VDisks by read blocks per second (last hour)
- Top 10 VDisks by write blocks per second (last hour)
- Top 10 VDisks by worst read response in us since last statistics collection
- Top 10 VDisks by worst write response in us since last statistics collection
- Top 10 VDisks by average transfer response time in us (last hour)

You can double-click on any resource element (disk, host or VDisk) to display its details.



Displaying the overview of IBM storage objects

You can display the overview of IBM storage objects, including its health, risk and efficiency status, and other attributes in a centralized manner, using the vROps Environment display.

Procedure

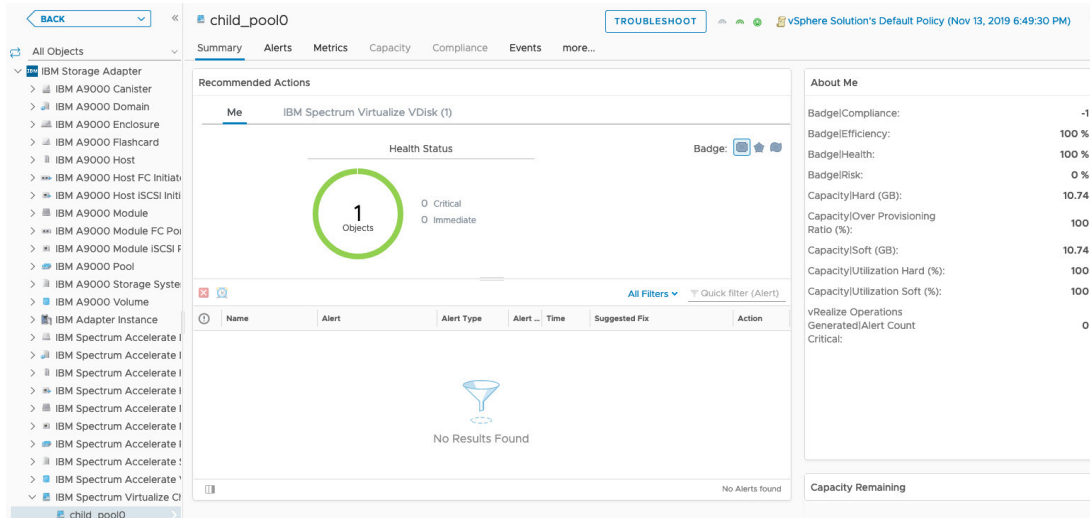
To display the overview of IBM storage objects:

1. Click **Environment > All Objects > IBM Storage Adapter**.

The list of IBM storage objects is displayed in the left-hand pane of the vROps Manager.

2. In the IBM storage object list, select an object that you intend to monitor.

The overview of the selected object status is displayed in the right-hand pane of the vROps Manager.



Defining thresholds and alerts for storage objects

The vROps Manager maintains thresholds of normal behavior for each storage element.

About this task

The vROps Manager alerts the user, when a metric violates a threshold. The thresholds can be set to fit the needs of the user. Afterward, you can define an alert to be triggered, when the threshold is crossed, changing the color of the storage object in the Overview and Performance dashboards. In addition, you can use the storage object metrics as Key Performance Indicator (KPI).

Procedure

To set thresholds and define their alerts:

1. Go to **Alerts > Alert Settings > Symptom Definitions**.
2. In the right-hand pane of the **Symptom Definitions** dialog box, click **+** sign to add a new symptom definition.

The **Add Symptom Definition** dialog box is displayed.

3. In the **Base Object Type** drop-down list, select **IBM Storage Adapter**, and then choose a storage element and a metrics, which thresholds you intend to define.
4. Double-click the metrics related to the selected storage resource, or drag it to the working area of the right-hand pane.

The selected object and metrics attributes are displayed.

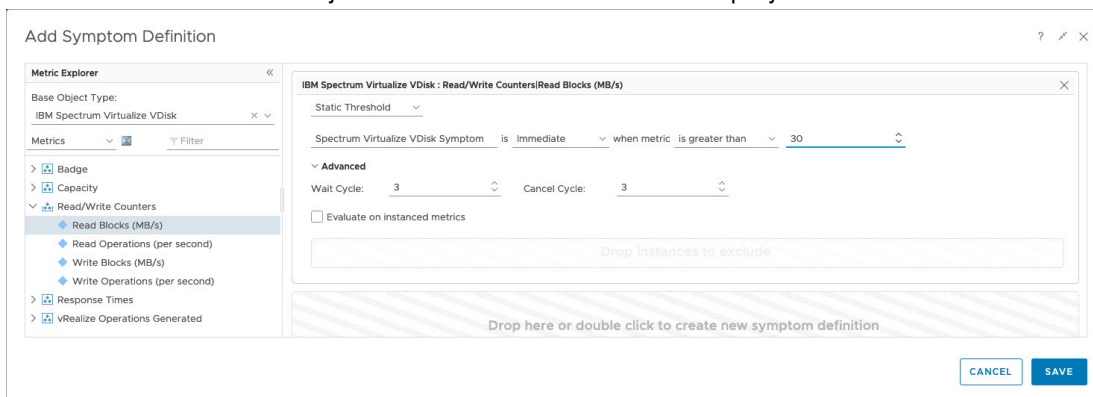


Figure 124. Add Symptom Definition dialog box

5. Enter the symptom definition name, criticality level, threshold triggering condition, wait cycle and cancel cycle values. Then click **Save** to add the symptom definition.

6. Go to **Alert > Alert Settings > Alert Definitions**, click **+** to add a new alert definition.

The **Alert Definition Workspace** dialog box is displayed.

7. In the left-hand pane of the **Alert Definition Workspace** dialog box, enter alert name and description.
8. Click **Base Object Type** and in the drop-down list, select **IBM Storage Adapter**, and then choose a storage element and a metrics, to which you intend to create an alert.

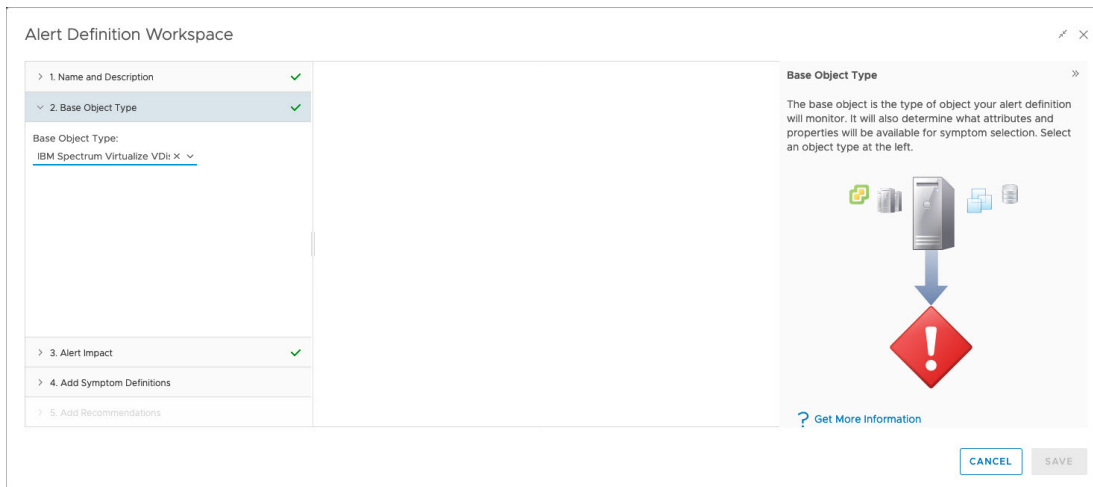


Figure 125. Selecting base object type for alert definition

9. Click **Alert Impact** and enter impact, criticality, alert type/subtype, wait cycle and cancel cycle values for the alert.



Figure 126. Selecting impact for alert definition

10. Click **Add Symptom Definition**, enter *Self* for the **Defined On** parameter, *Metric/Property* for the **Symptom Definition Type** parameter, locate the previously defined symptom in the **Symptom** list and add it to the alert definition by dragging it to the Symptoms area on the right-hand pane.

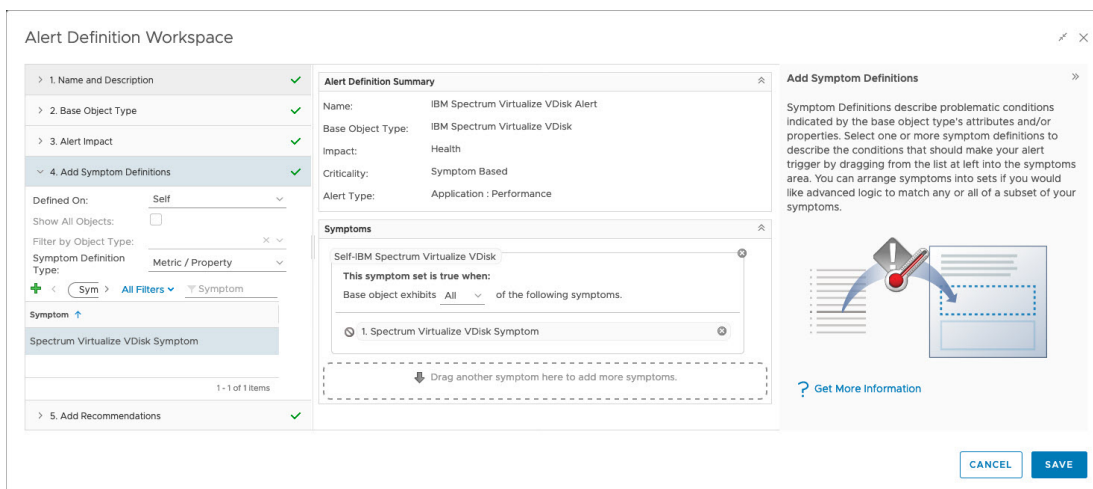






Figure 127. Adding symptom for alert definition

11. Click **Save** to save the changes.

After the duration of wait cycle that you defined has elapsed, the storage object color on a dashboard changes, if the metrics threshold was crossed. Storage objects display different colors, according to the criticality of symptoms:

- Info – 
- Warning – 
- Immediate – 
- Critical – 

12. Navigate to **Administration > Policies**.

13. In the **Policies** pane, click the **Policy Library** tab, select the **Default Policy** entry and click the **Edit** button.

The **Edit Monitoring Policy** dialog box is displayed.

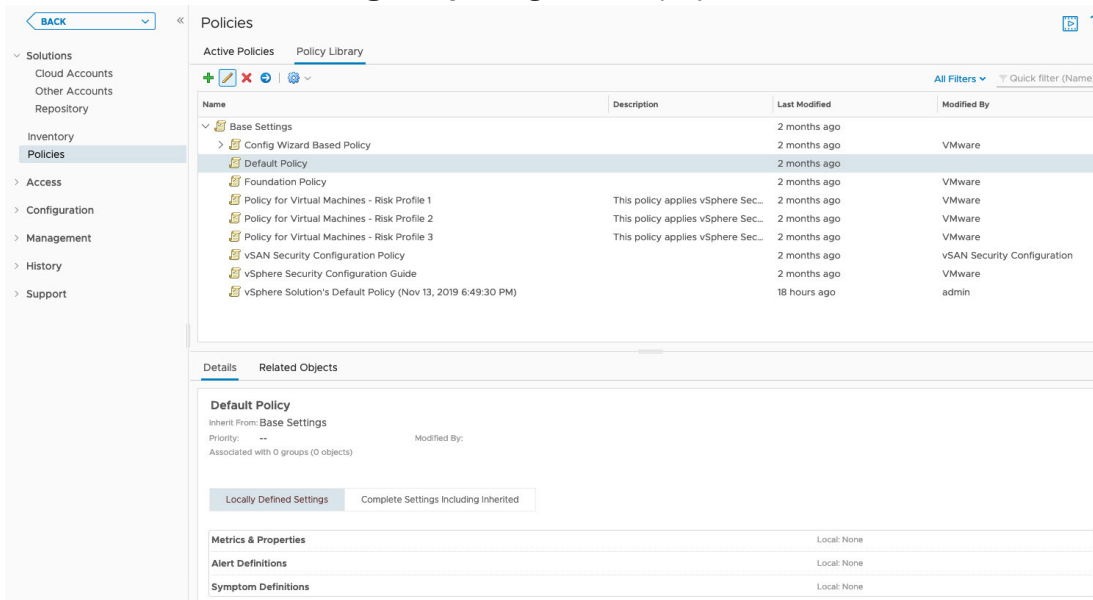


Figure 128. Editing default monitoring policy

14. In the **Edit Monitoring Policy** dialog box, leave the configuration steps 1 to 4 unchanged.

15. In the left-hand pane of the **Edit Monitoring Policy** dialog box, select **Collect Metrics and Properties**.

The list of attributes is displayed in the right-hand pane of the dialog box.

16. In the list of attributes, filter by the object type to locate the storage object used for alert definitions, then select the metrics that you want to use as a Key Performance Indicator, set its KPI to Yes, and click **Save** to finish.

Chapter 9. IBM Storage Automation Plug-in for PowerShell

The IBM Storage Automation Plug-in for PowerShell offers lightweight commands in the Microsoft PowerShell environment (cmdlets) for provisioning and management of the IBM storage systems.

The plug-in package can be downloaded from [Microsoft PowerShell Gallery](https://www.powershellgallery.com/packages/SpectrumConnect-Client) (<https://www.powershellgallery.com/packages/SpectrumConnect-Client>) and can then be deployed on a PowerShell host. It can also be used together with PowerCLI, Windows PowerShell interface for automating storage-related tasks in VMware vSphere environment.

After the plug-in is installed, storage-related cmdlets can be used in the PowerShell environment. The PowerShell runtime invokes these cmdlets for automated end-to-end storage provisioning, host mapping, volume expansion and other storage-related tasks. .

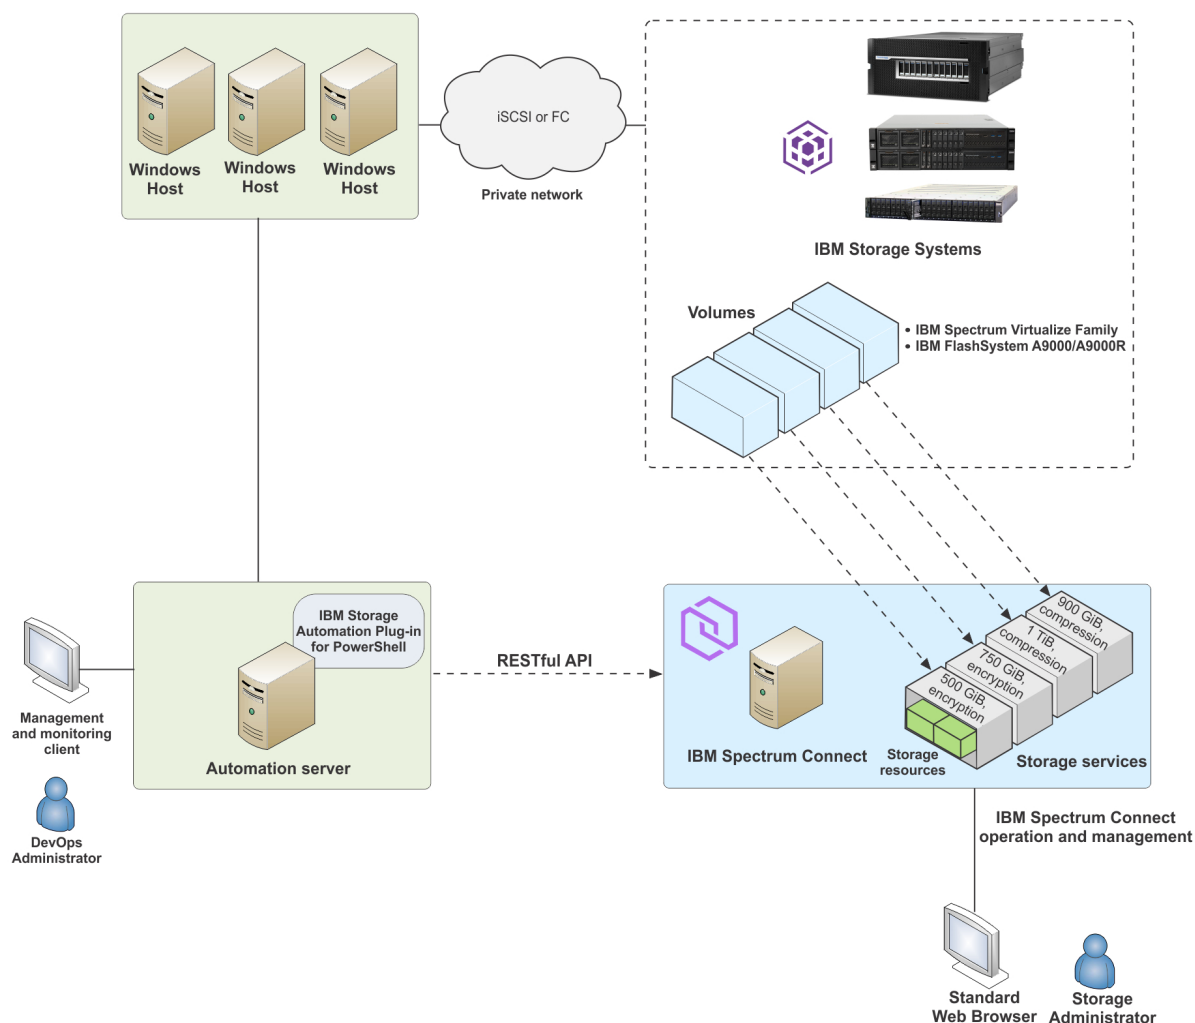


Figure 130. Integration of IBM storage systems in PowerShell environment

Managing integration with Microsoft PowerShell

The IBM Storage Automation Plug-in for PowerShell is used for automated provisioning of storage volumes from an external IBM storage system via PowerShell cmdlets.

About this task

The following procedure details how to add the PowerShell client interface to Spectrum Connect.

Procedure

1. On the **Interfaces** pane, click **Add Interface**, and then select **Add PowerShell**.

The **Add New PowerShell Interface** dialog box is displayed.

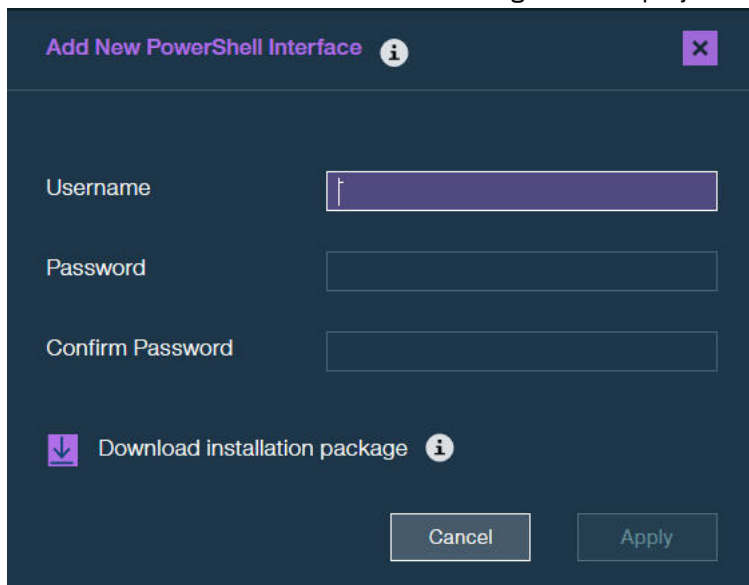
The image shows a dialog box titled "Add New PowerShell Interface" with a close button (X) in the top right corner. Inside the dialog, there are three input fields: "Username", "Password", and "Confirm Password". Below these fields is a link with a download icon and the text "Download installation package" followed by an information icon (i). At the bottom of the dialog are two buttons: "Cancel" and "Apply".

Figure 131. Add New PowerShell Interface dialog box

2. Enter the username and password for the new PowerShell user.

Note: If LDAP is enabled, enter the LDAP username or groupname to be authorized for this interface.

Important: When entering a user name and password for a PowerShell interface in Spectrum Connect with LDAP authentication, make sure that these credentials are the same as defined for LDAP. In addition, you can choose between using a single user or user group, if LDAP is enabled for this Spectrum Connect instance.

3. Click **Apply**.

The PowerShell interface is added to Spectrum Connect. The yellow frame and the exclamation mark indicate that the interface has no storage services delegated to it yet.

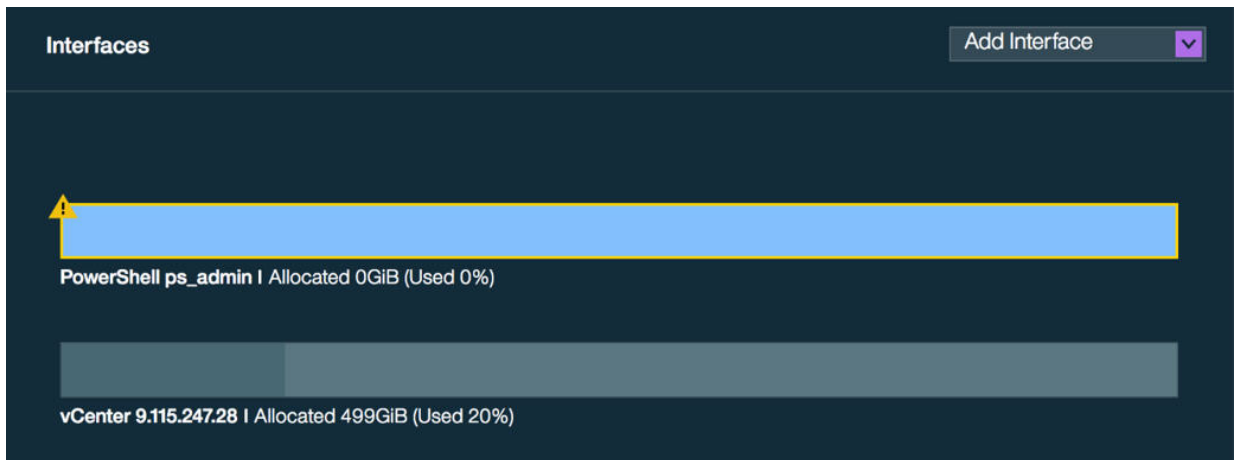


Figure 132. PowerShell interface on the Interfaces pane

What to do next

You can continue integrating the plug-in with Microsoft PowerShell, as explained in the following sections:

- “[Downloading and installing the plug-in package for PowerShell](#)” on page 159.
- “[Delegating storage services to the PowerShell interface](#)” on page 160.
- “[Canceling service delegation to PowerShell](#)” on page 160.

Downloading and installing the plug-in package for PowerShell

To start using PowerShell cmdlets for storage provisioning, you must first download the IBM Storage Automation Plug-in for PowerShell from Microsoft PowerShell Gallery and install it on a Microsoft PowerShell host.

Before you begin

Verify that:

- Windows Management Framework 5.0 has been installed.
- Microsoft PowerShell 5.0 has been installed.
- PowerShell user credentials have been defined in Spectrum Connect.

About this task

The following procedure details how to download, install, and properly configure the IBM Storage Automation Plug-in for PowerShell.

Procedure

1. Go to [Microsoft PowerShell Gallery](https://www.powershellgallery.com/packages/SpectrumConnect-Client) (https://www.powershellgallery.com/packages/SpectrumConnect-Client) and download the plug-in to every Microsoft PowerShell host. You can also navigate to the PowerShell Gallery from within the Spectrum Connect GUI by clicking **Download plug-in package** on the bottom of the **PowerShell Settings** dialog box (right-click the PowerShell interface on the **Interfaces** pane, and select **Modify**).
2. Initiate Microsoft PowerShell.
3. In the PowerShell environment, use the **Find-Module** and **Install-Module** commands to locate and install the SpectrumConnect-Client package.
4. Create connection between the IBM Storage Automation Plug-in for PowerShell and Spectrum Connect, using credentials previously defined in Spectrum Connect. Use the following procedure:

```
$client=New-SCConnection -ConnectionUri https://9.115.247.148:8440
```

```
-UserName powershell -Password Passw0rd
```

The session is active now.

5. If you need to uninstall the plug-in, use the **Uninstall-Module** command to uninstall the SpectrumConnect-Client package.

Delegating storage services to the PowerShell interface

Before you can use the IBM Storage Automation Plug-in for PowerShell, you must delegate the storage services that you want to make them available for PowerShell scripts.

About this task

The services and their storage resources that you delegate on Spectrum Connect can be used for issuing PowerShell cmdlets (for more information, see [“Using the IBM Storage Automation Plug-in for PowerShell”](#) on page 161).

Procedure

To delegate storage services to the PowerShell:

1. On the **Interfaces** pane, click the PowerShell interface to select it.
2. On the **Spaces/Storage Services** pane, select the storage space from which you want to choose storage services.
The available services that reside on the selected storage space are immediately displayed.
3. Right-click on a service that you want to delegate to the PowerShell interface, and then select **Delegate to <PowerShell_interface_name>**, or click the **Attach/Delegate** button on the service.
The service and its frame colors change to indicate the successful delegation.

You can continue the process by right-clicking available services under the current space.

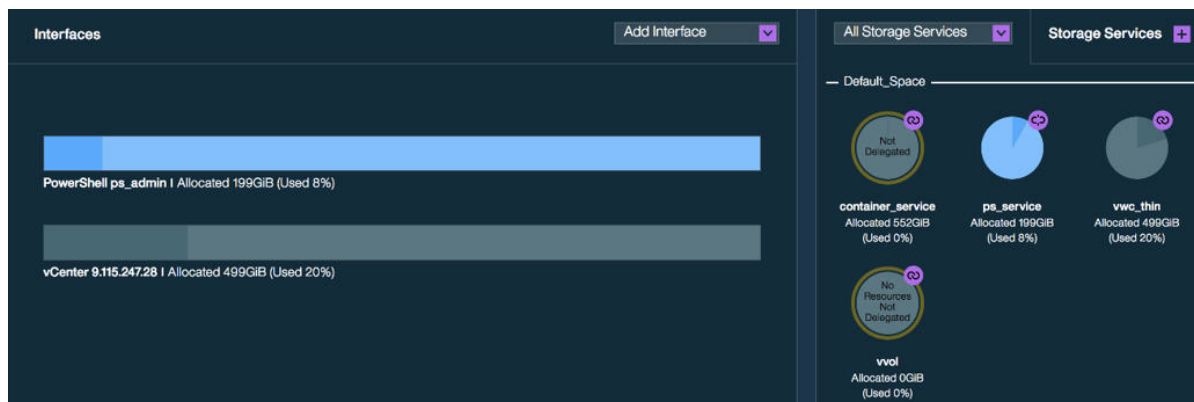


Figure 133. PowerShell interface with a delegated service

The PowerShell interface provides indication for the allocated and used storage space.

- Allocated – amount of storage space available on all pools connected to the delegated services.
- Used – amount of storage space used by PowerShell scripts on all pools connected to the delegated services.

Canceling service delegation to PowerShell

When required, you can cancel a storage service delegation to a PowerShell interface.

About this task

Storage services, which delegation has been canceled, and their resources (pools) cannot be used for running PowerShell cmdlets. Any scripts, involving these elements, will fail to run.

Procedure

1. On the **Interfaces** pane, click the PowerShell interface.
The services that are currently delegated to PowerShell interface are highlighted on the **Spaces/Storage Services** pane.
2. Right-click on a service which delegation you want cancel, and then select **Cancel delegation to <interface_name>** , or click the **Detach/Cancel Delegation** button on the service.
The service color changes to indicate the successful detachment.
You can continue the process by right-clicking delegated services under the current space.

Using the IBM Storage Automation Plug-in for PowerShell

Use the IBM Storage Automation Plug-in for PowerShell to run storage provisioning cmdlets in the PowerShell environment.

After the IBM Storage Plug-in is deployed (see “Downloading and installing the plug-in package for PowerShell” on page 159), the storage-related cmdlets become available for PowerShell users, as detailed in the table below.

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell		
Object/URI	Description	Syntax and parameters
SCConnection	Set up the connection between the Spectrum Connect server and the IBM Storage Automation Plug-in for PowerShell. Before using the PowerShell client, create a PowerShell interface user.	<p>New-SCConnection -ConnectionUri <String> [-Credential] <PSCredential> [<CommonParameters>]</p> <p>New-SCConnection -ConnectionUri <String> [-UserName] <String> [-Password] <String> [<CommonParameters>]</p> <ul style="list-style-type: none"> • ConnectionUri <String> Alias L. The connection URL for Spectrum Connect server in the https://SCIPAddress:ServicePort(8440) format. • Credentials <PSCredential>. User credentials for connection to the Spectrum Connect server. • UserName <String> Alias U. User name and password for the Spectrum Connect server connection must be specified. The user can be created on the Spectrum Connect GUI, when creating a PowerShell interface. Other non-PowerShell-interface users are limited to access some Spectrum Connect functions. • Password <String> Alias P. The corresponding password. <p>For example, connect to the Spectrum Connect server at 9.115.250.45 with user name powershell and password admin2:</p> <pre>PS C:\>\$client=New-SCConnection -ConnectionUri https://9.115.250.45:8440 -UserName powershell -Password admin2</pre> <p>Note: If the token is expired, re-issue New-SCClient to establish a new connection.</p>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
SCSpace	Retrieve information about all storage spaces or show the detailed information according to space ID or name.	<p>Get-SCSpace [[-SpaceID] <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCSpace [-SpaceName] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • SpaceID <String>. Get the space details via the space ID. • SpaceName <String>. Get the space details via the space name. • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, display the detailed information, using space ID:</p> <pre>PS C:\>Get-SCSpace -SCConnection \$client -SpaceID efb54ac-70c8-4693-ad7f-3df1cf56c187 id : efb54ac-70c8-4693-ad7f-3df1cf56c187 num_services : 0 unique_identifier : efb54ac-70c8-4693-ad7f-3df1cf56c187 name : Default_Space description : Space used as the default. storage_array_metadata : {}</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
SCService	Retrieve information about storage services delegated to the existing PowerShell interfaces.	<p>Get-SCService [[-ServiceID <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCService [-ServiceName <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCService [-SpaceID <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCService [-SpaceName <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • ServiceID <String>. The service ID or its unique identifier. • ServiceName <String>. The service name. • SpaceID <String>. Retrieve service information via its storage space ID. • SpaceName <String>. Retrieve service information via its storage space name. • SCConnection <SCConnection>. The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, display the detailed information, using service ID:</p> <pre>PS C:\>Get-SCService f69be4d0-b56c-449b-a3ae-a727a6ba972d -SCConnection \$client id : f69be4d0-b56c-449b-a3ae-a727a6ba972d unique_identifier : f69be4d0-b56c-449b-a3ae-a727a6ba972d name : service_vvol description : container : 7af7432d-172d-495b-a287-a1df2d2f4b77 capability_values : type : vvol physical_size : 214748364800 logical_size : 214748364800 physical_free : 214748364800 logical_free : 214748364800 total_capacity : 214748364800 used_capacity : 0 max_resource_logical_free : 214748364800 max_resource_free_size_for_provisioning : 214748364800 num_volumes : 0 has_admin : True</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
SCHost	Retrieve information about hosts.	<p>Get-SCHost [[-HostID] <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCHost [-ArrayID] <String> [-HostName] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCHost [-ArrayID] <String> [-Initiator] <Object> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCHost [-ArrayID] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • HostID <String>. The host ID unique to the Spectrum Connect server. • ArrayID <String>. The ID of the managed storage system. • HostName <String>. The host name. This string is case-sensitive. • Initiators <Object>. iSCSI or FC ports of the host. • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, display the detailed information about a single host:</p> <pre>PS C:\>Get-SCHost -ID 6 id : 6 array_type : 2145 array : 00000200AE62F4E4 name : fakeFCHost port_count : 2 iogroup_count : 4 status : offline host_type : generic storage_cluster : physical_host : iogroups : {2, 3, 4, 1} initiators : {21000024FF2DAFF6, 21000024FF2DAFF5}</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
SCVolume	<p>Perform volume operations:</p> <ul style="list-style-type: none"> Retrieve information about volumes managed by the PowerShell interfaces. Create a volume via the services delegated to the PowerShell interface. Resize a volume. Remove a volume. 	<p>Get</p> <p>Get-SCVolume [[-VolumeID] <String>] [[-SCConnection] <SCConnection>] [<CommonParameters>]</p> <p>Get-SCVolume [-VolumeName] <String> [[-ArrayID] <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCVolume [-ArrayID] <String> [<CommonParameters>]</p> <p>Get-SCVolume [-ServiceID] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCVolume [-ScsiID] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> VolumeID <String>. The volume ID, its unique identifier or alias ID. VolumeName <String>. The volume name or alias name. The VolumeName is not unique, especially when multiple storage systems are managed by same Spectrum Connect instance. To identify the volume on certain storage system, the combination VolumeName and ArrayID can be used. ArrayID <String>. The ID of the managed storage system. This parameter can be used separately, or together with VolumeName. ServiceID <String>. The ID of the service managing the volume. SCConnection <SCConnection>. The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, retrieve detailed information of a volume on a managed storage system:</p> <pre>PS C:\>Get-SCVolume -VolumeName SCVOL304 -ArrayID 00000200AE62F4E4 -SCConnection \$client scsi_identifier : 6005076802B98BD3900000000000000AD array_type : 2145 array : 00000200AE62F4E4 array_name : V7K_71 id : 6005076802B98BD3900000000000000AD pool_name : SC61_THIN pool_id : 3 max_extendable_size : 6596353938773 service_compliance : True domain_name : service_name : ThinProvisionService container_name : DemoSpace service_id : 8d4b6c91-670f-40bd-8d69-901e4a1219f9 container_id : 4cfc8298-965f-4f90-b23f-4d04fe70d9ee storage_model : Storwize V7000 volume_id : 24 name : SCVOL304 logical_capacity : 10737418240</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
		<p>New</p> <p>New-SCVolume [-VolumeName] <String> [-Size] <Int64> [[-SizeUnit] <String>] [-ServiceID] <String> [[-Initiator] <Object>] [[-SCConnection] <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • VolumeName <String>. The name of a new volume. • Size <Int64>. The size of a new volume. This parameter is together with SizeUnit. • SizeUnit <String>. The unit of the new volume size (Byte, GB, GiB, TiB). Default setting is GB. • ServiceID <String>. The ID of the service managing the volume. • Initiators <Object>. iSCSI or FC ports of the host to be mapped to the new volume. System.Collections.ArrayList object or just a Object[] can be used for multiple initiators. • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, create a new volume for a specific service:</p> <pre>PS C:\>New-SCVolume -Name DemoThin04 -Size 1 -SizeUnit GiB - ServiceID \$service.id ft array_name,id,name,pool_name,service_name, logical_capacity array_name : cim75 id : 6005076801A707416800000000000B76 name : DemoThin04 pool_name : SCReserved service_name : SVCThinService container_name : DemoSpace logical_capacity : 1073741824</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
		<p>Resize</p> <p>Resize-SCVolume [-VolumeID] <String> [-NewSize] <Int64> [[-SizeUnit] <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • VolumeID <String>. ID of the volume to be resized. • NewSize <Int64>. The new size of the volume. This parameter is together with SizeUnit. • SizeUnit <String>. The unit of the new volume size (Byte, GB, GiB, TiB). Default setting is GB. • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, create a new volume for a specific service:</p> <pre>Resize-SCVolume -ID 6005076801A7074168000000000000B76 -NewSize 2 -SizeUnit GiB ft name,id,logical_capacity name id logical_capacity ----- DemoThin03 6005076801A7074168000000000000B74 2147483648</pre>
		<p>Remove</p> <p>Remove-SCVolume [-VolumeID] <Object> [[-Force]] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • VolumeID <String>. ID of the volume to be removed. • Force <SwitchParameter>. Deletes mapping relations of the volume to be removed. • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, remove a volume:</p> <pre>PS C:\>Remove-SCVolume -VolumeID 6005076801A7074168000000000000B85 -SCConnection \$client True</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
SCHostVol Mapping	<p>Perform volume mapping operations:</p> <ul style="list-style-type: none"> Retrieve information about host-volume mapping. Map the volume to the host. Unmap the volume from the host. 	<p>Get</p> <p>Get-SCHostVolMapping [[-HostVolMappingID] <String>] [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCHostVolMapping [-HostID] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Get-SCHostVolMapping [-VolumeID] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> HostVolMappingID <String>. The mapping relation ID, its unique identifier or alias ID. HostID <String>. Displays mapping relations of the host with the specified ID. VolumeID <String>. Displays mapping relations of the volume with the specified ID. SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, display mapping relations for the host with ID 5:</p> <pre>PS C:\>Get-SCHostVolMapping -HostID 5 -SCConnection \$sc ft id volume host lun_number -- 113 6005076802B98BD3900000000000000AC 5 2 3 6005076802B98BD390000000000000018 5 1 4 6005076802B98BD390000000000000017 5 0 111 6005076802B98BD3900000000000000AB 5 7 107 6005076802B98BD3900000000000000A8 5 5</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
		<p>New</p> <p>New-SCHostVolMapping [-VolumeID] <String> [-HostID] <Object> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>New-SCHostVolMapping [-VolumeID] <String> [-HostName] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>New-SCHostVolMapping [-VolumeID] <String> [-Initiators] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • VolumeID <String>. ID of the volume to be mapped. • HostID <String>. ID of the host that the specified volume will be mapped to. • Initiators <Object>. The host endpoint (iSCSI or FC). • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, map a single volume to multiple hosts:</p> <pre>PS C:\>New-SCHostVolMapping -VolumeID 6005076801A7074168000000000000B76 -HostIDs 22,21,1 {@{id=21; volume=6005076801A7074168000000000000B76; host=22; lun_number=1}}{@{id=21; volume=6005076801A7074168000000000000B76; host=22; lun_number=4}, @{}; volume=6005076801A7074168000000000000B76; host=21; lun_number=4}, @{};</pre>

Table 30. Cmdlets available via IBM Storage Automation Plug-in for PowerShell (continued)

Object/URI	Description	Syntax and parameters
		<p>Remove</p> <p>Remove-SCHostVolMapping [-VolumeID] <String> [-HostID] <Object> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Remove-SCHostVolMapping [-VolumeID] <String> [-HostName] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <p>Remove-SCHostVolMapping [-VolumeID] <String> [-Initiators] <String> [-SCConnection <SCConnection>] [<CommonParameters>]</p> <ul style="list-style-type: none"> • VolumeID <String>. ID of the volume to be unmapped. • HostID <String>. ID of the host that the specified volume will be unmapped from. • Initiators <Object>. The host endpoint (iSCSI or FC). • SCConnection <SCConnection>The client handle for Spectrum Connect server. <p>It can be created via New-SCConnection. If the SCConnection is not specified, a most recently used SCConnection is utilized by default. The connection can be found via the global variable \$Global:DefaultConnection. If multiple Spectrum Connect servers are connected, you must explicitly specify the SCConnection parameter.</p> <p>For example, unmap a volume from two hosts:</p> <pre>PS C:\>Remove-SCHostVolMapping -VolumeID 6005076801A7074168000000000B76 -HostIDs 22,21 -SCConnection \$client</pre>

Notices

These legal notices pertain to the information in this IBM Storage product documentation.

This information was developed for products and services offered in the US. This material may be available from IBM in other languages. However, you may be required to own a copy of the product or product version in that language in order to access it.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
USA*

For license inquiries regarding double-byte character set (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

*Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan Ltd.
19-21, Nihonbashi-Hakozakicho, Chuo-ku
Tokyo 103-8510, Japan*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119*

Armonk, NY 10504-1785
USA

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

The performance data discussed herein is presented as derived under specific operating conditions. Actual results may vary.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of the International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the [Copyright and trademark information website](http://www.ibm.com/legal/us/en/copytrade.shtml) (www.ibm.com/legal/us/en/copytrade.shtml).

VMware, the VMware logo, ESX, ESXi, vSphere, vCenter, and vCloud are trademarks or registered trademarks of VMware Corporation in the United States, other countries, or both.

Microsoft, Windows Server, Windows, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States, other countries, or both.

Linux is a trademark of Linus Torvalds in the United States, other countries, or both.

Other product and service names might be trademarks of IBM or other companies.



Printed in USA

SC27-5999-34

